

Firmware Update

GLC-10000



FW Update Manual

This firmware update manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

Update Procedure

The firmware update for GLC-10000 requires an USB 2.0 flash disk and the corresponding "LC1XR.BIN" file beforehand.

**Note**

The "LC1XR.BIN", which is in different filename by default, needs to be manually renamed by user for firmware update. For instance, **rename the original "GLC10000_V1.03_20230101_LC1XR.BIN" to the exactly "LC1XR.BIN"**.

Update procedure

1. Power off GLC-10000 unit.
2. Plug in the USB flash disk after copying the "LC1XR.BIN" file to the boot directory of the USB flash disk.
3. Press and hold the STOP key and then followed by pressing the POWER button to power on GLC-10000 unit.



4. The BootLoader Mode is accordingly shown for firmware update automatically.



5. After the firmware update, the GLC-10000 unit will automatically reboot. For upgraded firmware version, please check "Information" under System.