How to Upgrade the **Firmware**

This application note describes how to manually upgrade the GDS-1000/1000A's firmware.

Required equipments

SD card	A standard SD card with the below firmware files copied into the root directory
Firmware	Three files are required: dso1kh.rom
	 dso1ks.rom dso1kmon.rom

Front panel overview with items related to the upgrade



Procedure

- 1. Inserting the Insert the SD card including new firmware files into the GDS-1000/1000A's SD card slot. SD card into the slot
- Power the GDS-1000/ 1000A up and at the same 2. Turning the GDS-1000 on time, press the F1 key several times. The GDS-1000/1000A should automatically boot in the firmware upgrade mode as in the snapshot below.

SHUTIONI			
		050 during	
upprade	I Internet	ions can lea	we the DSD
In an ur	istable cond	ition requir	ing you to
return f	Une DSO to f	actory for r	epair.
Press the	e lies to upo	rade Firmular	

3. Upgrading the Press the F4 key. The GDS-1000/ 1000A firmware automatically starts upgrading the firmware.

> When the status indicator at the bottom of the display shows the "Upgrade Success!!" message, upgrading the firmware is completed.

(ongoing) Upgrading.... (completed)

Upgrade Success!!



4. Confirming the Power the GDS-1000/ 1000A off and on to reboot the system. Open the system information by upgrade pressing the Utility key \rightarrow System Info (F4).



Check the firmware version in the system information screen that it is being updated.

Updating the firmware is completed