Programmable AC Power Source

APS-7000 Series

USER MANUAL





This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company. The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice. Good Will Instrument Co., Ltd.

No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.



Table of Contents

SAFETY	'INSTRUCTIONS	4
GETTIN	IG STARTED	8
	APS-7000 Series Overview	
	Appearance	
	Appearance	
OPERA ^T	TION	27
	Set Up	29
	Basic Operation	
	Advanced Settings	
	Miscellaneous	
	Trigger	
	Preset Settings	
	Arbitrary Waveform Function	
	Test Mode Function	
REAR P	ANEL SIGNAL OUTPUTS	148
СОММ	UNICATION INTERFACE	152
	Interface Configuration	
FAQ		174
APPEN	DIX	176
	Firmware Update	
	APS-7000 Default Settings	
	APS-7000 Specifications	
	APS-7000 Dimensions	
	Certificate Of Compliance	
	(Only for APS-7050 and APS-7100)	191
INDEX		192



SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.

NING

Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the APS-7000 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal





Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline

 


- Do not place any heavy object on the APS-7000.
- Avoid severe impact or rough handling that leads to damaging the APS-7000.
- Do not discharge static electricity to the APS-7000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the APS-7000 unless you are qualified.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The APS-7000 doesn't fall under category II, III or IV.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- 0 is for measurements performed on circuits not directly connected to Mains.

Power Supply



• AC Input voltage range:

115/230 Vac ± 15% (APS-7050, APS-7100) 230 Vac ± 15% (APS-7200, APS-7300)

- Frequency: 50/60Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.



7000

- Cleaning the APS- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

Operation **Environment**

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 80%, no condensation
- Altitude: < 2000m
- Temperature: 0°C to 40°C

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The APS-7000 falls under degree

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, nonconductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Temperature: -10°C to 70°C
- Relative Humidity: ≤80%, no condensation

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.



Power cord for the United Kingdom

When using the instrument in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons

 $\overline{\ '!}$ WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the

following code:

Green/ Yellow: Earth
Blue: Neutral
Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol \oplus or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.



GETTING STARTED

This chapter describes the power source in a nutshell, including its main features and front / rear panel introduction.



APS-7000 Series Overview	9
Series lineup	9
Operating Area	
Main Features	11
Accessories	12
Appearance	14
Front Panel	14
Rear Panel	19
Status Bar Icons	24
Grounding	25




APS-7000 Series Overview


Series lineup

The APS-7000 series consists of 4 models, the APS-7050, APS-7100, APS-7200 and APS-7300, differing only in capacity. Note that throughout the user manual, the term "APS-7000" refers to any of the models, unless stated otherwise.

Model name	Max. Output Current	Power Rating	Output Voltage
APS-7050	4.2A/2.1A	500VA	0~310.0 Vrms
APS-7100	8.4A/4.2A	1000VA	0~310.0 Vrms
APS-7200	16.8A/8.4A	2000VA	0~310.0 Vrms
APS-7300	25.2A/12.6A	3000VA	0~310.0 Vrms

 
Operating Area



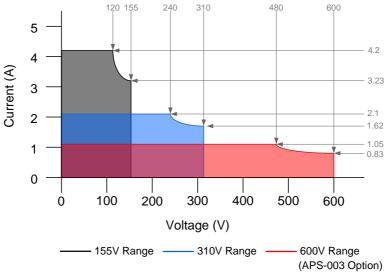




APS-7100 Output Operating Area

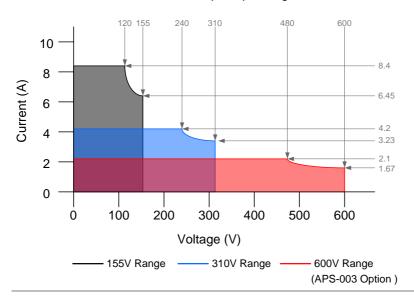


APS-7200 Output Operating Area

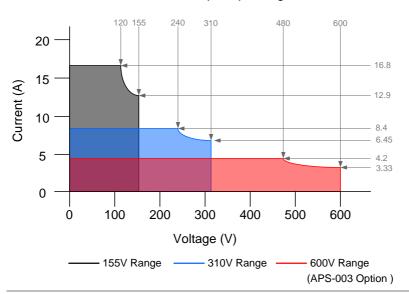



APS-7300 Output Operating Area

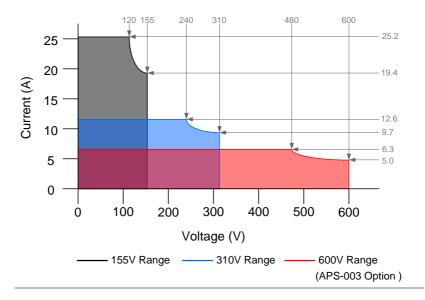

Main Features

Performance

- Low output ripple and noise
- Excellent and feature-rich measurement capacity
- Standard maximum output voltage is 310Vrms
- Maximum output voltage and frequency of 600Vrms(APS-003 Option)/1000Hz(APS-004 Option)



Features

- OCP, OPP and OTP protection
- Variable voltage, frequency and current limiter
- Sequence and simulation function
- Large 4.3 inch TFT panel
- Globally adjustable power inlet not restricted by the power supply environment
- USB interface is equipped as standard with the ability to save and recall setup files.
- Only 88mm (2U) case height (APS-7050 and APS-7100 models only).

Interface

Standard:

- Ethernet port
- USB host
- USB CDC (APS-7200 and APS-7300 models only)

Optional:

- GPIB
- RS-232 / USB CDC (APS-7050 and APS-7100 models only)
- RS-232 (APS-7200 and APS-7300 models only)

Accessories

Standard Accessories	Part number	Description
	CD ROM	User manual, programming manual
	82GW1SAFE0M*1	Safety guide
	Region dependent	Type I Power cord (APS-7050)
	Region dependent	Type II Power cord (APS-7100)




	Region dependent	Type III Power cord (APS-7200, APS-7300)
	62PS-7K0SC701 x1 5302-01613001 x1	Mains terminal cover set (APS-7050)
	62PS-7K0SC401 x1 5302-01613001 x2	Mains terminal cover set (APS-7100)
	GTL-123	Test leads: 1x red, 1x black
Optional Capacity	Part number	Description
	APS-003	Output Voltage Capacity: 0 ~ 600Vrms
	APS-004	Output Frequency Capacity: $45 \sim 1000 Hz$
Optional Accessories	Part number	Description
	GRA-423	APS-7050 and APS-7100 rack mount kit
	GRA-429	APS-7200 rack mount kit
	GRA-430	APS-7300 rack mount kit
	APS-001	GPIB interface card
	APS-002	RS-232 / USB CDC interface card (APS-7050 and APS-7100 only)
	APS-007	RS-232 interface card (APS-7200 and APS-7300 only)
	APS-008	Air inlet filter(APS-7200 and APS-7300 only)
	GPW-004	Power Cord 8mm ² /3C, 3m Max Length, 105°C, RNYBS8-6*3P, RNYB8- 8*3P
Download	Name	Description
	gw_aps.inf	USB driver




Appearance

Front Panel

APS-7050, APS-7100

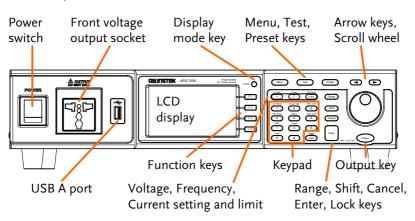

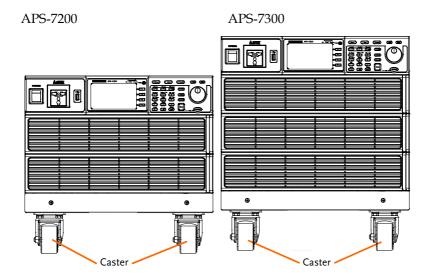



Item	Description		
Power Switch	POWER	Turns on th	ne mains power.
Front Voltage Output Socket	Neutral GN	Line	Output voltage terminal using a regional universal plug. There is a Euro and a Universal regional plug.
	00		
! CAUTION	Maximum allow 250Vrms and 15		oltage and current are
	For voltages exc 15Arms, please		ms or current over output terminal.
	Universal and E factory installed		llugs socket must be
USB A Port		-	ort is used for data nd upgrading software.
Note Note	It supports FAT3 only.	32 format with	n maximum 32G storage
LCD Screen		Displays the	ne measured values or em.
Display Mode Select Key	Display O	Selects betwand Simple	ween Standard mode e mode.



Function Keys	F 1	Assigned to the functions displayed on the right-hand side of the screen.
Menu Key	Menu	Enters the Main menu or goes back to one of the display modes.
Test Key	Test	Puts the instrument into the Sequence, Simulation and Program Control mode.
Preset Key	Preset	Puts the instrument into Preset mode.
Arrow Keys		The arrow keys are used to select the digit power of a value that is being edited.
V	V-Limit V	Used for setting the output voltage.
V-Limit	(Shift + V)	Used for setting the output voltage limit value.
F	F-Limit F	Used for setting the output frequency.
F-Limit	(Shift + F)	Used for setting the output frequency limit value.
l rms	IPK-Limit I rms	Used for setting the maximum output current.
IPK-Limit	(Shift + I rms)	Used to set the peak output current limit value.
Range Key	Range	Switches between the 155V, 310V and 600V ranges (the 600V range is an option).
Scroll Wheel		Used to navigate menu items or for incrementing/decrementing values one step at a time.




Lock Key	Unlock	Locks the number pad to prevent accidentally changing panel settings.
Unlock Key	(Long press)	Disables the key lock.
Enter Key	Enter	Confirms selections / settings
Cancel Key	Cancel	Clears entries that are made in the number entry dialog when a value is edited using the arrow keys or the scroll wheel.
		The Cancel key can also be used to cancel function setting menus or dialogs.
Shift Key	Shift	Turns on the shift state, which enables shortcut operations.
Output Key	Output	Turns the output on or off.
Number Pad	Cir Press Suppl Dp Fix CLE	Used to enter values.
Local Mode	(Shift + 0)	Switches operation back to local mode from remote mode.
ARB Mode	(Shift + 1)	Sets the ARB function.
Trigger Mode	(Shift + 2)	Sets the JI port trigger behavior on the rear panel.
Off Phase	(Shift + 4)	Sets the off phase for the output voltage.
RAMP	(Shift + 5)	Quick settings for Ramp control.
ALM CLR	(Shift + 6)	Clears alarms.
On Phase	(Shift + 7)	Sets the on phase for the output voltage.




Surge/Dip	(Shift + 8)	Quick settings for Surge/Dip control.
IPK CLR	(Shift + 9)	Clears peak current hold.




Rear Panel

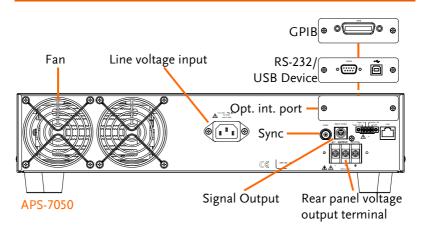


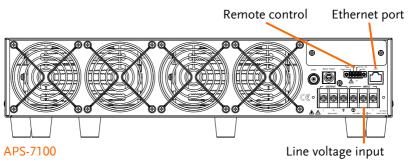



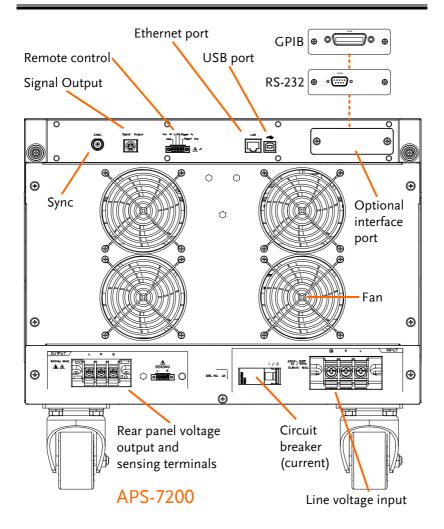



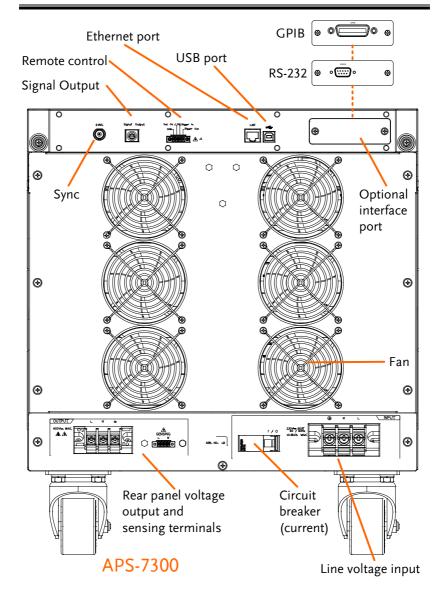




Line Voltage Input APS-7050

Voltage Input: 115/230±15% VAC; Line frequency: 50Hz/60 Hz (Automatically switchable)




APS-7100

 Voltage Input: 115/230±15% VAC; Line frequency: 50Hz/60 Hz (Automatically switchable) (M4 screw type, 8 ~ 18 AWG)



APS-7200 & 7300

 

Voltage Input: 230±15% VAC; Line frequency: 50Hz/60 Hz (M5 screw type, 2 ~ 16 AWG)

Rear Voltage Output Socket Output voltage terminal. (M4 screw type, $8 \sim 18$ AWG)

APS-7050



APS-7100

APS-7200 & 7300



Sync Output Socket



BNC socket. This socket will output a signal of approximately 10V when the output is on.

Signal Output



Connector for monitoring PASS, FAIL and PROCESSING output signals when using the Program mode.

Remote Control



Connector for controlling the TRIGGER IN, TRIGGER OUT and OUT ON/OFF states.



Ethernet Port



The Ethernet port is used for remote control and digital monitoring from a PC.

Optional Interface Slot

Optional GPIB communication, RS-232/USB B communication and RS-232 communication.

Circuit breaker (APS-7200, APS-7300 only)



Main power circuit (current) breaker

Rating: 40A (APS-7200) 63A (APS-7300)

Note: Check the status of the power breaker before power-on the APS-7200 or APS-7300.

FAN

Temperature controlled fan.


Remote sense (APS-7200, APS-7300 only)



Compensation of the load wire drop.



Status Bar Icons

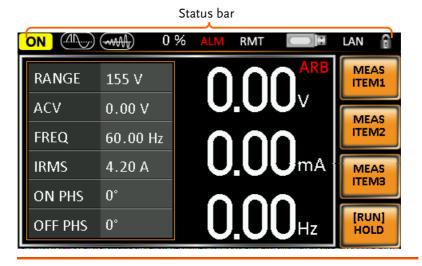

OFF

Indicates if the output is ON or OFF.

50%

Indicates the output power as a percentage of full scale.



Indicates that the Surge/Dip function is active.



Indicates that the Ramp function is active.



The alarm icon will appear on the status bar when one of the protection functions is tripped. Applies to Over Power, Over Irms, Over Ipeak and Over Temperature protection.



Indicates that the APS-7000 is in remote mode.



Indicates that a USB drive is detected in the front panel host port.



Indicates that the LAN interface is activated.



Indicates that the panel lock is active.



Indicates that the ARB function is active.

 
Grounding

The output terminals of the APS-7000 series are isolated with respect to the protective grounding terminal. The insulation capacity of the load, the load cables and other connected devices must be taken into consideration when connected to the protective ground or when floating.


Output

Grounded Neutral Basically, grounded return on the neutral output is allowed for APS-7000 series and electric shock may occur if not following the grounding procedure based on the local electrical safety codes. In some cases, 0 V is specifically required between ground and neutral, which can substantially moderate ground loops, thus keeping sensitive equipment from effects of ground loops and reducing ground noise. And that don't affect the measurement result.

Ground & Neutral Shortcut Illustration for APS-7050




 Ground & Neutral Shortcut Illustration for APS-7100





 Ground & Neutral Shortcut Illustration for APS-7200 and APS-7300





Owning to the fact that the neutral has been shortcut with the ground which is referenced to the chassis ground, few electric shocks may still take place from time to time, for which we sincerely ask your additional attention.

OPERATION

Set Up	29
Line Voltage Removal and Installation for APS-7100	29
Filter Installation	
Power Up	
Output Terminals	
Wire gauge considerations	40
Installing the Optional Hardware Modules	
Installing Optional Software Modules	
Using the Rack Mount Kit	49
How to Use the Instrument	51
Reset to Default Settings	55
View System Version and Serial Number	
LCD Configuration	
USB Driver Installation	58
Basic Operation	61
Setting the Voltage Range	
Setting the Voltage Limit	62
Setting the Output Voltage	
Setting the Frequency Limit	
Setting the Output Frequency	
Setting the Peak Current Limit	67
Setting the Current RMS Level	71
Setting the On/Off Phase	74
Alarm Clear	
Display Modes	
Panel Lock	
Turning the Output On	
Using the remote sense (APS-7200 and APS-7300 only)	
Local Sense	
Remote Sense	
Advanced Settings	83
Surge/Dip Control	83
Ramp Control	86
Miscellaneous	89



T Ipeak, hold	89
Power ON Output	91
Buzzer	92
SCPI Emulation	93
Remote Sense (APS-7200 and APS-7300 only)	94
Trigger	96
Trigger Control Settings	96
Preset Settings	101
Save Preset Settings to Local Memory	101
Load Preset Settings to Local Memory	
Manage Preset Settings	
Arbitrary Waveform Function	
ARB Mode Overview	106
Selecting an ARB Waveform	109
Test Mode Function	
Simulate Mode Overview	113
Simulate Settings	117
Save a Simulation to Local Memory	120
Recall a Simulation from Local Memory	
Manage Simulation Settings	121
Running a Simulation	123
Sequence Mode Overview	125
Sequence Settings	129
Save a Sequence to Local Memory	133
Recall a Sequence from Local Memory	133
Manage Sequence Settings	134
Running a Sequence	136
Program Mode Overview	
Save a Program to Local Memory	
Recall a Program from Local Memory	
Manage Program Settings	

Set Up

Line Voltage Removal and Installation for APS-7100

Background

The APS-7100 is equipped with an input power terminal that can accept $115V/230V \pm 15\%$. To connect or replace the power cord (GW Instek part number 4300-31000101), use the procedure below:

 


The following procedure should only be attempted by competent persons.

Ensure the AC power cord is not connected to power.


Removal

1. Turn off the power switch.




APS-7100

- 2. Unscrew the power cord protective sheath on the rear output socket.
- 3. Remove the 2 screws holding the power cord cover and remove.

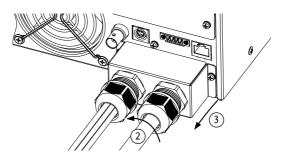



4. Remove the AC power cord wires.

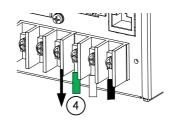


À CAUTION

The power line inputs for the APS-7100 are on the outer cluster of terminals.


The terminals to the inner of the panel are the rear panel outputs.

Installation

- 5. Connect the AC power cord wires to the AC input terminals.
- White/Blue \rightarrow Neutral (N)
- Green/Green-yellow→GND (♣)
- Black/Brown \rightarrow Line (L)

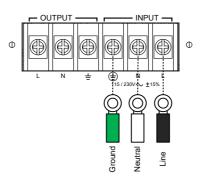

- 6. Re-install the power cord cover.
- 7. Screw the power cord sheath back onto the cover.

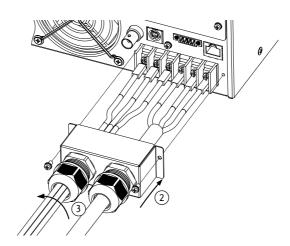




Filter Installation

Background

The APS-7200/7300 has a filter (GW Instek part number, 57RG-30B01801) that must first be inserted under the control panel before operation.

Steps

 1. Pull outward as indicated in the arrow to detach the snap.



2. Remove the cover



3. Remove the screws

 


4. Move the plastic frame in the direction indicated by the arrow





5. Remove the plastic frame.



6. Replace the filter with a new one.



7. The unit is now ready to power up.



Please clean regularly to avoid damaging the internal components of the machine



The following procedure should only be attempted by competent persons.

 
Ensure the AC power cord is not connected to power.



Power Up

Steps

1. Socket type (APS-7050): Connect the power cord to the rear panel socket.



Input Power Terminal (APS-7100, 7200 & 7300): Connect the power cord to the input power terminals. APS-7100,

APS-7200 & 7300, see page 22,

see page 29.

2. Press the POWER key. The splash screen will appear momentarily before the continuous mode screen appears with the settings loaded.







The power supply takes around 10 seconds to fully turn on and shutdown.

Do not turn the power on and off quickly.

Output Terminals

The output terminals can be output from either the front panel or from the rear panel. The outputs are limited to 4.2A/2.1A (APS-7050), 8.4A/4.2A (APS-7100), 16.8A/8.4A (APS-7200) or 25.2A/12.6A (APS-7300).

Supported plugs

Multi-region terminal Socket

Supported Standards

IEC, North America, Japan.

EURO CEE type universal plug

🔨 WARNING

Dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.


! CAUTION

For the front panel output, the maximum output voltage is 250VAC and current is 10A.


Front Panel Output Connection

- 1. The front panel has a multi-region power socket depending on the socket type.
- 2. Insert the plug from the DUT into the socket.

(APS-7050 or APS-7100 shown)

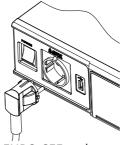



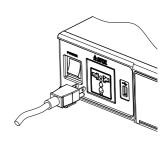

IEC North America, Japan



WARNING


Dangerous voltages. Ensure the output is off before unplugging the plug from the front panel socket.

3. Turn the power on. The AC power supply is now ready to power the DUT.


Connection

Rear Panel Output The rear panel output is used to supply higher power DUTs. The rear panel output connection is similar to the universal rear panel line input connection on the APS-7100, APS-7200 or APS-7300.

- 1. Disconnect the unit from the mains power socket and turn the power switch off.
- 2. Unscrew the power cord protective sheath (APS-7050 and APS-7100).
- 3. Remove the 2 screws holding the power cord cover and remove (APS-7050 and APS-7100).

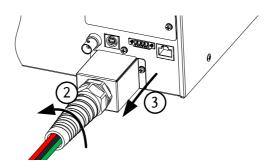

APS-7100

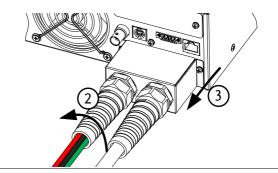




For the APS-7100, there is a single bank for the input and output terminals. Ensure the correct terminals are connected. The APS-7050, APS-7200 and APS-7300 have a dedicated bank of output terminals on the rear panel.

Installation

- 4. Connect the output AC power cord wires to the AC output terminals.
- Black \rightarrow Neutral (N)
- Green → GND (=)
- Red \rightarrow Line (L)


APS-7100

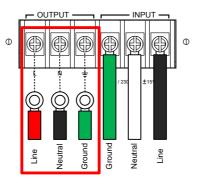

APS-7100 shown. The input terminals are already connected and shows which output terminals are to be connected.



 
APS-7050, APS-7200 and APS-7300




APS-7050 shown.

- 5. Re-install the power cord cover (APS-7050 and APS-7100).
- 6. Screw the power cord sheath back onto the cover (APS-7050 and APS-7100).

APS-7050

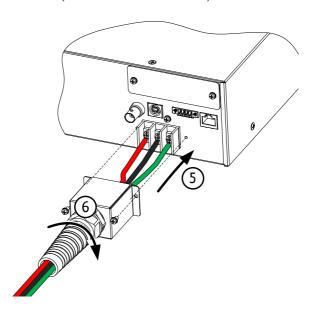

APS-7100

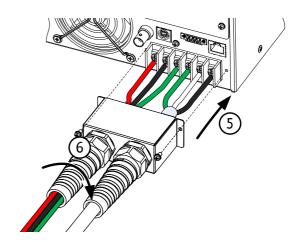

7. Turn the power on. The AC power supply is now ready to power the DUT.

Grounded Neutral Output:

Note Note

APS-7000 allows for a grounded return on the neutral output.

It is suit for the medical industry that required between ground with neutral is 0V essentially. And possible to mitigate ground loops that is ideal for reduce ground noise and isolate sensitive equipment from the effects of ground loops.



Because the neutral has been referenced to the chassis ground, be careful electric shock by yourself.



Wire gauge considerations

Background

Before connecting the output terminals to a load, the wire gauge of the cables should be considered.

It is essential that the current capacity of the load cables is adequate. The rating of the cables must equal or exceed the maximum current rated output of the instrument.

Recommended wire gauge

Wire Gauge	Nominal Cross Section	Maximum Current
20	0.5	9
18	0.75	11
18	1	13
16	1.5	18
14	2.5	24
12	4	34
10	6	45
8	10	64
6	16	88
4	25	120
2	32	145
1	50	190
00	70	240
000	95	290
0000	120	340

The maximum temperature rise can only be 60 degrees above the ambient temperature. The ambient temperature must be less than 30 degrees.

To minimize noise pickup or radiation, the load wires and remote sense wires should be twisted-pairs of the shortest possible length. Shielding of the sense leads may be necessary in high noise environments. Where shielding is used, connect the shield to the chassis via the rear panel ground screw. Even if noise is not a concern, the load and



remote sense wires should be twisted-pairs to reduce coupling, which might impact the stability of the power supply. The sense leads should be separated from the power leads.




Installing the Optional Hardware Modules


Background	There are a number of optional modules that can be installed for remote control.	
Optional Modules	APS-001	GPIB Interface card
	APS-002	RS-232/USB CDC interface card
	APS-007	RS-232 interface card
• WARNING	Dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.	
? CAUTION	Ensure the power is off before installing any of the optional modules.	
	1 7 (6)	

Installation

 1. Turn off the power switch.




2. Unscrew the two screws holding the options panel plate.

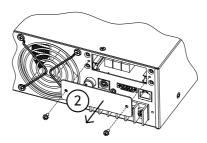

APS-7100 shown



- 3. Slide the module PCB onto the rails on the inside of the module slot.
- 4. Secure the module with the screws that were removed from step 2.

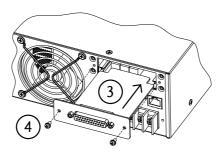

APS-7100 shown

5. The module will be recognized upon startup.



Installing Optional Software Modules

Background

The APS-003 and APS-004 are optional software modules that upgrade the voltage limit and frequency limit to 600Vrms and 1000Hz, respectively. Like the firmware, the software modules can be upgraded using the USB A port on the front panel. See your local distributor or GW Instek to purchase these options.



The APS-003 and APS-004 software module license keys have been updated and there are now two license key file formats in use:

- The old license keys were tied to the serial number of the APS-7000 unit. The license key files used XXXXXX.<u>lis</u> formatting, where XXXXXX was the serial number of the unit the license key is intended for.
- The new license keys are no longer tied to serial numbers. These new license key files use XXXXXX.lic formatting (APS003.lic & APS004.lic). The new license keys can be exported and transferred to different units.



To upgrade APS-003 or APS-004, it is recommended to upgrade the software version to the latest one. For software, please contact GW or local distributors.

LICENCE KEY INSTALLATION (XXXXXX.LIS format)



These options require your serial number. The older license keys are not longer available for purchase.

The serial number on the APS unit must match the XXXXXXX.lis filename, or the upgrade will fail.



See page 56 for instructions on how to view your serial number

Steps

- 1. Insert the USB flash drive into the USB port on front panel of the APS-7000.
- The USB drive should include the **XXXXXX.lis** file in a directory named "gw" (USB\gw:).
- 2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 11, *Special Function* and press *Enter*.
- 4. Key in the password when prompted and then press *Enter*.
- The password is "5004".
- 5. Go to Item 5, Add New Module and press Enter.
- 6. If the upgrade is successful, "Vlimit Enabled" or "Flimit Enabled" will appear on the screen.



Vlimit option successfully upgraded

Invalid License

7. If the upgrade is not successful, "Invalid License" will be displayed. Check to make sure the serial number and the XXXXXX.lis filename match.



LICENCE KEY INSTALLATION (XXXXXX.LIC format)



The license keys (APS003.lic & APS004.lic), can be exported and transferred to another APS-7000 power supply of the same model at anytime. A license key can only be used with one machine at a time.

Steps

- 1. Insert the USB flash drive into the USB port on front panel of the APS-7000.
- The USB drive should include the APS003.lic or APS004.lic file in a directory named "gw" (USB\gw:).
- 2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 11, *Special Function* and press *Enter*.
- 4. Key in the password when prompted and then press *Enter*.
- The password is "5004".
- 5. Go to Item 5, Add New Module and press Enter.
- 6. If the upgrade is successful, "Vlimit Enabled" or "Flimit Enabled" will appear on the screen.
- 7. Reset the power to the unit when prompted.





Invalid License

8. If the upgrade is not successful, "Invalid License" will be displayed.

LICENCE KEY EXPORT (XXXXXX.LIC format)



This guide will EXPORT the license key back to the USB flash drive* so that the license key can be installed on a different unit.

*The same USB flash drive that originally contained the *.lic license key must be used when exporting the license key.

Steps

- 1. Insert the USB flash drive into the USB port on front panel of the APS-7000.
- 2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 11, *Special Function* and press *Enter*.
- 4. Key in the password when prompted and then press *Enter*.
- The password is "5004".
- 5. Press F1 Export APS-003 or F2 Export APS-004.
- 6. Reset the power to the unit when prompted.





7. The APS003.lic or APS004.lic will now be in the GW directory of the USB flash drive.



You can only export one license key at a time.

You cannot have two license keys on the same USB drive.

You cannot copy a license key to another USB drive. Trying to do so will cause the file to be lost or to be mismatched.



Using the Rack Mount Kit


Background

The APS-7050, APS-7100, APS-7200 and APS7300 have optional Rack Mount kits:

Model	Rack Mount kit part number
APS-7050 & 7100	GRA-423
APS-7200	GRA-429
APS-7300	GRA-430


The APS-7050 and APS-7100 are designed to fit into a 2U rack height. The APS-7200 is designed to fit into a 7U rack height. The APS-7300 is designed to fit into a 9U rack height. Please see your distributor for further rack mount details.

Rack mount diagram (APS-7050 or 7100)

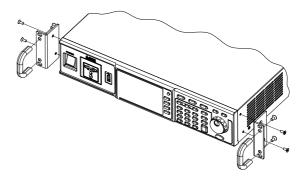




Rack mount diagram (APS-7200)

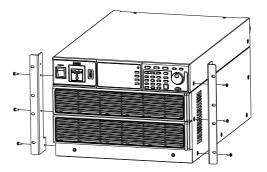

Rack mount diagram (APS-7300)

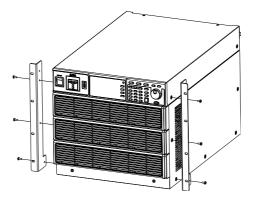

ACAUTION

Ensure adequate ventilation is provided when using the rack mount. Ensure at a gap of at least 50mm is given for the side air intakes. Failure to do so may cause the instrument to overheat.

How to Use the Instrument

Background

The APS-7000 AC power supplies generally use the scroll wheel, arrow keys and Enter keys to edit numerical values or to select menu options.

Menu navigation is performed using the menu keys and function keys on the front panel.

The following section will explain some of these concepts in detail.

Selecting Menu Items

1. Turn the scroll wheel to select parameters in menus and lists. The selected parameter will be highlighted in orange. The scroll wheel is also used to increment/decrement setting values.




2. Press the Enter key to edit the parameter or to enter the selected menu.





Example

Selected parameter

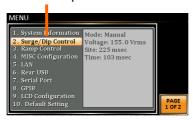

The following is an example of the menu list that appears when the Menu key is pressed.

to edit parameter values

Using the Keypad When editing a value the keypad can be used to directly enter the desired value.

> 1. Type the value of the parameter using the keypad.

 


2. Press the Enter key to confirm the edit.



Example

Parameter






Using the Arrow Keys and Scroll wheel to edit parameter values Use the arrow keys to select a digit power and then use the scroll wheel to edit the value by that power.

1. Use the arrow keys to move the cursor to the digit of the desired power.



2. Turn the scroll wheel to edit the value by the resolution of the selected digit.



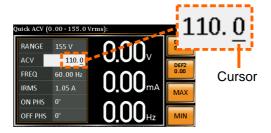

- 3. Repeat the steps above for all the relevant digits.
- 4. Press the Enter key to confirm the edit.





By default the cursor starts at the lowest power digit.



Using the onscreen keyboard

The onscreen keyboard is only used in the Program Mode. The screenshot below is an example of the onscreen keyboard.

On screen keyboard




Entered characters

Using the Function Keys

The function keys are quick settings keys, the function of which depends on the current menu or operation.

- 1. Press the function key that corresponds to the setting directly to its left.
- 2. The setting or parameter is immediately executed.

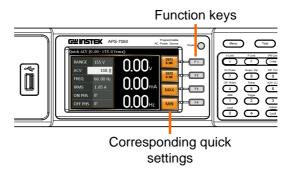

3. Repeat the steps above for all the relevant digits.



Reset to Default Settings

Background

The default settings can be restored from the Menu key settings. See page 178 for the default factory settings.

Steps

4. Press the *Menu* key. The Menu settings will appear on the display.



- 5. Use the scroll wheel to go to item 10, *Default Setting*.
- 6. Press *Enter* x2 to restore the default settings.



Default settings



View System Version and Serial Number

Background

The Menu>System Information setting displays the serial number and version number.

Steps

1. Press the Menu key. The Menu setting will appear on the display.



2. The system information should now be listed on the display.

If not, use the scroll wheel to go to item 1, *System Information*.

System Information





LCD Configuration

Background The LCD Configuration setting sets the brightness, contrast and saturation level of the LCD display.

Steps

1. Press the *Menu* key. The Menu settings will appear on the display.



- 2. Use the scroll wheel to go to item 9, *LCD Configuration* and press *Enter*.
- 3. Set the brightness, contrast and saturation.

Contrast(%) $1 \sim 100\%$ (Default=50%)

Brightness (%) $1 \sim 100\%$ (Default=50%)

Saturation(%) $1 \sim 100\%$ (Default=50%)


Exit

4. Press *Exit*[*F*4] to exit from the Ramp Control settings.



Default Settings

5. Press *Default*[*F*3] to set all the LCD settings to 50%.

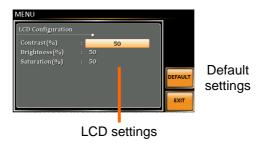




USB Driver Installation


Background	If the USB Type B interface is to be used for remote control, the USB driver needs to be installed.
Note	The USB driver, GW_APS.inf, is located on the CD Rom that accompanied this user manual. Alternatively the driver can be downloaded from the GW Instek website.
	For information on the USB interface, see page 153.
Steps	 Connect the rear panel USB -B port on the APS-7000 to the PC using a USB Type A to B cable.
	 Go the Windows Device Manager. For Windows 7: Start > Control Panel > Hardware and Sound > Device Manager



3. The APS-7000 will be located under *Other Devices* in the hardware tree. Right-click the *APS-7XXX* and choose *Update Driver Software*.

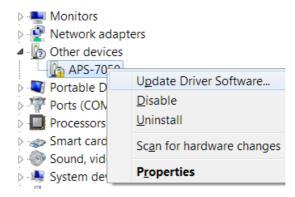


4. From the hardware wizard choose Browse my computer driver software.

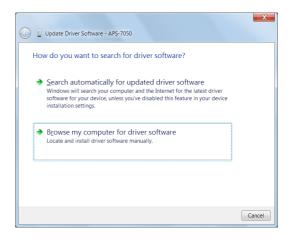



5. Set the file path to the location of the USB driver, click Next and finish the driver installation.

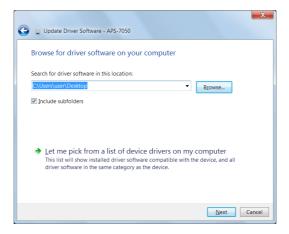

In APS-7000 will now be located in the *Ports*node of the hardware tree in the Windows
Device Manager if the driver installation was
successful.



Basic Operation

This section describes the basic operations required to operate the power supply.

- Setting the Voltage Range → from page 61
- Setting the Voltage Limit → from page 62
- Setting the Output Voltage → from page 63
- Setting the Frequency Limit → page 65
- Setting the Output Frequency → page 66
- Setting the Peak Current Limit → from page 67
- Setting the Current RMS Level → from page 69
- Setting the On/Off Phase → from page 74
- Clearing the Alarm → from page 75
- Setting the Display mode → from page 76
- Panel lock → from page 78
- Turning the Output on/off → from page 79
- Using the remote sense (APS-7200, APS-7300) → from page 80

Before operating the power supply, please see the Getting Started chapter, page 8.

Setting the Voltage Range

Background	The Range setting determines the general outlet voltage range. The ranges available correspond to common mains output voltage standards.
Steps	Press Range to access the Range menu. Range




2. Set the voltage range with the scroll wheel or with the F1 ~ F4 soft-keys.

Range AUTO, 600V(option), 310V, 155V

Soft-keys AUTO, 600V(option), 310V, 155V

3. Press Enter to confirm the Range setting.

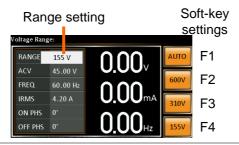



If the range is changed from 155V to 600V, the Irms and IPK values will automatically be changed to a lower value. If the range is changed from 600V to 155V, the Irms and IPK values remain the same.

If the voltage range is changed when the output is on, the output will be automatically turned off.

Setting the Voltage Limit

Background Setting the voltage limit allows the output voltage to be set to any level within the voltage limit (V Limit) range.

Steps

1. Press *Shift* + *V* to access the Volt Limit menu.






2. Set the voltage limit with the scroll wheel or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the limit to the maximum and minimum, respectively.

Range	10% of full range ~ full range
Soft-keys	MAX, MIN

3. Press *Enter* to confirm the voltage limit setting.

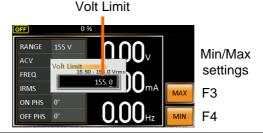



Each voltage range (155V, 310V, 600V) has an independent voltage limit.

Before change volt limit setting, if ACV setting value is bigger than desire volt limit value, so that the volt limit value can't be change.

Setting the Output Voltage

The voltage setting sets the voltage level of the power supply.

-	Before setting the power supply voltage level, set the voltage range and voltage limit.

Steps

1. Press the V key. The ACV parameter will be editable.



2. Set the voltage with the scroll wheel/keypad or with the F1 ~ F4 soft-keys.



Range	0 volts ~ full range
Soft-keys	DEF1, DEF2, MAX, MIN

3. Press *Enter* to confirm the voltage setting.

Preset Settings

The DEF1 and DEF2 preset settings are user defined settings. By default they are set to 0.00 volts. The MAX and MIN soft-keys set the voltage to the maximum and minimum, respectively.

4. Press the *V* key and set the desired voltage with the scroll wheel/keypad.

Range 0 volts ~ full scale of voltage range


 Press and hold the DEF1 or DEF2 soft-key until "Saved to DEF1/2" is displayed. This will save the voltage setting to the DEF1 or DEF2 softkey.



Trying to set the voltage outside of the voltage limit/range will result in a voltage setting error being displayed on the screen.

The voltage level can be set when the output is on.

Example

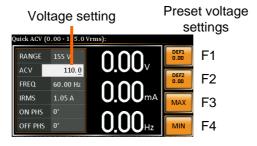



Setting the Frequency Limit

Background

Setting the frequency limit allows the frequency output to be set to any level within the limit range.

Steps

1. Press *Shift* + *F* to access the Freq Limit menu.




 Set the frequency limit with the scroll wheel/keypad or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the frequency limit to the maximum and minimum, respectively.

Range	45.00 ~ 500.0Hz (1000Hz option)
Soft-keys	MAX, MIN

3. Press *Enter* to confirm the limit setting.

Example

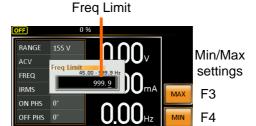



Before change freq limit setting, if FREQ setting value is bigger than desire freq limit value, so that the freq limit value can't be change.



Setting the Output Frequency

The frequency setting sets the frequency of the output.

Background	Before setting the frequency, set the frequency
	limit.

Steps

1. Press the *F* key. The FREQ parameter will be editable.



2. Set the frequency with the scroll wheel/keypad or with the F1 \sim F4 soft-keys.

Range	45.00 ~ 500.0Hz (1000Hz option)	
Soft-keys	DEF1, DEF2, MAX, MIN	

3. Press *Enter* to confirm the frequency setting.

Preset Settings

The DEF1 and DEF2 preset settings are user defined settings. By default they are set to 50.00Hz and 60.00Hz, respectively. The MAX and MIN softkeys set the frequency to the maximum and minimum, respectively.

4. Press the *F* key and set the desired frequency with the scroll wheel/keypad.

Range $45.00 \sim 500.0$ Hz (1000Hz option)

5. Press and hold the DEF1 or DEF2 soft-key until "Saved to DEF1/2" is displayed. This will save the frequency setting to the DEF1 or DEF2 soft-key.



Example Preset frequency Frequency setting settings F1 RANGE 0.00° DEF2 60.00 F2 60.00 4.20 A IRMS F3 MAX ON PHS 0° F4 OFF PHS 0°



Trying to set the frequency outside of the frequency limit will result in a frequency setting error being displayed on the screen.

The frequency can be set when the output is on.

Setting the Peak Current Limit

Background	Setting the peak current limit sets a limit on the current that can be sourced by the power supply. Once the output current over the setting, the output will set to off.
Note !	When the peak current limit is tripped, an alarm will sound. Press Shift + 9 to clear the Ipk alarm. Shift+6 can also clear the Ipk alarm. See page 75 for details.
Steps	1. Press Shift + I rms to access the Ipeak menu.




2. Set the peak current with the scroll wheel/keypad or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the peak current to the maximum and minimum, respectively.

Range	10% ~ 100% peak current value. The peak current value depends on the selected voltage range.
Soft-keys	MAX, MIN


3. Press *Enter* to confirm the peak current setting.

Example

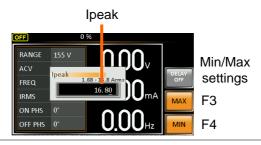

Delay Time Settings

The Delay Time setting essentially defines how long the measurement of the peak current must be sustained for before it is recognized. By default the delay time is turned off.

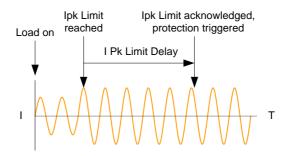




- 1. Press Shift + I rms and then press DELAY[F2].
- 2. Set the desired delay time with the scroll wheel/keypad or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the delay time to the maximum and minimum, respectively.

Range	$0(off) \sim 10$ seconds
Soft-keys	MAX, MIN

3. Press *Enter* to confirm the delay time setting.

Example

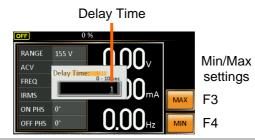

IPK Measurement The IPK Range settings allow you to manually set the Range Settings peak current measurement range. By default this setting is set to AUTO.

- 1. Press Shift + I rms and then press IPK Range[F1].
- 2. Set the desired range with the scroll wheel.

Range	AUTO, 0.28A, 1.4A, 14A, 70A (APS-7050, APS-7100)
	AUTO, 14A, 140A (APS-7200, APS-7300)


3. Press *Enter* to confirm the IPK Range setting.



Example

IPK Range settings

APS-7050 & 7100

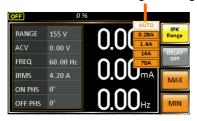

IPK Range settings

APS-7200 & 7300



Note

When using manual IPK range setting, Irms measure range as below

Model	RMS Current Measurement
APS-7050 APS- 7100	2.00 ~ 70.00mA (0.28A Range) 2.0 ~ 350.0mA (1.4A Range) 0.020 ~ 3.500A (14A Range) 0.02 ~ 17.50A (70A Range)
APS-7200 APS- 7300	0.100 ~ 3.500A (14A Range) 0.10 ~ 35.00A (140A Range)



Setting the Current RMS Level

Background

The I rms setting sets the root mean square current.

Setting the RMS current sets a limit on the current that can be sourced by the power supply. Once the output current over the setting, the output will set to off.

Steps

1. Press *I rms* to access the I rms menu.




2. Set the I rms level with the scroll wheel/keypad or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the I rms level to the maximum and minimum, respectively.

Range	$0.00 \sim \text{full scale A (dependant on the voltage range)}$
Soft-keys	MAX, MIN

3. Press *Enter* to confirm the current setting.

Example

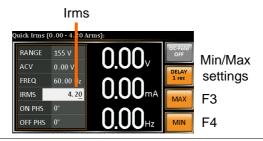




Setting the I rms level to 0.00 will disable OCP and the OPP protection function is activated. The OPP is 105% of rating.

Setting the I rms to 0A is dangerous.



Settings

I rms Delay Time The Delay Time setting defines how long the I rms measurement must be sustained for before it is recognized. By default the I rms delay time is turned off.

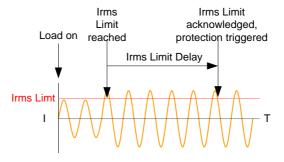


- 4. Press I rms and then press DELAY[F2].
- 5. Set the desired delay time with the scroll wheel/keypad or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the delay time to the maximum and minimum, respectively.

Range	$0(off) \sim 10$ seconds
Soft-keys	MAX, MIN

6. Press *Enter* to confirm the delay time setting.

Example

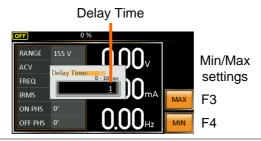


OC Fold Settings

The over current fold back settings allow the APS-7000 to work as either a constant voltage source or a constant current source.

While the unit is sourcing less current than the Irms current limit, the APS-7000 will act as a constant voltage source. In this mode, the voltage level will remain constant while the current level may vary. This is the normal operating mode.

When the current level reaches the Irms limit, the APS-7000 will act as a constant current source. In this mode the current is constant and the voltage level varies. When the current subsides below the Irms limit again, the unit will again act as a constant voltage source. When OC Fold is turned off, the APS-7000 will act as a current limiting power source when the Irms limit has been reached.

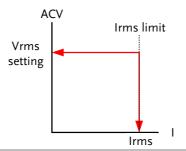

Note

OC-FOLD can only be active when the I rms level is greater than $\boldsymbol{0}$.

7. Press *I rms* and then press *OC-FOLD[F1]* toggle the OC-Fold function on or off.



OC-Fold setting



Setting the On/Off Phase

Background

The on phase setting sets the starting phase of the voltage output. The off phase setting sets the ending phase of the voltage output.

Steps

1. Press *Shift* + 7 or *Shift* + 4 the On Phase or Off Phase, respectively.



 Set the On Phase or Off Phase setting with the scroll wheel/keypad or with the F3 ~ F4 softkeys. The MAX and MIN soft-keys set the phase to the maximum and minimum, respectively.


Range	0 ~ 359°	
Soft-keys	MAX, MIN	

3. Press *Enter* to confirm the phase setting.



Example

On Phase

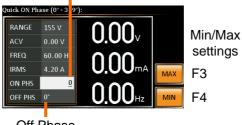

Off Phase

Alarm Clear

Background	The ALM CLR (Alarm Clear) function will clear any Over Power, Over Irms, Over Ipeak, Over Temperature, Output Short alarms and Remote Sense Error.
Applicable Alarms	OVER POWER, OVER IRMS, OVER IPEAK, OVER TEMPERATURE, OUTPUT SHORT, REMOTE SENSE ERROR.
Steps	1. Press <i>Shift</i> + 6 to clear any alarms.



Example

ALM indicator



Alarm message



Display Modes

The APS-7000 power supply has two display modes. The standard display mode shows the power supply setup on the left and the 3 configurable measurements on the right. The simple display mode shows all measurement items available on the APS-7000.

Steps

 
1. Press the *Display* key.



2. The display mode will toggle each time the key is pressed.


Standard Mode





Simple Mode

Measurement Items

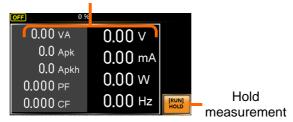

Configuring the Standard Mode Measurements


1. Press the Meas Item1, Item2 or Item3 soft-key.





2. Use the scroll wheel to select a measurement item and press Enter to confirm.

Sets first measurement item to Voltage

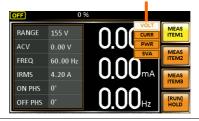

Hold Measurement

The Hold function will "hold" the current measurements on the display. Measurements won't be updated on the display until the function is released.

Press HOLD[F4] to toggle hold on or off.

When APS-7000 rear terminal has detected reverser current, the display would change as follow:



Reverse Current Mode





Panel Lock

The panel lock feature prevents settings from being changed accidentally. When activated, all keys and knobs except the Lock/Unlock key and the Output key (if active) will be disabled.

If the instrument is remotely controlled via the USB/LAN/RS-232/GPIB interface, the panel lock is automatically enabled. See page 152 for remote control details.

Activate the panel lock

Press the *Lock* key to active the panel lock. "Keys locked" appears on the display.




A lock icon will appear in the top corner when the panel keys are locked.



lock

Disable the panel Hold the *Lock* key for ~3 seconds to disable the panel lock. "Keys unlocked" will appear on the display and the padlock icon will disappear.



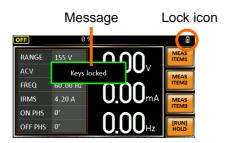

Turning the Output On

When the output is turned on, the DUT can be connected to either the rear panel output or the front panel output.



Both of these outputs are electrically linked. Only one DUT should be connected to any one of the outputs at a time. Using both outputs at the same time is not supported. Using the front and rear outputs are the same time could cause dangerous operating conditions. See page 35 for details about using the output terminals or sockets.

Turn Output On

Press the *Output* key. The Output key will light up and ON will be displayed in the status bar to indicate that the output is on.





Turn Output Off

Press the *Output* key. The Output key light will go out and OFF will be displayed in the status bar to indicate that the output is off.







Using the remote sense (APS-7200 and APS-7300 only)

The APS-7200 and APS-7300 can be operated using local or remote voltage sense. By default, the power supply is configured for local sense.



Ensure the output is off before handling the remote sense connectors.

Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.

Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.

Remote sense connectors overview

The remote sense connectors are located at the rear panel of the APS-7200 and APS-7300.



Local Sense

Local sense operation

When using local sense, the sensing terminals are not used. No compensation of any possible voltage drop seen on the load cables is performed. Local sense is only recommended when the voltage drop is of no consequence. By default, the power supply is configured for local sense.

1. Check that the remote sense setting is disabled (page 94).

Remote Sense

Remote sense operation

Remote sense is used to compensate for the voltage drop seen across load cables due to resistance inherent in the load cables. The remote sense function can compensate a maximum of 10% of the output voltage.



Ensure the output is off before handling the remote sense connectors.


Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.

Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.

- 1. Configure the remote sense setting to ON (page 94).
- Connect the Neutral terminal of the remote sense terminal block to the Neutral terminal of the load.
- 3. Connect the Live terminal of the remote sense terminal block to the Live terminal of the load.



Connection example

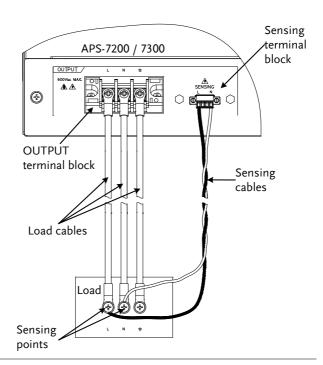

Advanced Settings

- Surge/Dip Control → from page 83
- Ramp Control → from page 86

Surge/Dip Control

Surge and dip control allows the power supply to source artificial surges or dips in voltage to a DUT. The surge/dip control feature provides a fast method to generate a surge/dip voltage event on a nominal voltage.

There have 4 parameters for configuring this feature: Mode selection (Mode), surge/dip voltage (ACV), the start time (T1) and testing duration (T2) of the surge/dip voltage period. The nominal voltage and frequency settings are based on the Basic Operation section.

Parametei
Settings

Mode

Auto: When the output is on, this mode will automatically generate a trigger at 0° to keep the surge or dip event repeatedly on site.

Manual: When the output is on, this mode will wait for the TRIG[F4] soft-key to be pressed before starting the surge or dip event on site.

 
OFF: Disables surge/dip control.



The magnitude of the surge/dip part of the resultant waveform depends on the surge/dip ACV setting level.



Triggering Site selection: The surge/dip site is Example: selected as shown below.



Dip/Surge site

ACV Sets the ACV surge/dip level from the 0V level.

T1 Sets the T1 time.

Range: 0~22ms(Auto Mode)

Range: 0~99ms(Manual Mode)

T2 Sets the width of the surge/dip.

Range: 0~22ms(Auto Mode)

Range: 0~99ms(Manual Mode)

100mS Fixed 100mS delay after triggering.

Steps

 Press the Menu key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 2, *Surge/Dip Control* and press *Enter*. Alternatively, use the short-cut key shift+8.
- 3. Go to the *Mode* setting using the scroll wheel and press Enter. Select the desired mode and press *Enter* again to confirm.

The Manual mode will allow you to manually trigger the surge/dip site. The Automatic setting will automatically trigger the surge/dip site.



		Mode Manual, Auto, OFF
	4.	Set the remaining parameters. Note: these parameters are not visible when MODE is set to OFF.
		Remaining parameters ACV, T1, T2
Exit	5.	Press <i>Exit</i> [F4] to exit from the Surge/Dip Control settings.
	6.	After exiting the menu, the surge/dip control icon will appear in the status bar.
Triggering the Manual Surge/Dip Site		For the manual mode, the surge/dip site is determined by a manual trigger.
6-7 P	1.	Configure the nominal voltage and Page: 63, 65 frequency settings. See the Basic Operation chapter for details.
	2.	Turn the output on. The nominal Page 79 settings above will be output.
	3.	Press <i>Shift</i> to arm the trigger.
		Press <i>TRIG[F4]</i> to generate the trigger manually via the front panel.
	or	OR ternatively, pulse the Trigger In pin Page 149 the J1 connector high to generate e trigger.
\bigwedge	Th	e TRIG soft-key is only available when the surge/dip



The TRIG soft-key is only available when the surge/dip control is set to *Manual*.



Ramp Control

 
The Ramp Control function controls how fast the voltage level ramps up and down. This function allows you to ramp the voltage as a unit of time or as a unit of voltage.

Parameter Settings

Time

The Time setting allows you to set the ramp time as ms/Vrms.


Tup = ramp up time/1Vrms
Tdn = ramp down time/1Vrms



Voltage

The Voltage setting allows you to set the ramp time as Vrms/ms.

 Vup = voltage up/1ms Vdn = voltage down/1ms



Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



2. Use the scroll wheel to go to item 3, *Ramp Control* and press *Enter*. Alternatively, use the short-cut key shift+5.



3. Go to the *Mode* setting using the scroll wheel and press *Enter*. Select either *Voltage* or *Time* and press *Enter* again to confirm.

Mode Voltage, Time

4. For Voltage mode, set Vup and Vdn.

Vup	0.01 ~ 99.99Vrms
Vdn	0.01 ~ 99.99Vrms

5. For Time mode, set Tup and Tdn.

Tup	0.1 ~ 999.9ms	
Tdn	0.1 ~ 999 9ms	

Exit

6. Press *Exit[F4]* to exit from the Ramp Control settings.




7. Upon exiting the ramp icon will appear in the status bar.



Example


Settings: Mode=Time, Tup=1 msec, VAC=100V, Freq=50Hz, Ramp output=on.

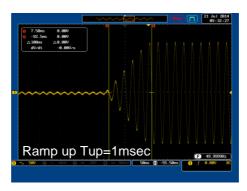



Example:

Settings: Mode=Voltage, Vdn=2Vrms, VAC=100V, Freq=50Hz, Ramp output=off.

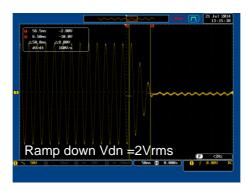


Miscellaneous

The Miscellaneous menu contains miscellaneous parameter settings.

- T Ipeak, hold → from page 89
- Power ON Output → from page 91
- Buzzer → from page 92
- SCPI Emulation → from page 93
- Remote Sense \rightarrow from page 94 (for APS-7200 and APS-7300 only).

T Ipeak, hold

The T Ipeak, hold function sets the hold time for the peak current measurement. After the output is turned on, the APS-7000 will delay starting the peak current measurement by this hold time.

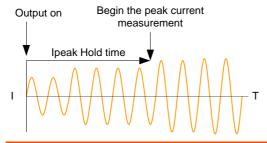

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 4, *MISC Configuration* and press *Enter*.
- 3. Go to the *T Ipeak, hold(msec)* setting using the scroll wheel and press *Enter*. Set the time and press *Enter* again to confirm.

T lpeak $1 \sim 60,000 \text{ ms}$



Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.





Settings

Power ON Output

The Power ON Output setting allows you to have the output turn on automatically after startup. The settings that are loaded are the last settings that were present in the standard mode before the unit was turned off last.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 4, *MISC Configuration* and press *Enter*.
- 3. Go to the *Power ON Output* setting using the scroll wheel and press *Enter*. Select a setting and press *Enter* to confirm.

ON	Set Output ON.
OFF	Set Output OFF.
SEQ	Execute the sequence that was loaded before the unit was last turned off.
SIM	Execute the simulation that was loaded before the unit was last turned off.
PROG	Execute the program that was loaded before the unit was last turned off.

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.





Example



Settings

Buzzer

The Buzzer setting turns the buzzer sound on or off for key presses and alarms.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 4, *MISC Configuration* and press *Enter*.
- 3. Go to the *Buzzer* setting using the scroll wheel and press *Enter*. Turn the setting on or off and press *Enter* again to confirm.

Buzzer ON, OFF

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.





Settings

SCPI Emulation

The SCPI Emulation setting supports both GW Instek as well as EXTECH SCPI remote commands. When set to EXTECH, the SCPI Emulation setting allows the APS-7000 to be a drop-in replacement for the EXTECH 6700 series by emulating the remote commands of the EXTECH units.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 4, *MISC Configuration* and press *Enter*.
- 3. Go to the *SCPI Emulation* setting using the scroll wheel and press *Enter*. Choose the SCPI emulation mode and press *Enter* again to confirm.

SCPI Emulation GW, EXTECH

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.





Settings



Remote Sense (APS-7200 and APS-7300 only)

The remote sense function detects the output voltage at the sensing input terminal. This function compensates for voltage drops across the load cables when the load is connected to the APS-7200 or APS-7300 over a long distance.



The remote sense function can compensate a maximum of 10% of the output voltage. The maximum output voltage when compensation is used is limited by the rated voltage.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



- 2. Use the scroll wheel to go to item 4, *MISC Configuration* and press *Enter*.
- 3. Go to the *Remote Sense* setting using the scroll wheel and press *Enter*. Select the unit and press *Enter* to confirm.

Remote Sense

ON, OFF

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.



 


Settings



Display

When the remote sense function is on, the displayed voltage value is the voltage measured at the sense terminal and the symbol "SV" is displayed next to the voltage reading on the standard and simple mode display.




Display



Before connecting the remote sense cables, turn off the output and peripherals. Please see page 80 for more information on the remote sense cabling instructions.

If the remote sense wires are loose or falling, the display would show a message as below.

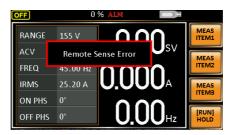





Trigger

The trigger settings are used to turn the output on or off or to set the behavior of the Trigger In and Trigger Out pins of the J1 Connector. The trigger can also be used in conjunction with the Sequence mode, Simulation mode and Surge/Dip mode. See page 149 for further details.

Pin Assignment (APS-7050 and APS-7100)

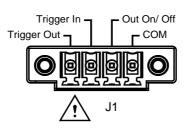

Pin Assignment (APS-7200 and APS-7300)

 

Trigger Control Settings

The trigger control menu sets both the trigger in and the trigger out behavior of the J1 connector.



The following trigger control settings are not applicable when in the Simulation test mode or the Sequence test mode.

Steps

1. Press *Shift* + 2 to access the Trigger Control menu.



2. The trigger control settings appear. The settings are divided into Input Pin and Output Pin.





Trigger Input Pin

- 1. The Input Pin settings configure what action is taken when the Trigger In pin on the J1 connector is high.
- 2. Go to the *Action* setting using the scroll wheel and press *Enter*. Choose what will happen when the Trigger In pin is pulsed high(+5V) and then press *Enter* to confirm.

None	No action is taken. Remote trigger commands are accepted.
Output	Turns the output on or off when triggered.
Setting	Sets a user-defined voltage and frequency setting when triggered.
Preset	Loads a preset setting when triggered.
Surge Dip	Triggers the surge/dip control.

3. Go to the Width setting and set the minimum pulse width to recognize the trigger input pulse.

0	Minimum pulse width (5ms)
1~ 60ms	1∼ 60ms pulse width.

4. If Output was chosen, set output status.

Status ON, OFF



5. If Setting was chosen, Set Vset and Fset.

Vset	0 ~ full scale voltage (dependent on the chosen range; 600V optional)
Fset	45.00 ~ 500.0 Hz (1000Hz optional)

If Preset was chosen, choose which preset setting should be loaded when the Trigger Input is set to high(+5V).

Memory $0 \sim 9$

Trigger Output Pin

7. Go to the *Source* setting to choose what function or test mode will be able to the trigger the output pin to pulse high.

None	No source is able to use the trigger output. Remote trigger commands are accepted.
Output	The trigger output pin is activated when the output is turned on or off.
Setting	When the settings change the trigger output pin is activated.
Preset	When a preset is loaded or saved, the trigger output pin is activated.
All	The trigger output pin is activated when any of the settings, presets or the output are changed.

8. Go to *Width* to set how long the trigger output pin is pulsed high for.

Width $1 \sim 60 \text{ms}$ 0ms: Stays high/low.



9. If Width, above, was set 0ms, you can choose the output pin polarity with the Level parameter. This setting will pull the output pin high or low when source condition is true. This setting is not available when Width is set to 1~60ms.

Level

HI (≥+2V), LO(≤+0.8V)

Exit

10. Press *Exit[F4]* to exit from the Trigger Control settings.



[1] Remote Control Commands

The following remote control commands are applicable for the trigger input or output. See the programming manual for usage details.

*TRG

:INITiate[:IMMediate]:NAME

:INITiate[:IMMediate][:TRANsient]

:MEMory:SAV

:MEMory:RCL

:MEMory:TRIGgered

:MEMory:TRIGgered?

:OUTPut[:STATe]:TRIGgered

:OUTPut[:STATe]:TRIGgered?

: SYSTem: CONFigure: TRIGger: INPut: MODE

: SYSTem: CONFigure: TRIGger: INPut: MODE?

:SYSTem:CONFigure:TRIGger:INPut:SOURce



:SYSTem:CONFigure:TRIGger:INPut:SOURce?

: SYSTem: CONFigure: TRIGger: OUTPut: MODE

:SYSTem:CONFigure:TRIGger:OUTPut:MODE?

: SYSTem: CONFigure: TRIGger: OUTPut: SOURce

:TRIGger:OUTPut:SOURce

:TRIGger:OUTPut:SOURce?

:TRIGger:OUTPut[:IMMediate]

:TRIGger:MEMory:SOURce

:TRIGger:MEMory:SOURce?

:TRIGger:MEMory[:IMMediate]

: TRIGger[:TRANsient]: SOURce

:TRIGger[:TRANsient]:SOURce?

:TRIGger[:TRANsient][:IMMediate]

[:SOURce]: FREQuency: TRIGgered

[:SOURce]:FREQuency:TRIGgered?

[:SOURce]:VOLTage[:LEVel]:TRIGgered[:AMPLitude]

[:SOURce]:VOLTage[:LEVel]:TRIGgered[:AMPLitude]?



Preset Settings

- Save Presets to Local Memory → from page 101
- Recall Presets to Local Memory → from page 102
- Manage Preset Settings → from page 103

Save Preset Settings to Local Memory

Up to 10 preset settings can be saved to internal memory.

Steps	1. Press <i>Preset</i> and then hold a number key (0~9) to save the present settings to the corresponding memory (hold) number.
	Presets $M0 \sim M9$
	2. Press the <i>Preset</i> key again to exit from the preset mode.
Example	For example, pressing <i>Preset</i> & holding 1 will save the present settings to memory slot 1 (saved to M1).
Note !	The preset key will become green when active. A beep will be heard (Buzzer set to ON) and a message will displayed when the settings are saved.



Load Preset Settings to Local Memory

Any of the 10 preset settings can be recalled from internal memory.

Steps	1. Press <i>Preset</i> and press a number key(0~9) to load the corresponding memory number.
	Presets $M0 \sim M9$
	2. Press the <i>Preset</i> key again to exit from the preset mode.
Example	For example, pressing <i>Preset</i> + 1 will recall the saved settings from memory slot 1 (recalled from M1).
Note !	The preset key will become green when active. A beep will be heard and a message will be displayed when the settings are recalled.



Manage Preset Settings

Preset settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

File Format

When files are saved to USB they are saved in the following format:

presetX.set, where X is the memory number $M0 \sim M9$. The files are saved to USB:/gw.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file preset0.set can only be recalled to memory number M0. The files can only be recalled from the USB:/gw directory.

Steps

1. Press the *Menu* key. The Menu settings will appear on the display.



- 2. Use the scroll wheel to go to item 12, *Save/Recall Files* and press *Enter*.
- 3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *Preset* and press *Enter* to confirm.
- 4. Go to the *Action* setting and choose the file operation and then press *Enter*.

MEM→USB	Saves the selected preset memory from the local memory to a USB flash drive.
MEM←USB	Loads a preset memory from a USB flash drive to the selected local memory.



DELETE(MEM)	Deletes the selected preset
	memory from local memory.

5. Go to the *Memory No.* setting and select the preset memory number to perform the operation on. Press *Enter* to confirm.

Memory No. $0 \sim 9 \text{ (M0} \sim \text{M9)}$

Execute File Operation

6. Press *Exe*[*F*1] to perform the file operation.



Exit

7. Press *Exit*[*F*4] to exit from the *Save*/*Recall Files* settings.





Settings

Arbitrary Waveform Function

The ARB function is able to select a large range of continuous arbitrary waveforms. There are a number of basic waveform shapes to choose from, each of which can be customized to output a waveform with your desired attributes.

The ARB function can be used in conjunction with the Simulate and Sequences modes, but cannot be used with the Program test modes. When the WAVE parameter is set to any waveform other than SINE, ARB will be shown in the status bar when in the BASIC operation, Simulate mode or Sequence mode to indicate that the ARB function is active when in these modes.



The output will always be turned off if the ARB waveform is changed. It is not possible to keep the output on whilst the type of ARB waveform is changed.

- ARB Function Overview → from page 106
- Selecting an ARB Waveform → from page 109




ARB Mode Overview

Background

The ARB mode function has 7 basic waveforms and a number of settable attributes, depending on the chosen waveform.

Setting Screen Overview

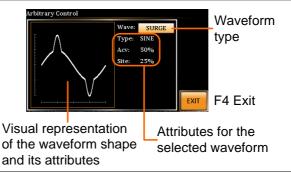


ARB Waveform Overview

The following describes each of the 7 basic waveforms.

Sine

 This is the default waveform used for the APS-7000. No settable attributes.




Triangle

Basic triangle waveform has a settable number of percentage.

Attributes:

 Sym%: 0 ~ 100% Arbitrary Control






Staircase

The staircase waveform has a settable number of step levels.

Attributes:

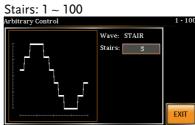

Clip

Outputs a clipped sinewave. The degree to which the sine wave is clipped is settable.

Attributes:


Ratio: 0.50 ~ 0.99 RMS: RATIO/KEEP



CF

Crest factor waveform. The crest factor is settable.

Attributes:

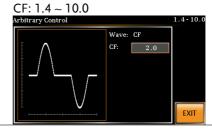



Surge

The surge waveform has a settable ACV base level, site size and site shape.

Attributes:

Type: Sine, Square (site waveform type) Acv: $0 \sim 100\%$ (base waveform ampl.) Site: $0 \sim 100\%$ (site waveform width)



ARB

The ARB waveform shape function simply adds a number Fourier series terms to create an arbitrary waveform. Attributes:

Type: $1 \sim 22$ (Number of selectable



The numerical figures shown under the Type parameter shows which Fourier series terms are used and their (bn) coefficients.



Selecting an ARB Waveform

Menu

Entering the ARB 1. Press *Shift* + 1 to access the ARB menu.



2. Set the Wave parameter with the scroll wheel and confirm the setting with the Enter key.

Wave	Sine, Triangle, Stair, Clip, CF, Surge,
	ARB

3. Use the scroll wheel and *Enter* key to select any other attributes for the selected waveform and press Enter to confirm any settings.

Other Attributes:

Sine Wave:	None
Triangle Wave:	None
Stair:	Stairs: 1 ~ 100
Clip:	N*ACV: 1 ~ 10
CF:	CF: 1.4 ~ 10.0
Surge:	Type: Sine, Square ACV: 0 ~ 100% Site: 0 ~ 100%

Exit

4. Press *Exit*[F4] to exit from the ARB settings.



Common Settings 5. Press Menu to go back to the main menu.






6. Set the voltage, frequency, Irms level and so on as you normally would for the standard ACV output. See the Basic Operation chapter for setting details.

Page 61



When the WAVE parameter is set to any waveform other than SINE, ARB will be shown on the display when in the BASIC operation, Simulate mode or Sequence mode to indicate that the ARB function is active when in these modes.

Standard Mode Example

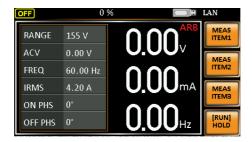

Simple Mode Example




Sequence Example





Simulate Example SIMULATE

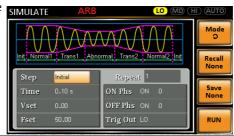



Test Mode Function

There are three test modes.

- Simulate Mode: voltage/frequency fluctuations.
 - The Simulate function is a quick and easy way to simulate fluctuations in voltage, frequency, phase and other anomalies in mains supply power.
- Sequence Mode: creates test sequences.
 - The Sequence function creates arbitrary AC waveforms based on user defined parameters.
- Program Mode: Runs a group of test sequences.
 - The Program function runs different memory steps sequentially. Each step of a program is a preset memory configuration (M01 ~ M50). The Program function can also perform pass/fail testing.
- Simulate Mode Overview → from page 113
- Simulate Settings → from page 117
- Save Simulation to Local Memory→ from page 120
- Recall Simulation from Local Memory→ from page 120
- Manage Simulation Settings → from page 121
- Run Simulation → from page 123
- Sequence Mode Overview → from page 125
- Sequence Settings → from page 129
- Save Sequence to Local Memory → from page 133
- Recall Sequence from Local Memory → from page 133
- Manage Sequence Settings → from page 134
- Run Sequence → from page 136
- Program Mode Overview → from page 138
- Save a Program to Local Memory → from page 145
- Recall a Program from Local Memory → from page 145
- Manage Program Settings → from page 146




Simulate Mode Overview

Background

The Simulate function is used to test power supply fluctuation. This function is able to simulate common abnormalities in mains power such as fluctuations in voltage, phase and frequency. These simulations can be run as one-off anomalies or cyclic anomalies.

Setting Screen Overview

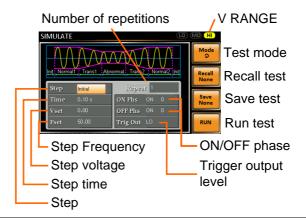


Step Overview

The Simulate function is comprised of 6 steps. Each step is run sequentially in the following order: Initial, Normal1, Trans1, Abnormal, Trans2, Normal2, Initial.

Initial	The Initial step is used as the initial
	and final settings of the waveform
	simulation. This is the standby step
	before the test starts and the standby
	step after the test ends.
Normal1	This step configures the normal output
	conditions that precede the abnormal
	conditions.



Trans1	This step configures the transition
	from normal to abnormal conditions.
	This step will linearly interpolate the
	normal settings to the abnormal
	settings. This step can be skipped for
	abrupt state changes.
Abnormal	This step contains the abnormal
	conditions for the simulation.
Trans2	This step configures the transition
	from abnormal to normal conditions.
Normal2	This step configures the normal
	conditions that supersede the
	abnormal conditions.

 

Parameter Overview The following table shows which parameters are available for each step.


Step\Parameter	Initial	Normal1	Trans1	Abnormal	Trans2	Normal2
Repeat	✓	✓	✓	✓	✓	✓
Time	1	✓	1	✓	✓	✓
ON Phs	1	✓	Χ	✓	Χ	✓
OFF Phs	1	✓	Χ	✓	Χ	√
Vset	1	✓	Χ	✓	Χ	✓
Fset	1	✓	Χ	✓	Χ	√
Trig Out	1	✓	1	✓	1	✓



Repeat	Indicates the number of times the simulation will be run, from Normal1 to Normal2.
	A value of 0 indicates infinite repeats. The repeat setting is the same for each step.
Time	Sets the duration time of the step. When the ON Phs=ON, the total duration of the step is equal to the Time setting + ON Phs=ON duration.
ON Phs	Sets the starting phase of the waveform for the step. Not applicable for the Trans 1/2 steps.
OFF Phs	Sets the off phase of the waveform after the output has been turned off. Not applicable for the Trans 1/2 steps.
Fset	Sets the frequency of the step. Not applicable for the Trans 1/2 steps.
Vset	Sets the voltage of the step. Not applicable for the Trans 1/2 steps.
Trig Out	Sets the polarity of the trigger out port for the duration of the step. The trigger out signal is sent at the start of each step (including the first initial step).



The following diagram illustrates the relationship between each of the parameters in a step.

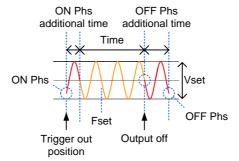



Simulate Settings

Entering the Simulate Menu

1. Press Test.



2. Press *Mode*[F1] and use the scroll wheel to select *SIMULATE* and then press *Enter*.

Simulate Mode



Steps

- 3. Use the scroll wheel to go to the *Step* setting and press *Enter*.
- 4. Use the scroll wheel to select one of the simulation steps and press *Enter*.

Steps	Initial, Normal1, Trans1, Abnormal,
	Trans2, Normal2

5. Go to the *Time* setting and set the duration of the step.

0.01 ~ 3600.00s, 0(Trans 1 and
Trans2)
Note: For Trans1 and Trans2, it
supports a value of 0, which will
skip the step.

6. Go to the *ON Phs* setting and set the starting phase of the step. Not applicable for Trans1 or Trans2.




ON Phase	ON, OFF
ON Phase	0~ 359°
Resolution	1°

7. Go to the *OFF Phs* setting and set the end phase of the step. Not applicable for Trans1 or Trans2.

OFF Phase	ON, OFF
OFF Phase	0~ 359°
Resolution	1°

 8. Press the *Range* key repeatedly to set the voltage range for the Vset parameter. The range will be shown in the top corner, which indicates that the simulation will be executed within this voltage range.





In several cases, time will be inconsistent with setting when Auto Range is executed. Hence, except for specific case, if any, please select a fixed Range.

Go to the *Vset* setting and set the Vrms level of the step. If you input a Vset value that is not within the voltage range, the input value will be ignored.

Not applicable for Trans1 and Trans2.

Vset	0.00 ~ 310.0Vrms (range dependent)
	(600V optional)

10. Go to the *Fset* setting set the frequency of the step. Not applicable for Trans1 and Trans2.



Fset 45.00 ~ 500.0Hz (1000Hz optional)

11. Go to the *Trig Out* setting and set the state of the trigger out pin at the start of each step.

Trig Out HI, LO

12. Lastly, go to the *Repeat* parameter select the number of times the simulation will repeat the Normal1-Trans1-Abnormal-Trans2-Normal2 sequence of steps. A value of 0 will set the number of repetitions to infinite.

Repeat $1 \sim 9999$, 0(infinite)



Save a Simulation to Local Memory

Saving a Simulation

Simulation settings can be saved to one of 10 memory slots (SIM0 ~ SIM9).

Steps

- 1. Press *Save*[F3] and then long press a *number key* when prompted.
- 2. A message will appear when the save is successful.

Save $SIM0 \sim SIM9$

Recall a Simulation from Local Memory

Recall a Simulation Simulation settings can be recalled from one of 10 memory slots (SIM0 \sim SIM9).

Steps

- 1. Press *Recall*[F2] and then press a *number key* when prompted.
- 2. A message will appear when the settings are recalled successfully.

Recall $SIM0 \sim SIM9$

Manage Simulation Settings

Simulation settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

File Format

When files are saved to USB they are saved in the following format:

simX.sim, where X is the memory number $0 \sim 9$ (SIM0 \sim SIM9). The files are saved to USB:/gw.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file sim0.sim can only be recalled to memory number SIM0. The files can only be recalled from the USB:/gw directory.

Steps

1. Press the *Menu* key. The Menu settings will appear on the display.



- 2. Use the scroll wheel to go to item 12, *Save/Recall Files* and press *Enter*.
- 3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *SIMULATE* and press *Enter* to confirm.
- 4. Go to the *Action* setting and choose the file operation and then press *Enter*.

MEM→USB	Saves the selected simulation memory from the local memory to a USB flash drive.
MEM←USB	Loads the simulation memory from a USB flash drive to the selected local memory.



DELETE(MEM) Deletes the selected simulation memory from local memory.

5. Go to the *Memory No*. setting and select the simulation memory number to perform the operation on. Press *Enter* to confirm.

Memory No. $0 \sim 9 \text{ (SIM0} \sim \text{SIM9)}$

Execute File Operation

6. Press *Exe*[*F*1] to perform the file operation.



Exit

7. Press *Exit*[*F*4] to exit from the *Save*/*Recall Files* settings.



Example



Settings




Running a Simulation

Background

When running a simulation, the display changes to the simulate run view.

Run Screen Overview

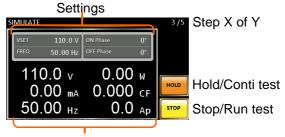

Readback measurements



Ap of readback measurements that is mean peak current (Apk)

Steps

1. Press Output.



2. Press *Run*[*F*4]. The test will start to run.

The settings of the current step will be shown at the top of the screen and the measurement readout will be shown on the bottom of the screen.

The top-right of the screen will display the current step number of the simulation.

1/5 = Normal1

2/5 = Trans1

3/5 = Abnormal

4/5 = Trans2

5/5 = Normal2



3. The test will continue to run until the last repeat step has run, *Stop[F4]* is pressed or the output is turned off*. When the test has finished/stopped, the screen will return to the original settings screen.

* If the OFF-phase has been set, the output will continue until the OFF-phase setting is satisfied.

Hold Test To pause the test mid-way, press *Hold[F3]*.

Continue Test To continue a paused test, press *Conti*[*F3*].




Sequence Mode Overview

Background

The Sequence function creates wholly AC arbitrary waveforms. These waveforms are made from a number of steps that when run creates an arbitrary waveform.

A Sequence function can be comprised of up to 255 steps.

Setting Screen Overview

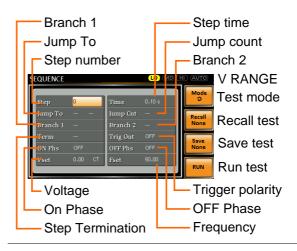

Sequence Parameter Overview

The Sequence function is comprised of a minimum of 2 steps that are executed in user defined sequences.

Each step can have different step times, voltage levels, start phases, stop phases and frequencies.



Step 0 is assigned as a "Standby" step. At the end of the test the unit will shift to the standby step.

Step Assigns the step number.




Time	Sets the step duration time. This step time is exclusive of any transition time needed to match start phases. See the diagram on page 127 for details.
Јитр То	The Jump To setting determines which step to jump to at the end of the step. If Jump To is turned off, the unit will follow the Term (Step termination) setting for the step.
Jump Cnt.	Determines the number of times to loop the jump step.
Branch1/ Branch2	The Branch settings allow you to make a selectable branch within the sequence when the sequence is running or on hold. The branch1 or branch2 actions are enabled by pressing the F1 or F2 function keys, or by using the :TRIG:SEQ:SEL:EXEC remote control command. After the branch step(s) have completed the unit will return back to the step from which the branch was executed and continue to run the step from where it left off.
Term	Determines the step termination settings at end of the step. The CONT setting tells the
	sequence to go to the next step.
	The HOLD setting will pause the output at the end of the step and will only continue to the next step when CONT[F3] is pressed.
	The END setting will end the sequence and go to Step 0(standby step).

Trig Out	Sets the polarity for the trig out pin on the J1 connector when the step is running.
ON/OFF Phs	Sets the start and stop phase of the AC waveform. The ON Phs setting sets the starting phase of the step.
	OFF Phs sets the off phase <i>for the output</i> when the output if turned off.
Vset	Sets the AC voltage level. There are 4 secondary voltage settings that determine how the voltage is output.
	Constant: Sets the voltage level of the step immediately to Vset values.
	Keep: Sets the voltage level to "keep" the voltage of the previous step.
	Sweep: Linearly increases or decreases the values from the end of the previous step to the end of the current step.
Voltage Range	There are 4 voltage range settings: HI range (0~600VAC), MD range (0~310VAC), LO range (0~ 155VAC), Auto
Fset	Sets the frequency of the step.
Time of step ON Step 1	Time of step ON Phs OFF Phs ON Phs Step 1
Jump Cnt=0	Jump Cnt=1 Output off

Sequence Example



Sequence Flow Example

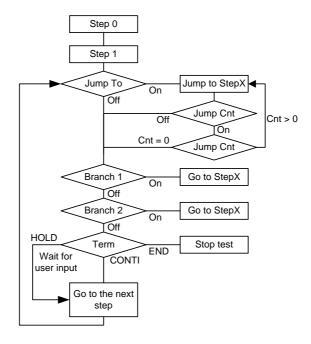



Sequence Settings

Entering the Sequence Menu

1. Press Test.



2. Press *Mode*[F1] and use the scroll wheel to display *Sequence Mode* and then press *Enter*.



Steps

- 3. Use the scroll wheel to go to the *Step* setting and press *Enter*.
- 4. Use the scroll wheel to select the step number. 0 is always the starting step for the sequence.

Step 0 ~ 255

5. Go to the *Time setting* and set the duration of the step.

Time 0.01 ~ 3600.00s

6. Go to the *Jump To* setting and choose which step to jump to, or turn the setting off.

Step ON, OFF, 0 ~ 255

7. Go to the *Jump Cnt* setting and set the number of times the current step will loop.



Jump Cnt	1 ~ 999, 0
	Note: A setting of 0 will set the number of jumps to infinite.

8. Go to the Branch 1/2 setting and set a step to branch to.

Branch 1, 2 ON, OFF, 0 ~ 255

9. Go to the *Term* setting and set the step termination setting. CONTI will automatically go to the next step at the end of the step. END will return to step 0. HOLD will stay at the current step until you allow the sequence to continue to the next step.

Term CONTI, END, HOLD

10. Go to the *Trig Out* setting and set the output state of the trigger out pin when the step has started.

Trig Out HI, LO

11. Go to the *ON Phs* setting and set the starting phase of the step.


ON Phase	ON, OFF	
ON Phase	0~ 359°	
Resolution	1°	

12. Go to the *OFF Phs* setting and set the end phase of the step.

OFF Phase	ON, OFF	
OFF Phase	0~ 359°	
Resolution	1°	



 13. Press the *Range* key repeatedly to set the voltage range for the Vset parameter. The Range will be shown in the top corner.



14. Go to the *Vset* setting and set the output voltage for the step. If the input setting voltage doesn't appear in the selected voltage range, an "Over Range" alarm will appear during Sequence. At this time, the output voltage maintains on the previous setting voltage value.

Vset	0 ~ 310V (range dependent) (600V optional)
Secondary settings	CT (Constant), KP (Keep), SP (Sweep)
	Note: Step 0 can only be set to CT or SP.




When output has been executed under Standard Mode, press the [Test] key to enter Sequence Mode, and then execute step 0 to set output value.

15. Go to the *Fset* setting and set the frequency of the step.

Fset 45.00 ~ 500.0Hz(1000Hz optional)

 Example Test





The example above shows how the secondary voltage settings affect how the voltage is output in each step.

Step no.	0	1	2	3
Vset (V)	0	110	90	N/A
2 nd Setting	CT	CT	SP	KP



Save a Sequence to Local Memory

Saving a Sequence

Sequence settings can be saved to one of 10

memory slots (SEQ0 ~ SEQ9).

Steps

1. Press *Save*[*F*3] and then long press a *number key* when prompted.

2. A message will appear when the save is successful.

Save $SEQ0 \sim SEQ9$

Recall a Sequence from Local Memory

Recall a Sequence Sequence settings can be recalled from one of 10 memory slots (SEQ0 \sim SEQ9).

Steps

- 1. Press *Recall*[F2] and then press a *number key* when prompted.
- 2. A message will appear when the settings are recalled successfully.

Recall $SEQ0 \sim SEQ9$



Manage Sequence Settings

Sequence settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

File Format

When files are saved to USB they are saved in the following format:

seqX.seq, where X is the memory number $0 \sim 9$ (SEQ0 \sim SEQ9). The files are saved to USB:/gw.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file seq0.seq can only be recalled to memory number SEQ0. The files can only be recalled from the USB:/gw directory.

Steps

1. Press the *Menu* key. The Menu settings will appear on the display.



- 2. Use the scroll wheel to go to item 12, *Save/Recall Files* and press *Enter*.
- 3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *SEQUENCE* and press *Enter* to confirm.
- 4. Go to the *Action* setting and choose the file operation and then press *Enter*.

MEM→USB	Saves the selected sequence memory from the local memory to a USB flash drive.
MEM ← USB	Loads the sequence memory from a USB flash drive to the selected local memory.



DELETE(MEM)	Deletes the selected sequence
	memory from local memory.

5. Go to the *Memory No.* setting and select the sequence memory number to perform the operation on. Press *Enter* to confirm.

Memory No. $0 \sim 9 \text{ (SEQ0} \sim \text{SEQ9)}$

Execute File Operation

6. Press *Exe*[*F*1] to perform the file operation.



Exit

7. Press *Exit[F4]* to exit from the *Save/Recall Files* settings.



Example



Settings




Running a Sequence

Background

When running a sequence, the display changes to the sequence run view.

Run Screen Overview

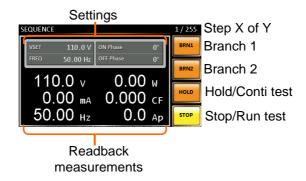

Steps

1. Press Output.



2. Press Run[F4]. The test will start to run.

The settings of the current step will be shown at the top of the screen and the measurement readout will be shown on the bottom of the screen.

The top-right of the screen will be display the current step number by the total number of steps (current step/total steps).

- 3. The test will continue to run until the last step has run, or *Stop*[*F*4] is pressed. When the test has finished/stopped, the screen will return to the original settings screen.
- 4. If any of the steps have a conditional branch configured, the branch can be manually evoked




	during run time by pressing the <i>BRN1</i> [F1] (branch 1) soft-key or the <i>BRN2</i> [F2] soft-key(branch 2). Alternatively the :TRIG:SEQ:SEL:EXEC command can also be used evoke a conditional branch.
Hold Test	To pause the test mid-way, press <i>Hold[F3]</i> .
Continue Test	To continued a paused test, press Conti[F3].



Program Mode Overview


Background

 The Program mode creates a test program comprised of a number of different memories and steps that can include pass/fail testing. Each memory is made up of 9 steps and each program is made up of 50 memories. A program will run each memory sequentially, which in turn will run each step in the memory sequentially until the program is terminated or a step in the program is programmed to end. Each memory, each step and even each program can also be programmed to loop a user-defined number of times. The diagram below shows the basis of a program.





Setting Screen Overview

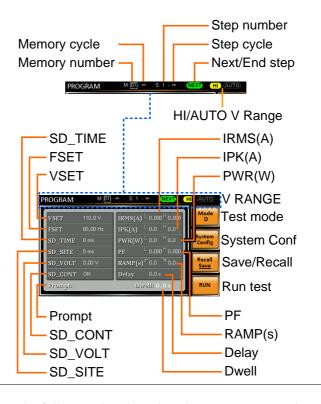

Settings Screen Parameter Overview The following list describes the parameters on the settings screen.

Memory number	Sets the current memory number.
Memory cycle	Sets the number of cycles for the selected memory number.
Step number	Sets the current step for the current memory number.
Step cycle	Sets the number of cycles for the selected step number.



NEXT/END	This setting will configure the action after a step has completed. NEXT will go to the next step/memory. END will end the program at the end of the step.
HI/AUTO V range	Sets the voltage range for the program, HI or AUTO.
	When set to AUTO, the unit will automatically set the range to 155VAC, 310VAC or 600VAC (the APS-003 option only).
	When set to HI, the unit range is set to 310VAC or 600VAC if the APS-003 option is installed.
VSET	Sets the output voltage for the current step.
FSET	Sets the frequency for the current step.
SD_SITE	Surge/Dip site position. (T1 time)
SD_TIME	Surge/Dip time. (T2 time)
SD_VOLT	Surge/Dip voltage. (ACV)
SD_CONT	Surge/Dip trigger control. Manual or Auto.
Example	T1 T2 T1 T2 K— ACV ACV ACV
IRMS(A)	Sets the IRMS high/low limit for the step.
IPK(A)	Sets the peak current high/low limit for the step.




PWR(W)	Sets the power high/low limit for the step.
PF	Sets the power factor high/low limit.
Ramp Up/Down	Sets the ramp up and down times.
Delay	The delay time introduces a delay time before testing pass/fail limits. The delay timing starts as soon as a step has started.
Dwell	The dwell time sets the total execution time of the step.
Prompt	Sets a user-defined text message for the current step.
	Note: The Enter soft-key must be used to exit out of the text input screen.


On screen keyboard



 Enter soft-key





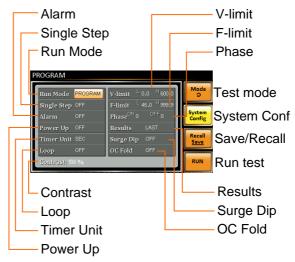

System
Configuration
Parameters

The System Configuration screen is accessible when the *System Config*[F2] soft-key is pressed.


Run Mode	When set to "MANUAL" mode, only Memory number, VSET, FSET, H-IRMS(A), SD-VOLT, SD-SITE, SD_CONT and SD-TIME will be enabled.
	When set to "PROGRAM" mode, all the parameters are available.
Single Step	Sets the program to run only one step at a time. After a step is run the program is held until the Output key is pressed, after which the program will go to the next step.
Alarm	Turns the alarm buzzer on/off.
Power Up	When this option is turned on, the current program will be loaded and run after APS-7000 powers up.



Timer Unit	Sets the time units for the Dwell and Delay parameters.
Loop	Determines how many times the program itself will loop (M1 through M50).
V-Limit	Sets the voltage limit.
F-Limit	Sets the frequency limit.
Phase	Sets the ON phase and OFF phase of the step.
Results	Configures how the results are displayed:

ALL: Shows all the step results on the screen.

Example:

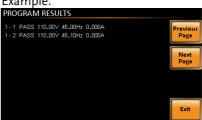

LAST: Only displays the last result.





P/F: If one of the test results is judged a fail, then FAIL is displayed on the screen.

Fail Example:



Pass Example:



Surge/Dip Turns the Surge Dip function on/off.

OC Fold Turns OC Fold on/off.

Contrast Sets the LCD contrast.



Save a Program to Local Memory

Saving a Sequence

Sequence settings can be saved to one of 10 memory slots (PROG0 ~ PROG9).

Steps

- 1. Press *Save/Recall[F3]* and then long press a *number key*.
- 2. A message will appear when the save is successful.

Save PROG0 ~ PROG9

Recall a Program from Local Memory

Recall a Sequence Sequence settings can be recalled from one of 10 memory slots (PROG0 \sim PROG9).

Steps

- 1. Press *Recall*[F2] and then press a *number key*.
- 2. A message will appear when the settings are recalled successfully.

Recall PROG0 ~ PROG9



Manage Program Settings

Program settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

File Format

When files are saved to USB they are saved in the following format:

progX.pro, where X is the memory number $0 \sim 9$ (PROG0 \sim PROG9). The files are saved to USB:/gw.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file prog0.pro can only be recalled to memory number PROG0. The files can only be recalled from the USB:/gw directory.

Steps

1. Press the *Menu* key. The Menu settings will appear on the display.



- 2. Use the scroll wheel to go to item 12, *Save/Recall Files* and press *Enter*.
- 3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *SEQUENCE* and press *Enter* to confirm.
- 4. Go to the *Action* setting and choose the file operation and then press *Enter*.

MEM→USB	Saves the selected program memory from the local memory to a USB flash drive.
MEM←USB	Loads the program memory from a USB flash drive to the selected local memory.



DELETE(MEM)	Deletes the selected program	
	memory from local memory.	

5. Go to the *Memory No.* setting and select the program memory number to perform the operation on. Press *Enter* to confirm.

Memory No. $0 \sim 9 \text{ (PROG0} \sim \text{PROG9)}$

Execute File Operation

6. Press *Exe*[*F*1] to perform the file operation.



Exit

7. Press *Exit*[*F*4] to exit from the *Save*/*Recall Files* settings.



Example



Settings



REAR PANEL SIGNAL OUTPUTS

The rear panel has 3 signal output connectors. These connectors are used for external triggering, synchronization and test judgment state. The following chapter will give a brief overview each of these connectors.

I1 Connector Overview	149
Signal Output Overview	150
SYNC Output Overview	



 
J1 Connector Overview

 
Overview

The J1 connector is primarily used for triggering and for monitoring the status of the power supply. Each pin is isolated from the power supply (photo coupled). The Trigger In and Out On/Off input port are pulled high internally to +5V.

The trigger control menu configures the Trigger In and Trigger Out pins. See page 94 for details on the trigger control settings.

Pin Assignment






APS-7050 and APS-7100

APS-7200 and APS-7300

according
n the
to the
ction
the Trigger
de,
ng a
preset
to this
by default.
֡֡֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜֜



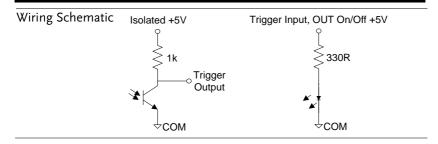


Signal Output Overview

Overview

The Signal Output port is used in the Program Mode. This port is used to remotely monitor the PASS, FAIL and Processing conditions. Each of these conditions are isolated from the APS-7000 with internal relays.

Pin Assignment

 Remote relay contact







APS-7200 APS-7300

Pin name	Pin number	Description
	1	Pass pin
	2	Pass return pin
	3	Processing pin
	4	Fail pin
	5	Processing return pin
	6	Fail return pin
	Pass: Connec	t between Pin1 and Pin2
	Fail: Connect	between Pin4 and Pin6
	Processing: Connect between Pin3 and Pin5	
! CAUTION	The internal relays allow for a maximum voltage of 250VAC and maximum current of 3A.	

 


SYNC Output Overview

Overview The SYNC output outputs a +10V signal when the

output is turned on.

Pin Assignment





COMMUNICATION

This chapter describes basic configuration of IEEE488.2 based remote control. For a command list, refer to the programming manual, downloadable from GW Instek website, www.gwinstek.com



If the instrument is remotely controlled via the USB/LAN/RS-232/GPIB interface, the panel lock is automatically enabled.

Interface Configuration	153
USB Remote Interface – Optional	
(APS-7050 and APS-7100 only)	153
RS-232 Remote Interface - Optional	154
RS-232/USB Remote Control Function Check	157
Using Realterm to Establish a Remote Connection	
Configure GPIB Interface - Optional	161
GPIB Function Check	162
Configure Ethernet Connection	166
Web Server Remote Control Function Check	168
Socket Server Function Check	



Interface Configuration

USB Remote Interface – Optional (APS-7050 and APS-7100 only)

USB configuration	PC side connector	Type A, host		
9	APS-7000 side connector	Rear panel Type B, slave		
	Speed	1.1/2.0 (full speed/auto speed)		
	USB Class	CDC (communications device class)		
Note !	be installed before	The RS-232/USB interface card (APS-002) must first be installed before the USB interface can be used for remote control. Please see page 42 for installation details.		
Steps	-	. Connect the Type A-Type B USB cable from the PC to the rear panel USB B port.		
	2. Press the <i>Ment</i> setting will ap	wey. The Menu pear on the display.		
		Use the scroll wheel to go to item 6, <i>Rear USB</i> and press <i>Enter</i> .		
	4. Go to the Speed	Go to the <i>Speed</i> setting and set the USB speed.		
	Speed	Full, Auto		
		on is successful <i>Connection Status</i> om Offline to Online.		



Connection status



Exit

6. Press *Exit*[*F4*] to exit from the rear panel USB settings.



RS-232 Remote Interface - Optional

The APS-002 RS-232/USB or APS-007 RS-232 interface card must be installed to remotely control the APS-7000 via the serial port.

RS-232 configuration	Connector	BD-9, male	
	Parameters	Baud rate, data bits, parity, stop bits.	
Pin Assignment	12345	2: RxD (Receive data) 3: TxD (Transmit data) 5: GND 4, 6 ~ 9: No connection	

Pin Connection

Use a Null Modem connection (RS-232C cable) as shown in the diagram below.







The RS-232/USB (APS-002) or RS-232 (APS-007) must first be installed before the RS-232 interface can be used for remote control. Please see page 42 for installation details.

Steps

1. Connect the RS-232C cable from the PC to the rear panel RS-232 port.



2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 7, *Serial Port* and press *Enter*.
- 4. Go to the *Function Active* setting and turn the serial port connection on.

scriat port conficction on.		
Function Active	ON, OFF	

5. Set the remaining serial port settings.

Baud rate	1200, 2400, 4800, 9600(default), 19200, 38400, 57600, 115200,
Data bits	7, 8(default)
Parity	None(default), odd, even
Stop bits	1(default),2

Serial port configuration





Exit

6. Press *Exit*[*F*4] to exit from the serial port settings.





RS-232/USB Remote Control Function Check

Functionality check

Invoke a terminal application such as Realterm.

For both USB and RS-232, set the COM port, baud rate, stop bit, data bit and parity accordingly. The RS-232 settings are configured on the APS-7000. The UART settings for the USB connection can be seen in the Windows Device Manager.

To check the COM settings in Windows, see the Device Manager. For example, in WinXP go to the Control panel \rightarrow System \rightarrow Hardware tab.



If you are not familiar with using a terminal application to send/receive remote commands from the serial port or via a USB connection, please see page 158 for more information.

Run this query command via the terminal after the instrument has been configured for RS-232/USB remote control (page 154, 153).

*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

GWINSTEK, APS-7050, GEXXXXXXX, XX.XX.XXXXXXXX

Manufacturer: GWINSTEK

Model number: APS-7050

Serial number: GEXXXXXX

Software version: XX.XX.XXXXXXX





For further details, please see the programming manual, available on the GW Instek web site @ www.gwinstek.com.

Using Realterm to Establish a Remote Connection

Background

Realterm is a terminal program that can be used to communicate with a device attached to the serial port of a PC or via an emulated serial port via USB.

The following instructions apply to version 2.0.0.70. Even though Realterm is used as an example to establish a remote connection, any terminal program can be used that has similar functionality.



Realterm can be downloaded on Sourceforge.net free of charge.

For more information please see http://realterm.sourceforge.net/

Operation

- Download Realterm and install according to the instructions on the Realterm website.
- 2. Connect the APS-7000 via USB (page 153) or via RS-232 (page 154).
- 3. If using RS-232, make note of the configured baud rate, stop bits and parity.
- Go to the Windows device manager and find the COM port number for the connection.
 For example, go to the Start menu > Control Panel > Device Manager.

Double click the Ports icon to reveal the



connected serial port devices and the COM port for the each connected device.

If using USB, the baud rate, stop bit and parity settings can be viewed by right-clicking the connected device and selecting the *Properties* option.



Start Realterm on the PC as an administrator. Click:

Start menu>All Programs>RealTerm>realterm

Tip: to run as an administrator, you can right click the Realterm icon in the Windows Start menu and select the *Run as Administrator* option.


6. After Realterm has started, click on the Port tab.

Enter the *Baud*, *Parity*, *Data bits*, *Stop bits* and *Port* number configuration for the connection.

The *Hardware Flow Control, Software Flow Control* options can be left at the default settings.

Press *Open* to connect to the APS-7000.



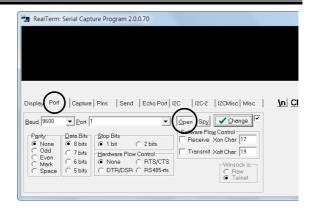




For USB, the baud rate should be fixed to 115,200.

7. Click on the Send tab.

In the *EOL* configuration, check on the +*LF* check boxes.

Enter the query: *idn?

Click on Send ASCII.

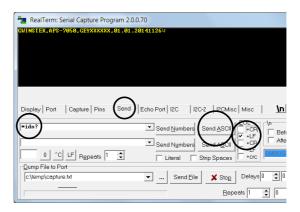



8. The terminal display will return the following:

GWINSTEK, APS-7050, GEXXXXXXX, XX.XX.XXXXXXXX

(manufacturer, model, serial number, software version)

If Realterm fails to connect to the APS-7000, please check all the cables and settings and try again.

Configure GPIB Interface - Optional

To use GPIB, the optional APS-001 GPIB interface card must first be installed.



The GPIB interface card (APS-001) must first be installed before the GPIB interface can be used for remote control. Please see page 42 for installation details.

GPIB Configuration

1. Connect a GPIB cable from the PC to the GPIB on the interface card.



2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 8, *GPIB* and press *Enter*.
- 4. If the GPIB card is installed successfully, the *Card Status* will show *Plugged in*.
- 5. Go to the *Function Active* setting and turn the GPIB port on.



6.

Function Active	ON, OFF	
Set the GPIB addre	ess.	

 $0 \sim 30$

GPIB port configuration

GPIB Address



Exit

7. Press *Exit*[*F*4] to exit from the serial port settings.



GPIB constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
- Unique address assigned to each device
- At least 2/3 of the devices turned On
- No loop or parallel connection

GPIB Function Check

Functionality check

Please use the National Instruments Measurement & Automation Controller software to confirm GPIB/LAN functionality.

See the National Instrument website, http://www.ni.com for details.



For further details, please see the programming manual, available on the GW Instek web site @ www.gwinstek.com.



Operation

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:



Start>All Programs>NI MAX



From the Configuration panel access;My System>Devices and Interfaces>GPIB0



- 3. Press the Scan for Instruments button.
- 4. In the *Connected Instruments* panel the APS-7000 should be detected as *Instrument 0* with the address the same as that configured on the APS-7000.
- 5. Double click the *Instrument 0* icon.



- 6. Click on Visa Properties.
- 7. Click on Open Visa Test Panel.



- 8. Click on the Input/Output icon.
- 9. Under the Basic I/O tab, ensure *IDN? is written in the Select or Enter Command text box.
- 10. Click on the *Query* button to send the **IDN*? query to the instrument.



11. The instrument identification string will be returned to the buffer area:

GWINSTEK, APS-7050, GEXXXXXXX, XX.XX.XXXXXXXX

(manufacturer, model, serial number, software version)



12. The function check is complete.



- All product information related to NI-VISA belongs to NATIONAL INSTRUMENTS CORP.
- For using NI-VISA, please link to NATIONAL INSTRUMENTS CORP website to download and install it.
- When using NI-VISA, please be aware of the relevant license terms of NATIONAL INSTRUMENTS CORP.



Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.

The APS-7000 supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.

Ethernet Parameters	MAC Address (display only)	DHCP
	IP Address	Subnet Mask
	Gateway	DNS Address
	DNS Server	Socket port fixed at 2268
Ethernet	1. Connect a LAN cal	ole from the PC

Ethernet Configuration

 Connect a LAN cable from the PC to the Ethernet port on the rear panel.



2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 5, *LAN* and press *Enter*.
- 4. If the LAN cable is installed correctly a connection is active, the *Connection Status* will show *Online*
- 5. To automatically have the network assign an IP address, set DHCP to ON. Otherwise set DHCP to OFF to manually set the Ethernet settings.

	 <i>J</i>	0-1
DHCP	ON OFF	
5	014, 011	



6. If DHCP was set to OFF, configure the remaining LAN parameters.

IP Address

Subnet Mask

Gateway

DNS Server

LAN configuration



Exit

7. Press *Exit*[*F*4] to exit from the LAN settings.





Web Server Remote Control Function Check

Functionality check

Enter the IP address of the power supply (for example: http:// XXX.XXX.XXX.XXX) in a web browser after the instrument has been configured for LAN(page 166).

The web interface allows you to:

- View the system and information and the network configuration.
- View the analog control pinout.
- View the dimensions of the unit.
- View the operating area

Example:





Socket Server Function Check

Background

To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or "downloads" at the following URL, http://www.ni.com/visa/

Requirements

Operating System: Windows XP, 7, 8, 8.1

Functionality check

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:

Start>All Programs>NI MAX




2. From the Configuration panel access;


My System>Devices and Interfaces>Network Devices

Press Add New Network Device>Visa TCP/IP Resource...



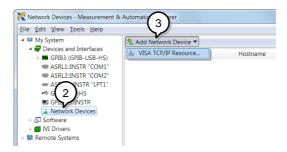


4. Select *Manual Entry of Raw Socket* from the popup window.

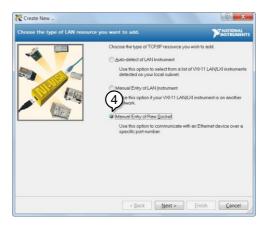


- 5. Enter the IP address and the port number of the APS-7000. The port number is fixed at 2268.
- 6. Double click the Validate button and press *Next*.



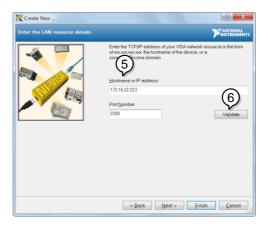


- 7. Next configure the Alias (name) of the APS-7000 connection. In this example the Alias is: APS
- 8. Click finish.

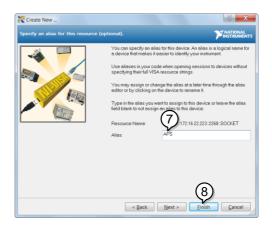

- 9. The IP address of the power supply will now appear under Network Devices in the configuration panel. Select this icon now.
- 10. Press Open VISA Test Panel.



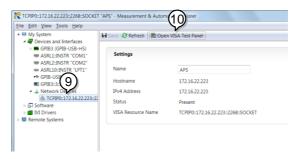

11. Click the *Configuration* Icon. Under the *IO*Settings tab check *Enable Termination Character*.

The termination character should be set as *Line*Feed -\n.



- 12. Click the *Input/Output* icon. Under the *Basic I/O* tab, make sure **IDN?*\n is entered in the *Select* or *Enter Command* drop box.
- 13. Click Query.

The APS-7000 will return the machine identification string into the buffer area: *GWINSTEK,APS-7050, GEXXXXXXX*, *XX.XX.XXXXXXXXXX*







For further details, please see the programming manual, available on the GW Instek web site @ www.gwinstek.com.



FAQ

- The accuracy does not match the specification.
- The display shows "fuse broken" message.
- The display shows "output shorted" message.
- The display shows "waiting for 10secs" message.
- The display shows "OCP" message.
- The display shows "Remote Sense Error" message.

The accuracy does not match the specification.

Make sure the device is powered On for at least 30 minutes, within $+18^{\circ}\text{C}\sim+28^{\circ}\text{C}$. This is necessary to stabilize the unit to match the specification.

The display shows "fuse broken" message.

The internal protection fuse is open. Contact your local dealer or GW Instek.

The display shows "output shorted" message.

Make sure the DUT is correctly connected to the APS-7000 output terminals and that no shortcut exist. A DUT malfunction may also be the cause.



The display shows "waiting for 10secs" message.

A protection function is likely in force, check the DUT settings.

The display shows "OCP" message.

OCP message be occurred that is mean over the specification of APS-7000 series.

Even set Irms is equal to 0.

Purchasing more higher power AC Source, please.

The display shows "Remote Sense Error" message.

Remote Sense Error message be occurred that is mean remote sense connection has mistake. Double check connection, please.

For more information, contact your local dealer or GWInstek at www.gwinstek.com / marketing@goodwill.com.tw.



APPENDIX

Firmware Update

Background The AP

The APS-7000 firmware can be upgraded using the USB A port on the front panel. See your local distributor or the GW Instek website for the latest firmware information.



- Ensure the DUT is not connected.
- Ensure the output is off.

Steps

- 1. Insert a USB Flash Drive into the USB port on front panel of the APS-7000.
- The USB drive should include the **gw.sbt** file in a directory name "gw" (USB\gw:).

Steps

2. Press the *Menu* key. The Menu setting will appear on the display.



- 3. Use the scroll wheel to go to item 11, *Special Function* and press *Enter*.
- 4. Key in the password when prompted and then press *Enter*.
- The password is "5004".
- 5. Go to Item 1, *Update Main Program* and press *Enter*.



Exit

6. Wait for the unit to update. Upon completion the unit will automatically reset.

Example



Password setting screen



APS-7000 Default Settings

The following default settings are the factory configuration settings for the power supply.

For details on how to return to the factory default settings, see page 55.

Continuous Mode	APS-7050	APS-7100	APS-7200	APS-7300	
Range	155V				
ACV	0.00V				
FREQ	60.00Hz				
IRMS	4.20A	8.40A	16.80A	25.20A	
ON PHS	0°				
OFF PHS	0°				
V limit	155.0Vrms				
F Limit	500.0Hz				
Ipeak Limit	16.80A	33.60A	67.20A	100.8A	

Simulation Mode	APS-7050	APS-7100	APS-7200	APS-7300
Step	Initial			
Repeat	1			
Time		0.10	0s	
ON Phs	ON, 0			
Vset	0.00			
OFF Phs	ON, 0			
Fset	50.00			
Trig Out	LO			
Range	HI			

Sequence Mode	APS-7050	APS-7100	APS-7200	APS-7300		
Step	0					
Time	0.10s					
Jump To	ON, 1					
Jump Cnt	1					
Branch1 OFF						
Branch2	OFF					
Term	CONTI					
Trig Out	LO					



ON Phs	OFF
OFF Phs	OFF
Vset	0.00, CT
Fset	50.00

Program Mode APS-7050 APS-7100 APS-7200 APS-7300

Not applicable

Configuration Menu	APS-7050	APS-7100	APS-7200	APS-7300		
Surge/Dip Control	OFF					
Ramp Control		0				
T ipeak, hold(msec)		1ms				
Power ON Output		0	FF			
Buzzer		ON				
SCPI Emulation	GW					
Program Timer		SEC (se	econds)			
Remote Sense	N/A	N/A	OFF	OFF		
LAN, Rear USB, Serial		NI	/ ^			
Port, GPIB		IN	/A			
LCD Contrast		50				
LCD Brightness	50%					
LCD Saturation	50%					



APS-7000 Specifications

The specifications apply when the APS-7000 is powered on for at least 30 minutes. Note that the high frequency and high voltage options are listed as separate specifications.

Standard APS-7000

Model	APS-7050	APS-7100	APS-7200	APS-7300	
AC Input					
Phase	Single Phase				
Voltage	115/230 Vac ± 15% 230 Vac ± 15%				
Frequency	50/60 Hz				
Max. Current	16A/8A	32A/16A	32A	50A	
Power Consumption	1.8 kVA or	3.6 kVA or	7.2 kVA or	10.8 kVA or	
	less	less	less	less	
Power Factor		0.7	Гур.		
AC Output					
Power Rating	500 VA	1000 VA	2000 VA	3000 VA	
Output Voltage	0 -	~ 155Vrms / (0 ~ 310.0 Vrr	ns	
Output Frequency		45.00 ~ 5	00.0 Hz		
Maximum Current (r.m.s)*1					
0 ~ 155 Vrms	4.2 A	8.4 A	16.8 A	25.2 A	
0 ~ 310 Vrms	2.1 A	4.2 A	8.4 A	12.6 A	
Maximum Current (peak)					
0 ~ 155 Vrms	16.8 A	33.6 A	67.2 A	100.8 A	
0 ~ 310 Vrms	8.4 A	16.8 A	33.6 A	50.4 A	
Phase	Sir	ngle Phase, Tv	vo Wire (1P2	(W)	
Total harmonic distortion (THD) *2	≤ 0.5% at 45 ~ 500Hz (Resistive Load)				
Crest factor					
Line regulation	0.1% (% of full scale)				
Load regulation	0.5% (% of full scale)				
Response time	< 100μS				
Reverse current	30% of Maximum Output RMS Current (Continue) 100% of Maximum Output RMS Current (Within 3 minutes)				



Model		APS-7050	APS-7100	APS-7200	APS-7300	
Setting	7					
Voltage						
	Range	(0 ~ 155 Vrms, 0	~ 310 Vrms, Auto		
	0.01 V at 0.00 ~ 99.99 Vrms					
	Resolution		0.1 V at 100.0 ~ 310.0 Vrms			
	Accuracy		\pm (0.5% of sett	ting + 2 counts)		
Freque	ency					
	Range		45 ~ 5	500 Hz		
	Resolution			.00 ~ 99.99 Hz).0 ~ 500.0 Hz		
	Accuracy		± 0.02%	of Setting		
Power	on/off phase a	angle				
	Range 0~359°					
	Resolution			1°		
	Accuracy		± 1° (only 4	45 ~ 65 Hz)		
Measi	rement *3		(,			
	e (r.m.s)					
10.000	c ()		0.20 ~ 3	8.75 Vrms		
	38.76 ~ 77.50 Vrms					
	Range		77.51 ~ 155.0 Vrms			
			155.1 ~ 3	10.0 Vrms		
	0.01 V at 0.00 ~ 99.99 Vrms					
	Resolution		0.1 V at 100.	0 ~ 310.0 Vrms		
	Accuracy *4		± (0.5% of reading + 2 counts)			
Freque	ency					
	Range		45 ~ 500 Hz			
	Resolution		0.01 Hz at 45.00 ~ 99.99 Hz			
			0.1 Hz at 100	0.0 ~ 500.0 Hz		
	Accuracy *5		± 0.	1 Hz		
Currer	ıt (r.m.s)					
_			70.00 mA			
	Range	60.0 ~ 3	350.0 mA	0.200 ~ 3	.500 A	
	Kange		- 3.500 A	3.00 ~ 3.	5.00 A	
	3.00		17.50 A			
	0.		1 mA			
	Resolution	• • • •	mA	0.001		
	Resolution		01 A	0.01	Α	
		0.0	01 A			



Model		APS-7050 APS-710	0	APS-7200	APS-7300	
	Accuracy	\pm (0.6% of reading+5 coun 2.00 ~ 350.0 mA \pm (0.5% of reading+5 coun 0.350 ~ 3.500 A \pm (0.5% of reading+3 coun 3.500 ~ 17.50 A	its),	0.200 - ± (0.5% of rea	ding+5 counts), - 3.500 A ding+3 counts), 35.00 A	
Curren	it (peak)					
	Range	0.0 ~ 70.0 A		0.0 ~ 140.0 A		
	Resolution	0.1 A		0.	.1 A	
	Accuracy	± (1% of reading + 1 cour	nt)	± (1% of read	ding + 1 count)	
Power	(W)					
	Resolution	0.01 W 0.1 W 1 W			1 W W	
	Accuracy	± (0.6% of reading+5 coun 0.20 ~ 99.99 W ± (0.6% of reading+5 coun 100.0 ~ 999.9 W ± (0.6% of reading+2 coun 1000 ~ 9999 W	its),	0.2 ~ 9 ± (0.6% of rea	ding+5 counts), 999.9 W ding+2 counts), 9999 W	
Appare (VA)	ent Power					
(11.7)	Resolution	0.01 VA 0.1 VA 1 VA			1 VA VA	
	Accuracy	± (1% of reading + 7 coun 0.20 ~ 99.99 VA ± (1% of reading + 7 coun 100.0 ~ 999.9 VA ± (1% of reading + 5 coun 1000 ~ 9999 VA	ts),	0.2 ~ 9 ± (1% of read	ing + 7 counts), 999.9 VA ing + 5 counts), 9999 VA	
Power Factor						
	Resolution	0.001				
	Accuracy	acy ±2% reading + 2 counts				
	8					



Model	APS-7050	APS-7100	APS-7200	APS-7300	
General					
Remote output signal	Pass, Fail, T	est-in Proces OUT O		Trigger out,	
Trigger Out	Maximum low level output = 0.8V Minimum high level output = 2V Maximum source current = 8mA.				
Trigger In	Maximum low level input voltage = 0.8V Minimum high level input voltage = 2.0V Maximum sink current = 8mA.				
Sync output signal	O	utput Signal	10 V, BNC Ty	pe	
Number of Preset		10 (0~9 nu	meric keys)		
Protection	(OCP, OPP, O		 1	
Environmental Conditions					
Operating temperature range		0 ~ +	40 °C		
Storage temperature range		-10 ~ -	+70 °C		
Operating humidity range	20	~ 80% RH (n	o condensat	ion)	
Storage humidity range 80% RH or less (no condensation)				tion)	
LCD Display	4.3 inch, 480 (RGB) x 272				
Dimensions (mm)		,	,		
W	430	430	430	430	
H	88	88	312	400	
D	400	560	650	650	
Weight	24Kg	38Kg	90Kg	128Kg	
Withstand voltage					
Between input and chassis:	No abnorma	lities at 1500	Vac for 1 mi	nute	
Between input and output:	No abnorma	lities at 3000	Vac for 1 mi	nute	
Between output and chassis:	No abnorma	lities at 500 \	/ac for 1 min	ute	
Insulation resistance					
Between input and chassis:					
Between input and output:	500 Vdc, 100	$0 \mathrm{M}\Omega$ or more	e Ω		
Between output and chassis:	_				
Sequence/Simulation Function	n				
Number of Memories 10 (0~9 numeric keys)					
Number of Steps	9999max. (for 1 sequence)				
Step Time Setting Range *9	9 0.01 ~ 3600.00 S				
Operation within Step	Co	nstant, Keep	, Linear Swe	ер	
Parameters	Output Rar only	nge, Frequence), On Phase, t (0 ~999), Ju 2, Trigge	Cy, Waveform Off Phase, 7 mp-to, Brand	(sine wave Term	



Sequence Control	Start, Stop, Hold, Continue, Branch 1, Branch 2		
Interface			
Standard	USB Host, LAN	USB Host, USB-CDC, LAN	
Optional	GPIB (APS-001) RS232/ USB CDC(APS- 002)	GPIB (APS-001) RS232 (APS-007)	



APS-003 Option

APS-7050	APS-7100	APS-7200	APS-7300	
500VA	1000VA	2000VA	3000VA	
1.05 A	2.1 A	4.2 A	6.3 A	
4.2 A	8.4 A	16.8 A	25.2 A	
Range $0 \sim 155 \text{ Vrms}, 0 \sim 310 \text{ Vrms}, 0 \sim 600 \text{ Vrms}, \text{ Auto}$				
0.01V at 0.00 ~ 99.99 Vrms 0.1V at 100.0 ~ 600.0 Vrms				
\pm (0.5% of setting + 2 counts)				
	`		<i>,</i>	
0.2 ~ 600.0 Vrms				
0.01V at 0.00 ~ 99.99 Vrms				
0.1V at 100.0 ~ 600.0 Vrms				
± (0.5% of reading + 2 counts)				
	500VA 1.05 A 4.2 A 0 ~ 155 Vrr	500VA 1000VA 1.05 A 2.1 A 4.2 A 8.4 A 0 ~ 155 Vrms, 0 ~ 310 Vr 0.01V at 0.00 0.1V at 100.0 ± (0.5% of sett) 0.2 ~ 600 0.01V at 0.00 0.1V at 100.0	500VA 1000VA 2000VA 1.05 A 2.1 A 4.2 A 4.2 A 8.4 A 16.8 A 0 ~ 155 Vrms, 0 ~ 310 Vrms, 0 ~ 600 0 0.01V at 0.00 ~ 99.99 Vrms 0.1V at 100.0 ~ 600.0 Vrm ± (0.5% of setting + 2 count) 0.2 ~ 600.0 Vrms 0.01V at 0.00 ~ 99.99 Vrms 0.1V at 100.0 ~ 600.0 Vrms	

APS-004 Option

Hz					
APS-7050	APS-7100	APS-7200	APS-7300		
	45.00 ~	1000 Hz			
0	.01 Hz at 45.	00 ~ 99.99 H	Z		
0.1 Hz at 100.0 ~ 999.9 Hz					
1 Hz at 1000 Hz					
\pm 0.02% of Setting					
	45.00 ~	1000 Hz			
0.01Hz at 45.00 ~ 99.99Hz					
0.1Hz at 100.0 ~ 999.9Hz					
1 Hz at 1000 Hz					
	0.1/	1 Hz			
	0	45.00 ~ 0.01 Hz at 45.00 ~ 1 Hz at 100 1 Hz at ± 0.02% 6 45.00 ~ 0.01 Hz at 45.00 ~ 1 Hz at 100	APS-7050 APS-7100 APS-7200 45.00 ~ 1000 Hz 0.01 Hz at 45.00 ~ 99.99 H 0.1 Hz at 100.0 ~ 999.9 Hz 1 Hz at 1000 Hz ± 0.02% of Setting 45.00 ~ 1000 Hz 0.01Hz at 45.00 ~ 99.99Hz 0.1Hz at 100.0 ~ 999.9Hz		



AC Output	
Total harmonic distortion (THD)*8	\leq 0.5% at 45 ~ 1000Hz (Resistive Load)

Product specifications are subject to change without notice.


The Specifications are not suit for ARB mode.

- *1 Maximum output current at working voltage 120Vrms, 240Vrms
- *2 45 Hz to 500 Hz, 10% or higher of the rated output voltage, the maximum current or lower.
- *3 All of measurement accuracy is at 23±5°C.
- *4 In the case of 15 V to 155 V / 30 V to 310 V, sine wave, no load.
- *5 For an output voltage of 75 V to 155 V / 150 V to 310 V, sine wave, no load
- *6 Maximum output current at working voltage 480Vrms.
- *7 In the case of 60 V to 600 V, sine wave, no load.
- *8 45 Hz to 1000 Hz, 10% or higher of the rated output voltage, the maximum current or lower.
- *9 Step Time does not guarantee specification.



APS-7000 Dimensions

APS-7050

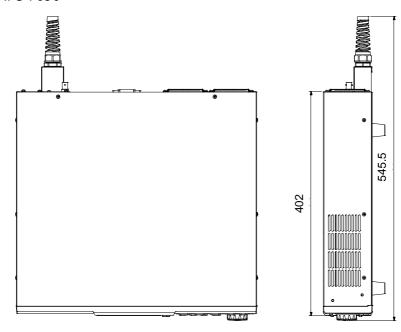





Scale = mm



 APS-7100

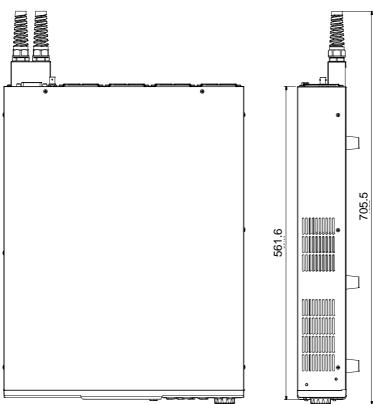





Scale = mm



APS-7200

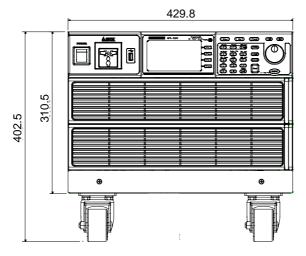


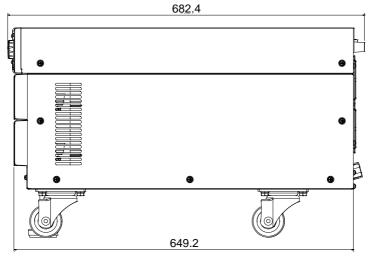


Scale = mm



APS-7300

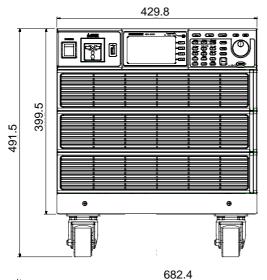

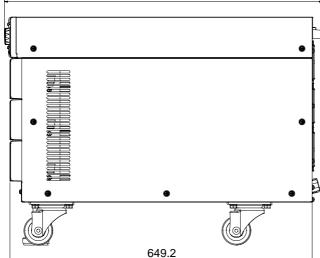

Scale = mm

Certificate Of Compliance (Only for APS-7050 and APS-7100)

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the CE marking mentioned product

satisfies all the technical relations application to the product within the scope of council:

Directive: EMC; LVD; WEEE; RoHS

The product is in conformity with the following standards or other normative documents:

◎ EMC					
EN 61326-1	Electrical equipment for measurement, control and laboratory use EMC requirements				
Conducted & Radiated Emission		Electrical Fast Transients			
EN 55011 / EN 55032		EN 61000-4-4			
Current Harmonics		Surge Immunity			
EN 61000-3-2 / EN 61000-3-12		EN 61000-4-5			
Voltage Fluctuations		Conducted Susceptibility			
EN 61000-3-3 / EN 61000-3-11		EN 61000-4-6			
Electrostatic Discharge		Power Frequency Magnetic Field			
EN 61000-4-2		EN 61000-4-8			
Radiated Immunity		Voltage Dip/ Interruption			
EN 61000-4-3		EN 61000-4-11 / EN 61000-4-34			
◎ Safety					
EN 61010-1 :	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements				

GOODWILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng District, New Taipei City 236, Taiwan

Tel: +886-2-2268-0389 Fax: +886-2-2268-0639

GOODWILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China Tel: <u>+86-512-6661-7177</u> Fax: <u>+86-512-6661-7277</u>

GOODWILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands
Tel: <u>+31-(0)40-2557790</u>
Fax: <u>+31-(0)40-2541194</u>
Email: sales@gw-instek.eu



NDEX

Accessories12
Advanced settings
Buzzer92
miscellaneous89
Power output91
Program timer unit94
ramp86
SCPI emulation93
surge/dip83
T Ipeak89
trigger96
Alarm clear
Analog control
overview148
ARB 105
Overview106
Waveform109
Buzzer 92
Caution symbol4
Cleaning the instrument6
clear alarm
Conventions 51
Current RMS 71
Declaration of conformity 191
Default settings 178
reset55
Delay time 68
Delete program memory 146
Delete sequence memory 134
Delete simulation memory 121
Display mode
operation76
Disposal instructions 6
EN61010
measurement category5
pollution degree6
Environment
safety instruction6
2

Ethernet	
interface	. 166
Filter installation	32
Firmware update	
Frequency limit	
Frequency output	
Front panel diagram	
Ground	
symbol	4
I rms	71
Ipk measurement range	69
Ipk range	69
Ipk-Limit	67
Irms Delay time	72
J1 connector	
pin assignment	. 149
LCD configuration	57
Line voltage	
1000VA models	
List of features	
Load preset to local memory	
Load preset to USB	
Load program to USB	
Load sequence to USB	
Load simulation to USB	121
Marketing	
contact	
Model differences	
Module installation	
software	
OC fold	
On/off phase	
Output terminals	35
Panel lock	78
Peak current limit	
Power on output	91
Power on/off	



safety instruction5	Surge/dip control	83
Power up34	SYNC output	
Preset settings101	pin assignment	151
Program timer unit94	System version	
Rack mount	view	56
description49	T Ipeak	89
Ramp control86	Test	
Remote control152	Overview	112
Ethernet166	Program	
GPIB161	Overview	
LAN166	Recall	
RS232154	Save	145
USB153	Sequence Overview	105
Remote control function check	Recall	
GPIB162	Run	
Realterm158	Save	133
RS-232157	Settings	129
USB157	Simulation	
Save preset to local memory 101	Overview	
Save preset to USB103	Recall	
Save program to USB146	Run Save	
	Settings	
Save sequence to USB	Trigger control	
Save simulation to USB121	Trigger in	
SCPI emulation93		
Serial number	UK power cord	
view56	Updating the firmware	
Service operation	USB driver installation	
about disassembly5	Voltage limit	62
contact175	Voltage output level	63
Signal output	Voltage range	61
pin assignment150	Warning symbol	
Socket server function check 169	Web server function chec	
Specifications180	Wire gauge chart	
Start/stop phase74	c gaage chair	10