

# Firmware Update

GPT-10000 Series



## FW Update Manual

This firmware update manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.  
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

# Update Procedure

The firmware update for GPT-10000 series requires an USB 2.0 flash disk and the corresponding “image.BIN” file beforehand.

**Note**

The “image.BIN”, which is in different filename by default, needs to be manually renamed by user for firmware update. For instance, **rename the original “GPT\_12001\_V1.02\_image.BIN” to the exactly “image.BIN”.**

## Update procedure

1. Power off GPT-10000 unit.
2. Plug in the USB flash disk after copying the “image.BIN” file to the boot directory of the USB flash disk.
3. Press and hold both F2 key and MANUAL key simultaneously followed by pressing the POWER button to power on GPT-10000 unit.



4. The BootLoader Mode is accordingly shown for firmware update automatically.



5. After firmware update, it is suggested to restart GPT-10000 unit to ensure every function is upgraded to the latest version.