

# **DIGITAL I/O ADAPTER**

## **GSM-20H10 OPT**

### **SM-01/02**

## **Quick Start Guide**

**GW INSTEK PART NO. 82SM-02000M01**



**ISO-9001 CERTIFIED  
MANUFACTURER**

**GW INSTEK**

## Copyright Statement

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.


**Good Will Instrument Co., Ltd.  
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.**

# SM-01 DIGITAL I/O ADAPTER


## Overview

The SM-01 DIGITAL I/O ADAPTER is a signal separator for the GSM-20H10. It divides the Digital I/O signal of a DB-15 digital I/O port to a TRIG link port (MINI DIN SOCKET) and a male DB-9 digital I/O port. The TRIG link port is used for input and output triggers signal. The DB-9 digital I/O port is used for output 3-bit or 4-bit pattern value of Limit testing.

## Input port

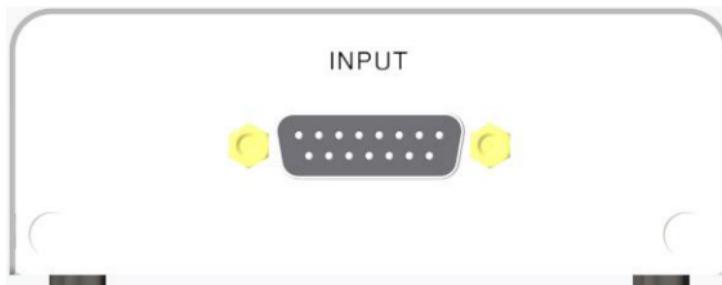

# Output port

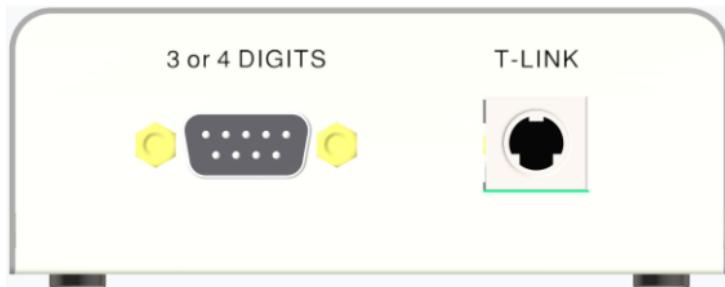

## Connections

---

### Limit testing

**Description** The GSM output 3-bit pattern value or 4-bit pattern value via SM-01 DIGITAL I/O ADAPTER. The Digital I/O port includes 4 output lines.

**Definition** Output1=Pin1

Output2=Pin2

Output3=Pin3



Output4=Pin4

+5V=Pin7

Ground=Pin5 and Pin9

SOT=Pin6

OE=Pin8

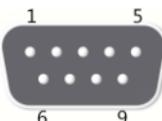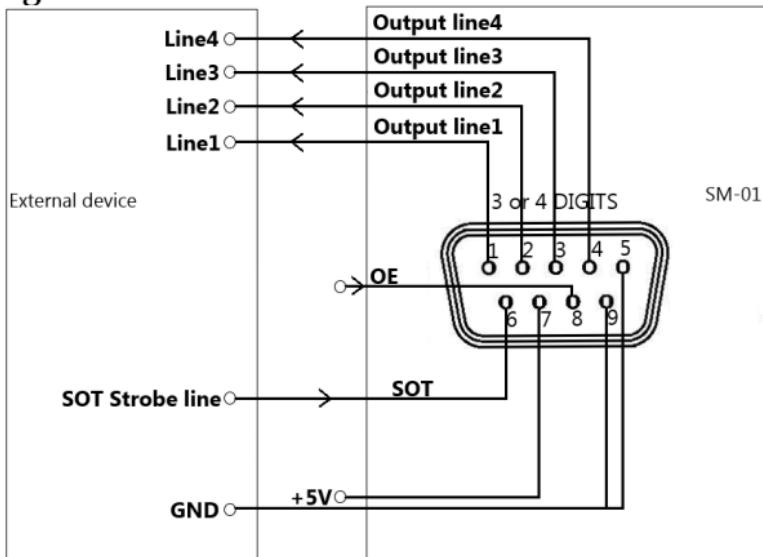**Pin  
number****Connection  
diagram****Pattern  
value  
formats**

The SM-01 DIGITAL I/O ADAPTER can output binary bit patterns from 0 to 111 or 0 to 1111. From the front panel, an output bit pattern must be entered as a decimal value.

For remote operation, an output bit pattern can be set in the decimal, binary, octal, or hexadecimal format. When sending a command to set an output bit

pattern, there are two parameter types. For the decimal format, an <NRf> parameter type is required. For any of the non-decimal formats, an <NDN> parameter type is used. Parameter value ranges for 4-bit operation are as follows:

<NRf>=0 to 15	Decimal format
<NDN> =#B0 to #B111	Binary format
=#Q0 to #Q17	Octal format
=#H0 to #HF	Hexadecimal format

Parameter value ranges for 3-bit operation are as follows:

<NRf>=0 to 7	Decimal format
<NDN> =#B0 to #B111	Binary format
=#Q0 to #Q7	Octal format
=#H0 to #H7	Hexadecimal format

The following command is used to set SOUR2 and TTL response formats.

:FORMat:SOURce2 <name>

<name>= ASCII	ASCII format
HEXadecimal	Hexadecimal format
OCTal	Octal format
BINary	Binary format

## Digital output

From the front panel, you can set the output level of the Digital I/O port by System->Control->Digout. For example, if you set Digout to 7, all 3 I/O ports will be set high, if you set Digout to 15, all 4

I/O ports will be set high.

**Input/output level** When operating in 3bit/4bit mode, the maximum sink current for an output line is 500mA. To prevent damage to the GSM, do not exceed the maximum sink current of the I/O port.

#### Source current limits

- When the output lines set TTL high levels, the source current for each output lines is limited to approximately 2mA.
- +5V line: the source current is limited to approximately 300mA

**OE line** The digital I/O port provides an output enable control line to be used together with the output enable switch of a test fixture. When used correctly, the Output of the GSM will turn off if the lid of the test fixture is opened.

## Trig testing

**Description** This connector is used to input or output trigger signal while running Trig test regardless the digits number(3bit, 4bit) of Digout size option.

Please refer to GSM-20H10 User manual to operate TRIG function and this trig connector.

**Pin  
number**



- Pin1: Trig link 1
- Pin2: Trig link 2
- Pin3: Trig link 3
- Pin4: Trig link 4
- Pin5: NC
- Pin6: NC
- Pin7: GND
- Pin8: GND


# SM-02 DIGITAL I/O ADAPTER

## Overview


---

The SM-02 DIGITAL I/O ADAPTER is a signal expansion option for GSM-20H10. The adapter divides the Digital I/O signal of a DB-15 digital I/O port to a TRIG link port (MINI DIN SOCKET) and a male DB-37 digital I/O port. The TRIG link port is used for input and output triggers. The 37-pin D-SUB digital I/O port is used for output 16-bit pattern value of Limit testing.

## Input port

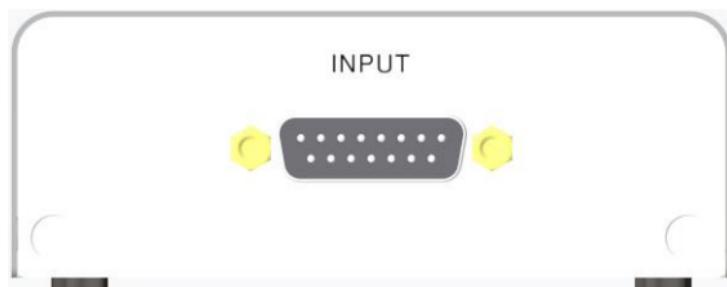

## Output port

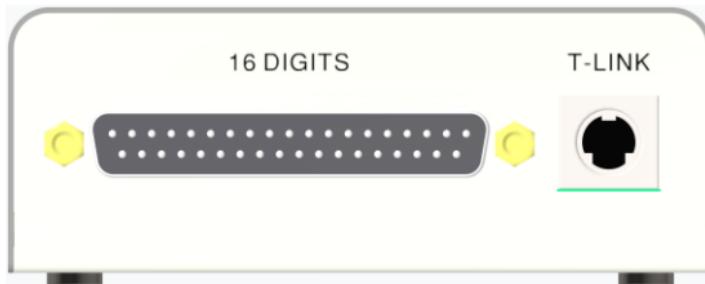

## Connections

---

### Limit testing

**Description** The GSM can output 16-bit pattern value via SM-02 DIGITAL I/O ADAPTER. The Digital I/O port includes 16 output lines.


<b>Pin</b>	Output1=Pin5
<b>Definition</b>	Output2=Pin6
	Output3=Pin7
	Output4=Pin8
	Output5=Pin9
	Output6=Pin10
	Output7=Pin11

Output8=Pin12  
Output9=Pin24  
Output10=Pin25  
Output11=Pin26  
Output12=Pin27  
Output13=Pin28  
Output14=Pin29  
Output15=Pin30  
Output16=Pin31  
+5V=Pin14  
Ground=Pin13 and Pin32  
SOT=Pin33  
OE=Pin15  
EOT, /EOT, BUSY, /BUSY=Pin34

**Pin  
number**



**Connection diagram**

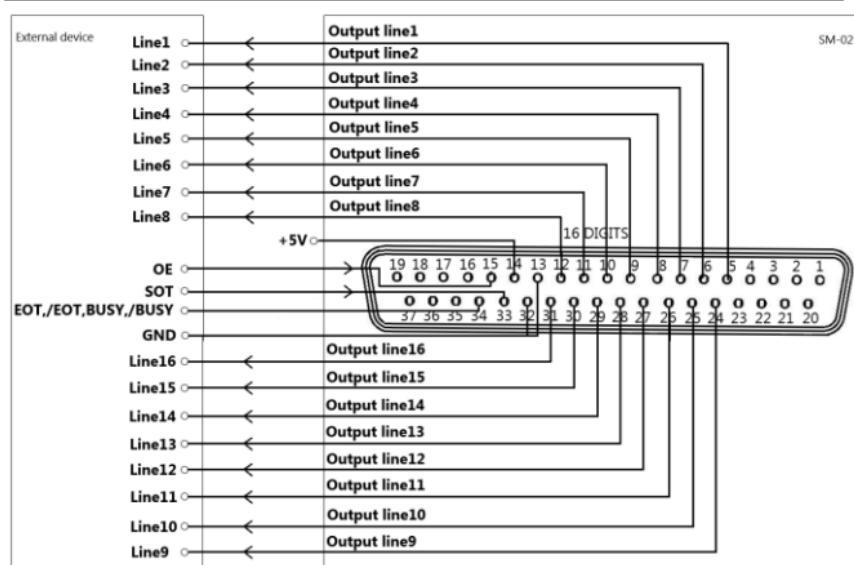

**Pattern value formats** The 16bit SM-02 DIGITAL I/O ADAPTER can output binary bit patterns from 0 to 1111111111111111. Before this, a decimal pattern value (0-65535) should be set from the front panel. For example, if you want output lines 8 and 2 to be high (0000000010000010), you should set the pattern value as 130.

For remote operation, an output bit pattern can be set in the decimal, binary, octal, or hexadecimal format. When sending a command to set an output bit pattern, there are two parameter types. For the decimal

format, an <NRf> parameter type is required. For any of the non-decimal formats, an <NDN> parameter type is used. Parameter value ranges for 16-bit operation are as follows:

<NRf>=0 to 65535	Decimal format
<NDN> =#B0 to #B1111111111111111	Binary format
=#Q0 to #Q177777	Octal format
=#H0 to #HFFFF	Hexadecimal format

The following command is used to set SOUR2 and TTL response formats.

:FORMat:SOURce2 <name>

<name>=ASCII	ASCII format
HEXAdecimal	Hexadecimal format
OCTal	Octal format
BINary	Binary format

**Digital output** From the front panel, you can set the output level of the Digital I/O port by System->Control->Digout. For example, if you set Digout to 65535, all 16 I/O ports will be set high.

**Input/output level** The maximum sink current for an output line is 500mA. To prevent damage to the GSM, do not exceed the maximum sink current of the

I/O port.

EOT, /EOT, BUSY, /BUSY line: Maximum allowable sink current is 500mA.

Maximum input voltage

The absolute maximum allowable input voltage on any line of the digital I/O is 30V.

Source current limits

- 16 output lines: when the output lines set TTL high levels, the source current for each output lines is limited to approximately 5mA.
- +5V line: the source current is limited to approximately 300mA.

Output voltage

16 output lines and EOT, /EOT, BUSY, /BUSY line: the maximum working output voltage for these lines is 30V.

**OE line** The digital I/O port provides an output

enable control line to be used together with the output enable switch of a test fixture.

When used correctly, the Output of the GSM turn off if the lid of the test fixture is opened.

## Trig testing

**Description** This connector is used to input or output trigger signal while running Trig test.

Please refer to GSM-20H10 User manual to operate TRIG function and this trig connector.

**Pin  
number**



Pin1: Trig link 1  
Pin2: Trig link 2  
Pin3: Trig link 3  
Pin4: Trig link 4  
Pin5: NC  
Pin6: NC  
Pin7: GND  
Pin8: GND