

How to get GPM-8212 ONLINE by using the Real-Term

GPM-8212 configuration:

| | |
|-------------------------------|--|
| | <p>Checking the GPM-8212 Baud Rate</p> |
| <p>(Operation by Key-pad)</p> | <p>(Operation by Key-pad)</p> |
| | <p>BAUD RATE</p> |

Real-term Configuration:

| | |
|--|------------------------------|
| | <p>Display configuration</p> |
| <p>You can use the ActiveX automation to control me!</p> | <p>Ascii</p> |

| | |
|--|--|
| | <p>Port configuration</p> |
| <p>You can use the ActiveX automation to control me!</p> | <p>Baud : 9600 Port : depend on current setting Parity : None Bata Bits : 8 bits Stop Bits : 1 bit Hardware Flow Control : None</p> |
| <p>You can use the ActiveX automation to control me!</p> | <p>[NOTE] After complete the above setting, please press "Change" to confirm.</p> |

| | |
|--|--|
| | <p>Send (message terminator) configuration</p> |
| <p>You can use the ActiveX automation to control me!</p> | <p>EOL : CRLF</p> |

| | |
|------------------|--|
| | <p>Press "Send ASCII" to send out command.</p> |
| <p>Command →</p> | <p>Command</p> |