

# Getting Start

#### eWave 1.0 -1111-2 -nn # M 21:30 MEASURE Vpp Vavo requ DutyC **Rise Tir** ICH1 EDGE 1250 • $\odot$ . 昌 Ħ \$

# FreeWave -- GDS-2000 PC Software

2007/1/2 Rev. 6

# Features:

Real-time Screen Image Display Movie Clips Recorder Waveform Data Capturer Command Set Remote Control USB Interface

### Introduction:

A PC Software "FreeWave" supporting GDS-2000 is available to all customers for free, downloadable from GW Website.

FreeWave enables the full screen image transfer from GDS-2000 to PC via USB port in a fast-updating manner, so the user is able to see a nearly-real-time display on the PC screen. The screen image (.bmp or.jpg) and waveform raw data (.csv) could be saved into PC for further applications.

The continuous waveform images (.wav) in a time period could be recorded for later playback. This video recorder function facilitates the repetitive observation of a saved waveform with continuous variation in a certain period of time. Remote control function lets user create personal control procedure easily and quickly.



# File Download:

Users need download 3 files for install full functional FreeWave:

- FreeWave program (Beta version).
- Windows .NET Frame Work 1.1.
- Windows Media Encoder 9 series.

#### FreeWave Program:

Add Ne

FreeWave (Beta version) could be downloaded from GWInstek website.

http://www.gwinstek.com.tw

Select these icons: **Support Download Software** and then select **Oscilloscope** item.

FreeWave program would be in the download list.



### Install WINDOWS .NET Frame work 1.1

Download Here (Download from Microsoft website)

#### Install WINDOWS MEDIA ENCODER 9 SERIES

Download Here (Download from Microsoft website)

Check the [Microsoft .NET Framework 1.1] and [Windows Media Encoder 9 Series] has installed in your PC:





ISO-9001 CERTIFIED MANUFACTURER GOOD WILL INSTRUMENT CO., LTD. NO. 7-1, JHONGSING ROAD, TUCHENG CITY, TAIPEI HSIEN, TAIWAN

# Install FreeWave

1. Execute Setup.exe to install FreeWave to your PC

2. Press next step icon until install process finished (Default install folder is C:\Program Files\FreeWave\).

3. Connect GDS-2000 USB device port(rear panel) to PC via USB cable and setting the interface type of DSO is USB (Utility $\rightarrow$ F2 $\rightarrow$ F1)



4. First time connects GDS-2000 to PC and select USB interface. The hardware install message would notice to user, press install continuously or install driver as below steps:

- A) Connect PC and GDS-2000 in USB mode, but the driver is not installed. The device manage would disappear error message as below (Orange square shows the unknown device for PC).
- B) Click right button of mouse in the question mark, and select "Update Driver"







**ISO-9001 CERTIFIED MANUFACTURER** 

**GOOD WILL INSTRUMENT CO., LTD.** NO. 7-1, JHONGSING ROAD, TUCHENG CITY,

TAIPEI HSIEN, TAIWAN

C) Select install driver manually.

Hardware Update Wizard		Hardware Update Wizard	
	Welcome to the Hardware Update         Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).         Read our privacy policy         Can Windows connect to Windows Update to search for software?         O Yes, this time only         O Yes, now and givery time I connect a device		This wizard helps you install software for: GDS-2062 If your hardware came with an installation CD or floppy disk, insert it now. What do you want the wizard to do?
5	No. not this time     Click Next to continue.	5	○ Install the software automatically (Recommended)
	< Back Next > Cancel		< Back Next > Cancel

D) Driver file is" *dso\_cdc.inf* "(in the FreeWave download file, or download from GWinstek website). Select the file folder using "Browse" button. Press "Next" to install driver as below:

Hardware Update Wizard	Hardware Update Wizard		
Please choose your search and installation options.	Please wait while the wizard installs the software		
Search for the best driver in these locations. Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.     Search removable media (floppy, CD-ROM)     Include this location in the search:     C:\Gw/Instek\DSO\GDS-2000\FreeWave\driver     Browse     Don't search. I will choose the driver to install.     Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.	GDS-2k Series         Image: Constraint of the system restore point and backing up old files in case your system needs to be restored in the future.		
<back next=""> Cancel</back>	< <u>B</u> ack Next > Cancel		

E) GDS-2000 USB driver has been installed in the PC. Check the Device Manager, the device has been installed correctly.

Hardware Update Wizard		
	mpleting the Hardware Update zard wizard has finished installing the software for: GDS-2k Series	
Cick	K Finish to close the wizard.           < Back	Network adapters Ports (COM & LPT) DSO (COM8) Processors Secure Digital bost contracts



# Run FreeWave

Execute "FreeWave" program. (Start  $\rightarrow$  All Programs $\rightarrow$ FreeWave). FreeWave is made by four main functions, control panel and message box.





**ISO-9001 CERTIFIED MANUFACTURER** 

**GOOD WILL INSTRUMENT CO., LTD.** NO. 7-1, JHONGSING ROAD, TUCHENG CITY,

TAIPEI HSIEN, TAIWAN

1. FreeWave Setup

🚍 FreeWave 1.0			
	k Pur	-11	
11	GW,GDS:2052,GW 00000001,V1.00		Record Mode © User Interface © Image Ink Saver © No © Yes
		I	GDS-2062,GW 0000001

(1) Search Device

Press icon to search DSO.

If the setting is correct, message box would show the information of the DSO.

If there is no correct message in the message box, please check:

- Interface setting is USB in the DSO
- USB cable is connected from DSO (Device port) to PC (Host port)
- GDS-2000 USB hardware setting is correct in Device Manager of user's PC

(2) Record Mode in real-time screen display

Select different clip record mode (Red square area):

- User Interface: recorded clip will include all program windows.
- Image: recorded clip only include the waveform area.





User Interface

Image



**ISO-9001 CERTIFIED MANUFACTURER** 

**GOOD WILL INSTRUMENT CO., LTD.** NO. 7-1, JHONGSING ROAD, TUCHENG CITY,

TAIPEI HSIEN, TAIWAN

(3) Ink saver mode in Real-time image display

Enable or disable ink saver function in Real-time screen display.







**GOOD WILL INSTRUMENT CO., LTD.** NO. 7-1, JHONGSING ROAD, TUCHENG CITY, TAIPEI HSIEN, TAIWAN

2. Real-time Screen Display



- (1) Run/Stop: Control image transfer to PC or transfer stop.
- (2) Record/Record Stop: Start/Stop to record movie clips.
- (3) Save/Print: Save image to picture file(JPG, BMP, etc) or print out the picture.
- (4) Full screen: Display full screen without control buttons, only waveform area.
- (5) Exit: Exit FreeWave program.



#### 3. Waveform Data Capture

Example for how to get waveform data:

- (1) Select Source: CH1
- (2) Press [READ] button.
- (3) When waveform display in the PC screen, Press [Stop] button
- (4) You can see there is a mark in the "NO1" box, and the [Save] button is active.
- (5) Press [Save] button and save the waveform data to \*.csv file.
- (6) Press [Delete] button to remove this waveform box.



Save As		? 🗙
Save in:	🞯 Desktop 🗾 🔶 💼 🕂 📰 -	
My Recent Documents Desktop	My Documents Wy My Computer My Network Places Command Waveform	
My Documents		
My Computer		
<b>S</b>		
My Network Places	File name:	Save Cancel

🛎 Microsoft Excel - Waveform3								
:8)	檔案(E) 編輯(E) 檢視(V) 插〕	人① 格式(2) 工具	(I) 資料(D) 親i					
: D	😂 🖬 💪 🦪 💁 🖤 📖 -	🌡 🗈 🛍 • 🛷   🖻	) • (" •   🧕 Σ					
;新細明體 • 12 • ₿ ℤ 및   三 三 三 三 12 • 8 ∞								
Al 🔸 🎓 DESCRIPTION								
	A	В	С					
24	LEVEL	1.20E-01						
25	SLOPE	0						
26	COUPLE	1						
27								
28	ACQUISITION:							
29	MODE	0						
30	RECORD LEBGTH	500						
31	AVERAGE	1						
32								
33	POINT	VALUE						
34	1	-49						
35	2	-49						
36	3	-49						
37	4	-49						
38	5	-49						



ISO-9001 CERTIFIED MANUFACTURER GOOD WILL INSTRUMENT CO., LTD. NO. 7-1, JHONGSING ROAD, TUCHENG CITY, TAIPEI HSIEN, TAIWAN

#### 4. DSO Remote Control

Example for how to control DSO by remote command:

- (1) Expend the DSO command
- (2) Select commands to command list box (Press right arrow icon).
- (3) Press [Run] button to execute command.
- (4) The [Save] button could save the command for \*.csv file.
- (5) [Stop] button would clear all commands in the box.

E DS0 Command	(2)	Command	Value	Set/Qu	Description
PROCESS_COMMAND COMMAND_DELAY SYSTEM_COMMAND AUT IDN		"IDN #DLY CHAN1:SCAL	GW/GDS-2062 1000 5.000E-1	Read System	Delay for the next command Sets the vertical scale of channel
-RCL -SAV ■ VOLTAGE ■ FREQUENCE ● ACQUIRE					
OISPLAY     OLIASOR_MEASURE     TRIGER     TRIGER_DEL     TRIGER_PULSE     TRIGER_VIDE0     CHANNEL_ONE     C1_8WL     C1_6WP	\$				
C1_DISP C1_INV		¢			
Command : CHAN1:SCAL		N			
Description : Sets the vertical scale of channel 1.		42			
	00		~		
Description : Sets the vertical scale of channel 1.	3 (3	Ę	(4)		

📧 Mi	Microsoft Excel - command							
:	檔案(E) 編輯	靖(E) 檢視(V	) 插入①	格式(①) 工。	具(I) 資料(I	2) 視窗(₩)		
10	🞽 🖬 🔒	🖪 💁 l 🍣	🕰   🐰 🗅	n 🖹 - 🛷	17 - CI -	🧕 Σ <del>-</del> <u>A</u> ↓		
新細	新細明體 ・ 12 ・ B I U 三 三 三 三 12 ・ 3 / 5 / 5							
	A1	-	fx	*IDN				
	A	В	С	D	E	F		
1	*IDN	GW	GDS-2062	GW 00000	V1.00	Read		
2	#DLY 1000 System Delay for the next command				nmand			
3	:CHAN1:S	5.00E-01	Query	Sets the vertical scale of channel 1.				
4								
5								