

Digital Storage Oscilloscope

GDS-3000A Series

USER MANUAL



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan

Table of Contents

SAFETY INSTRUCTIONS	4
GETTING STARTED	9
GDS-3000A Series Overview	10
Appearance.....	14
Set Up	26
Built-in Help	35
MEASUREMENT	36
Basic Measurement	37
Automatic Measurement.....	43
Cursor Measurement	59
Math Operation	66
ADVANCED CONFIGURATION	77
Acquisition	80
Segmented Memory Acquisition	85
Horizontal View	95
Vertical View (Channel).....	103
Bus Key Configuration	114
Trigger	139
Search.....	177
System Settings	185
Display	191
ARBITRARY WAVE GENERATOR	197
Arbitrary Wave Generator Operation	198
POWER ANALYSIS (OPTIONAL)	229
Power Analysis Overview	231
Power Quality	233

Switching Loss	237
Harmonics	242
Ripple	252
Inrush	254
Modulation	256
Safe Operation Area	260
Transient	264
Efficiency	267
B-H curve	270
Control Loop Response	274
Power Supply Rejection Ratio (PSRR)	286
Turn On/Off	290
SPECTRUM ANALYZER	294
Spectrum Analyzer operation	295
APPLICATIONS	312
Introduction	313
Go-NoGo application	316
DVM application	321
Data Log application	323
Digital Filter application	325
Mask application	327
FRA application	338
SAVE/RECALL	343
File Format/Utility	344
Create/Edit Labels	350
Save	353
Recall	360
Reference Waveforms	365
FILE UTILITIES	367
HARDCOPY KEY	374

REMOTE CONTROL CONFIG	376
Interface Configuration	377
Web Server	390
MAINTENANCE	394
FAQ	399
APPENDIX	401
Updating the Firmware	402
GDS-3000A Series Specifications	404
Probe Specifications	411
Dimensions	412
Certificate Of Compliance	413
INDEX	414

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the Product name.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the equipment or to other properties.



DANGER High Voltage



(Note)

Attention required. Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



WARNING



CAUTION

- Make sure the BNC input voltage does not exceed 300 Vrms.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place any heavy object on the GDS-3000A series.
- Avoid severe impact or rough handling that leads to damaging the GDS-3000A series.
- Do not discharge static electricity to the GDS-3000A series.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at a power source or building installation (Note below).
- Do not disassemble the GDS-3000A series unless you are qualified.



Note

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The GDS-3000A series falls under category I.

- Measurement category IV is for measurements performed at the source of low-voltage installation.
- Measurement category III is for measurements performed in the building installation.
- Measurement category II is for measurements performed on circuits directly connected to the low voltage installation.
- Measurement category I is for measurement performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage: 100 V to 240 V AC, 50 Hz to 60 Hz, auto selection. Power consumption: 100 W for GDS-3000A series.
 - Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.
-

Cleaning the
GDS-3000A
Series

- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh materials such as benzene, toluene, xylene and acetone.
-

Operation
Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: $\leq 80\%$, $40\text{ }^{\circ}\text{C}$ or below;
 $\leq 45\%$, $41\text{ }^{\circ}\text{C}$ to $50\text{ }^{\circ}\text{C}$
- Altitude: < 2000 meters
- Temperature: $0\text{ }^{\circ}\text{C}$ to $50\text{ }^{\circ}\text{C}$



Note

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The GDS-3000A series falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
-

Storage
environment

- Location: Indoor
 - Temperature: $-10\text{ }^{\circ}\text{C}$ to $60\text{ }^{\circ}\text{C}$
 - Humidity: Up to 93% RH (non-condensing) / $\leq 40\text{ }^{\circ}\text{C}$, up to 65% RH (non-condensing) / $41\text{ }^{\circ}\text{C}$ to $60\text{ }^{\circ}\text{C}$
-

Disposal

Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the oscilloscope in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol \oplus or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75 mm² should be protected by a 3 A or 5 A fuse. Larger conductors would normally require 13 A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

G GETTING STARTED

This chapter describes the GDS-3000A series in a nutshell, including its main features and front/rear panel. After going through the overview, follow the Set Up section to properly set up the device for first time use. The Set Up section also includes an introduction on how to use this manual effectively.

GDS-3000A Series Overview	10
Integrated instruments and series lineup.....	10
Main Features.....	10
Accessories	11
Appearance	14
Front panel	14
GDS-3000A 2CH models.....	14
GDS-3000A 4CH models.....	14
Rear Panel and Right side panel.....	22
LCD Display	24
Set Up	26
Tilt Stand.....	26
Power Up.....	26
First Time Use	27
How to Use This Manual.....	30
Built-in Help	35

GDS-3000A Series Overview

Integrated instruments and series lineup

The GDS-3000A series consists of two models. Note that throughout the user manual, the term “GDS-3000A series” refers to all models of the series, unless stated otherwise.

Model name	Frequency bandwidth	Input channels	Max. Real-time Sampling Rate
GDS-3102A	1 GHz	2	5 GSa/s
GDS-3104A	1 GHz	4	5 GSa/s

Main Features

Features

- 10.2 inch, 800 x 480, WVGA TFT display.
 - 1G Hz bandwidth available.
 - Real-time sampling rate of 5 GSa/s max.
 - Deep memory: 200 Mega points record length per channel.
 - Waveform capture rate of 200,000 waveforms per second.
 - Vertical sensitivity: 1 mV/div to 10 V/div @ 1 M Ω ; 1 mV/div to 1 V/div @ 50 Ω
 - Segmented Memory: Optimizes the acquisition memory to selectively capture only the important signal details. Up to 490,000 successive waveform segments can be captured with a time-tag resolution of 400 ps.
 - Waveform Search: Allows the scope to search for a number of different signal events.
 - Arbitrary Wave generator: Full-function dual channel arbitrary waveform generator.
 - Spectrum Analyzer: A handy tool to perform signal analysis in the frequency domain.
-

- Logic Analyzer (option): Can be used to measure discrete inputs or measure values on various buses.
- The optional power analysis software provides automatic measurement for a number of advanced measurement types such as power quality, harmonics, ripple, inrush current, etc.
- Powerful embedded applications such as: Data Logging, Digital Voltmeter, Go-No Go, Mask, Digital filter, FRA etc.
- On-screen Help.
- 800 Mega byte SLC internal flash disk.

Interface

- USB (USBTMC) device port: rear panel, for remote control.
- USB host device port: front panel, for storage devices
- Ethernet port as standard.
- Probe compensation output with selectable output frequency (1 kHz to 200 kHz).
- Calibration output.
- RS232 DB-9 male connector for remote control
- DB-15 female SVGA output connector
- Optional GPIB interface
- ± 12 V/500 mA power supply receptacles for current probe (GCP-530/1030) usage.

Accessories

Standard Accessories	Description
Power cord	N/A region dependent
GTP-501R	500 MHz Passive probe for GDS-3102A/3104A
GTL-110	Test lead for AWG, BNC to BNC connector


Optional Accessories	Description
DS3A-16LA	16 CH logic analyzer
DS3A-GPIB	GPIB interface (Factory Pre-installed)
GTP-033A	35 MHz 1:1 Passive probe
GTP-352R	350 MHz 20:1 Passive probe
GDP-025	25 MHz High voltage differential probe
GDP-050	50 MHz High voltage differential probe
GDP-100	100 MHz High voltage differential probe
GCP-300	300 kHz/200 A Current probe
GCP-500	500 kHz/150 A Current probe
GCP-530	50 MHz/30 A Current probe
GCP-1000	1 MHz/70 A Current probe
GCP-1030	100 MHz/30 A Current probe
GTL-16LA3A	16-Channel Logic Analyzer Probe
GTL-248	GPIB Cable, Double Shielded, 2000 mm
GTL-232	RS-232C cable, 9-pin female to 9-pin female, Null modem for computer
GTL-246	USB 2.0 cable, A-B type cable 4P, 1800 mm
GRA-443-E	Rack Adapter Panel
GKT-100	Deskew Fixture
GTP-1501R	1.5 GHz 10:1 Passive probe
GCP-0275	2 MHz / 750 A Current probe
GCP-0550	5 MHz / 500 A Current probe
GCP-2525	25 MHz / 250 A Current probe
Standard Apps	Description
Go-NoGo	Go-NoGo testing app.
DataLog	Waveform or image data logging app.
DVM	Digital Voltmeter app.

Digital Filter	High ,low or band pass digital filter for analog inputs.
Mask	Creates shape templates for signal comparison.
Remote Disk	Allows the scope to mount a network share drive.
Demo mode	Demonstration mode that is used with the GDB-03 demo board.
FRA	Frequency Response Analyzer
Optional App	Description
DS3A-PWR	Power Analysis
Drivers, others	Description
Driver	LabVIEW driver


Appearance

Front panel

GDS-3102A 2CH model

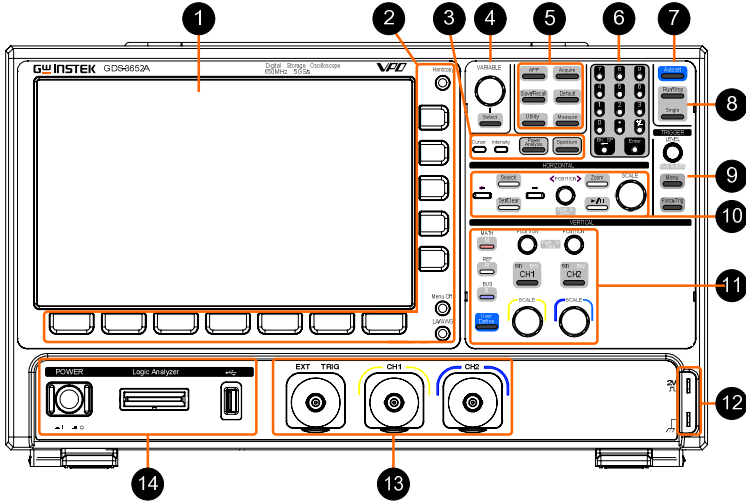


GDS-3104A 4CH model

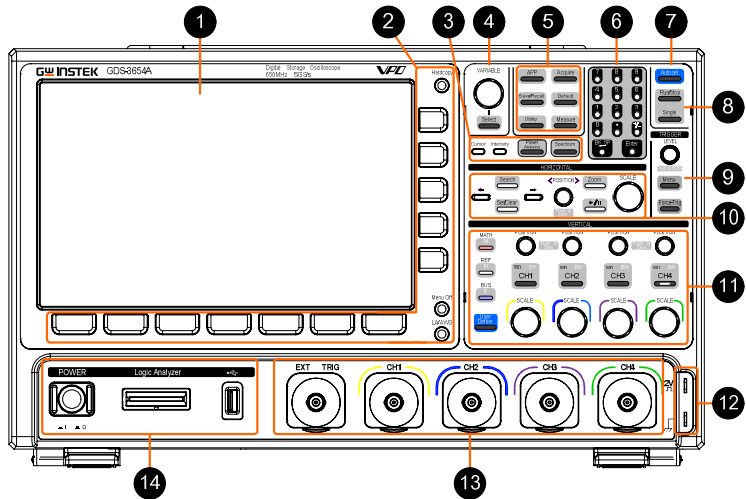


1 LCD Display 10.2 " WVGA TFT color LCD, 800 x 480 resolution, wide angle view display.


2 Hardcopy Key **Hardcopy** The Hardcopy key is a quick-save key. For more information see pages 374.



Menu Off Key **Menu Off** Use the Menu Off key to hide the onscreen menu system.




LA/AWG Key **LA/AWG** This key is used to access installed arbitrary wave generator or optional logic analyzer.




Menu Keys The side menu and bottom menu keys are used to make selections from the soft-menus on the LCD user interface.


To choose menu items, use the 7 Bottom menu keys located on the bottom of the display panel.


To select a variable or option from a menu, use the side menu keys on the side of the panel. See page 30 for details.

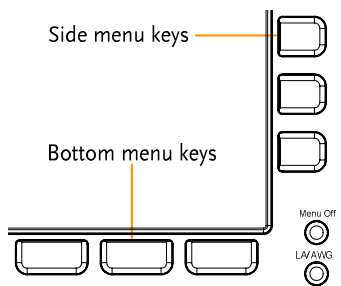


3 Cursor **Cursor** Configures and runs cursor measurements.




Intensity  Configures the waveform and graticule settings.

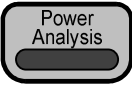Power Analysis  Executes various power analysis functions (optional).


Spectrum  Executes spectrum function.

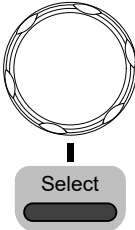
4 VARIABLE Knob and Select Key  The VARIABLE knob is used to increase/decrease values or to move between parameters.
The Select key is used to make selections.





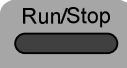



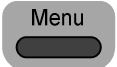
5 Function Keys The Function keys are used to enter and configure different functions on the GDS-3000A series.


APP  Configures and runs the applications.

Acquire  Configures the acquisition mode, including Segmented Memory acquisition.

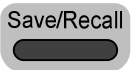

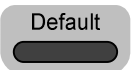Save/Recall  Used to save and recall waveforms, images, panel settings.

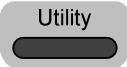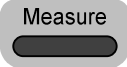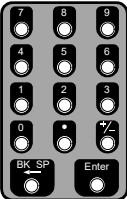
Default  Resets the oscilloscope to the default settings.

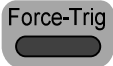- | | | |
|---------|---|--|
| Utility |  | Configures the Hardcopy key, display time, language, probe compensation and calibration. It also accesses the file utilities menu. |
| Measure |  | Configures and runs automatic measurements. |
-
- | | | |
|------------------|---|---|
| 6 Numeric keypad |  | The numeric keypad is used to enter values and parameters. It is often used in conjunction with the VARIABLE Knob and Select Key. |
|------------------|---|---|
-
- | | | |
|-----------|---|--|
| 7 Autoset |  | Press the Autoset key to automatically set the trigger, horizontal scale and vertical scale. |
|-----------|---|--|
-
- | | | |
|----------------|---|---|
| 8 Run/Stop Key |  | Press to Freeze (Stop) or continue (Run) signal acquisition (page 39). The run stop key is also used to run or stop Segmented Memory acquisition (page 88). |
| Single |  | Sets the acquisition mode to single triggering mode. |
-
- | | | |
|--------------------|---|--|
| 9 Trigger Controls | The trigger controls are used to control the trigger level and options. | |
| Level Knob |  | Used to set the trigger level. Push the Level Knob to set the trigger level to the half way point (50 %) |
| |  | |
| Trigger Menu Key |  | Used to bring up the trigger menu. |


Force - Trig  Press to force an immediate trigger of the waveform.


10 Horizontal Controls The horizontal controls are used to set the time base settings, zoom into the waveforms/traces and search for events.


Horizontal Position   The Position knob is used to position the waveforms/traces horizontally on the display screen. Pressing the knob will reset the position to zero.

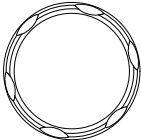

SCALE  SCALE The Scale knob is used to change the horizontal scale (TIME/DIV).

Zoom  Press Zoom in combination with the horizontal Position knob.

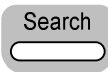Play/Pause  The Play/Pause key allows you to view each search event in succession – to effectively “play” through each search event. It is also used to play through a waveform/trace in zoom mode.

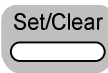
Search  The Search key accesses the search function menu to set the search type, source and threshold.

Set/Clear  Use the Set/Clear key to set or clear points of interest when using the search function.

Search Arrows   Use the arrow keys to navigate the search events.


- 11 Vertical POSITION

POSITION




Sets the vertical position of the waveform/trace. Push the knob to reset the vertical position to zero.
- SCALE Knob (Vertical)

SCALE

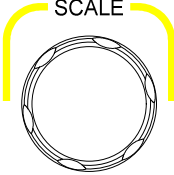


Sets the vertical scale of the channel (TIME/DIV).
- Channel Menu Key




Press the CH1/CH2/CH3/CH4 key to set and configure the corresponding channel.
- Math Key

MATH

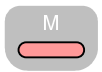


Use the Math key to set and configure math functions.
- Reference Key

REF




Press the Reference key to set or remove reference waveforms.
- BUS Key

BUS

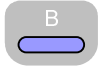


The Bus key is used for bus decode (SPI, UART, I²C, CAN and LIN) configuration.
- User Define Key



Provides several predefined function keys as shortcuts. Press the "Utility" key and select "User defined" to select the desired predefined function as shortcut.

12 Probe Compensation Output

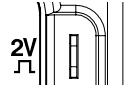


The probe compensation output is used for probe compensation. It also has an adjustable output frequency.

By default this port outputs a 2 Vpp, square wave signal at 1 kHz for probe compensation.


Please see page 188 for details.

Ground Terminal

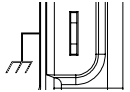

Accepts the DUT ground lead for common ground.


13 External Trigger Input

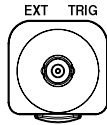

Accepts external trigger signals (page 139).

Input impedance: 1 MΩ/50 Ω
 Voltage input: ±15 Vpeak for 1 MΩ
 Input impedance; 5 Vrms for 50 Ω
 Input impedance; EXT trigger capacitance: 22 pF.

Channel Inputs

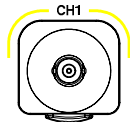


Accepts input signals.
 Input impedance: 1 MΩ/50 Ω.
 Capacitance: 22 pF
 CAT I


14 USB Host Port




Type A, 1.1/2.0 compatible. Used for data transfer.

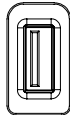

Logic Analyzer

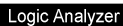


Logic Analyzer probe connector

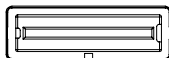

Power Switch

POWER

Used to turn the power on/off.

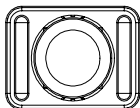


■ I: ON

■ O: OFF



Rear Panel and Right side panel

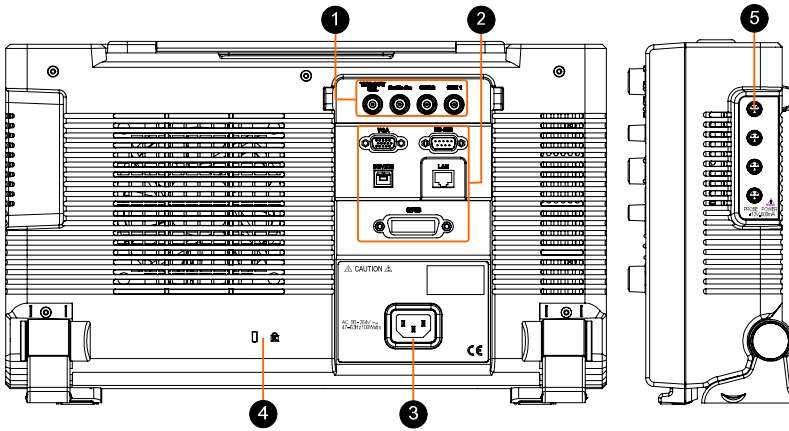

1 Calibration Output

**TRIG OUT/
CAL**

Outputs the signal for vertical scale accuracy calibration (page 395).



Go-No Go Output

Go/No Go

Outputs Go-No Go test results (page 316) as a 500 μ s pulse signal.



AWG Output

GEN 1

Output the GEN1 or GEN2 signal from the Arbitrary Wave Generator function. (see page 199).



2 USB (USBTMC) Device Port




The Type B USB (USBTMC) Device Port is used for remote control.

LAN (Ethernet) Port



The LAN port is used for remote control over a network or when combined with the Remote Disk app, allows the scope to be mounted to a share disk.

RS-232 port

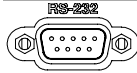

It is used for RS-232 remote control

VGA port




Outputs SVGA resolution to an external display.

GPIB port



24 pin female GPIB port.

3 Power Input Socket

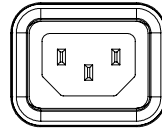

Power cord socket accepts AC mains, 100 V to 240 V, 50 Hz/60 Hz.

For power up sequence, see page 26.

4 Security Slot



Kensington security slot compatible.


5 Power Supply Receptacle










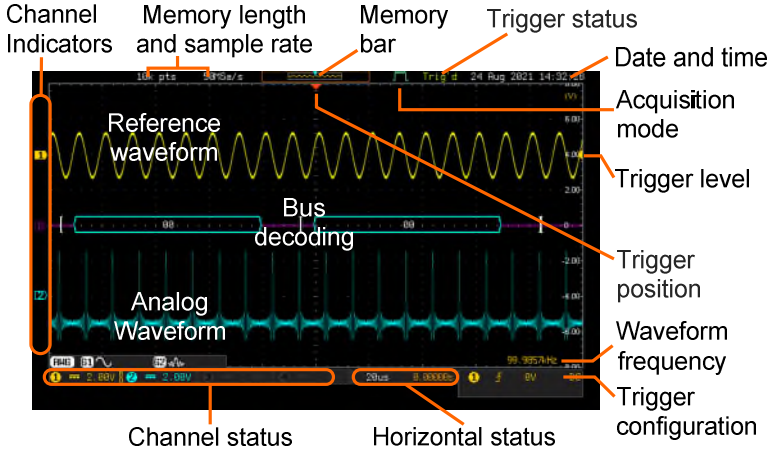

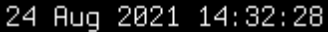

+/-12 V power supply for current probe usage.

LCD Display

Below is a general description of the main display. As the display changes while activating the different functions of the GDS-3000A, please refer to each function sub-chapters of this user manual for more details.




Analog Waveforms	Shows the analog input signal waveforms. Channel 1: Yellow Channel 2: Blue
Bus decoding	Shows serial bus data decoding. The values are displayed in hex or binary.
Reference waveform	Reference waveform(s) can be displayed for reference, comparison or other operations.
Channel Indicators	The channel indicators for each activated channels are located at the zero volt level of each signals. Any active channel is shown with a solid color. Example: B Bus indicator(B) 1 Reference waveform indicator M Math indicator
Trigger Position	Shows the position of the trigger.
Horizontal Status	Shows the horizontal scale and position.

- Date and Time  24 Aug 2021 14:32:28
 Current date and time (page 186).
- Trigger Level  Shows the trigger level on the graticule.
- Memory Bar 
 The ratio and the position of the displayed waveform compared to the internal memory (page 95).
- Trigger Status
- Trig'd Triggered.
 - PrTrig Pre-trigger.
 - Trig? Not triggered, display not updated.
 - Stop Trigger stopped. Also appears in Run/Stop (page 39).
 - Roll Roll mode.
 - Auto Auto trigger mode.
- For trigger details, see page 139.
- Acquisition Mode  Normal mode
 Peak detect mode
 Average mode
 High Resolution mode
- For acquisition details, see page 80.
- Signal Frequency  99.9857kHz Shows the trigger source frequency.
- Trigger Configuration  1 f 0V DC Trigger source, slope, voltage and coupling.
- Horizontal Status  20us 0.00000s Horizontal scale, horizontal position.
- For trigger details, see page 139.
- Channel Status  1 2.00V B Channel 1, DC coupling, 2 V/Div, both bandwidth limit, 50 ohm input impedance are on.
- For channel details, see page 103.


Set Up

Tilt Stand

Tilt To tilt, push the legs outward, as shown below.

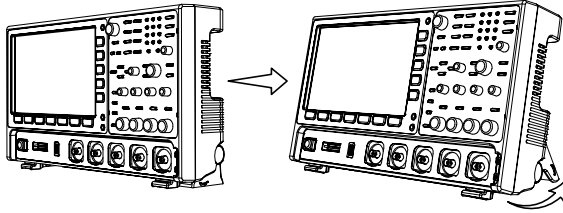


Stand To stand the scope upright, push the legs back under the casing as shown below.

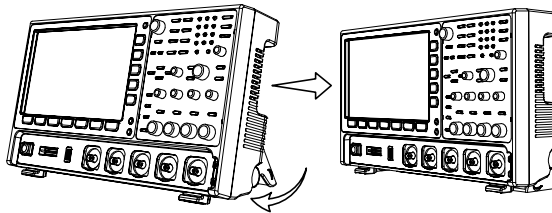

Power Up

Requirements The GDS-3000A series accepts line voltages of 100 V to 240 V at 50 Hz or 60 Hz.

Step 1. Connect the power cord to the rear panel socket.

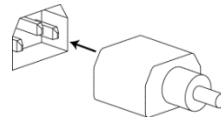

2. Press the POWER key. The display becomes active in 30 seconds.

POWER



- | : ON
- ○ : OFF





Note

The GDS-3000A series recovers the state right before the power is turned OFF. The default settings can be recovered by pressing the Default key on the front panel. For details, see page 360.

First Time Use


Background	This section describes how to connect, adjust the scale and compensate the probe. Before operating the GDS-3000A series in a new environment, run these steps to make sure the instrument performs at its full potential.
------------	---

1. Power On	Follow the procedures on the previous page.
-------------	---


2. Firmware	Update to the latest firmware.	Page 402
-------------	--------------------------------	----------

3. Set the Date and Time	Set the date and time.	Page 186
--------------------------	------------------------	----------

4. Reset System	Reset the system by recalling the factory settings. Press the <i>Default</i> key on the front panel. For details, see page 360.
-----------------	---


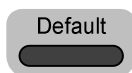


5. Connect the probe	<p>Connect the probe that you will use for measurements to the Channel 1 input and to the probe compensation output. This output provides by default a 2 V peak to peak, 1 kHz square wave for signal compensation.</p> <p>Set the probe attenuation to x10 if the probe has adjustable attenuation.</p>
----------------------	--

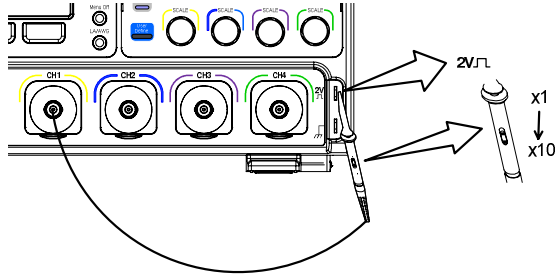


6. Capture Signal (Autoset)

Press the *Autoset* key. A square waveform appears on the center of the screen. For Autoset details, see page 38.

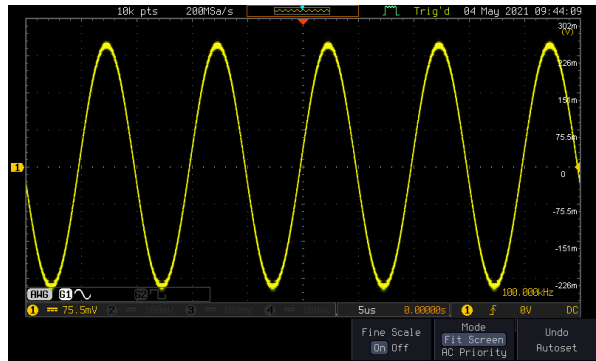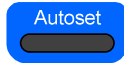



7. Select Vector Waveform

3. Press the **UTILITY** key followed by pressing the **DISPLAY** key from the bottom menu, and then set the display type to **Vector**.

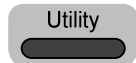

8. Compensate the probe

Turn the adjustment point on the probe to make the square waveform as flat as possible.

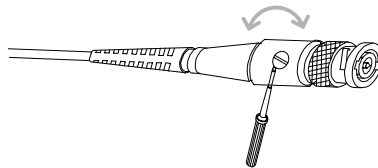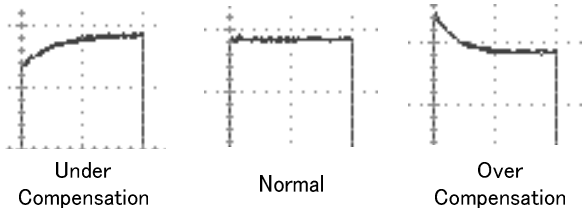

9. Start operations Continue with the other operations.

- Measurement: page 36 Advanced Configuration: page 77
- Using the Spectrum Analyzer: page 294 Applications: page 312
- Save/Recall: page 342 File Utilities: page 367
- Hardcopy key: page 374 Remote Control: page 376
- Maintenance: page 394

How to Use This Manual

Background


This section describes the conventions used in this manual to operate the GDS-3000A series.

Throughout the manual any reference to pressing a menu key refers to the keys directly below or beside any menu icons or parameters.

When the user manual says to “toggle” a value or parameter, press the corresponding menu item. Pressing the item will toggle the value or parameter.

Active parameters are highlighted for each menu item. For example in the example below, Coupling is currently set to DC.


If a menu item can be toggled from one value or parameter to another, the available options will be visible, with the current option highlighted. In the example below the slope can be toggled from a rising slope to a falling slope or either slope.

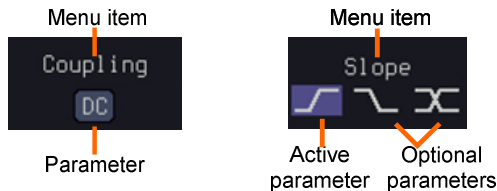

Selecting a Menu Item, Parameter or Variable

When the user manual says to “select” a value from one of the side menu parameters, first press the corresponding menu key and use the VARIABLE knob to either scroll through a parameter list or to increase or decrease a variable.


Example 1

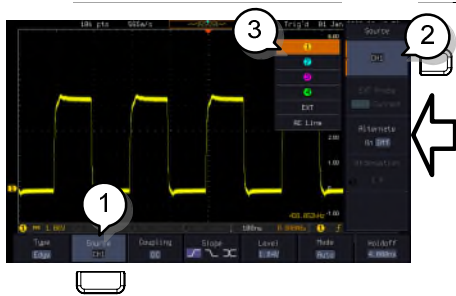


4. Press a bottom menu key to access the side menu.



5. Press a side menu key to either set a parameter or to access a sub menu.

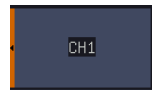

6. If accessing a sub menu or setting a variable parameter, use the VARIABLE knob to scroll through menu items or variables. Use the Select key to confirm and exit.

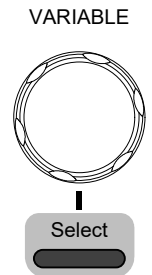


7. Press the same bottom menu key again to reduce the side menu.



Example 2


For some variables, a circular arrow icon indicates that the variable for that menu key can be edited with the VARIABLE knob.

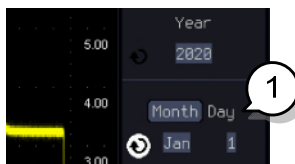

- 8. Press the desired menu key to select it. The circular arrow will become highlighted.



9. Use the VARIABLE knob to edit the value. Toggling a Menu Parameter

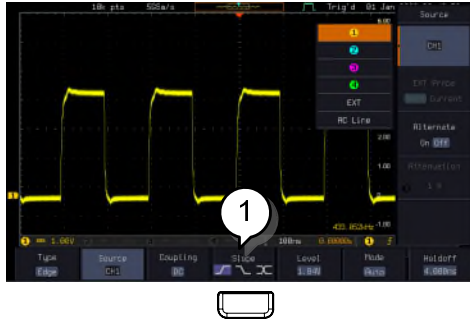

- 10. Press the bottom menu key to toggle the parameter.



Reduce Side Menu




- 11. To reduce the side menu, press the corresponding bottom menu that brought up the side menu.

For example: Press the *Source* soft-key to reduce the Source menu.

Reduce Lower Menu




12. Press the relevant function key again to reduce the bottom menu. For example: press the Trigger Menu key to reduce the trigger menu.

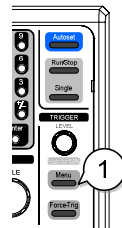

Remove All Menus




13. Press the *Menu Off* key to reduce the side menu, press again to reduce the bottom menu.

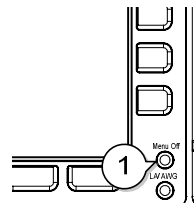

Remove On-Screen Messages

14. The *Menu Off* key can also be used to remove any on screen messages.

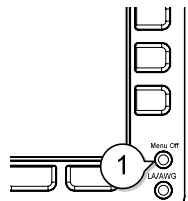


Built-in Help

Press and hold any key on front panel for few seconds to launch the built-in Help contents. The help menu contains information on how to use the front panel keys.

Panel Operation Press and hold any key for few seconds to launch introduction of the select key. The display changes to Help mode.

Example: Help on the Acquire key

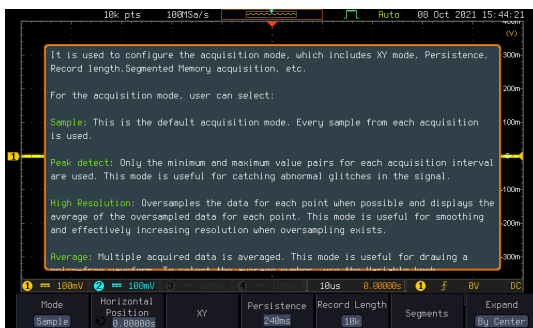

Exit Further press any key to close the Help contents shown on screen display.

M EASUREMENT

Basic Measurement	37
Channel Activation.....	37
Autoset	38
Run/Stop	39
Horizontal Position/Scale.....	40
Vertical Position/Scale	42
Automatic Measurement.....	43
Measurement Items.....	43
Add Measurement	47
Remove Measurement	49
Measurement Shortcuts.....	50
Gated mode	53
Display All mode.....	53
High Low Function.....	54
Statistics	56
Reference Levels.....	57
Cursor Measurement	59
Use Horizontal Cursors.....	59
Use Vertical Cursors	62
Math Operation	66
Basic Math Overview & Operators.....	66
Addition/Subtraction/Multiplication/Division.....	66
FFT Overview & Window Functions.....	68
FFT Operation.....	69
Advanced Math Overview	72
Advanced Math Operation	73

Basic Measurement


This section describes the basic operations required in capturing, viewing and measuring the input signal. For more detailed or more specific operations, see the following chapters.

- Advanced Configuration → from page 77
- Arbitrary Wave Generator → from page 177
- Spectrum Analyzer → from page 229
- Applications → from page 312

Before operating the oscilloscope, please see the Getting Started chapter, page 9.

Channel Activation


Activate Channel To activate an input channel, press a *channel* key.

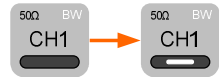


When activated, the channel key will light up. The corresponding channel menu will also appear.

Each channel is associated with the color shown beside each channel's vertical SCALE dial: CH1: yellow, CH2: blue


When a channel is activated, it is shown above the bottom menu system.

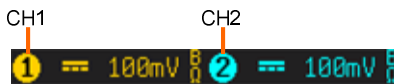

De-activate Channel To deactivate a channel, press the corresponding *channel* key again. If the channel menu is not open, press the *channel* key twice (the first press shows the Channel menu).

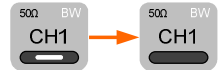

Default Setup To activate the default state, press *Default* (this will reset the system and recall the factory defaults, see page 360).

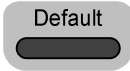

Autoset


Background The Autoset function automatically configures the panel settings to position the input signal(s) to the best viewing condition. The GDS-3000A series automatically configures the following parameters:

- Horizontal scale
- Vertical scale
- Trigger source channel

There are two operating modes for the Autoset function: Fit Screen Mode and AC Priority Mode.

Fit Screen Mode will fit the waveform to the best scale, including any DC components (offset). AC priority mode will scale the waveform to the screen by removing any DC component.

Panel Operation 1. Connect the input signal to the GDS-3000A series and press the *Autoset* key.

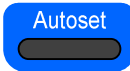


2. The waveform appears in the center of the display.

Before

After




3. To undo Autoset, press *Undo Autoset* from the bottom menu.

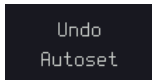


Change modes

4. Choose between *Fit Screen Mode* and *AC Priority Mode* from the bottom menu.

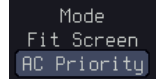

5. Press the *Autoset* key again to use Autoset in the new mode.

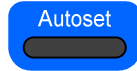

Fit Screen Mode



AC Priority



Limitation

Autoset does not work in the following situations:

- Input signal frequency is less than 20 Hz
- Input signal amplitude is less than 10 mV



Note

The Autoset key does NOT automatically activate the channels to which input signals are connected.

Run/Stop

Background

By default, the waveform on the display is constantly updated (Run mode). Freezing the waveform by stopping signal acquisition (Stop mode) allows flexible observation and analysis. To enter Stop mode, two methods are available: pressing the Run/Stop key or using the Single Trigger mode.

Stop mode icon



When in Stop mode, the

Triggered icon



Stop icon appears at the top of the display.

Freeze Waveform using the Run/Stop Key

Press the *Run/Stop* key once. The Run/Stop key turns red. The waveform and signal acquisition freezes.

Stop:



To unfreeze, press the *Run/Stop* key again. The *Run/Stop* key turns green again.



Freeze Waveform by Single Trigger Mode

Press the *Single* key to go into the Single Trigger mode. The *Single* key turns bright white.



In the Single Trigger mode, the scope will be put into the pre-trigger mode until the scope encounters the next trigger point. After the scope has triggered, it will remain in Stop mode, until the *Single* key is pressed again or the *Run/Stop* key is pressed.

Waveform Operation

The waveform can be moved or scaled in both Run and Stop mode, but in different manners. For details, see page 95 (Horizontal position/scale) and page 103 (Vertical position/scale).

Horizontal Position/Scale

For more detailed configuration, see page 95.

Set Horizontal Position

The horizontal position knob moves **<POSITION>** the waveform left and right.



Push to Zero

Set Horizontal Position to 0

Pressing the horizontal position knob will reset the horizontal position to 0.



Alternatively, pressing the *Acquire* key and then pressing *Reset H Position to 0 s* from the bottom menu will also reset the horizontal position.



As the waveform moves, the display bar on the top of the display indicates the portion of the waveform currently shown on the display and the position of the horizontal marker on the waveform.




Position Indicator The horizontal position is shown at the bottom of the display grid to the right.



Select Horizontal Scale

To select the timebase, turn the horizontal *SCALE* knob; left (slow) or right (fast).

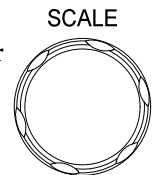


Range 1 ns/div to 1000 s/div 1-2-5 increments

The scale is displayed to the left at the bottom of the screen.




Display bar

The display bar indicates how much of the waveform is displayed on the screen at any given time. Changes to timebase will be reflected on the display bar.

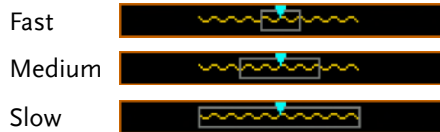

Stop mode In the Stop mode, the waveform size changes according to the scale.

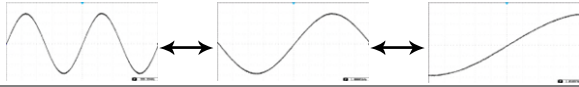

Note

The Sample rate changes according to the timebase and record length. See page 84.


Vertical Position/Scale

For more detailed configuration, see page 103.

Set Vertical Position

To move the waveform up or down, turn the *vertical position knob* for each channel.

Push the *vertical position knob* to reset the position to 0.

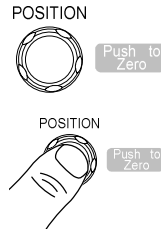


Run/Stop mode

The waveform can be moved vertically in both Run and Stop mode.

Select Vertical Scale

To change the vertical scale, turn the vertical *SCALE knob*; left (down) or right (up).

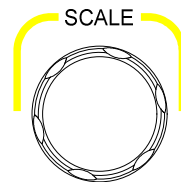

Range:

for 1 Mohm input 1 mV/div to 10 V/div 1-2-5 impedance increments

for 50 ohm input 1 mV/div to 1 V/div 1-2-5 impedance increments

The vertical scale indicator for each channel on the bottom of the display changes accordingly.






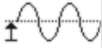
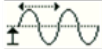

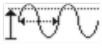
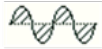
Automatic Measurement













The automatic measurement function measures and updates major items for Voltage/Current, Time, and Delay type measurements.


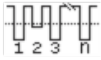
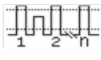

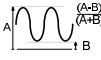
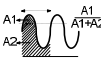
Measurement Items

	V/I Measurements	Time Meas.	Delay Meas.
Overview	<ul style="list-style-type: none"> Pk-Pk Max Min Amplitude High Low Mean Cycle Mean RMS Cycle RMS Area Cycle Area ROVShoot FOVShoot RPREShoot FPREShoot 	<ul style="list-style-type: none"> Frequency Period RiseTime FallTime +Width -Width Dutycycle +Pulses -Pulses +Edges -Edges % Flicker Flicker Idx 	<ul style="list-style-type: none"> FRR FRF FFR FFF LRR LRF LFR LFF Phase

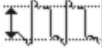
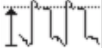


Voltage/Current Measurement	Pk-Pk (peak to peak)	Difference between positive and negative peak. (=max - min)
	Max	Positive peak.
	Min	Negative peak.

Amplitude		Difference between the global high value and the global low value, measured over the entire waveform or gated region. (=high – low)
High		Global high voltage. See page 54 for details.
Low		Global low voltage. See page 54 for details.
Mean		The arithmetic mean value is calculated for all data samples as specified by the Gating option.
Cycle Mean		The arithmetic mean value is calculated for all data samples within the first cycle found in the gated region.
RMS		The root mean square of all data samples specified by the Gating option.
Cycle RMS		The root mean square value is calculated for all data samples within the first cycle found in the gated region.
Area		Measures the positive area of the waveform and subtracts it from the negative area. The ground level determines the division between positive and negative areas.

	Cycle Area		The Summation based on all data samples within the first cycle found in the gated region.
	ROVShoot		Rise overshoot
	FOVShoot		Fall overshoot
	RPREShoot		Rise preshoot
	FPREShoot		Fall preshoot
Time Measurement	Frequency		Frequency of the waveform.
	Period		Waveform cycle time. (=1 /Freq)
	RiseTime		The time required for the leading edge of the first pulse to rise from the low reference value to the high reference value.
	FallTime		The time required for the falling edge of the first pulse to fall from the high reference value to the low reference value.
	+Width		Positive pulse width.
	-Width		Negative pulse width.
	Duty Cycle		Ratio of signal pulse compared with whole cycle. =100 x (Pulse Width/Cycle)

+Pulses		Measures the number of positive pulses.
-Pulses		Measures the number of negative pulses.
+Edges		Measures the number of positive edges.
-Edges		Measures the number of negative edges.
% Flicker		Ratio in percentage of the peak-to-peak value to the sum of peak values.
Flicker Idx		Ratio of the area above the average to the total area during one cycle.

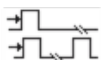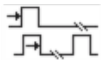Delay Measurement

FRR		Time between: Source 1 first rising edge and Source 2 first rising edge.
FRF		Time between: Source 1 first rising edge and Source 2 first falling edge.
FFR		Time between: Source 1 first falling edge and Source 2 first rising edge.
FFF		Time between: Source 1 first falling edge and Source 2 first falling edge.


LRR		<p>Time between: Source 1 first rising edge and Source 2 last rising edge.</p>
LFR		<p>Time between: Source 1 first rising edge and Source 2 last falling edge.</p>
LRF		<p>Time between: Source 1 first falling edge and Source 2 last rising edge.</p>
LFF		<p>Time between: Source 1 first falling edge and Source 2 last falling edge.</p>
Phase		<p>The phase difference of two signals, calculated in degrees.</p> $\frac{t1}{t2} \times 360^\circ$

Add Measurement


The *Add Measurement* function allows you to add up to eight automatic measurement items on the bottom of the screen from any channel source.

Add
Measurement
Item

1. Press the *Measure* key.

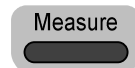

2. Press *Add Measurement* from the bottom menu.

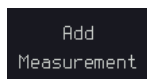


- Choose either a *V/I*, *Time* or *Delay* measurement from the side menu and choose the type of measurement you wish to add.




V/I (Voltage/ Current)	Pk-Pk, Max, Min, Amplitude, High, Low, Mean, Cycle Mean, RMS, Cycle RMS, Area, Cycle Area, ROVShoot, FOVShoot, RPREShoot, FPREShoot
Time	Frequency, Period, RiseTime, FallTime, +Width, -Width, Duty Cycle, +Pulses, -Pulses, +Edges, - Edges, %Flicker, FlickerIndex
Delay	FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF, Phase

- All of the chosen automatic measurements will be displayed in a window on the bottom of the screen. The channel number and channel color indicate the measurement source.
For the analog inputs: yellow = CH1, blue = CH2.

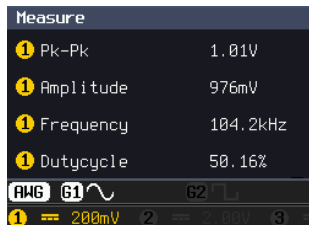

Choose a Source The channel source for measurement items can be set either before or when selecting a measurement item.

- To set the source, press either the *Source1* or *Source2* key from the side menu and choose the source.

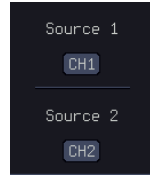

Range Source1: CH1 to CH4, Math,
Source2: CH1 to CH4, Math



Note


Source 2 is only applicable to Delay measurements.

Remove Measurement


Individual measurements can be removed at any time using the Remove Measurement function.

Remove Measurement Item



- Press the *Measure* key.

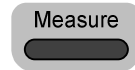

- Press *Remove Measurement* from the bottom menu.

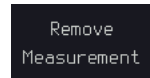


- Press *Select Measurement* and select the item that you want to remove from the measurement list.

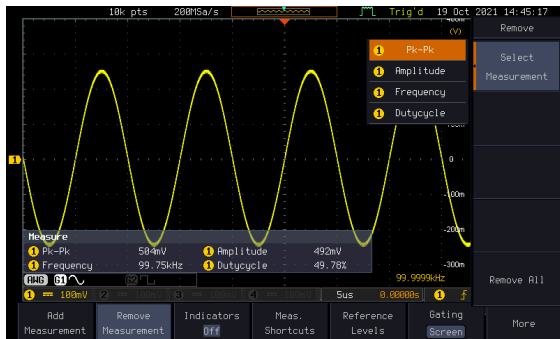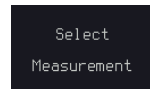

Remove All Items Press *Remove All* to remove all the measurement items.



Indicator 1. Press the *Measure* key.

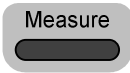


2. Push *Indicators* to visual measurement indicator. User can select measurement of interest from the added list and visualize the result corresponding to the waveform.



Note


Only one measurement item can be selected to display per time.

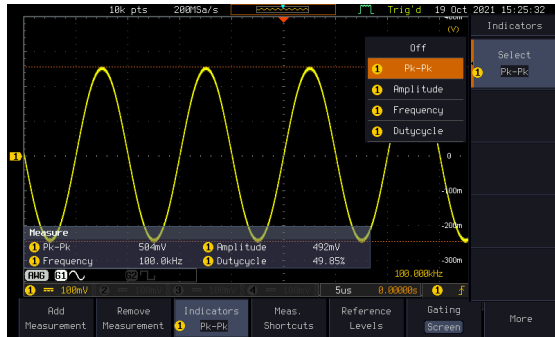


Measurement Shortcuts

Users can use the *Measure Shortcuts* function to select the item to be measured, and then store the selected item in *Shortcut 1 to 4*, which can be selected to conduct measurements for the same product next time. Users just select the previously stored *Shortcut 1 to 4* without making new selections from *Add measurement* and all the measurement items will be displayed on the screen to improve the measurement efficiency.

1. Press the *Measure* key.

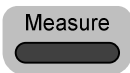

2. Press *Meas. Shortcuts* from the bottom menu.

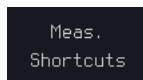

3. Current selected measurement items can be saved for quick use in the future by pressing *Select* key.




If *User* option is selected, the current measurement item will be changed to this item (*User*) when there is a change in the contents of shortcut key 1 to 4.

If *Shortcut 1 to 4* is selected, 4 sets of custom measurement item settings can be stored.


Save user to a shortcut

Press *Save User to* key and then select a shortcut to save the current measurement items.

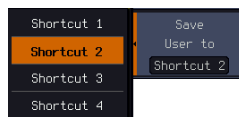

Measure display



Press *Display* key and then select whether the measurement item displays in landscape or portrait orientation or turn off the "Measure" display.

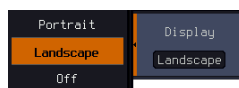

Transparent Readout

Select transparent readout background or turn off this function by press *Transparent Readouts On/Off*.




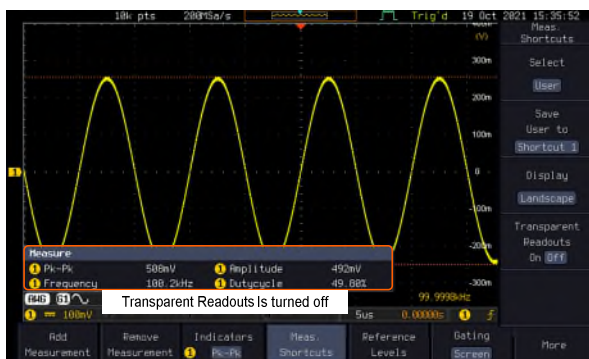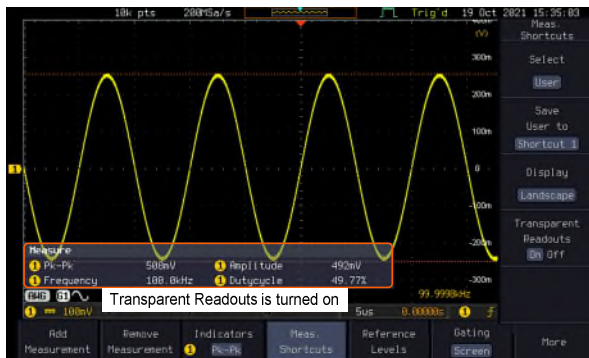


Gated mode

Some automatic measurements can be limited to a “gated” area between cursors. Gating is useful for measuring a magnified waveform or when using a fast time base. The Gated mode has three possible configurations: Off (Full Record), Screen and Between Cursors.


Set Gating Mode 1. Press the *Measure* key.

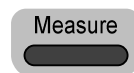

2. Press *Gating* from the bottom menu.

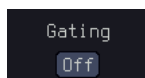

3. Choose one of the gating modes from the side menu: *Off (full record)*, *Screen*, *Between Cursors*.

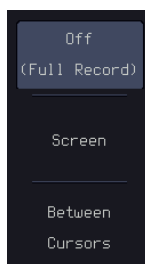

Cursors On
Screen

If *Between Cursors* is selected, the cursor positions can be edited by using the cursor menu.


Page 59

Display All mode


Display All mode shows and updates all items from Voltage and Time type measurements.

View
Measurement
Results


1. Press the *Measure* key.

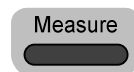


2. Press the *More* key.

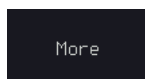

3. Press *Display All* from the bottom menu.

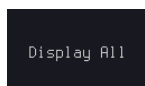

- Press Source from the side menu and choose a measurement source.

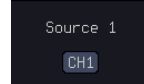

Range CH1 to CH2 (or CH4 for 4CH models), Math

- The results of Voltage and Time type measurements appear on the display.



Remove Measurements

To remove the measurement results, press *OFF*.



Delay Measurements

Delay type measurements are not available in this mode as only one channel is used as the source. Use the individual measurement mode (page 47) instead.

High Low Function


Background

The High-Low function is used to select the method for determining the value of the High-Low measurement values.


Auto

Automatically chooses the best high-low setting for each waveform when measuring.

Histogram Uses histograms to determine the high-low values. This mode ignores any pre-shoot or overshoot values. This mode is particularly useful for pulse-type waveforms

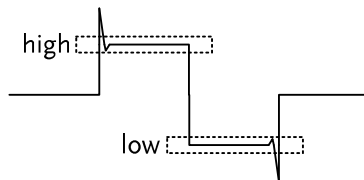


Min-max Sets the high-low values as the minimum or maximum measured values.

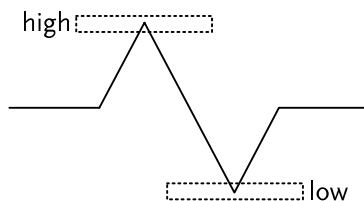


Set High-Low


1. Press the *Measure* key.

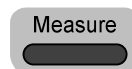

2. Press the *More* key.

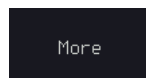

3. Press *High-Low* from the bottom menu.

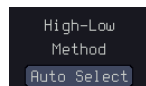


4. Select the type of High-Low settings from the side menu.

High-Low Settings Histogram, Min-Max, Auto

Restore Default High-Low Settings

To return to the default High-Low settings, press *Set to Defaults*.

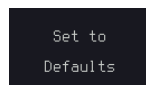


Statistics

Background


The Statistics function can be used to view a number of statistics for the selected automatic measurements. The following information is displayed with the Statistics function:

Value	Currently measured value
Mean	The mean value is calculated from a number of automatic measurement results. The number of samples used to determine the mean can be user-defined.
Min	The minimum value observed from a series of measured results for the selected automatic measurement items.
Max	The maximum value observed from a series of measured results for the selected automatic measurement items.
Standard Deviation	The variance of the currently measured value from the mean. The standard deviation equals the squared root of the variance value. Measuring the standard deviation can, for example, determine the severity of jitter in a signal. The number of samples used to determine the standard deviation can be user-defined.

Panel Operation 1. Press the *Measure* key.

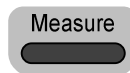


2. Press the *More* key.

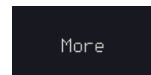

3. Select at least one automatic measurement. Page 47

4. Press *Statistics* from the bottom menu.

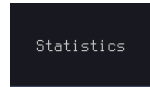


5. Set the number of samples to be used in the mean and standard deviation calculations.




Samples 2 to 1000


6. Press *Statistics* and turn Statistics on.

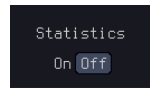

7. The statistics for each automatic measurement will appear at the bottom of the display in a table.

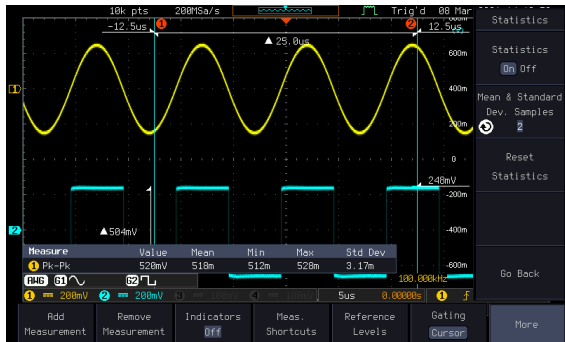

- Reset Statistics To reset the standard deviation calculations, press *Reset Statistics*.

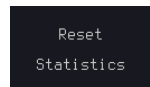


Reference Levels

- Background The reference level settings determine the measurement threshold levels for some measurements like the Rise Time measurement.



High Ref: Sets the high reference level.

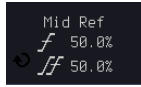


Mid Ref: Sets the middle reference for the first and second waveforms.




Low Ref: Sets the low reference level.

Panel Operation 1. Press the *Measure* key.

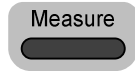


2. Press *Reference Levels* from the bottom menu.

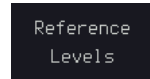

3. Set the reference levels from the side menu. Ensure the reference levels do not cross over.

High Ref	0.0 % to 100 %
Mid Ref	0.0 % to 100 %
	0.0 % to 100 %
Low Ref	0.0 % to 100 %

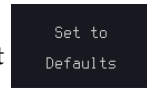


Default Settings 4. Press *Set to Defaults* to set the reference levels back to the default settings.




Cursor Measurement

Horizontal or vertical cursors are used to show the position and values of waveform measurements and math operation results. These results cover voltage, time, frequency and other math operations. When the cursors (horizontal, vertical or both) are activated, they will be shown on the main display unless turned off.


Use Horizontal Cursors

- Panel Operation
1. Press the *Cursor* key once.
 
 2. Press *H Cursor* from the bottom menu if it is not already selected.
 
 3. When the H Cursor is selected, repeatedly pressing the *H Cursor* key or the *Select* key will toggle which cursor is selected.
 

or

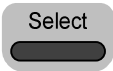


Range	Description
∷	Left cursor (1) movable, right cursor position fixed
∷	Right cursor (2) movable, left cursor position fixed
	Left and right cursor (1+2) movable together

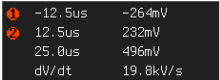4. The cursor position information appears on the top left hand side of the screen.
 

1	-12.5us	-264mV
2	12.5us	232mV
	25.0us	496mV
	dV/dt	19.8kV/s
- Cursor 1 Hor. position, Voltage/Current
 Cursor 2 Hor. position, Voltage/Current
 Δ Delta (difference between cursors)
 dV/dt or dI/dt

5. Use the *VARIABLE* knob to move the movable cursor(s) left or right.

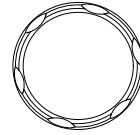


Note

The selected cursor(s) will move along the active waveform. To move along another waveform, select its corresponding channel and press the cursor key again to re-enter the cursor menu.

Select Units


6. To change the units of the horizontal position, press *H Unit*.

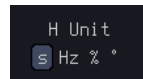


Units S, Hz, % (ratio), °(phase)

Phase or Ratio Reference

7. To set the 0 % and 100 % ratio or the 0 ° and 360 ° phase references for the current cursor positions, press *Set Cursor Positions As 100 %*.

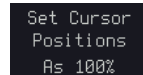


Example

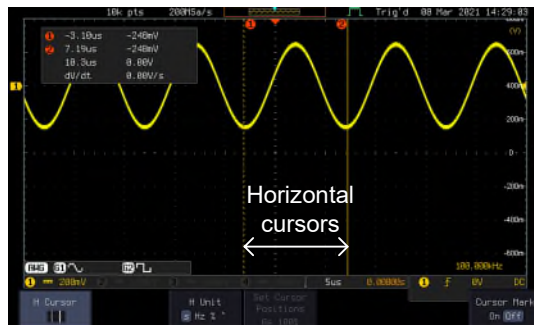


FFT

FFT cursors can use different units. For FFT details, see page 68.

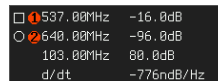

- Cursor ① Hor. position, dB/Voltage
- Cursor ② Hor. Position, dB/Voltage
- △ Delta (difference between cursors)
dV/dt or d/dt

Example

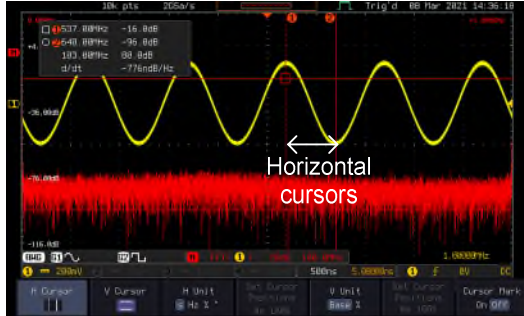

XY Mode

XY mode cursors measure a number of X by Y measurements. See page 81.


1 (X) Versus 2 (Y)	1	2	Δ
t:	-245ns	545ns	790ns
Rectangular			
x:	72.0mV	248mV	176mV
y:	-120mV	16.0mV	136mV
Polar			
r:	189mV	248mV	222mV
θ:	-59.0°	3.69°	37.5°
Product			
x×y:	-8.64mV ²	3.96mV ²	23.9mV ²
Ratio			
y/x:	-1.66V/V	64.5mV/V	772mV/V

Cursor 1 Time, rectangular, polar coordinates, product, ratio.

Cursor 2 Time, rectangular, polar coordinates, product, ratio.


Δ Delta (difference between cursors)

Example

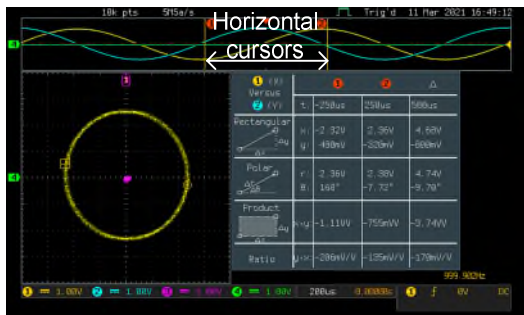

Use Vertical Cursors

Panel Operation/ Range 1. Press the *Cursor* key twice.

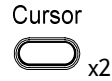


2. Press *V Cursor* from the bottom menu if it is not already selected.



3. When the *V Cursor* is selected, repeatedly pressing the *V Cursor* key or the *Select* key will toggle which vertical cursor is selected.



or

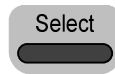

Range



Upper cursor movable, lower cursor position fixed




Lower cursor movable, upper cursor position fixed



Upper and lower cursor movable together

4. The cursor position information appears on the top left hand side of the screen (if the "Cursor Mark" is set to OFF).

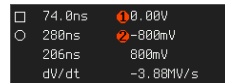


□, ○ Time: cursor 1, cursor 2

①, ② Voltage/Current: cursor1, cursor2

△ Delta (difference between cursors)
dV/dt or dI/dt


5. Use the *VARIABLE* knob to move the cursor(s) up or down.

VARIABLE

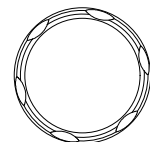

Select Units


6. To change the units of the vertical position, press *V Unit*.

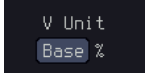


Units Base (source wave units), % (ratio)

Base or Ratio Reference

7. To set the 0 % and 100 % ratio references for the current cursor position, press *Set Cursor Positions* As 100 %.

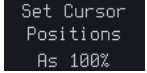


Example

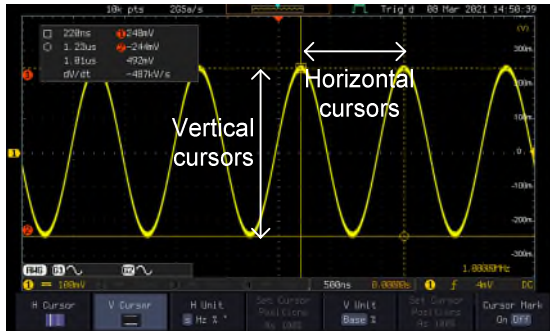


FFT

FFT has different content. For FFT details, see page 68.

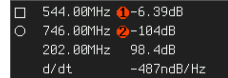



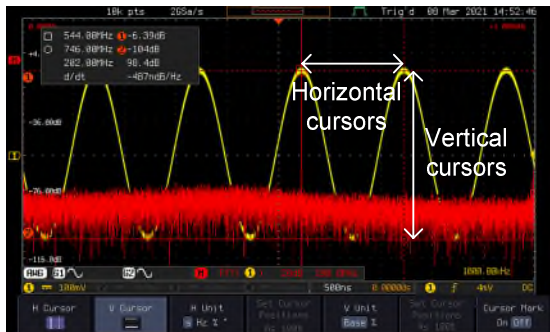


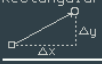
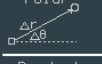

- , Frequency/Time: cursor1, cursor2
- ①, ② dB/V: cursor1, cursor2
- △ Delta (difference between cursors)
- d/dt


Example




XY Mode

XY mode cursors measure a number of X by Y measurements. See page 81.


 (X) Versus  (Y)	 			
	t:			
Rectangular 	x:	72.0mV	248mV	176mV
	y:	-120mV	16.0mV	136mV
Polar 	r:	139mV	248mV	222mV
	θ:	-59.0°	3.69°	37.6°
Product 	x * y:	-8.64mV ²	3.96mV ²	23.9mV ²
	Ratio	y / x:	-1.66V/V	64.5mV/V

Cursor  Rectangular, polar co-ordinates, product, ratio.

Cursor  Rectangular, polar co-ordinates, product, ratio.


 Delta (difference between cursors)

Example

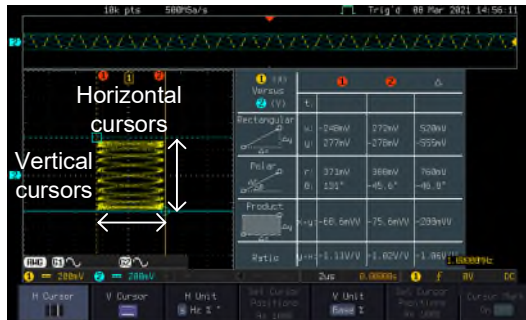

Cursor Mark
(On/off)

The information of cursor is displayed on cursor when the Cursor Mark function is activated.


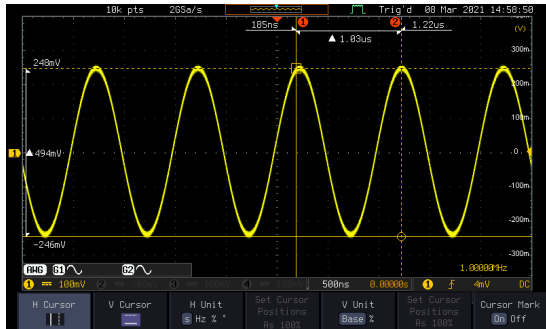

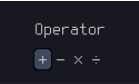


Math Operation

Basic Math Overview & Operators


Background	The Math function performs basic math functions (addition, subtraction, multiplication, division) on the input signals or the reference waveforms. The resultant waveform will be shown on the screen in real-time.	
Addition (+)	Adds the amplitude of two signals.	
	Source	CH1 to CH4, Ref1 to Ref4
Subtraction (-)	Extracts the amplitude difference between two signals.	
	Source	CH1 to CH4, Ref1 to Ref4
Multiplication (×)	Multiplies the amplitude of two signals.	
	Source	CH1 to CH4, Ref1 to Ref4
Division (÷)	Divides the amplitude of two signals.	
	Source	CH1 to CH4, Ref1 to Ref4

Addition/Subtraction/Multiplication/Division

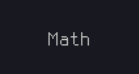Panel Operation	1. Press the <i>Math</i> key.	
	2. Press the <i>Math</i> key on the lower bezel.	
	3. Select <i>Source 1</i> from the side menu.	
	Range	CH1 to CH4, Ref1 to Ref4
4. Press <i>Operator</i> to choose the math operation.		

Range +, -, ×, ÷

- 5. Select *Source 2* from the side menu.

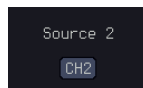


Range CH1 to CH4, Ref1 to Ref4

- 6. The math measurement result appears on the display. The vertical scale of the math waveform appears at the bottom of the screen.



From left: Math function, source1, operator, source2, Unit/div

Example

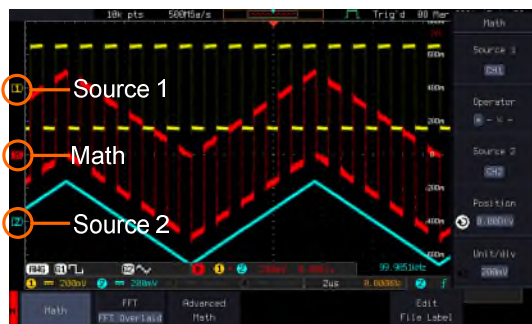

Position and Unit To move the math waveform vertically, press the *Position* key from the side menu and use the *VARIABLE* knob to set the position.



Range -12.00 Div to +12.00 Div

To change the unit/div settings, press *Unit/div*, then use the *VARIABLE* knob to change the unit/div.



The units that are displayed depend on which operator has been selected, and whether the probe for the selected channel has been set to voltage or current.

Operator:	Unit/div:
Multiplication	VV, AA or W
Division	V/V, A/A
Addition/Subtraction	V or A

Turn Off Math To turn off the Math result from the display, press the *Math* key again.




FFT Overview & Window Functions

Background The FFT function performs a Fast Fourier Transform on one of the input signals or the reference waveforms. The resultant spectrum will be shown on the screen in real-time. Four types of window function are available: Hanning, Hamming, Rectangular, and Blackman, as described below.

Hanning	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for...	Frequency measurement on periodic waveforms

Hamming	Frequency resolution	Good
	Amplitude resolution	Not good


	Suitable for...	Frequency measurement on periodic waveforms
Rectangular	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for...	Single-shot phenomenon (this mode is the same as having no window at all)
Blackman	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for...	Amplitude measurement on periodic waveforms
 Note	For more complete measures and functions in the frequency domain of a signal, please also refer to the Spectrum Analyzer section of the GDS-3000A series on page 229.	

FFT Operation

Panel Operation 1. Press the *Math* key.



2. Press *FFT* from the bottom menu to select a FFT display mode.

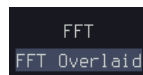


3. FFT contains up to 3 display methods.




FFT-overlaid

The time domain waveform overlaps with the FFT waveform.

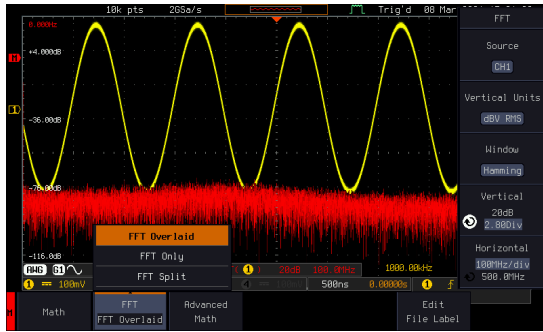


FFT-only

Only FFT display is shown.

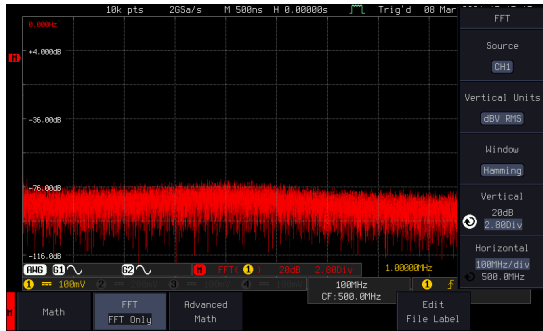


FFT-split

The time domain waveform is shown in the upper section, whereas the FFT display is shown in the lower section.

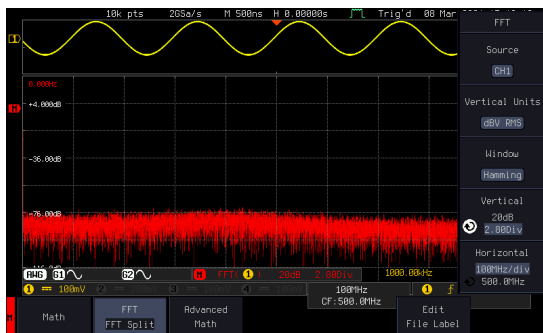

4. Select the *Source* from the side menu.

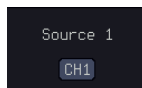

Range CH1 to CH4, Ref1 to Ref4

5. Press the *Vertical Units* key from the side menu to select the vertical units used.




Range Linear RMS, dBV RMS

6. Press the *Window* key from the side menu and select the window type.



Range Hanning, Hamming, Rectangular, and Blackman.

7. The FFT result represents the frequency-domain representation of a signal. Hence, the horizontal scale changes from time to frequency, and the vertical scale from voltage/current to dB/RMS.

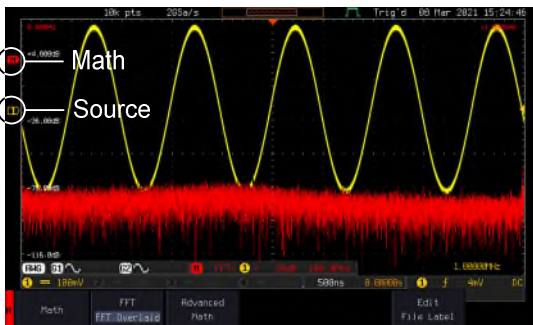

Position and Scale

To move the FFT waveform vertically, press *Vertical* until the *Div* parameter is highlighted and then use the *VARIABLE* knob.



Range -12.00 Div to +12.00 Div


To select the vertical scale of the FFT waveform, press *Vertical* until the *dB* or *voltage* parameters are highlighted and then use the *VARIABLE* knob.



Range 2 mV to 1 kV RMS (Linear RMS),
1 dB to 20 dB (dB VRMS)


Horizontal
Position and
Scale

To move the FFT waveform horizontally, press *Horizontal* until the *Frequency* parameter is highlighted and then use the *VARIABLE* knob.

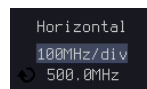

Range 0 Hz to half of the sampling
frequency

To select the horizontal scale of the FFT waveform, press *Horizontal* repeatedly until the *Hz/div* parameter is highlighted and then use the *VARIABLE* knob.

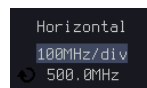

Advanced Math Overview

Background

The advanced math function allows complex math expressions to be created based on the input sources, reference waveforms or even the automatic measurements available from the *Measure* menu (see page 43).

An overview of each of the major parameters that can be used in the advanced math function are shown below:

Expression

Displays the function expression as it is created.

Source

Selects the source signal.

Source CH1 to CH4, Ref1 to Ref4

Function

Adds a mathematical function to the expression.


	Function	Intg, Diff, log, Ln, Exp, Sqrt, Abs, Rad, Deg, Sin, Cos, Tan, Asin, Acos, Atan
Variable		Adds a user-specified variable to the expression.
	Source	CH1 to CH4, Ref1 to Ref4
Operator		Adds an operator or parenthesis to the function expression.
	Operator	+, -, *, /, (,), !, <, >, <=, >=, ==, !=, , &&
Figure		Adds a value to the expression.
	Figure	Integers, floating point, or floating point with exponent values.
Measurement		Adds automatic measurements to the expression. Not all automatic measurements are supported.
	Measurement	Pk-Pk, Max, Min, Amp, High, Low, Mean, CycleMean, RMS, CycleRMS, Area, CycleArea, ROVShoot, FOVShoot, Freq, Period, Rise, Fall, PosWidth, NegWidth, Dutycycle, FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF, Phase, RPRFShoot, FPREShoot, +Pulses, -Pulses, +Edges, -Edges

Advanced Math Operation


Panel Operation 1. Press the *Math* key.




2. Press *Advanced Math* from the bottom menu.

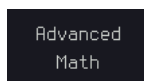

3. Press Edit Expression.

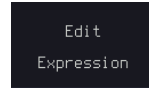

4. The Edit f(x) screen appears. CH1 + CH1 is shown in the expression box as an example at startup.

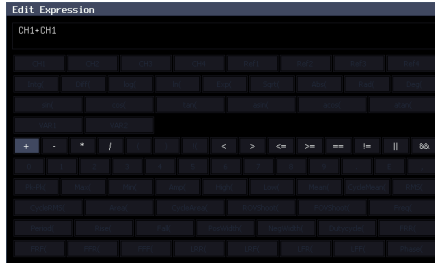


5. Press *Clear* to clear the expression entry area.



6. Use the *VARIABLE* knob and the *Select* key to create an expression.

Use the *VARIABLE* knob to highlight a source, function, variable, operator, figure or measurement in orange.

Press the *Select* key to make the selection.

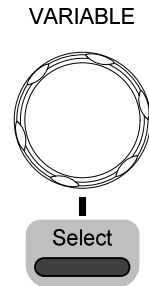


If a particular parameter is grayed out, it indicates that the particular parameter is not available at that time.

Back Space


7. To delete the last parameter press *Back Space*.




- When the expression is complete, press *OK Accept*.

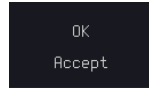

- Load recent expression: It loads the previous expression setting.

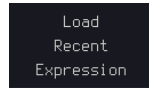


Example:
CH1 + CH2

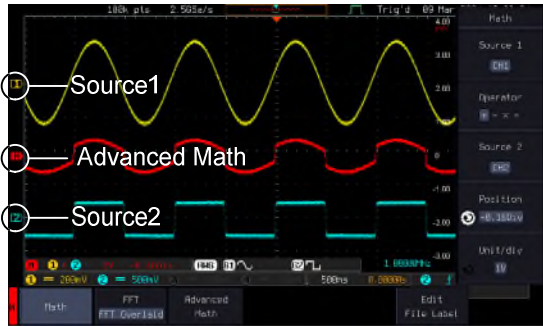


Set the VAR1 & VAR2


- Press *VAR1* or *VAR2* to set VAR1/VAR2 if they were used in the expression created previously.

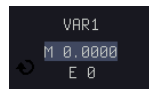

- Use the numerical keypad on the front panel to set the value of the selected digit.

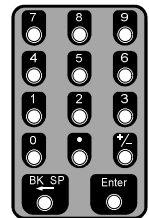

- Use the *VARIABLE* knob to set the exponent of the variable. Input number via pressing the numerical keypad followed by pressing the Enter to confirm.

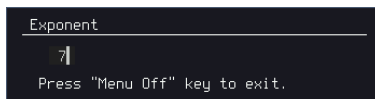

13. Press *menu off* to finish editing VAR1 or VAR2.

Menu Off



Vertical Position and Scale

14. Press *Unit/div* and use the *VARIABLE* knob to set the vertical scale of the math waveform.



15. Press *Position* and use the *VARIABLE* knob to set the vertical position of the math waveform on the display.



Clear Advanced Math

To clear the advanced math result from the display, press the *Math* key again.

MATH



ADVANCED CONFIGURATION

Acquisition	80
Select Acquisition Mode.....	80
Show Waveform in XY Mode	81
Set the Record Length.....	84
Segmented Memory Acquisition	85
Segments Display	86
Set the Number of Segments	87
Run Segmented Memory.....	88
Navigate Segmented Memory	89
Play Through Each Segment.....	90
Measurement on Segments.....	91
Segment Info.....	94
Horizontal View	95
Move Waveform Position Horizontally	95
Select Horizontal Scale	96
Select Waveform Update Mode.....	96
Zoom Waveform Horizontally	98
Play/Pause	100
Vertical View (Channel).....	103
Move Waveform Position Vertically.....	103
Select Vertical Scale.....	104
Select Coupling Mode.....	104
Input Impedance	105
Invert Waveform Vertically	106
Limit Bandwidth.....	107
Fine Scale	109
Expand by Ground/Center.....	110
Select Probe Type.....	111
Select Probe Attenuation Level	112
Set the Deskew	112
Bus Key Configuration	114
Bus Display.....	114
Serial Bus Overview.....	115

UART Serial Bus Configuration	117
I ² C Serial Bus Interface	119
Serial Bus Interface.....	120
Parallel Bus	123
Input Configuration	123
Threshold Configuration.....	124
Bus Encoding	125
Parallel Bus Event Table	125
Adding a Label to the Parallel Bus	126
CAN Serial Bus Interface.....	128
LIN Serial Bus Interface.....	129
Bus Encoding.....	130
Threshold configuration.....	131
Serial Bus Event Tables	132
Event Tables Format	134
Adding a Label to a Bus	135
Using Cursors with the Serial Bus	137
Trigger	139
Trigger Type Overview.....	139
Trigger: types and sources.....	141
Trigger Parameter Overview	141
Setup Holdoff Level.....	148
Setup Trigger Mode	149
Using the Edge Trigger	149
Using Advanced Delay Trigger.....	151
Using Pulse Width Trigger.....	152
Using Video Trigger.....	154
Pulse Runt trigger	155
Using Rise and Fall Trigger.....	157
Using the Timeout Trigger	158
Using the Bus Trigger.....	160
UART BUS Trigger Settings	160
I ² C Bus Trigger Settings	162
SPI Bus Trigger Settings.....	165
CAN Bus Trigger.....	166
LIN Bus Trigger.....	169
Parallel Bus Trigger	172
Using the Logic Trigger.....	173
Search.....	177
Configuring Search Events	177
Copying Search Event To/From Trigger Events.....	179
Search Event Navigation.....	179
Save Search Marks	180
Setting/Clearing Single Search Events	181

FFT Peak.....	181
System Settings	185
Select Menu Language	185
View System Information	185
Erase Memory	186
Erase Disk.....	186
Set Date and Time.....	188
Probe Compensation Frequency	188
QR Code Reader Function.....	189
Display	191
Display Waveform as Dots or Vectors.....	191
Ruler On/Off.....	191
Set the Intensity Level	192
Select Display Graticule	195
Freeze the Waveform (Run/Stop)	196
Turn Off Menu.....	196


Acquisition

The Acquisition process samples the analog input signals and converts them into digital format for internal processing.


Select Acquisition Mode

Background	The acquisition mode determines how the samples are used to reconstruct a waveform.
Sample	This is the default acquisition mode. Every sample from each acquisition is used.
Peak detect	Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.
Hi Resolution	Performs boxcar averaging on the samples. This reduces white noise and increases the vertical resolution of the waveform.
Average	Multiple acquired data is averaged. This mode is useful for drawing a noise-free waveform. To select the average number, use the VARIABLE knob. Average number: 2, 4, 8, 16, 32, 64, 128, 256 and 512


Panel Operation 1. Press the *Acquire* key.

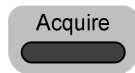

2. To set the Acquisition mode, press *Mode* on the bottom menu.

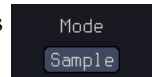


3. Select an acquisition mode from the side menu.
4. If *Average* was chosen, set the number of samples to be used for the average function.

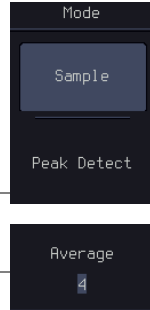

Mode	Sample, Peak Detect, Average
Average sample	2, 4, 8, 16, 32, 64, 128, 256, 512

Example

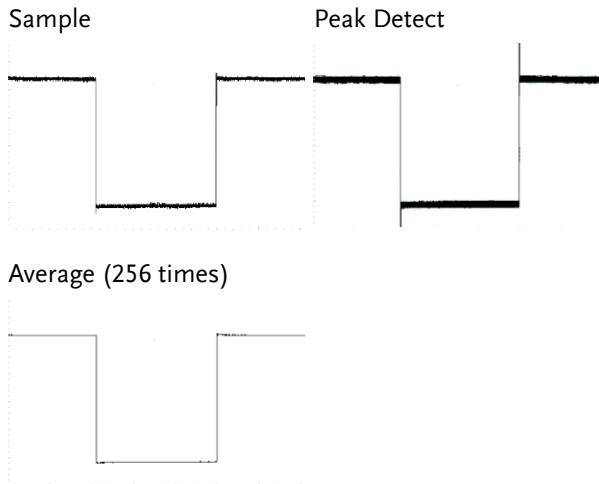

Show Waveform in XY Mode


Background

The XY mode maps the voltage of channel 1 to the voltage of channel 2. In 4 channel models, the voltage of channel 3 is mapped to the voltage of channel 4. This mode is useful for observing the phase relationship between waveforms.


Reference waveforms can also be used in XY mode. Ref1 is mapped to Ref2 and Ref3 is mapped to Ref4. Using the reference waveforms is the same as using the channel input waveforms.

Connection

1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis) or Channel 3 (X2-axis) and Channel 4 (Y2-axis)

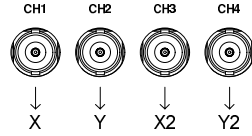


2. Make sure a channel pair is active (CH1 & CH2 or CH3 & CH4). Press the Channel key if necessary. A channel is active if the channel key is lit.

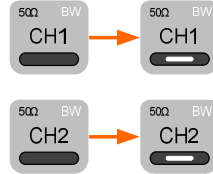


Panel Operation


3. Press the *Acquire* menu key.

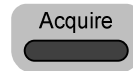


4. Press XY from the bottom menu.

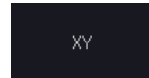


5. Choose *Triggered XY* from the side menu.

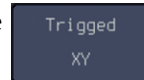


X-Y mode is split into two windows. The top window shows the signals over the full time range. The bottom window shows XY mode.

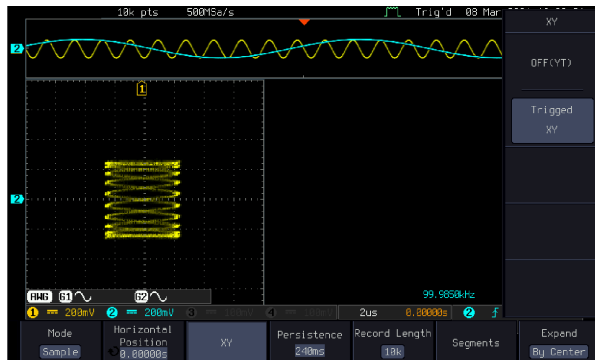

To move the XY waveform position, use the vertical position knob: Channel 1 knob moves the XY waveform horizontally and Channel 2 knob moves the XY waveform vertically. Similarly, the X2 and Y2 axis can be positioned using the channel 3 and channel 4 vertical position knobs.

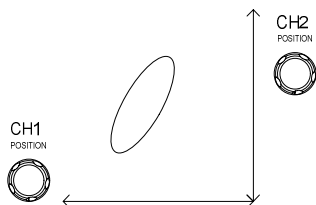




The horizontal position knob and horizontal Scale knob can still be used under the XY mode.

Turn Off XY Mode To turn off XY mode, choose *OFF* (*YT*) mode. 

Cursors and XY Mode Cursors can be used with XY mode. See the Cursor chapter for details. Page 59

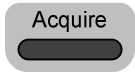Persistence The persistence function allows the GDS-3000A to mimic the trace of a traditional analog oscilloscope. A waveform trace can be configured to “persist” for designated amount of time.

- Panel Operation**
6. Press the *Acquire* menu key. 
 7. To set the persistence time, press the *Persistence* menu button on the bottom bezel. 
 8. Use the *VARIABLE* knob to select a persistence time. 

Time Auto, 16 ms to 4 s, Infinite, Off

Clear Persistence It clears the Persistence effect.

Set the Record Length


Background The number of samples that can be stored is set by the record length. Record length is important in an oscilloscope as it allows longer waveforms to be recorded.

The maximum record length for the GDS-3000A SERIES depends on operating mode. The table below describes the record lengths that are available for each mode.

Limitation

Record Length	1 k	10 k	100 k	1 M	10 M	100 M	200 M
Single Window	✓	✓	✓	✓	✓	✓	✓
Zoom	✗	✓	✓	✓	✓	✓	✓
FFT	✓	✓	✓	✓	✗	✗	✗
Zoom+FFT	✗	✓	✓	✓	✗	✗	✗
Digital Filter	✓	✓	✓	✓	✗	✗	✗
Roll+MATH	✓	✓	✓	✗	✗	✗	✗
Average	✓	✓	✓	✓	✗	✗	✗
Zoom+Average	✗	✓	✓	✗	✗	✗	✗
Segment	✓	✓	✓	✓	✗	✗	✗
LA	✗	✓	✓	✓	✓	✗	✗
HighRes	✓	✓	✓	✓	✓	✓	✗

Panel Operation 1. Press the *Acquire* key.

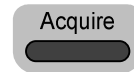

2. Press the *Record Length* key on the bottom menu and choose the record length.



Record length 1 k, 10 k, 100 k, 1 M, 10 M, 200 M



Note


The sampling rate may also be changed when the record length is changed.

Segmented Memory Acquisition


The advanced segmented memory utility allows the scope memory to be divided into different segments. Each time the scope is triggered, it only acquires data for one segment of memory at a time. This allows you to optimize the scope memory to only perform signal acquisition during important signal events.

For example, for a signal with a number of pulses, normally the oscilloscope will acquire the signal until the acquisition memory of the scope is filled up and then it will re-arm the trigger and then capture again. This could result in a number of events not being captured or captured at a less-than-desired resolution (depending on the horizontal scale and sampling rate). However, the segmented memory function would effectively allow you to capture more of the signal than you would otherwise. The diagrams below illustrate this point.

Normal acquisition mode example:

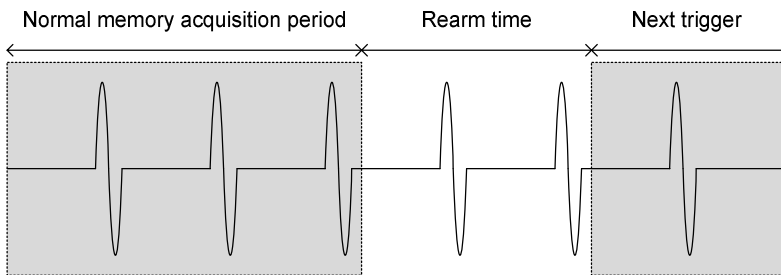

Segmented memory acquisition example:

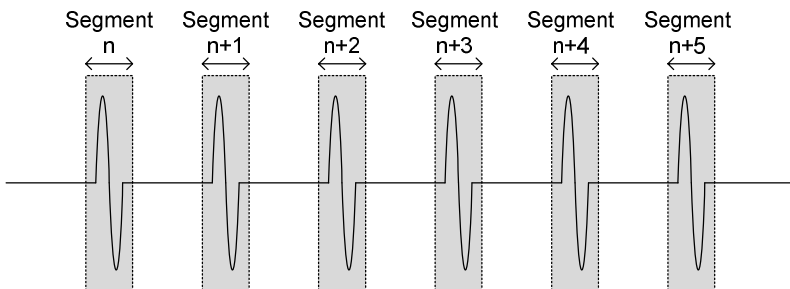


As shown above, the memory is divided into segments to increase the number of events that can be effectively captured with the same acquisition memory. Also notice that the scope doesn't need to rearm the trigger between each segment, this makes the segmented memory function especially useful for high speed signals. The time between each segment is also recorded so that accurate signal timing can also be measured.


The segmented memory function also supports automatic measurements for each segment or statistics for all the captured segments.

The advanced Segment Memory Utility is available for both analog and digital channels.

Segments Display

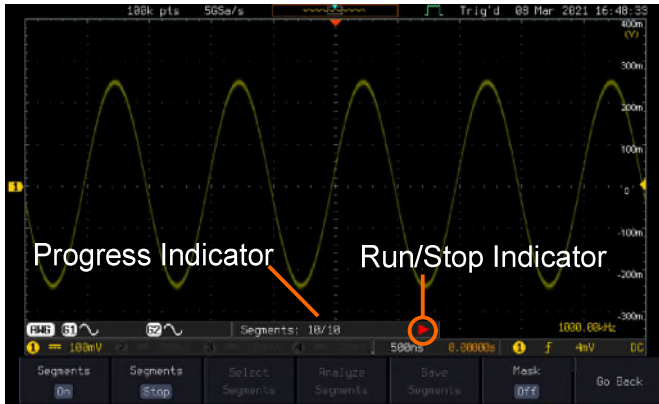

Progress Indicator

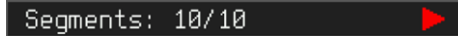

Indicates the number of segments that have to be captured relative to the set number of segments.

Run/Stop Indicator



Stop: The segments have finished acquiring or have been stopped.



Run: The scope is ready to acquire segments.

Set the Number of Segments

Background Before the Segment function can be used, set the trigger settings as appropriate for the signal you wish to use. The number of segments that can be used depends wholly on the record length. See page 84 to set the record length.




Note

Segment supports up to 1 M points record length.


Record length	Number of segments
1000 pt.	1 to 490,000
10k pt.	1 to 49,000
100k pt.	1 to 4,900
1M pt.	1 to 490

Panel Operation


1. Press the *Acquire* key.

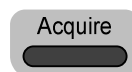

2. Press *Segments* on the bottom menu.

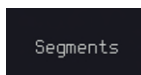

3. Press *Select Segments* and set the number of segments from the side menu.

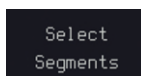

Num of Seg	1 to 490,000 (record length dependent)
------------	--

Set to Maximum	Sets to the maximum number
----------------	----------------------------

Set to Minimum	Sets to 1 segment
----------------	-------------------



Note

The Select Segments icon is only available when Segments = OFF or when Segments is in the STOP mode (see the section below).


Run Segmented Memory

Background Before the Segmented Memory function can be used, set the trigger settings as appropriate for the signal you wish to use. See page 139 for configuring the trigger settings.

Run Segments 1. Toggle *Segments On* from the bottom menu.



2. The scope will automatically start acquiring segments. The progress of the segmented memory capture is shown in the Progress Indicator.
3. The Run Indicator will be shown when in the Run mode and the Segments icon will also indicate that the function is in run mode.

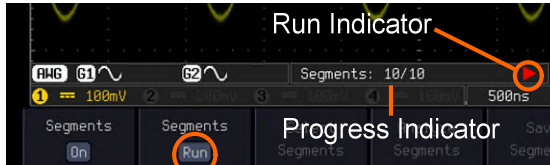

Segment (Run)icon

4. When the scope has finished acquiring segments, press *Segments Run* to toggle the mode to the *Segments Stop* mode.



Alternatively, the *Run/Stop* key can be pressed.



5. The Stop Indicator will be shown when in the Stop mode.




Segment (Stop)icon

The scope is now ready to navigate or analyze the acquired segments.

- Rerun Segmented Acquisition
- To rerun the segments, press the *Segments Stop* key to toggle the mode back to the *Segments Run* mode.



Alternatively, press the *Run/Stop* key again.

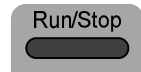


- Repeat steps 3 and 4 in the section above when the segmented acquisition has completed.



Navigate Segmented Memory

Background After the segmented memory acquisitions have been captured you can navigate through each segment one at a time.

- Operation**
- Press *Select Segments* from the bottom menu. This key will be available in the Stop mode.

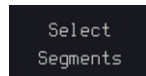

2. To navigate to the segment of interest, press *Current Seg* from the side menu and use the VARIABLE knob to scroll to the segment of interest.
Alternatively, the *Set to Minimum* and *Set to Maximum* keys can be used to jump to the first and last segment respectively.
3. The position in time of the selected segment relative to the time of the first segment is shown in the *Segments Time* key.

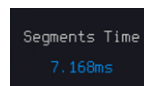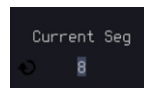

Play Through Each Segment

Background When all the segments have been acquired, the play/pause key can be used to play back through each segment.

- Operation**
1. Make sure the scope is in *Segments Stop* mode. See page 88 for details.
 2. Press the *Play/Pause* key to run through the acquired segments in numerical order.
 - Press the Play/Pause key again to pause the playback.
 - When the scope has played through to the last segment, pressing the Play/Pause key again will play through each segment again in reverse order.



Measurement on Segments

Background The Segmented memory function can be used in conjunction with the automatic measurements configured in the Measurement menu (see page 43).
Please note that Digital channels measurements cannot be used in conjunction with the segmented memory.

Modes

Segments Measure	This function will either perform statistics calculations on the segments or tabulate a list of the measurement results for all the segments.
------------------	---

Segments Info	Provides configuration information common for all the acquired memory segments.
---------------	---

Segments Measure The Segments Measure function allows you to view automatic measurements for the segments in statistical bins or as a list displaying the result of each automatic measurement.

Statistics	This function will bin the measurement results of a single automatic measurement into a user-defined number of bins. This enables the user to easily view the distribution of the measurement results for a large number of segments.
------------	---

Measurement List	Puts all the measurement results for a segment in a list. All the currently selected automatic measurement results are listed. A maximum of 8 automatic measurements can be used with this function.
------------------	--




Note

To use automatic measurements with the segmented memory, automatic measurements must first be selected from the Measure menu before the segmented memory function is run. Note that Digital channels cannot use this function.

Setup


Press the *Measure* key and select any *single* source measurement from the *Add Measurement* menu.

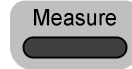

See page 47 for details on how to add automatic measurements.

Operation


1. Press *Analyze Segments* from the Segments menu.

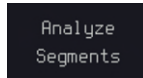

Note

This key will only be available in the Stop mode.

2. Press Segments Measure.

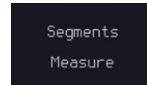

3. Select either the statistics or the measurement list from the side menu.



Statistics List

4. The statics table or measurement list appears on the display.

Note that the more segments that you have, the longer it will take to calculate the statics or list the measurement results.

- For statistic measurements, press *Plot Source* to choose which automatic measurement to use for the statistics calculations. The statistics for only one automatic measurement can be viewed at a time.



- For the measurement list, press *Source* and select the source channel for measurement.



Range CH1 to CH4

Statistics Results This function will bin the measurement results of the selected automatic measurement into a user-defined number of bins.


Setup

- To select the number of bins for the statistics, press *Divided by* and select the number of bins with the Variable knob.




Range 1 to 20 bins

- Press *Select* and use the *VARIABLE* knob to view the measurement results for each bin.

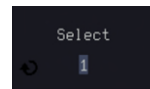


**Example:
Statistics**

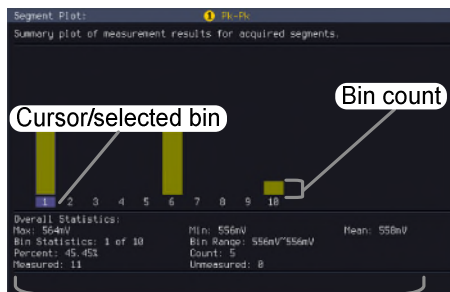


Statistics of currently selected bin

Measurement List Puts all the measurement results for a segment in a list.

Setup 9. Press *Select* and use the *VARIABLE* knob to scroll through each segment.

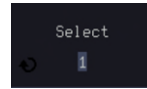


Example:
Measurement List

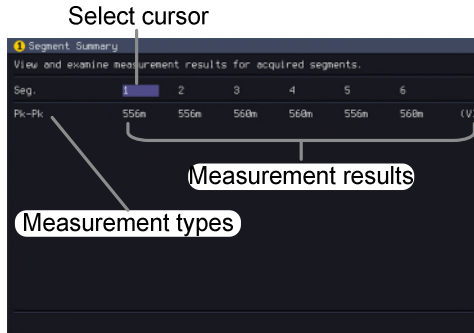


Segment Info

Operation 1. Press *Analyze Segments* from the bottom menu.

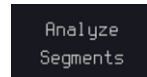


This key will only be available in the Stop mode.

2. Press Segments Info.

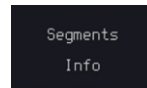

3. A table showing all general setting information for the segmented memory acquisitions is shown on the display.

Info: Sample rate, Record length,
 Horizontal, Vertical

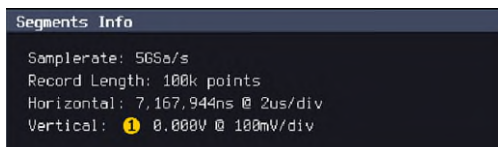

Horizontal View

This section describes how to set the horizontal scale, position, and waveform display mode.

Move Waveform Position Horizontally

Panel Operation The horizontal position knob moves **<POSITION>** the waveform left/right.




Push to Zero

As the waveform moves, a position indicator on the top of the display indicates the horizontal position of the waveform in memory.




Horizontal Position

1. Pushing the horizontal position knob will also reset the position to zero.

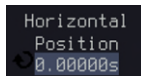

2. It is available to use the numerical keypad to input a desired horizontal position.

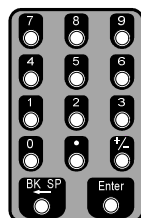


Run Mode

In Run mode, the memory bar keeps its relative position in the memory since the entire memory is continuously captured and updated.


Select Horizontal Scale

Select Horizontal Scale To select the timebase (time/div), turn the horizontal Scale knob; left (slow) or right (fast).

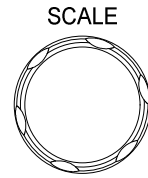


Range 1 ns/div to 1000 s/div, 1-2-5 increment

The timebase indicator updates as the horizontal scale is adjusted.

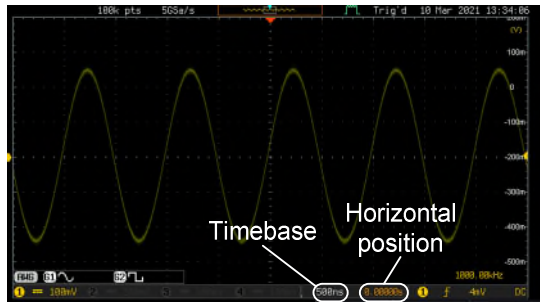

Run Mode In Run mode, the memory bar and waveform size keep their proportion. When the timebase becomes slower, roll mode is activated (if the trigger is set to Auto).


Stop Mode In Stop mode, the waveform size changes according to the scale.

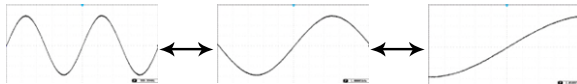

Select Waveform Update Mode


Background The display update mode is switched automatically or manually according to the timebase and trigger.

Normal	Updates the whole displayed waveform at once. Automatically selected when the timebase (sampling rate) is fast.
	Timebase ≤ 50 ms/div
	Trigger all modes
Roll Mode	Roll Updates and moves the waveform gradually from the right side of the display to the left. Automatically selected when the timebase (sampling rate) is slow.
	Timebase ≥ 100 ms/div
	Trigger all modes

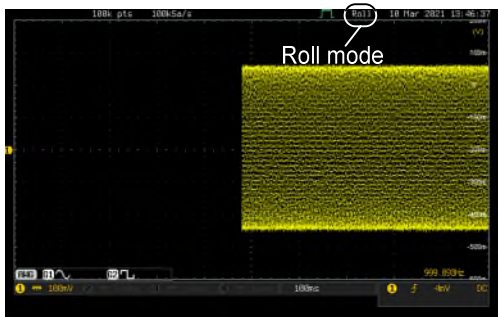


Select Update Mode Manually

1. Press the *Trigger Menu* key.
2. Press *Mode Auto/Normal* key from the bottom menu to let the equipment choose between Auto (Untriggered Roll) and Normal mode.

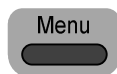


The auto (Untriggered Roll) trigger mode enables free-running and roll mode (timebase ≥ 100 ms/div) acquisitions.

The normal trigger mode enables the equipment which trigger only on valid trigger events. If no trigger occurs, the last waveform record acquired remains on the display. If no last waveform exists, no waveform is displayed.

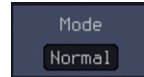


User can also force the equipment to trigger. To do so, press the *Force-Trig* key on the front panel.

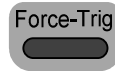


Zoom Waveform Horizontally



Background When in Zoom mode, the screen is split into 2 sections. The top of the display shows the full record length, while the bottom of the screen shows the normal view.



Panel Operation 1. Press the *Zoom* key.

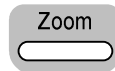



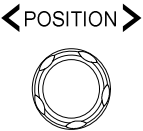

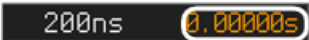
2. The Zoom mode screen appears.

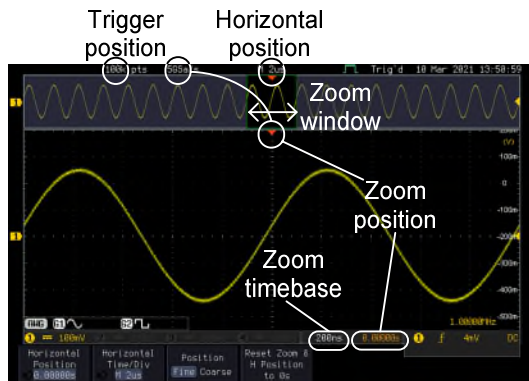

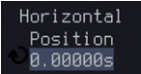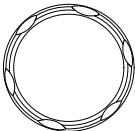
Horizontal Navigation	To scroll the waveform left or right, press <i>Horizontal Position</i> and use the <i>VARIABLE Position</i> knob.	 VARIABLE
	The horizontal position will be shown on the <i>Horizontal Position</i> icon.	

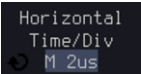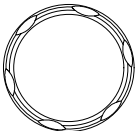Horizontal Scale	To change the horizontal scale, press <i>Horizontal Time/Div</i> and use the <i>VARIABLE Position</i> knob.	 VARIABLE
	The scale will be shown on the <i>Horizontal Time/Div</i> icon.	

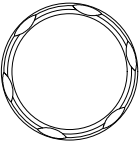Zoom	To increase the zoom range, use the horizontal <i>Scale</i> knob.	SCALE 
	The zoom time base at the bottom of the screen will change accordingly.	


Move the Zoom Window	Use the <i>Horizontal Position</i> knob to pan the zoom window horizontally.	
	To reset the zoom position, press the <i>Horizontal Position</i> knob.	
	The position of the zoom window, relative to the horizontal position is shown at the bottom of the screen next to the Zoom timebase.	

Scroll Sensitivity To alter the scrolling sensitivity of the zoom window, press the *Zoom Position* key to toggle the scrolling sensitivity

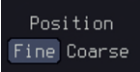


Sensitivity Fine, Coarse

Reset the Zoom & Horizontal Position To reset both the zoom and horizontal position, press *Reset Zoom & H POS to 0 s.*

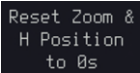


Exit To go back to the original view, press the *Zoom* key again.

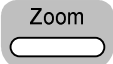


Play/Pause

Background The Play/Pause key can be used to play through signals in the Zoom mode.

Note If the Segmented memory function is turned on, pressing the play pause key will play through memory segments. See page 90 for more information.

- Panel Operation
1. Press the *Play/Pause* menu key.
- 
2. The scope will go into the Zoom Play mode and begin to scroll through the acquisition (from left to right).

The full-record length waveform will be shown at the top and the zoomed section will be shown at the bottom. The Play/Pause indicator shows the play status.

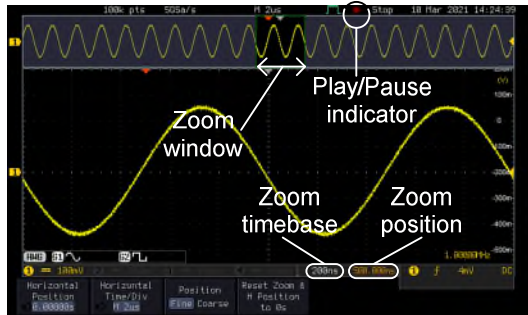


Zoom

To increase the zoom range, use the horizontal *Scale* knob.


SCALE

The zoom time base at the bottom of the screen will change accordingly.

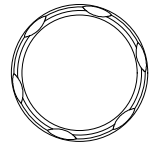

Scroll Speed


To alter the scrolling speed of the zoom window, press the *Zoom Position* key to toggle the scrolling speed.

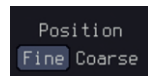

Sensitivity Fine, Coarse


Alternatively, use the horizontal position knob to control the scroll speed.

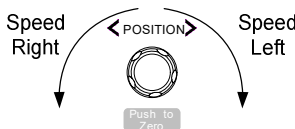


- Turning the Horizontal knob determines the speed and direction of the scrolling.



Reset the Zoom Position

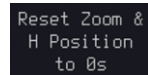To reset both the zoom position and horizontal position, press *Reset Zoom & H POS to 0 s*.



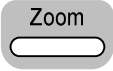







Pause	Press the <i>Play/Pause</i> key to pause or resume playing the waveform.	
Reverse Direction	Press the <i>Play/Pause</i> key when at the end of the record length to play back through the waveform in reverse.	
Exit	To exit, press the Zoom key.	

Vertical View (Channel)

This section describes how to set the vertical scale, position, and coupling mode.

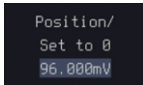Move Waveform Position Vertically

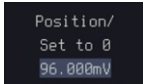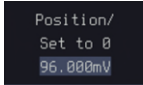
- | | | |
|-----------------------------------|---|--|
| Panel Operation | <ol style="list-style-type: none"> To move the waveform up or down, turn the <i>vertical position</i> knob for each channel. | <p>POSITION</p>  |
| | <ol style="list-style-type: none"> As the waveform moves, the vertical position of the channel indicator appears. Press the lower-right More key from the bottom menu and the vertical position will be shown within the "position/Set to 0". | 
 |
| View or Set the Vertical Position | <ol style="list-style-type: none"> Press a channel key followed by pressing More key and the vertical position is shown in the $\text{Position} / \downarrow \text{Set to 0}$ soft key. | 

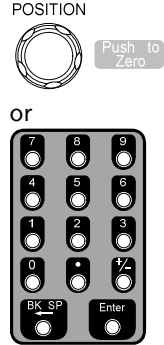 |
| | <ol style="list-style-type: none"> To change the position, press $\text{Position} / \downarrow \text{Set to 0}$ to reset the vertical position or turn the <i>vertical position</i> knob to the desired level or press the numerical keypad to directly input a desired value of vertical position. |  |



Run/Stop Mode The waveform can be moved vertically in both Run and Stop mode.

Select Vertical Scale

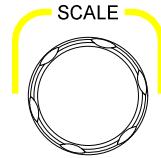Panel Operation To change the vertical scale, turn the vertical SCALE knob; left (down) or right (up).



The vertical scale indicator on the bottom left of the display changes accordingly for the specific channel.




Range 1 mV/div to 10 V/div. 1-2-5 increments


Stop Mode In Stop mode, the vertical scale setting can be changed.

Select Coupling Mode

Panel Operation 1. Press a *channel* key.

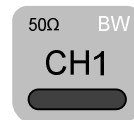


2. Press *Coupling* repeatedly to toggle the coupling mode for the chosen channel.

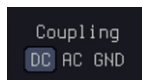

Range



DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.

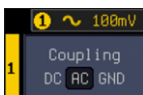

AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signals.




Ground coupling mode. The display shows only the zero voltage level as a horizontal line.

Input Impedance

Background The input impedance of the GDS-3000A series has 2 types of Impedance: 1 M Ω & 50 Ω . The impedance is displayed in the channel menu.

- View Impedance** 1. Press the *Channel* key.

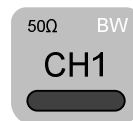

2. Press *Impedance* repeatedly to toggle between the impedance settings. There are 2 types of Impedance: 1 M Ω and 50 Ω .




3. Select 50 Ω . A small ohm icon “ Ω ” will be displayed on the screen.




Invert Waveform Vertically

Panel Operation 1. Press the *Channel* key.

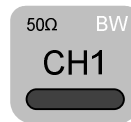

2. Press *Invert* to toggle Invert On or Off.

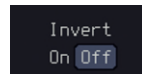



Limit Bandwidth


Background Bandwidth limitation puts the input signal into a selected bandwidth filter.

This function is useful for cutting out high frequency noise to see a clear waveform shape.

The bandwidth filters available are dependent on the bandwidth of the oscilloscope model.

Also refer to the digital filter application, page 325.

- Panel Operation**
1. Press the *Channel* key.
 
 2. Press *Bandwidth* from the bottom menu. A small bandwidth icon "B" will be displayed on the screen.
 


 3. Choose a bandwidth* from the side menu.

*Depending on the bandwidth of the oscilloscope.


Range Full, 20 MHz, 100 MHz, 200 MHz , 350 MHz




The tolerance of bandwidth limit is $\pm 10\%$

Example

BW Full

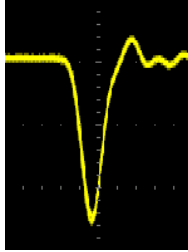


BW Limit 20 MHz

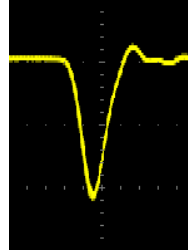


Fine Scale

Panel Operation 1. Press the *Channel* key.

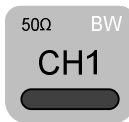


2. Press *More* key from the bottom menu


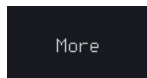


3. Use the *VARIABLE* knob and the numerical keypad to input a desired value of vertical position.

VARIABLE

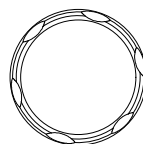


or

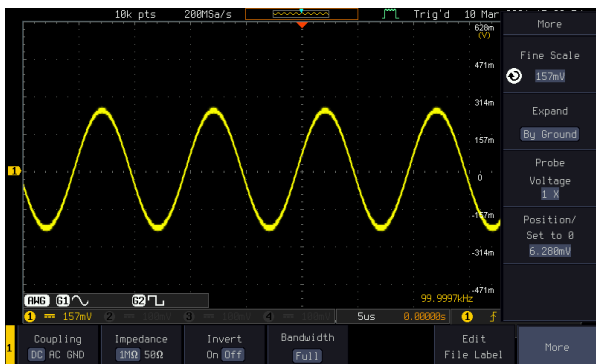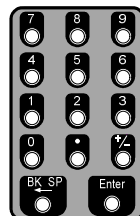

Expand by Ground/Center

Background When the voltage scale is changed, the Expand function designates whether the signal expands from the center of the screen or from the signal ground level. Expand by center can be used to easily see if a signal has a voltage bias. Expand by ground is the default setting.

- Panel Operation**
1. Press a *channel* key.
 2. Press *Expand* repeatedly to toggle between expand *By Ground* and *Center*.

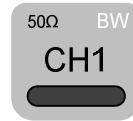


Range By Ground, By Center

Example If the vertical scale is changed when the Expand function is set to ground, the signal will expand from the ground level*. The ground level does not change when the vertical scale is changed.


If the vertical scale is changed when the Expand function is set to center, the signal will expand from the center of the screen. The ground level will suit to match the signal position.

*Or from the upper or lower edge of the screen if the ground level is off-screen.

Expand by Ground

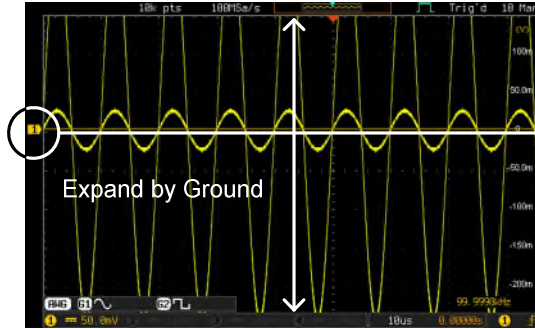



Expand by Center

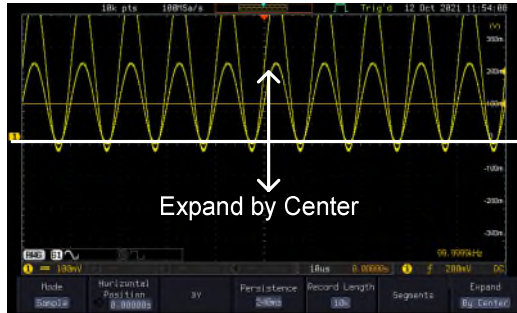

Select Probe Type

Background A signal probe can be set to voltage or current.





- Panel Operation**
1. Press the Channel key.
 2. Press *More* key from the bottom menu
 3. Press *Probe* from the side menu.
 4. Press the *Voltage/Current* soft-key to toggle between voltage and current.

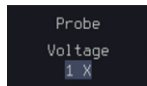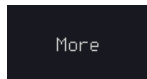

Select Probe Attenuation Level

Background An oscilloscope probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value on a DUT.

- Panel Operation**
1. Press the *Channel* key.
 2. Press *More* key from the bottom menu
 3. Press *Probe* from the side menu.
 4. Press *Attenuation* on the side menu and use the *VARIABLE* knob to set the attenuation.

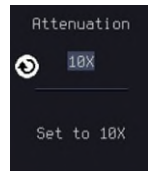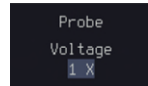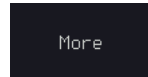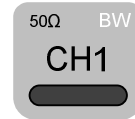

Alternatively, press *Set to 10 X*.

Range 1 mX to 1 kX (1-2-5 step)




The attenuation factor adds no influence on the real signal. It just changes the voltage/current scale on the display.

Set the Deskew

Background The deskew function is used to compensate for the propagation delay between the oscilloscope and the probe.


Panel Operation 1. Press one of the *Channel* keys.

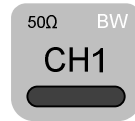


2. Press *More* key from the bottom menu



3. Press *Probe* from the side menu.

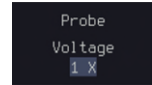

4. Press *Deskew* on the side menu and use the *VARIABLE* knob to set the deskew time.

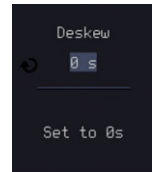

Alternatively, press *Set to 0s* to reset the deskew time.


Range -50 ns to 50 ns, 10 ps increments


5. Repeat the procedure for another channel if necessary.


Bus Key Configuration


The Bus key is used to configure the Serial bus inputs. The Bus menu also features event tables to track and save your bus data. The Bus key is used in conjunction with the Bus trigger (page 160) to decode serial bus signals.

Bus Display

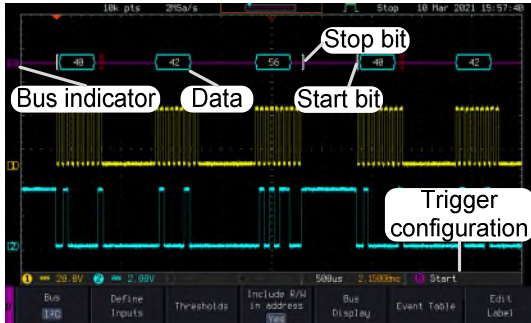

Start Bit/Start of Frame  The Start bit is shown as an open bracket (Serial bus data only).

Stop Bit/End of Frame  The Stop bit is shown as a closed bracket (Serial bus data only).

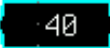Data  Data packets/frames/words can be shown in Hex or Binary. The color of the bus data indicates the type of data or the channel the data is coming from, depending on the bus type.

UART: Color of packet = Color of source channel.

I²C: Color packet = SDA source channel.




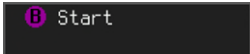
CAN: Purple = Error frame, Data length control (DLC), Overload.

Yellow = Identifier.

Cyan = Data.

Orange = CRC.

Red = Bit stuffing error

	LIN:	Purple = Break, Sync and Checksum errors, Wakeup Yellow = Identifier, Parity Cyan = Data Red = Error type
Error Indicator/ Missing Ack		If there is an error/missing acknowledgement in decoding the data, a red error indicator will be shown.
Bus Indicator		The Bus indicator shows the bus position. The active bus is shown with a solid color. The VARIABLE knob can be used to horizontally position the Bus indicator when it is active.  Active bus (solid indicator)  Activated bus (transparent indicator)
Trigger Configuration		Shows the bus trigger (B) and the <i>Trigger On</i> settings. Please see page 160. 

Serial Bus Overview

The Serial Bus includes support for 6 common bus interfaces UART, I²C, SPI, Parallel, CAN and LIN. Each interface is fully configurable to accommodate variations in the basic protocols.

Each input can be displayed as binary, hexadecimal or ASCII. An event table can also be created to aid in debugging.

UART	Universal Asynchronous Receiver Transmitter. The UART bus is able to accommodate a wide range of various common UART serial communications. The UART serial bus software is suitable for a number of RS-232 protocol variants.
	Inputs Tx, Rx
	Threshold Tx, Rx

Configuration	Baud rate, Parity, Packets, End of packets, Input polarity
Trigger On	Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error

I ² C	Inter Integrated Circuit is a two line serial data interface with a serial data line (SDA) and serial clock line (SCLK). The R/W bit can be configured.
Inputs	SCLK, SDA
Threshold	SCLK, SDA
Configuration	Addressing mode, Read/Write in address
Trigger On	Start, Repeat Start, Stop, Missing Ack, Address, Data, Address/Data

SPI The SPI (Serial Interface Peripheral) bus is fully configurable to accommodate the wide variety of SPI interfaces. This bus is only available on 4 channel models.

Inputs	SCLK, SS, MOSI, MISO
Threshold	SCLK, SS, MOSI, MISO
Configuration	SCLK edge, SS logic level, Word size, Bit order
Trigger On	SS Active, MOSI, MISO, MOSI&MISO

CAN The CAN (Controller Area Network) bus is a 2-wire, message-based protocol.

Inputs	CAN Input
Threshold	CAN Input
Configuration	Signal Type, Bit Rate

	Trigger On	Start of Frame, Type of Frame, Identifier, Data, Id & Data, End of Frame, Missing Ack, Bit Stuffing Err.
<hr/>		
LIN	The LIN (Local Interconnect Network) bus is used to decode a wide range of common LIN configurations.	
	Inputs	LIN Input
	Threshold	LIN Input
	Configuration	Bit Rate, LIN Standard, Include Parity Bits with Id
	Trigger On	Sync, Identifier, Data, Id & Data, Wakeup Frame, Sleep Frame, Error


UART Serial Bus Configuration

The UART bus menu is designed to decode RS-232 and other common RS-232 variants such as RS-422, RS-485. The software configuration is also flexible enough to decode the many proprietary protocols based on RS-232.

Background	<p>Basic RS-232 protocol uses single-ended data transmissions. The signal voltage levels can be high (± 15 V) and employ active low signaling.</p> <p>High speed variants of RS-232, such as RS-422 and RS-485 use differential signaling and commonly employ low voltage differential signals with active high signaling.</p> <p>Universal Asynchronous Receiver/Transmitter (UART) or RS-232 driver/receiver ICs commonly used for embedded applications typically use active high signaling with standard IC signal levels.</p>
------------	---

Operation

1. Connect each of the bus signals (*Tx*, *Rx*) to one of the oscilloscope's analog or digital channels. Connect the ground potential of the bus to one of the probes' ground clip if you are using the analog channels or to the ground connector of the Digital card if you are using the digital channels.

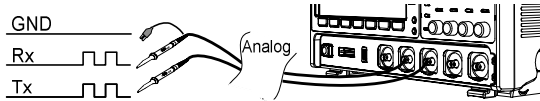

2. Press the *BUS* key.




3. Press *Bus* from the bottom menu and choose the *UART* serial bus on the side menu.



Define Inputs

4. Press *Define Inputs* from the bottom menu.

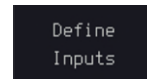

5. From the side menu choose the *Tx Input* and the *Rx Input* source and the signal polarity.

Tx OFF, CH1 to CH4 or OFF


Rx OFF, CH1 to CH4 or OFF

Polarity Normal (High = 0), Inverted (High = 1)

Configuration

The Configure key sets the baud rate, number of data bits and parity.

6. Press *Configure* from the bottom menu.

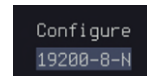


7. From the side menu select the Baud rate, Data bits, Parity, Packets and End of Packet bits.

Fine-tuned Baud Rate	50, 75, 110, 134, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, 9600, 14400, 15200, 19200, 28800, 31250, 38400, 56000, 57600, 76800, 115200, 128000, 230400, 460800, 921600, 1382400, 1843200, 2764800
Data Bits	5, 6, 7, 8, 9
Parity	Odd, Even, None
Packets	On, Off
End of Packet (Hex)	00(NUL), OA(LF), OD(CR), 20(SP), FF

I²C Serial Bus Interface

The I²C bus is a 2 wire interface with a serial data line (SDA) and serial clock line (SCLK). The I²C protocol supports 7 or 10 bit addressing and multiple masters. The scope will trigger on any of the following conditions: a start/stop condition, a restart, a missing acknowledge message, Address, Data or Address & Data frames. The I²C trigger can be configured for 7 or 10 bit addressing with the option to ignore the R/W bit as well as triggering on a data value or a specific address and direction (read or write or both).


- Panel operation
1. Connect each of the bus signals (*SCLK*, *SDA*) to one of the oscilloscope's analog or digital channels. Connect the ground potential to one of the probes' ground clip if you are using the analog channels.

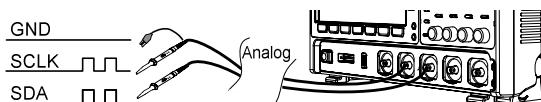

2. Press the *Bus* key.




3. Press *Bus* from the bottom menu and choose *I²C* from the bottom menu.

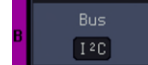

Define Inputs

4. Press *Define Inputs* from the bottom menu.
5. From the side menu choose the *SCLK* input and the *SDA* Input.

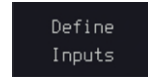


SCLK CH1 to CH4

SDA CH1 to CH4

Include R/W in address

To configure whether you want the R/W bit to be included in the address, press *Include R/W in address* and set to Yes or No in the side menu.

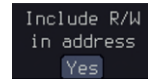


R/W Bit Yes, No


Serial Bus Interface

The serial peripheral interface (SPI) is a full duplex 4 wire synchronous serial interface. The 4 signals lines: Serial clock line (SCLK), slave select (SS), Master output/slave input (MOSI, or SIMO) and the Master input/slave output (MISO, or SOMI). The word size is configurable from 4 bits to 32 bits (fine-tuned). The SPI triggers on the data pattern at the start of each framing period. This bus is only available on 4 channel models.

- Panel operation
1. Insert each of the bus signals (*SCLK*, *SS*, *MOSI*, *MISO*) to one of the oscilloscope channels.

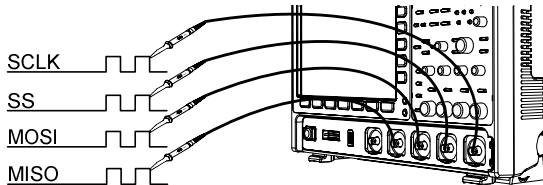

2. Press *Bus* from the bottom menu and choose *I²C* from the bottom menu.

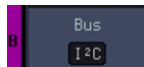


Note

The SPI bus decoding function is only available on 4 channel DSO models.

Define Inputs

3. Press *Define Inputs* from the lower menu.

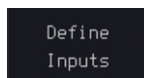

4. From the side menu choose the *SCLK*, *SS*, *MOSI* and *MISO* inputs.

SCLK CH1 to CH4


SS CH1 to CH4

MOSI OFF, CH1 to CH4

MISO OFF, CH1 to CH4

Set the Threshold

5. Press *Threshold* from the bottom menu.

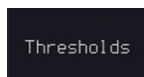


6. Press *Select* from the side menu. Choose *SCLK*, *SS*, *MOSI* or *MISO* line thresholds.




Range SCLK, SS, MOSI, MISO

7. Press *Threshold* from the side menu and configure the threshold.

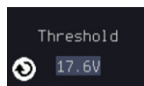


8. Press the Choose Preset to select the following settings

TTL, 5.0 V CMOS, 3.3 CMOS, 2.5 V COMS, ECL -1.3 V, PECL 3.7 V, 0 V 0 V

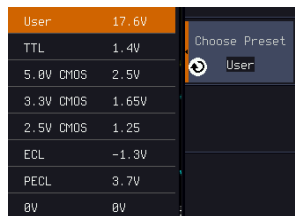

Configuration The *Configure* menu sets the data line logic level, SCLK edge polarity, word size and bit order.


9. Press *Configure* from the bottom menu.

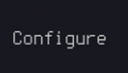

10. From the side menu select SCLK edge, SS logic level, word Size and Bit order.


SCLK	rising edge , falling edge
SS	Active High, Active Low
Word Size	4 bits to 32 bits (fine-tuned)
Bit Order	MS First, LS First

Bus Display Press Bus Display from the bottom menu and Hex or Binary from the side menu.

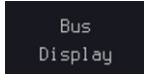


Range	Hex, Binary
-------	-------------

Event Table 11. Press *Event Table* from the bottom menu.

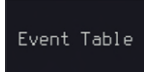

12. Press *Event Table* from the side menu to toggle the event table On or Off.

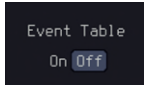

Event	On, Off
-------	---------

13. To save the event table, press *Save Event Table*.



Parallel Bus

Input Configuration

Background The digital channels can be configured as a parallel bus. The number of bits that define the bus as well as which bit is used as the bus clock can also be configured.




Note

The trigger should also be set to parallel bus. Please see page 165 for details.


Panel Operation 1. Press the *Bus* key.




2. Press the *Bus* soft-key and select Parallel from the side menu.

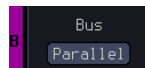

3. Press *Define Inputs* from the bottom menu.

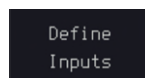


4. Press *Number of Bits* from the side menu and select the number of bits for the data bus.

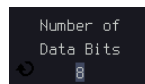

By default the bus is assigned bits D0, D1, D2 and so on up to the last bit.

5. You may also assign a bit as a clock. This bit will be one of the bits in the bus. To add a clock bit, press *Clock Edge* and select type of clock edge. Selecting *Off* will disable the clock bit.

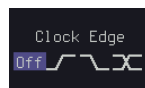


- If you wish to define which channels are assigned to the bus, press *Select Signal* from the side menu and select the bit that wish to assign.

Channel 1 is currently assigned to bit 7.



- Next, press *Select Ch* and select which channel is assigned to the bit selected above.

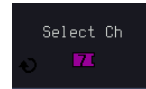


- Repeat steps 6 and 7 for any remaining bits and for the clock, if enabled.


Threshold Configuration

Background The threshold levels for the parallel bus can be set to either a user-defined threshold level or to pre-set threshold.


- Operation**
- Press *Thresholds* from the bottom menu.
 - Press *Select* from the side menu and select a digital channel.
 - Press *Choose Preset* to select a pre-set logic threshold for the selected channel.

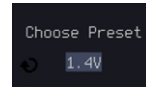



Logic Type	Threshold
TTL	1.4 V
5.0 V CMOS	2.5 V
3.3 V CMOS	1.65 V
2.5 V CMOS	1.25 V

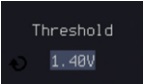ECL	-1.3 V
PECL	3.7 V
0 V	0 V
4. Press <i>Threshold</i> to set a user defined threshold for the selected input.	
Range	±10 V


Bus Encoding

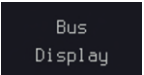Background	The bus that is displayed on the screen or in the event tables can be set to either hex or binary formats.
Operation	1. Press <i>Bus Display</i> from the Bus menu and choose either Hex or Binary from the side menu. 

Parallel Bus Event Table

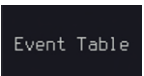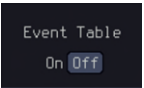Event Table	The parallel bus event table lists when each data event on the bus occurred. The data is displayed as either hex or binary, depending on the bus display settings. Event tables can be saved to disk in a CSV format. The files will be named "Event_TableXXXX.CSV", where XXXX is a number from 0000 to 9999. See page 134 for details.
Operation	1. Press Event Table from the bottom menu.  2. Press Event Table from the side menu to turn the event table on or off. 
Event	On, Off


- To save the event table, press *Save Event Table*.

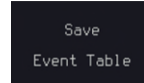

Use the *VARIABLE* knob to scroll through the event table.

Example

Time of event

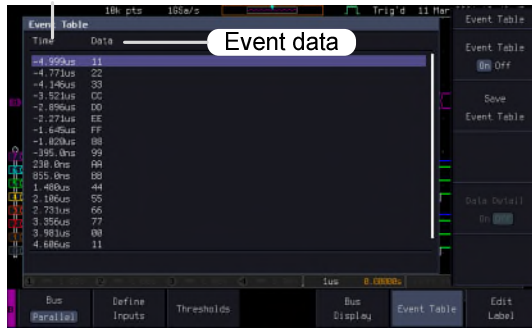



Adding a Label to the Parallel Bus

Background

A label can be added to the parallel bus.

Panel Operation


- To add a label to the bus, press *Edit Labels* from the Parallel Bus menu.
- To choose a preset label, Press *User Preset* from the side menu and choose a label.

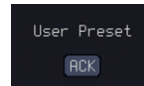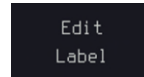


Labels ACK, AD0, ADDR, ANALOG, BIT, CAS, CLK, CLOCK, CLR, COUNT, DATA, DTACK, ENABLE, HALT, INT, IN, IRQ, LATCH, LOAD, NMI


Edit Label

- Press *Edit Character* to edit the current label.
- The Edit Label window appears.

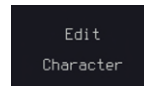


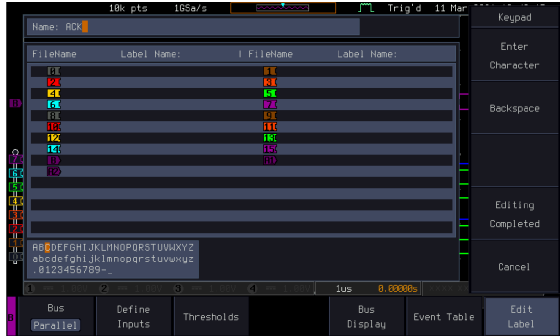


5. Use the *VARIABLE* knob to highlight a character.

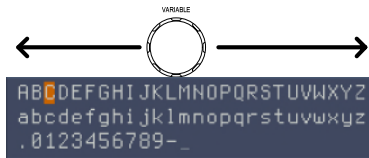


Press *Enter Character* to select a number or letter.

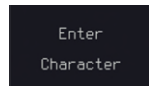

Press *Back Space* to delete a character.

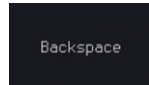


Press *Editing Completed* to create the new label and return to the previous menu.

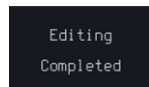

Note

This key must be pressed to save the label, even for the preset labels.

Press *Cancel* to cancel the editing and return to the Edit Label menu.

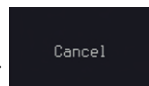

The label will appear next to the bus indicator.

Below, the label "BUS_1" was created for the parallel bus.



The parallel bus is labeled as BUS_1

Remove Label Press *Label Display* to toggle the label on or off.



CAN Serial Bus Interface

The controller area network (CAN) bus is a half duplex 2 wire synchronous serial interface. The CAN bus is a multi-master communication system that relies on arbitration to solve contention issues. The GDS-3000A series supports both CAN 2.0A and 2.0B. The CAN bus uses two wires, CAN-High and CAN-Low. These wires are voltage inverted, and as such, the GDS-3000A Series only needs one wire, CAN-High or CAN-Low for decoding.


- Panel operation
1. Connect the bus signal (*CAN Input*) to one of the oscilloscope's analog or digital channels. Connect the ground potential to one of the probes' ground clip if you are using the analog channels or to the ground connector of the Digital card if you are using the digital channels.




2. Press the *Bus* key.



3. Press *Bus* from the bottom menu and choose the *CAN* serial bus.

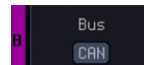

- Define Inputs
4. Press *Define Inputs* from the lower menu.

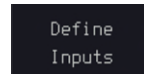

- From the side menu choose the *CAN Input* inputs and the signal type.

CAN Input CH1 to CH4

Signal Type CAN_H, CAN_L, Tx, Rx.




Note

The Sample Point soft-key indicates the sampling position of each bit. This parameter is fixed.

Bit Rate

The *Bit Rate* menu sets the bit rate of the bus. The bit rate is usually tied to the bus length.

- Press *Bit Rate* from the bottom menu and set the bit rate.

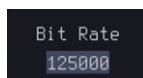


Bit Rate 10 kbps, 20 kbps, 50 kbps, 125 kbps,
250 kbps, 500 kbps, 800 kbps, 1 Mbps

LIN Serial Bus Interface

The local interconnect network (LIN) bus is a single wire interface.


- Panel operation
- Connect the bus signal (*LIN Input*) to one of the oscilloscope's analog or digital channels. Connect the ground potential to one of the probes' ground clip if you are using the analog channels or to the ground connector of the Digital card if you are the using digital channels.

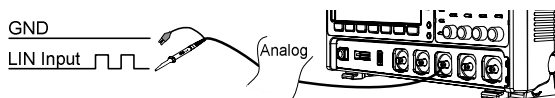



- Press the *Bus* key.




- Press *Bus* from the bottom menu and choose the *LIN* serial bus.

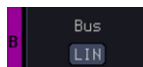

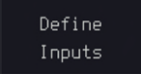
- Define Inputs
4. Press *Define Inputs* from the lower menu. 
 5. From the side menu choose the LIN input and the polarity of the bus.
-
- | | |
|-----------|--|
| LIN Input | CH1 to CH4 |
| Polarity | Normal (High = 1),
Inverted(High = 0) |
-

 **Note** The Sample Point soft-key indicates the sampling position of each bit. This parameter is fixed.

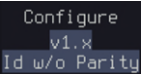- Configuration
- The *Configure* menu sets the bit rate, the LIN standard and the parity options for the Id frame.
6. Press *Configure* from the bottom menu. 
 7. From the side menu select configuration items.
-
- | | |
|-----------------------------|---|
| Bit Rate | 1.2 kbps, 2.4 kbps, 4.8 kbps,
9.6 kbps, 10.417 kbps, 19.2 kbps |
| LIN Standard | V1.x, V2.x, Both |
| Include Parity Bits with Id | On, Off |
-

Bus Encoding


Background The bus that is displayed on the screen or in the event tables can be set to either hex or binary formats.

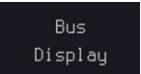Operation Press *Bus Display* from the Bus menu and choose either Hex or Binary from the side menu. 


Threshold configuration

Background The threshold levels for the Serial buses can be set to either a user-defined threshold level or to pre-set threshold.

Set the Threshold 1. Press *Threshold* from the bottom menu.

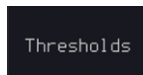


2. Press *Select* from the side menu to choose one of the lines that are configured for your type of bus.

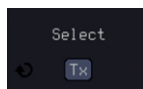


UART	Tx, Rx
I ² C	SCLK, SDA
CAN	CAN_H, CAN_L, Tx, Rx
LIN	LIN Input

3. Press *Choose Preset* to select a preset logic threshold.

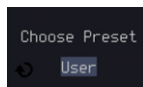

Logic Type	Threshold
TTL	1.4 V
5.0 V CMOS	2.5 V
3.3 V CMOS	1.65 V
2.5 V CMOS	1.25 V
ECL	-1.3 V
PECL	3.7 V
0 V	0 V

4. Press *Threshold* to set a user defined threshold for the currently selected input.

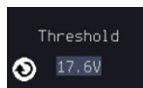

For the analog channels, the threshold level depends on the vertical scale :


Scale	Range	Scale	Range
10 V/Div	±290 V	50 mV/Div	±5.2 V
5 V/Div	±270 V	20 mV/Div	±580 mV
2 V/Div	±33 V	10 mV/Div	±540 mV
1 V/Div	±29 V	5 mV/Div	±520 mV
500 mV/Div	±27 V	2 mV/Div	±508 mV
200 mV/Div	±5.8 V	1 mV/Div	±504 mV
100 mV/Div	±5.4 V		

Serial Bus Event Tables


Background The serial bus event tables list when each data event on the bus occurred. The data is displayed as either hex or binary, depending on the bus display settings.

Event tables can be saved to disk in a CSV format. The files will be named “Event_TableXXXX.CSV”, where XXXX is a number from 0000 to 9999. See page 134 for details.

Operation 1. Press *Event Table* from the bottom menu.

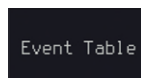


2. Press *Event Table* from the side menu to turn the event table on or off.

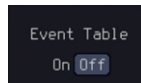

Event On, Off

Use the *VARIABLE* knob to scroll through the event table.

Data Detail (I²C only) 3. To view the data at a particular address in more detail, turn *Data Detail* On. This is only available for the I²C bus.

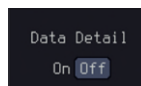

Detail On, Off


Use the *VARIABLE* knob to scroll through the Data Detail event table.

- Save Event Table 4. To save the event table, press *Save Event Table*. The Event table will be saved to the current file path in a CSV format. See page 134 for details.




Use the *VARIABLE* knob to scroll through the event table.


Example:
UART Event table

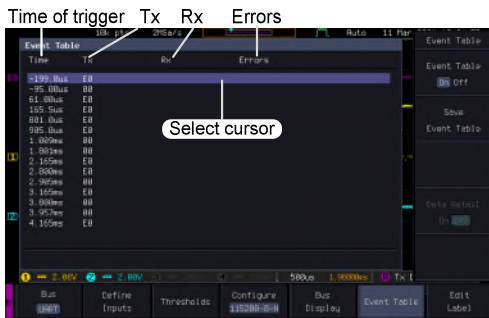

Example:
I²C Event table

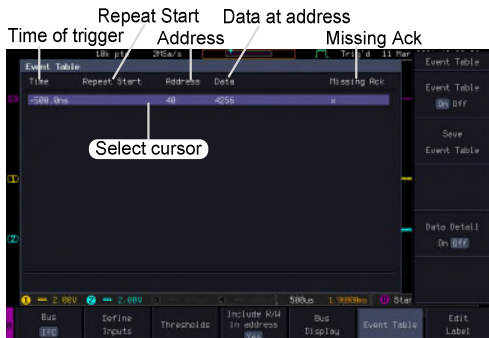


Example:
I²C Data Detail

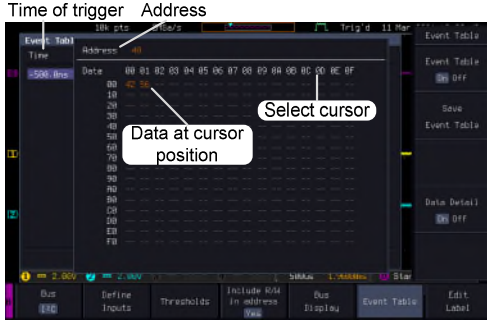


Note

Data Detail is only available with the I²C bus.

Example:
CAN Event table

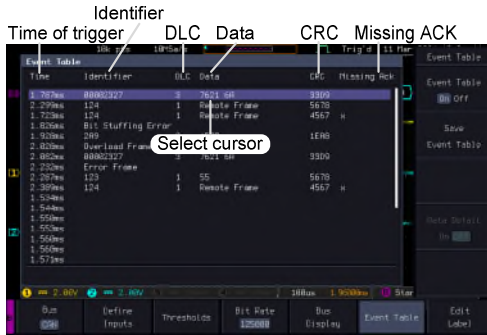

Example:
LIN Event table

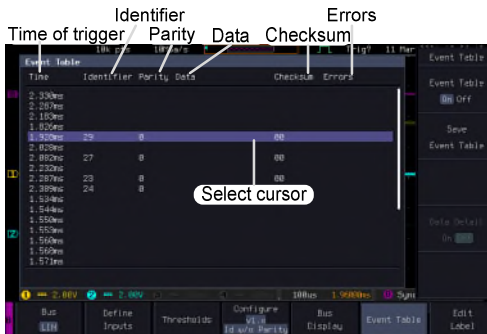

Event Tables Format

Each bus type can have an event table saved containing each bus event as a .CSV file. An event is defined as a packet/frame/word or

associated set of data being successfully read according to the specific operating conditions of each bus (Start of frame, acknowledgements, checksums, etc ...). The data associated with each event and the time of each event is recorded.

File Type Each event table is saved as Event_TableXXXX.CSV into the designated file path. Each event table is numbered sequentially from 0000 to 9999. For example the first event table will be saved as Event_Table0000.CSV, the second as Event_Table0001.CSV, and so on.

Event Table Data Each event table saves a timestamp of each event relative to the trigger as well as the data in each frame/packet at the time of an event. The frame/packet data is saved in HEX format.

The table below lists in order the data saved for each event table.

UART	Time, Tx frame data, Rx frame data, Errors.
I ² C	Time, Repeat Start, Address, Data, Missing Ack.
CAN	Time, Identifier, DLC, Data, CRC, Missing Ack.
LIN	Time, Identifier, Parity, Data, Checksum, Errors.

Adding a Label to a Bus


Background A Label can be added to the buses. This label will appear next to the bus indicator on the left hand-side of the display.

Panel Operation 1. To add a label to the bus, press *Edit Labels* from the Bus menu.



Edit
Label


- To choose a preset label, Press *User Preset* from the side menu and choose a label.

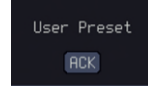


Labels ACK, AD0, ADDR, ANALOG, BIT, CAS, CLK, CLOCK, CLR, COUNT, DATA, DTACK, ENABLE, HALT, INT, IN, IRQ, LATCH, LOAD, NMI

Edit Label


- Press *Edit Character* to edit the current label.

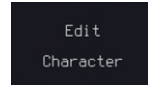


- The Edit Label window appears.

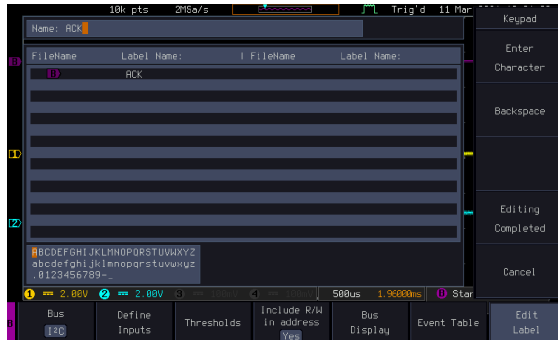


- Use the *VARIABLE* knob to highlight a character.

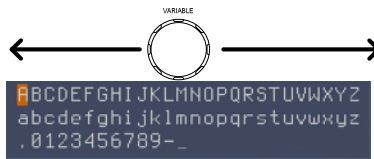


Press *Enter Character* to select a number or letter.

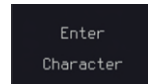

Press *Back Space* to delete a character.

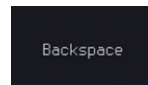

Press *Editing Completed* to create the new label and return to the previous menu.

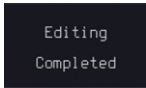

Note


This key must be pressed to save the label, even for the preset labels.

Press *Cancel* to cancel the editing and return to the Edit Label menu.




6. The label will appear next to the bus indicator.

Below, the label "ACK" was created for the bus.

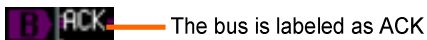

Remove Label

Press *Label Display* to toggle the label on or off.

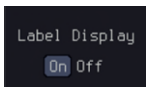

Using Cursors with the Serial Bus

Background

The cursors can be used to read bus values at any position.



Note

Ensure that one of the serial buses has been selected and is activated.

Panel Operation


1. Press the *Cursor* key. Horizontal cursors appear on the display.



2. When cursor mark is selected "ON"




Press the *H Cursor* soft-key and select which cursor(s) you wish to position.

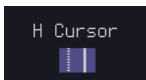

Range	Description
	Left cursor (1) movable, right cursor position fixed
	Right cursor (2) movable, left cursor position fixed
	Left and right cursor (1+2) movable together


- The cursor position information appears on the top left hand side of the screen.

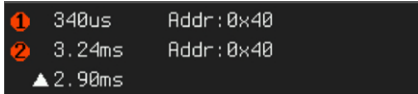

Example: I²C cursors.

- Cursor 1 Hor. position, Bus value(s)
- Cursor 2 Hor. position, Bus value(s)

- When cursor mark is selected "ON"

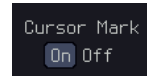


The cursor will mark readout directly on waveform.



- Use the *VARIABLE knob* to move the movable cursor(s) left or right.

VARIABLE

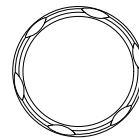

- Press the *Cursor* key twice. Vertical cursors appear on the display.

Cursor




Trigger

The trigger configures the conditions for when the GDS-3000A SERIES captures a waveform.

Trigger Type Overview

Edge The edge trigger is the simplest trigger type. An edge trigger triggers when the signal crosses an amplitude threshold with either a positive or negative slope.

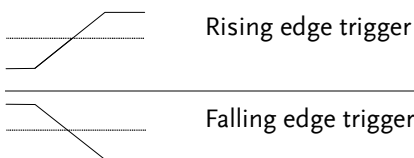


Delay The Delay trigger works in tandem with the edge trigger, by waiting for a specified time (duration) or number of events before the delay trigger starts. This method allows pinpointing a location in a long series of trigger events.




Note

When using the delay trigger, the edge trigger source can be any one of the channel inputs, the EXT input or the AC line.

Delay trigger example (by event)

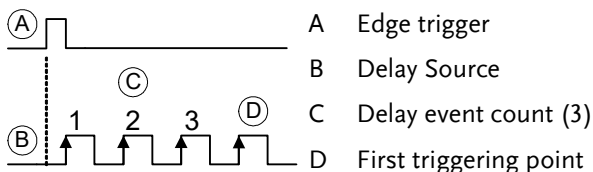


Delay trigger example (by time)

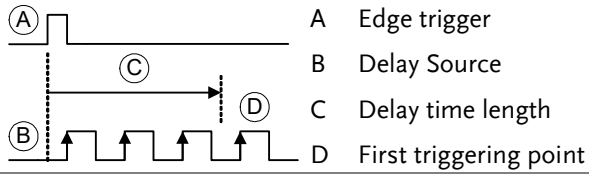

Pulse Width

Triggers when the pulse width of the signal is less than, equal, not equal or greater than a specified pulse width.

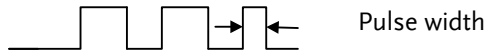


Video

Extracts a sync pulse from a video format signal, and triggers on a specific line or field.


Pulse and Runt

Triggers on a "runt". A runt is a pulse that passes a specified threshold but fails to pass a second threshold. Both positive and negative runts can be detected.

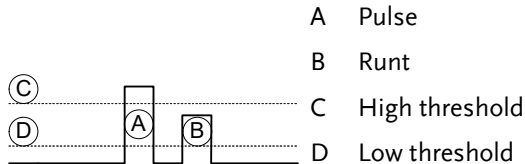


Rise and Fall (Slope)

Trigger on rising and or falling edges, below or over a specified rate. The threshold can also be specified.

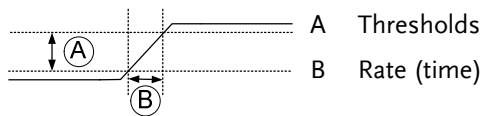

Timeout

Triggers when the signal stays high, low or either for a designated amount of time. The trigger level determines when a signal is high or low.

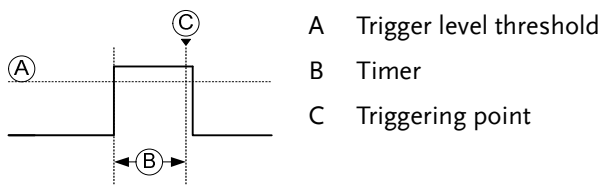

Bus	Triggers on several bus events.
Logic	Triggers on specified logic levels or for specified clock edge. Logic trigger is only available for Digital channels.


Trigger: types and sources

Sources versus types	Trigger types	Trigger sources			
		Analog			Digital
		CH1 to CH4	EXT	AC Line	D0 to D15
Edge	✓	✓	✓	✓	
Delay	✓	✓	✓		
Pulse Width	✓	✓	✓	✓	
Video	✓				
Pulse & Runt	✓				
Rise & Fall (Slope)	✓				
Timeout	✓	✓	✓	✓	
Bus	✓*			✓	
Logic				✓	

*The source analog is assigned from the Bus menu.

Trigger Parameter Overview

All the following parameters are common for all the trigger types unless stated otherwise.

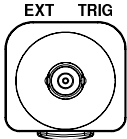Trigger Source	CH1 to CH4	CH1 to CH4 input signals
	EXT	External trigger input signal Except for: Video, Pulse Runt, Rise & Fall and Bus
		
	AC Line	AC mains signal Except for: Video, Pulse Runt, Rise & Fall and Bus
	Alternate	Alternate between channel sources for the trigger source.
	D0 to D15	Digital input channels Except for: Video, Pulse Runt, Rise and Fall
	EXT Probe	For EXT trigger source only. Set the probe as either current or voltage.
	Attenuation	For EXT trigger source only. Attenuates the EXT trigger probe by an adjustable value.
	Range	0.001 X to 1000 X 1-2-5 steps
Source Bus	UART	UART bus
	I ² C	Inter-Integrated Circuit
	CAN	Controller Area Network bus
	LIN	Local Interconnect Network
	SPI	Serial Peripheral Interface
	Parallel	Parallel bus



Note

The Source Bus is not configurable from the Trigger menu. The field is automatically filled according to the Bus menu configuration (see page 114).

Coupling
(Edge, Delay,
Timeout)

- DC DC coupling.

- AC AC coupling. Blocks DC components from the trigger circuits *.


- HF reject High frequency filter, above 70 kHz*.


- LF reject Low frequency filter, below 70 kHz*.


- Reject noise DC coupling with low sensitivity to reject noise.

*Parameter not applicable to digital channels.

Slope
(Edge, Delay, Rise
& Fall)


-  Trigger on a rising edge.

-  Trigger on a falling edge.

-  Either (either rising or falling edge).

Trigger Level
(Edge, Delay)

Level Adjusts the trigger level manually using the Trigger LEVEL knob.

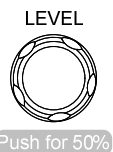

Set to TTL Sets the trigger level to 1.4 V, suitable for triggering on TTL signals.


Set to ECL - Sets the trigger to -1.3 V. This is suitable for ECL circuits.


Set to 50 % User can push the trigger level knob to set directly the trigger level to 50 % of the waveform amplitude.



Level
(Edge, Delay)


Only available when the trigger source is digital.

Level	Adjusts the trigger level when the source is digital.	
Range: -5 V to +5 V		

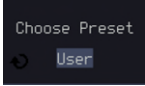Choose Preset	Press <i>Choose Preset</i> to select a pre-set logic threshold.	
---------------	---	---

Logic Type	Threshold
TTL	1.4 V
5.0 V CMOS	2.5 V
3.3 V CMOS	1.65 V
2.5 V CMOS	1.25 V
ECL	-1.3 V
PECL	3.7 V
0 V	0 V

Trigger Mode	<p>Auto (untriggered roll) The GDS-3000A series generates an internal trigger if there is no trigger event, to make sure waveforms are constantly updated regardless of trigger events. Select this mode especially when viewing rolling waveforms at slower timebases.</p> <p>Normal The GDS-3000A acquires a waveform only when a trigger event occurs.</p>
--------------	---

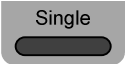	Single	When pressing the Single key, the GDS-3000A Series acquires a waveform only once when a trigger event occurs, and then stops acquiring (the oscilloscope falls into Stop mode). Press the <i>Single</i> key to acquire a waveform again. Please refer to Run/Stop mode for more details (page 39).	
Holdoff	Holdoff	Sets the holdoff time.	
	Set to Minimum	Set the holdoff time to the minimum.	
Delay (Delay)	Time	Sets the delay time (4 ns to 10 s) between the trigger event and the real trigger timing.	
	Event	Sets the number of events (1 to 65535) passed after the trigger event, until the real trigger timing.	
	Set to Minimum	Sets the source trigger to the minimum time.	
When (Pulse Width)		Sets the pulse width (4 ns to 10 s) and the triggering condition.	
	>	Longer than	= Equal to
	<	Shorter than	≠ Not equal to
Threshold (Pulse Width)		Sets the amplitude threshold level for the pulse widths.	
	Threshold	-XXV to +XXV, user-set level	
	Set to TTL	1.4 V	
	Set to ECL	-1.3 V	

Set to 50 % Sets the threshold to 50 %


(Only when the trigger source is digital):

Threshold Adjusts the amplitude threshold for the pulse width trigger when the source is digital.



Range -5 V to +5 V

Choose Preset Press *Choose Preset* to select a pre-set logic threshold.

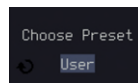

Logic Type	Threshold
TTL	1.4 V
5.0 V CMOS	2.5 V
3.3 V CMOS	1.65 V
2.5 V CMOS	1.25 V
ECL	-1.3 V
PECL	3.7 V
0 V	0 V



Note

Setting the threshold levels for the digital sources from the Trigger menu will also change the threshold levels set in the Logic Analyzer menu (page 341).

Standard (Video)

NTSC National Television System Committee

PAL Phase Alternate by Line

SECAM SEquential Couleour A Memoire

Polarity (Pulse Width, Video)








Positive polarity (triggered on the high to low transition)




Negative polarity (triggered on the low to high transition)




Positive polarity (positive runt)

Polarity (Pulse Runt)		Negative polarity (negative runt)
		Either (either negative or positive runt)
Trigger On (Video)	Selects the trigger point in the video signal.	
	Odd Field	NTSC: 1 to 263 PAL/SECAM: 1 to 313 EDTV: 1 to 525(480 P), 1 to 625(576 P) HDTV: 1 to 750(720 P), 1 to 563(1080 i), 1 to 1125(1080 P)
	Even Field	NTSC: 1 to 262, PAL/SECAM: 1 to 312 HDTV: 1 to 562(1080 i)
	All Fields	Triggers on all fields.
	All Lines	Triggers on all lines.
Trigger On (Bus)	Selects the conditions for the serial bus triggers.	
	UART Bus	Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error
	I ² C	Start, Repeat Start, Stop, Missing Ack, Address, Data, Address/Data
	CAN	Start of Frame, Type of Frame, Identifier, Data, Id & Data, End of Frame, Missing Ack, Bit Stuffing Err
	LIN	Sync, Identifier, Data, Id & Data, Wakeup Frame, Sleep Frame, Error
Data(Bus)	Selects the conditions for the parallel bus trigger.	
	Parallel	A Binary or Hexadecimal word.
Threshold (Pulse Runt)		Sets the upper threshold limit.
		Sets the lower threshold limit.
		High Sets the High threshold.


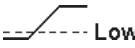
Threshold (Rise & Fall)		Sets the Low threshold.
Trigger When (Timeout)	Stays High	Triggers when the input signal stays high for a designated amount of time.
	Stays Low	Triggers when the input signal stays low for a designated amount of time.
	Either	Triggers when the input signal stays high or low for a designated amount of time.
Timer (Timeout)	4 ns to 10.0 s	Sets the amount of time that a signal must stay high or low for the timeout trigger.

Setup Holdoff Level


Background The holdoff function defines the waiting period before the GDS-3000A starts triggering again after a trigger point. The holdoff function ensures a stable display if there are a number of points in a periodic waveform that can be triggered. Holdoff applies to all the triggering types except the trigger by bus.

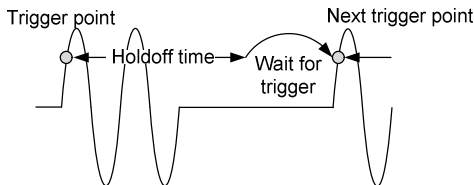

- Panel Operation**
1. Press the trigger *Menu* key.
 2. To set the Holdoff time, press the *Holdoff* (or *Mode/Holdoff*) menu button on the bottom bezel.

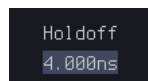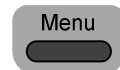


- Use the side menu to set the Holdoff time.

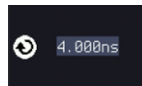

Range 4 ns to 10 s

Pressing *Set to Minimum* sets the Holdoff time to the minimum of 4 ns.

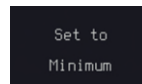


Note

The holdoff function is automatically disabled when the waveform update mode is in roll mode (page 96).

Setup Trigger Mode

Background The trigger mode can be set to Normal or Auto (untriggered roll). The triggering mode applies to all the trigger types.

- Panel Operation** 1. Press the Trigger menu key.

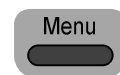

- Press *Mode* from the bottom menu to change the triggering mode.




- Use the side panel to select *Auto* or *Normal* triggering modes.

Range Auto, Normal

Using the Edge Trigger

- Panel Operation** 1. Press the trigger *Menu* key.

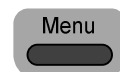


- Press *Type* from the lower bezel menu.



3. Select *Edge* from the side menu.

The edge trigger indicator appears at the bottom of the display.

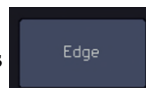

From left: trigger source, slope, trigger level, coupling

4. Press *Source* to change the trigger source.



5. Use the side menu to select the trigger source type.

Range CH1 1 to CH4 (Alternate On/Off), EXT (Ext Probe: Volt/Current, Attenuation: 1 mX to 1 kX, and AC Line.


6. Press *Coupling* from the bottom bezel menu to select the trigger coupling or frequency filter settings.



Choose the coupling from the side menu.


Range DC, AC, HF Reject, LF Reject

7. Toggle *Noise Rejection* On or Off from the side menu.

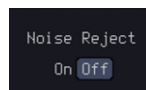

Range On, Off

8. From the bottom menu press *Slope* to toggle the slope type.

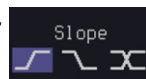

Range Rising edge, falling edge, either

9. To set the external trigger level, select *Level* from the bottom bezel menu (Not applicable for AC line source).



10. Set the external trigger level using the side menu.



Analog channel Range	Set to TTL 1.4 V	
	Set to ECL -1.3 V	
	Set to 50 %	
Digital channel Range	-5.00 V to +5.00 V	
	TTL	1.4 V
	5.0 V CMOS	2.5 V
	3.3 V CMOS	1.65 V
	2.5 V CMOS	1.25 V
	ECL	-1.3 V
	PECL	3.7 V
	0 V	0 V




Note

Setting the trigger level for a digital source will also change the threshold levels set in the Logic Analyzer menu (page 341).

Using Advanced Delay Trigger

Panel Operation 1. Set the edge trigger source. This will set the initializing trigger for the delay source. Page 149


2. Press the trigger *Menu* key.

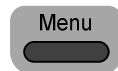

3. Press *Type* from the lower bezel menu.



4. Select *Delay* from the side menu. The delay trigger indicator appears at the bottom of the display.

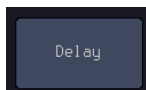




From left: Delay trigger indicator (D), edge trigger (A), edge slope, edge level, edge coupling, delay trigger (B), delay slope, delay trigger level, delay coupling.

- To set the delay source, press *Source* and select a source from the side menu.



Source CH1 to CH4, AC Line, EXT


- Press *Coupling* from the bottom bezel menu to select the trigger coupling or frequency filter settings.

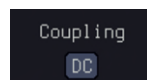


Choose the coupling from the side menu.

Range DC, AC, HF Reject, LF Reject

- To set the delay press *Delay* from the bottom bezel.

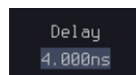


- To Delay by Time (Duration), press *Time* from the side menu and set the delay time.

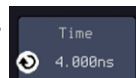

Range 4 ns to 10 s (by time)
Set to minimum


- To Delay by Event, press *Event* from the side menu and set the number of events.

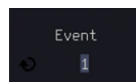

Range 1 to 65535 events
Set to Minimum

Using Pulse Width Trigger


- Panel Operation 1. Press the trigger *Menu* key.

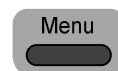

2. Press the *Type* key from the lower bezel menu.



3. Select *Pulse Width* from the side menu. The pulse width trigger indicator appears at the bottom of the display.

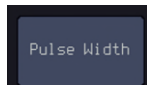

From left: source, polarity, when, coupling


4. Press *Source* from the lower bezel.



5. Use the side menu to select the pulse width trigger source.

Range CH 1 to CH4 (Alternate On/Off),
EXT (Ext Probe: Volt/Current,
Attenuation: 1 mX to 1 kX, and AC
Line.

6. Press *Polarity* to toggle the polarity type.

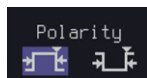

Range Positive (high to low transition)
Negative (low to high transition)

7. Press *When* from the lower bezel.



Then use the side menu to select the pulse width condition and width.


Condition > , < , = , ≠

Width 4 ns to 10 s

8. Press *Threshold* from the lower bezel to edit the pulse width threshold.



- Set the threshold level using the side menu.

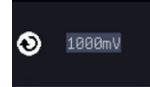

Analog channel Range	Set to TTL 1.4 V	
	Set to ECL -1.3 V	
	Set to 50 %	
Digital channel Range	-5.00 V to +5.00 V	
	TTL	1.4 V
	5.0 V CMOS	2.5 V
	3.3 V CMOS	1.65 V
	2.5 V CMOS	1.25 V
	ECL	-1.3 V
	PECL	3.7 V
	0 V	0 V




Note

Setting the trigger threshold for a digital source will also change the threshold levels set in the Logic Analyzer menu (page 341).

Using Video Trigger

- Panel Operation
- Press the trigger *Menu* key.

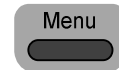


- Press the *Type* key from the lower bezel menu.



- Select *Video* from the side menu. The video trigger indicator appears at the bottom of the display.




From left: source, video standard, field, line, coupling

4. Press *Source* from the lower bezel. 

5. Use the side menu to select the video trigger source.

Range CH1 to CH4

6. Press *Standard* on the bottom bezel. 

Use the side menu to select the video standard.

Range NTSC, PAL, SECAM, EDTV(480 P, 576 P), HDTV(720 P, 1080 i, 1080 P)

7. Press *Trigger On* to edit the video field and line. 


Use the side menu to select the field and line.

Odd Field NTSC: 1 to 263
 PAL/SECAM: 1 to 313
 EDTV: 1 to 525(480 P),
 1 to 625(576 P)
 HDTV: 1 to 750(720 P),
 1 to 562(1080 i), 1 to 1125(1080 P)

Even Field NTSC: 1 to 262
 PAL/SECAM: 1 to 312
 HDTV: 1 to 563(1080 i)

All Fields Triggers on all fields.

All Lines Triggers on all lines.

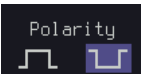8. Press *Polarity* to toggle the polarity type. 

Range positive, negative

Pulse Runt trigger


Panel Operation 1. Press the trigger *Menu* key.



2. Press the *Type* key from the lower bezel menu.




3. Select *Others* → *Pulse Runt* from the side menu. The Pulse and Runt indicator appears at the bottom of the display.

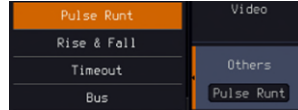

From left: polarity, source, high/low threshold, threshold level, coupling


4. Press *Source* from the lower menu.

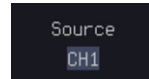

Use the side menu to select a source.


Range CH1 to CH4 (Alternate On/Off)

5. Press *Polarity* to toggle the polarity.

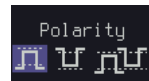

Range Rising edge, falling edge, either.

6. Press *When* from the lower menu.

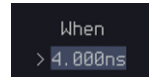


Then use the side menu to select the condition and width.

Condition > , < , = , ≠

Width 4 ns to 10 s

7. Press *Threshold* from the lower bezel to edit the threshold for the upper and lower threshold.

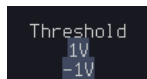


8. Use the side menu to set the upper threshold.



Range -XX V to XX V


9. Use the side menu to set the lower threshold.

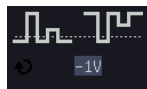

Range -XX V to XX V

Using Rise and Fall Trigger



- Panel Operation 1. Press the trigger *Menu* key.

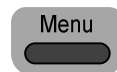

2. Press the *Type* key from the lower bezel menu.



3. Select *Others* → *Rise and Fall* from the side menu. The Rise and Fall indicator appears at the bottom of the display.

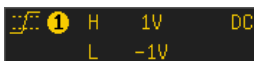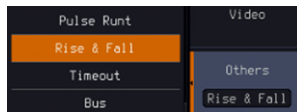

From left: slope, source, high/low threshold, threshold level, coupling

4. Press *Source* from the lower menu.



Use the side menu to select a source.


Range CH1 to CH4 (Alternate On/Off)

5. Press *Slope* from the bottom menu to toggle the slope.



Range Rising edge, falling edge, either

6. Press *When* from the lower menu.

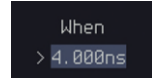


Then use the side menu to select the logic conditions and true or false status.

Condition > , < , = , ≠

Width 4 ns to 10 s

7. Press *Threshold* from the lower bezel to edit the High and Low threshold.

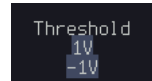


Range High: -XX V to XX V


Low: -XX V to XX V

Using the Timeout Trigger

- Panel Operation 1. Press the trigger *Menu* key.

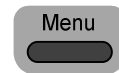

2. Press the *Type* key from the lower bezel menu.

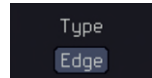

3. Select *Others* → *Timeout* from the side menu. The Timeout indicator appears at the bottom of the display.



From left: Source, Trigger type, threshold level, coupling


4. Press *Source* from the lower menu.



Use the side menu to select a source.

Range CH1 to CH4 (Alternate On/Off), EXT (Ext Probe: Volt/Current, Attenuation: 1 mX to 1 kX and AC Line.


5. Press *Coupling* from the bottom bezel menu to select the trigger coupling or frequency filter settings.

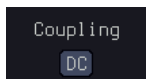

Choose the coupling from the side menu.


Range DC, AC, HF Reject, LF Reject

6. Toggle *Noise Rejection* On or Off from the Coupling side menu.

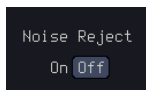

Range On, Off

7. Press *Trigger When* from the lower menu.

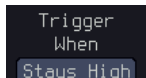

Then use the side menu to select trigger conditions.

Condition Stays High, Stays Low, Either

8. Press *Level* from the lower bezel to set the trigger level.



9. Set the level using the side menu.



Analog channel Set to TTL 1.4 V
 Range Set to ECL -1.3 V
 Set to 50 %


Digital channel	-5.00 V to +5.00 V	
Range	TTL	1.4 V
	5.0 V CMOS	2.5 V
	3.3 V CMOS	1.65 V
	2.5 V CMOS	1.25 V
	ECL	-1.3 V
	PECL	3.7 V
	0 V	0 V



Note

Setting the trigger threshold for a digital source will also change the threshold levels set in the Logic Analyzer menu (page 341).

10. Press *Timer* from the lower bezel to set the timer time.

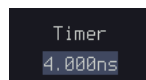

Range	4 ns to 10.0 s
-------	----------------

Using the Bus Trigger


The Bus trigger is used to trigger the oscilloscope on UART, I²C, SPI, CAN or LIN serial bus signals or on parallel bus data.

UART BUS Trigger Settings

The UART bus trigger conditions can be set at any time after the bus settings have been set to *UART*.

Panel Operation 1. Set the Bus to UART in the bus menu. Page 117


2. Press the *Trigger Menu* key.

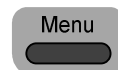

3. Press *Type* from the bottom menu.



4. Press *Others* from the side menu and select *Bus*.

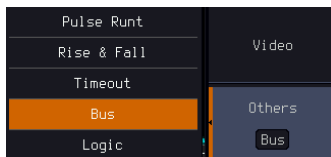


The Trigger on settings will be reflected on the Trigger Configuration icon.



From left: Bus trigger, Trigger source

5. Press *Trigger On* and select the triggering condition for the UART

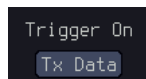


Trigger On Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error

Trigger On – Tx Data, Rx Data

If Tx Data or Rx Data was configured for the Trigger On setting, then the number of bytes and data can also be configured.

6. Press *Data* from the bottom menu.

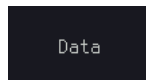


7. Press *Number of Bytes* from the side menu and choose the number of bytes for the data.




UART 1 Byte to 10 Bytes

8. Press *Data* from the side menu to edit the triggering data.

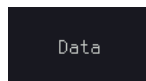

9. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *Variable* knob to choose a value for the digit and press *Select* to confirm.

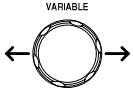Binary	0,1, X (don't care)	
Hex	0 to F, X (don't care)	

Binary

XXXX XXXX

Select


ASCII	ASCII characters for the equivalent Hex characters 00 to FF
-------	---

I²C Bus Trigger Settings

The I²C bus trigger conditions can be set at any time after the bus settings has been set to I²C.

Panel Operation 1. Set the Bus to I²C in the bus menu. Page 119


2. Press the *Trigger Menu* key.

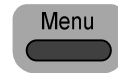

3. Press *Type* from the bottom menu.



4. Press *Others* from the side menu and select *Bus*.

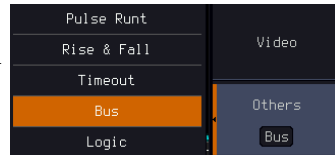

The Trigger on settings will be reflected on the Trigger Configuration icon.



From left: Bus trigger, Trigger source


5. Press *Trigger On* and select the triggering condition for the selected bus.



Trigger On Start, Repeat Start, Stop, Missing Ack, Address, Data, Address/Data

Trigger On – Data If Data or Address/Data was configured for the Trigger On setting, then the number of bytes, data and addressing mode (I²C) can be configured.

6. Press *Data* from the bottom menu.

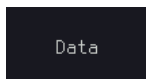

7. Press *Number of Bytes* from the side menu and choose the number of bytes for the data.




I²C 1 Byte to 5 Bytes

8. Press *Addressing Mode* to toggle between 7 and 10 bit addressing modes.



9. Press *Data* from the side menu to edit the triggering data.

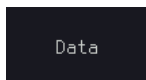

10. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.




Binary 0,1,X (don't care)

Hex 0 to F, X (don't care)

Trigger On - Address If Address or Address/Data was configured for the Trigger On setting, then the triggering address must be configured.


11. Press *Address* on the bottom menu.

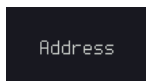

12. Press *Addressing Mode* to toggle between 7 and 10 bit addressing modes.



13. To choose a preset address as the default address, press *Choose Preset* and select a preset address.

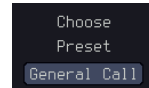

Address	Description
0000 000 0	General Call
0000 000 1	START Byte
0000 1XX X	Hs-mode
1010 XXX X	EEPROM
0000 001 X	CBUS

Press *Apply Preset* to set the default address to the preset.



Note

Presets are not available for Trigger On Address/Data.

14. Press *Address* from the side menu to manually edit the triggering address.




15. To edit the address, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.



Binary	0,1, X (don't care)
Hex	0 to F, X (don't care)

Direction

16. Press *Direction* on the bottom menu and choose the direction from the side menu.

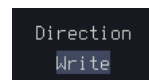


Direction	Write, Read, Read or Write
-----------	----------------------------

SPI Bus Trigger Settings

The SPI bus trigger conditions can be set at any time after the bus setting has been set to SPI.

Panel Operation 1. Set the Bus to SPI in the bus menu.


2. Press the *Trigger Menu* key.

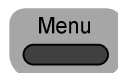


3. Press *Type* from the bottom menu.



4. Press *Others* from the side menu and select *Bus*.

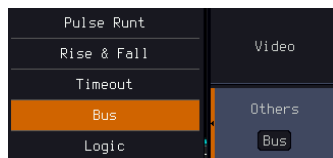


The Trigger on settings will be reflected on the Trigger Configuration icon.

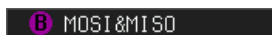

From left: Bus trigger, Trigger source


5. Press *Trigger On* and select the triggering condition for the SPI bus.

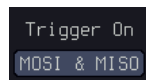


SPI	SS Active, MOSI, MISO, MOSI&MISO
-----	----------------------------------

Trigger On – Data If MOSI, MISO or MISO/MOSI was configured for the Trigger On setting, then the number of words and the data can be configured.


6. Press *Data* from the bottom menu.

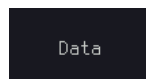


7. Press *Number of Words* from the side menu and choose the number of words for the data.

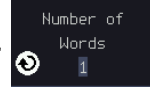

8. Press *MOSI* or *MISO* from the side menu to edit the triggering data.

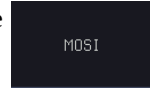

9. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.

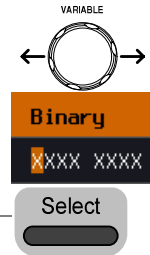

Binary	0,1,X (don't care)
Hex	0 to F, X (don't care)


CAN Bus Trigger

The CAN bus trigger conditions can be set at any time after the bus setting has been set to CAN.


- Panel Operation
1. Set the Bus to CAN in the bus menu.

Page 120


2. Press the *Trigger Menu* key.

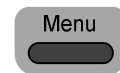

3. Press *Type* from the bottom menu.

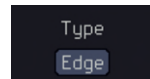

4. Select *Others* → *Bus* from the side menu. The Bus indicator appears at the bottom of the display.

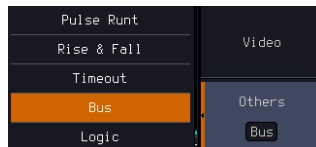


The Trigger on settings will be reflected on the Trigger Configuration icon.

B Identifier

From left: Bus trigger, Trigger source

5. Press *Trigger On* and select the triggering condition for the selected bus.

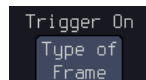

Trigger On Start of Frame, Type of Frame, Identifier, Data, Id & Data, End of Frame, Missing Ack, Bit Stuffing Err

Trigger On –Type of Frame

6. If *Frame Type* was configured for the Trigger On setting, then the type of frame can be configured from the side menu.

B Type of Frame


Type Data Frame, Remote Frame, Error Frame, Overload Frame

Trigger On – Identifier


7. If *Identifier/Id & Data* was configured for the Trigger On setting, select the format from the side menu.

Format Standard, Extended

8. Press *Identifier* from the side menu to set the identifier data.

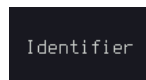


9. To edit the identifier, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.

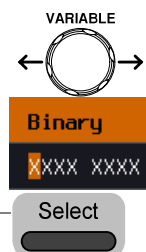

Binary	0,1,X (don't care)
Hex	0 to F, X (don't care)

10. Press *Direction* on the bottom menu and select the CAN Direction from the side menu.

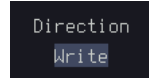


CAN Direction Write, Read, Read or Write

Trigger On - Data

If *Data/Id and Data* was configured for the Trigger On setting, then the triggering data must be configured.

11. Press *Data* on the bottom menu.

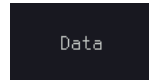


12. Press *Number of Bytes* from the side menu and choose the number of bytes for the data.



Bytes 1 Byte to 8 Bytes

13. Press *Data* from the side menu to edit the triggering data.

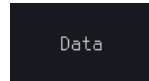


14. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.



Binary 0,1,X (don't care)

Hex 0 to F, X (don't care)

15. Press *Trigger When* from the side menu to choose the triggering condition for the data.

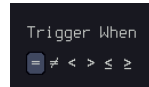

When =, ≠, <, >, ≤, ≥


16. The oscilloscope will now trigger when the specified bus data matches the *Trigger When* conditions.

LIN Bus Trigger

The LIN bus trigger conditions can be set at any time after the bus setting has been set to LIN.

Panel Operation 1. Set the Bus to LIN in the bus menu. Page 129


2. Press the *Trigger Menu* key.

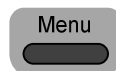

3. Press *Type* from the bottom menu.




4. Select *Others* → *Bus* from the side menu. The Bus indicator appears at the bottom of the display.

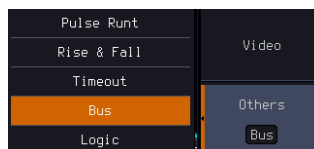

From left: Bus trigger, Trigger source


5. Press *Trigger On* and select the triggering condition for the selected bus.

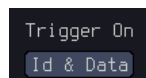


Trigger On Sync, Identifier, Data, Id and Data, Wakeup Frame, Sleep Frame, Error.

Trigger On – Identifier

6. If *Identifier* or *Id & Data* was configured for the Trigger On setting, press *Identifier* from the bottom menu.

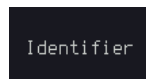

7. Press *Identifier* from the side menu to set the identifier data.

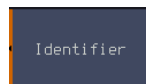


8. To edit the identifier, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.



Binary	0,1,X (don't care)
Hex	0 to F, X (don't care)

Trigger On - Data If *Data/Id and Data* was configured for the Trigger On setting, then the triggering data must be configured.

9. Press *Data* on the bottom menu.

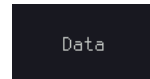


10. Press *Number of Bytes* from the side menu and choose the number of bytes for the data.



Bytes	1 Byte to 8 Bytes
-------	-------------------

11. Press *Data* from the side menu to edit the triggering data.

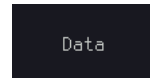


12. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.



Binary	0,1,X (don't care)
Hex	0 to F, X (don't care)

13. Press *Trigger When* from the side menu to choose the triggering condition for the data.

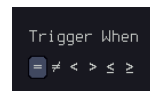

When	=, ≠, <, >, ≤, ≥
------	------------------


14. The oscilloscope will now trigger when the specified bus data matches the *Trigger When* conditions.

Parallel Bus Trigger

The parallel bus trigger conditions can be set at any time after the bus setting has been set to parallel. The parallel bus can be set up to trigger on a specified data pattern.

Panel Operation 1. Set the Bus to parallel in the bus menu.


2. Press the *Trigger Menu* key.

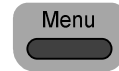

3. Press *Type* from the bottom menu.




4. Select *Others* → *Bus* from the side menu. The Bus indicator appears at the bottom of the display.

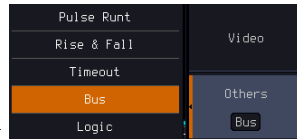


From left: Bus trigger, Data source

5. Press *Data* from the bottom menu.

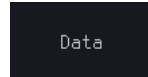

6. Press *Data* from the side menu to edit the triggering data.

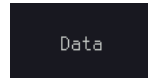

7. To edit the data, use the *VARIABLE* knob to highlight a binary or hex digit and press *Select*. Use the *VARIABLE* knob to choose a value for the digit and press *Select* to confirm.



Binary 0,1,X (don't care)

Hex 0 to F, X (don't care)

- The oscilloscope will now trigger when the specified data appears on the bus.

Using the Logic Trigger


Background

The digital channels can be set up to trigger on specified logic levels and for a specified clock edge.

For example the digital channels can be set to trigger on the rising edge of a clock signal when bit 1 of a digital channel is high and all other channels are ignored.

Panel Operation



- Press the *Trigger Menu* key.

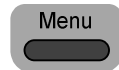

- Press *Type* from the bottom menu.




- Select *Others* → *Logic* from the side menu. The Logic indicator appears at the bottom of the display.

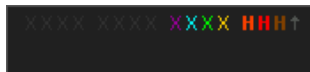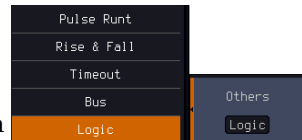


From left: Bits D15 to D0

- Press *Define inputs* from the bottom menu.

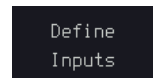


5. Press *Select* on the side menu and select a channel.
6. Next, select a logic level for the selected channel, or set the selected channel as the clock signal.

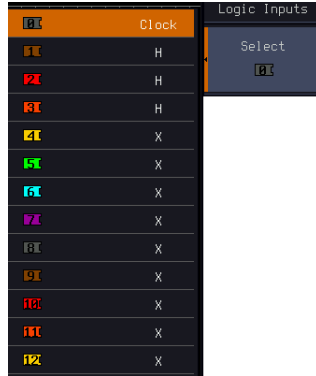

Logic	Clock, High (H), Low (L), Don't Care (X)
-------	--

7. Repeat steps 5 to 6 for the remaining channels.
8. The chosen logic levels will be reflected in the trigger indicator at the bottom of the screen. The color of each channel, if active will also be displayed. If a channel is not turned on, it will be grayed-out


Example

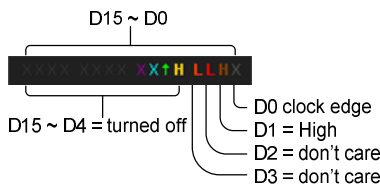

Logic Trigger Timing


If a channel was selected as a clock signal, then the clock edge determines when the logic comparison is made. If a clock was not defined then the *When* menu determines the triggering timing conditions. This is described below in step 9 and 10.

9. If a clock signal was defined, press *Clock Edge* from the bottom menu and select a clock transition. At each clock transition a comparison will be made.

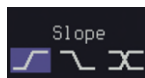

Clock Edge	Rising, Falling, Either
------------	-------------------------

10. If no clock were defined, press *When* from the bottom menu and choose the trigger timing conditions.

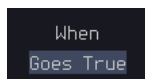

Trigger When	Description
Goes True	Triggers when the defined logic goes true (rising edge).
Goes False	Triggers when the defined logic goes false (falling edge).
Is True >	10.0 ns to 9.99 s. Triggers when the defined logic is true for greater than the defined amount of time (falling edge).
Is True <	10.0 ns to 9.99 s. Triggers when the defined logic is true for less than the defined amount of time (falling edge).
Is True =	10.0 ns to 9.99 s. Triggers when the defined logic is true for the defined amount of time $\pm 5\%$ (falling edge).
Is True \neq	10.0 ns to 9.99 s. Triggers when the defined logic is not true for the defined amount of time $\pm 5\%$ (falling edge).

11. The oscilloscope will now trigger when the specified logic appears among the digital channels.


Trigger Threshold Levels The trigger threshold levels for the digital channels can be assigned from a selected number of preset levels or a user-defined threshold level.



Note

The threshold levels that are set in this menu will replace the threshold levels that are set in the Logic Analyzer menu (page 341).

12. Press *Thresholds* from the bottom menu.

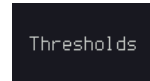


13. Press *Select* from the side menu and choose a group of channels.



Group	D0 to D3, D4 to D7, D8 to D11, D12 to D15
-------	---

14. Press *Choose Preset* to select a pre-set logic threshold.

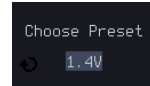

Logic Type	Threshold
TTL	1.4 V
5.0 V CMOS	2.5 V
3.3 V CMOS	1.65 V
2.5 V CMOS	1.25 V
ECL	-1.3 V
PECL	3.7 V
0 V	0 V

15. Press *Threshold* to set a user defined threshold.



Range	± 5.00 V
-------	----------

Search

The search feature can be used to search for events on the analog and digital input channels. The events that can be searched for are similar to the events that are used for the trigger system. The only difference is that the search feature uses the measurement threshold levels rather than the trigger level to determine events.

Configuring Search Events

Background Similar to configuring the trigger system, the Search events must first be configured before they can be found.

Luckily the trigger system configuration settings can also be used for the search events. The types of searches are listed below. Please note that a full description of the events can be found in the Trigger section on page 139.

Display


The screenshot shows an oscilloscope display with a search interface overlaid. Annotations include:

- Trigger point**: Points to a vertical dashed line on the waveform.
- Current marker**: Points to a specific search event marker on the waveform.
- Search event markers**: A bracket indicating the range of search results.
- Level for event search**: Points to a horizontal dashed line representing the search threshold.
- Total number of events**: Points to a status bar showing 'Total: 12'.
- Current marker position**: Points to the 'Search' field in the configuration menu, which shows '00'.


The configuration menu at the bottom includes fields for Search, Search Type, Source, Polarity, When, Threshold, and Timeout.

Search Event Types Edge, Pulse Width, Runt, Rise and Fall Time, FFT Peak* and Bus.
 *The FFT Peak search event doesn't have a trigger equivalent.

Panel Operation 1. Press the *Search* menu key.

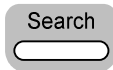

2. Press *Search* from the bottom menu and turn the Search function on.

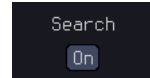

3. Press *Search Type* from the bottom menu and select the type of search. The search events are configured in the same fashion as the trigger events.



Please see the trigger configuration settings for details:

Event Types:	Edge, Pulse Width, Runt, Rise/Fall Time, FFT Peak*, Bus
--------------	---


*No trigger equivalent.

4. Select the source from which to search events. Press *Source* from the bottom menu, and select the source.



Sources: CH1 to CH4, Math

5. To set the threshold levels for the search events (instead of the trigger level that is used for trigger events), use the threshold soft-key from the bottom menu.

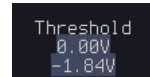

Note


The search function can support up to 10,000 events, however only 1,000 events can be displayed on screen at once.

Copying Search Event To/From Trigger Events


Background As the trigger system and search feature have similar settings, their settings can be used interchangeably by using the Copy functions.

Interchangeable Settings Edge, Pulse Width, Pulse Runt, Rise and Fall Times, Logic and Bus (FFT Peak has no trigger equivalent)


Panel Operation 1. Press *Search* from the lower bezel menu.

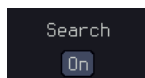

2. To copy the settings of the selected search type to the trigger settings, select *Copy Search Settings to Trigger*.

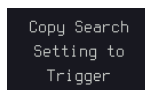

3. To copy over the current trigger settings to the search settings, press *Copy Trigger Settings To Search*.

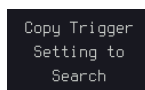

Note

If the settings cannot be copied or if there are no trigger settings configured (so that you cannot copy from the trigger settings), then those particular options will not be available.

Search Event Navigation

Background When using the search feature, each event can be searched according to the event settings.


Operation 1. Turn Search on and set the appropriate search type.

Page 177

2. Search events are marked by hollow white triangles at the top of the graticule.

- Use the search arrow keys to move between each search event.


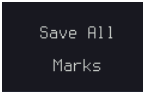

Search events can be navigated in both stop and run mode.

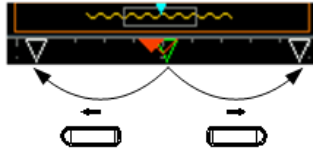


When using the arrow keys to navigate to each event, the “current event” will always be centered on the display.

Save Search Marks

Background The search events can be saved to the graticule display, allowing you to superimpose new search events. Search events are saved over the entire record length, with a maximum of 1000 marks.

- | | |
|-------------------|---|
| Save Marks | <ol style="list-style-type: none"> Press <i>Search</i> from the lower bezel menu.  Press the <i>Save All Marks</i> soft-key.  The search event markers will become solid white triangles to indicate that they have been saved.  |
|-------------------|---|

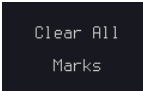Clear All Marks	<p>To clear all the saved marks, press <i>Clear All Marks</i> from the side menu. </p>
------------------------	---



Note

Each time the *Save All Marks* function is used, the previously saved marks will also be retained, unless cleared.

Setting/Clearing Single Search Events


Background In addition to searching for search events based on Search Type settings, custom search marks can be created with the Set/Clear key.

Set Search Event Navigate to a point of interest using **<POSITION>** the horizontal position knob or some other method.



Push to
Zero


1. Press the *Set/Clear* key.

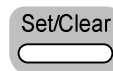

2. A marker will be saved at the center of the display.

This marker can be navigated to/from in the same way that a normally saved search marker can.


Clear Search Event To clear a set search event, use the search arrows to navigate to the event of interest and press the Set/Clear key.

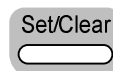

The marker will be deleted from the display.

FFT Peak

Background The FFT Peak search type can be used to mark all FFT peaks that are above a certain threshold.

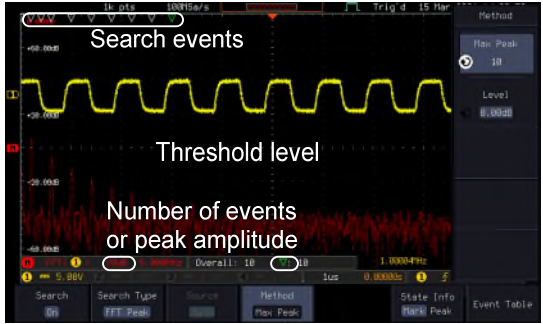


Note

The search function can support up to 10,000 events, however only 1,000 events can be displayed on screen at once.

Panel Operation

1. Turn the FFT math function on. Page 68


2. Press the *Search* menu key.

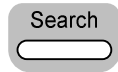

3. Press *Search* from the bottom menu and turn the Search function on.




4. Press *Search Type* from the bottom menu and select *FFT Peak* from the side menu.

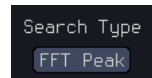


Note

Note that the Math source is automatically selected.

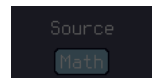

5. Next, select the event search method by pressing *Method* from the bottom menu.

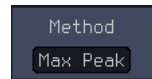

- Select *Max Peak* to search by a selected number of “max” peaks. Select *Level* to set the threshold level for the search events. Any peaks above the threshold level will be seen as a search event.




Max Peak 1 to 10

Level -100 dB to 100 dB


View Number of Peak Events

To view the number of peak events, set *State Info* to Mark. The number of search events will be shown at the bottom of the screen.

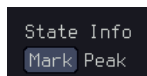

View Amplitude of Peak Search Event


To view the position and amplitude of a selected event, set *State Info* to Peak. This information will be shown at the bottom of the display.

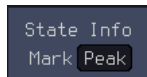

Peak Event Table

The Event Table function tabulates the amplitude and frequency of each peak event in real time. The event table can also be saved to a USB disk drive. File names are saved as a PeakEventTbXXXX.csv, where XXXX is a number starting from 0001 and is incremented each time the event table is saved.


- Press *Event Table* from the bottom menu and turn the Event Table function on.

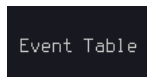


The event table will appear on the screen.

No.	Freq. (Hz)	Mag. (dB)
1	0.0000	-13.6
2	1.0000M	5.60
3	3.0000M	-5.60
4	5.0000M	-12.8
5	7.0000M	-18.4
6	9.0000M	-24.0
7	11.000M	-29.6
8	13.000M	-31.2
9	15.000M	-33.6
10	17.000M	-33.6

Save Event Table 8. To save the event table, insert a USB memory drive into the front panel USB-A port.

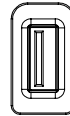

9. Press *Save Event Table*. The event table will be saved as PeakEventTbXXXX.csv.

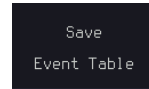


Event Table CSV Format The format for the CSV file is the same as the event table displayed on the GDS-3000A SERIES screen; No., Frequency, and Value.

For example:

No.	Frequency	Value
1	1.0000 MHz	-29.6 dB
2	2.0000 MHz	-30.4 dB
3	3.0000 MHz	-32.0 dB

Center Peak Results on Screen

To shift the peak events to the center of the screen, press *Selected Peak To Center* from the event table side menu.


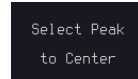



System Settings

This section describes how to set the interface, language, time/date, probe compensation signal, erase the internal memory and access useful QR codes.



Select Menu Language


Description The GDS-3000A SERIES has a number of different languages to choose from.

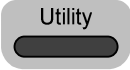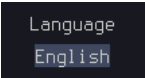- Panel Operation**
1. Press the *Utility* key. 
 2. Press *Language* on the lower menu. 
 3. Select the language* from the side menu.

 **Note** Language selection may differ based on region, and as such are not listed here.

View System Information

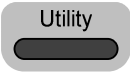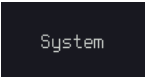- Panel Operation**
1. Press the *Utility* key. 
 2. Press *System* from the lower menu. 
 3. Press *System Info* from the side menu. A display panel will appear showing:
 - Manufacturer name • Model name
 - Serial number • Firmware version
 - Manufacturer URL


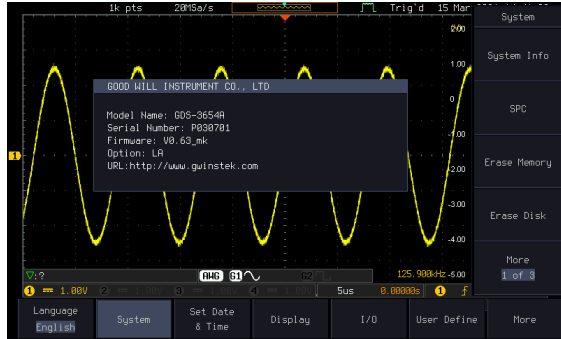


Erase Memory

Background The Erase Memory function will erase all internal waveforms, setup files and labels from internal memory.

Erased Items Waveform 1 to 20, Setting memory 1 to 20, Reference 1 to 4, Labels

- Panel Operation**
1. Press the *Utility* key.
 2. Press *System* from the lower menu.
 3. Press *Erase Memory* from the side menu.

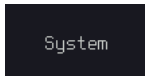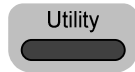

A message will prompt you to press *Select* key to confirm this process. Press another key to cancel this process.

Erase Disk

Background The Erase Disk function will erase all files from the internal flash driver.


Erased Items Waveform 1 to 20, Setting memory 1 to 20,
Reference 1 to 4, Labels

Panel Operation

1. Press the *Utility* key.



2. Press *System* from the lower menu.

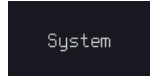



3. Press *Erase Memory* from the side menu.



A message will prompt you to press Select to confirm this process. Press another key to cancel this process.

Set Date and Time

Panel Operation/
Parameter

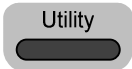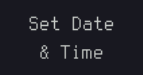1. Press the *Utility* key. 
2. Press *Set Date & Time* on the lower menu. 
3. Set the *Year, Month, Day, Hour* and *Minute* from the side menu.

Year 2000 to 2037



Month 1 to 12




Day 1 to 31

Hour 1 to 23



Minute 0 to 59

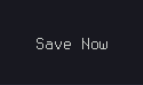
4. Press *Save Now* from the side menu to save the date and time. 
5. Make sure the date/time setting is correctly reflected at the top of the display.

15 Mar 2021 14:44:10


Probe Compensation Frequency

Background


The probe compensation output can be set from 1 kHz (default) to 200 kHz, in steps of 1 kHz.

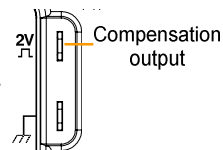


Panel Operation/
Parameter

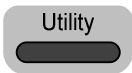1. Press the *Utility* key. 


2. Press the *More* key.

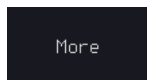


3. Press *Probe Comp.* on the lower menu.

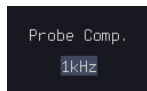

4. Press *Frequency* and change the frequency of the probe compensation signal.

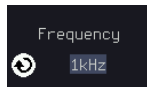

Default Frequency 5. Press *Default* to set the frequency of the probe compensation signal to 1 kHz default.

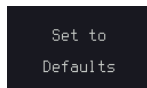


QR Code Reader Function

Background The QR Code reader function displays a number of preset QR codes that link to useful websites.


QR Code Items

- GW Instek website
- GW Instek contact window (marketing department)


Panel Operation/Parameter 1. Press the *Utility* key.

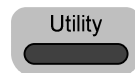


2. Press *System* from the lower menu.

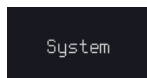

3. Press *More 1 of 3*, *More 2 of 3* from the side menu.

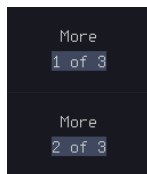

4. Press *QR Code* from the side menu. There will be two pages of QR codes to choose from.
5. Press *Page 1* or *Page 2* to navigate to each page.

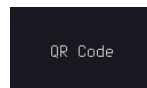

6. Use a QR code reader app on your smart phone or tablet to read one of the QR codes.


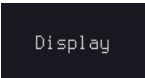
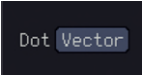
Display

The Display menu defines how the waveforms and parameters appear on the main LCD display.

Display Waveform as Dots or Vectors

Background When the waveform is displayed on the screen, it can be displayed as dots or vectors.

Panel Operation

1. Press the *Utility* key. 
2. Press the *Display* key. 
3. Press *Dot / Vector* to toggle between Dot and Vector mode. 

Range	Dots	Only the sampled dots are displayed.
	Vectors	Both the sampled dots and the connecting line are displayed.

Example:

Vectors	Dots
	


Ruler On/Off

Background The Ruler function adds a scale to the graticule.




This mode only functions in the vertical.



Panel Operation

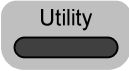1. Press the *Utility* key. 

2. Press the *Display* menu key.

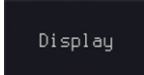

3. Press *Ruler* to toggle the Ruler function on/off

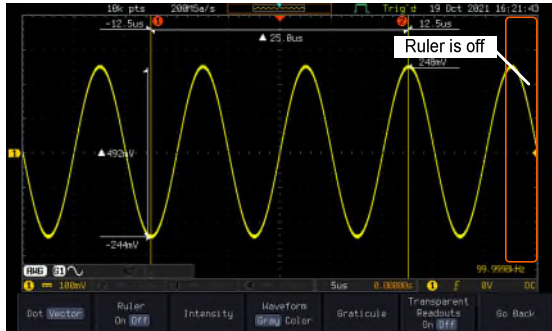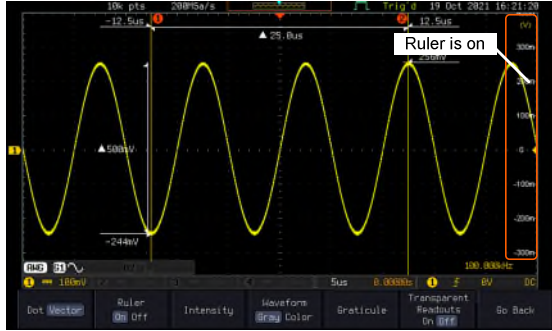


Set the Intensity Level

Background


The intensity level of a signal can also be set to mimic the intensity of an analog oscilloscope by setting the digital intensity level.

Panel Operation


1. Press the *Utility* key.

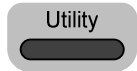

2. Press the *Display* menu key.

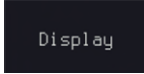

3. Press *Intensity* from the bottom menu.

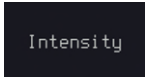



Waveform Intensity

4. To set the waveform intensity, press *Waveform Intensity* and edit the intensity.

Range 0 % to 100 %

Example

Waveform Intensity 50 % Waveform Intensity 100 %

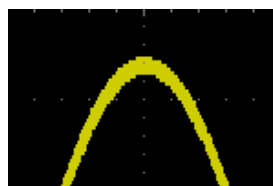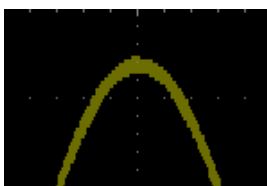



Graticule Intensity

5. To set the graticule intensity, press *Graticule Intensity* from the side menu and edit the intensity value.

Range 10 % to 100 %

Example

Graticule Intensity 100 % Graticule Intensity 10 %

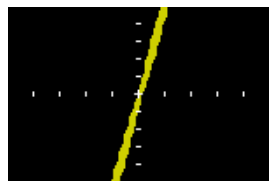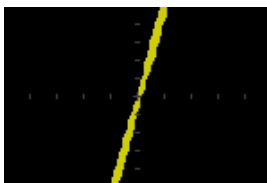

Backlight Intensity

6. To set the LCD backlight intensity, press *Backlight Intensity* from the side menu and edit the intensity value.

Range 2 % to 100 %

Backlight Auto-Dim

- To automatically dim the backlight after a set duration, set *Backlight Auto-Dim* to On and then set *Time* to the appropriate time.

After the set amount of time with no panel activity, the screen will dim until a panel key is pressed again. This function will prolong the life of the LCD display.

Range 1 minute to 180 minutes



Time

Screensaver Range: 1 minute to 180 minutes




Waveform





The intensity gradient of a signal can be set to grayscale or color. If intensity is set to color, the intensity gradient is analogous to a thermal color gradient where high intensity areas are colored red and low intensity areas are colored blue.

Range Waveform in gray or color display
 Gray/Color

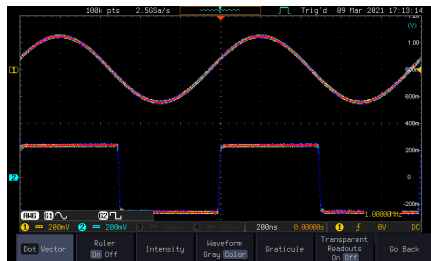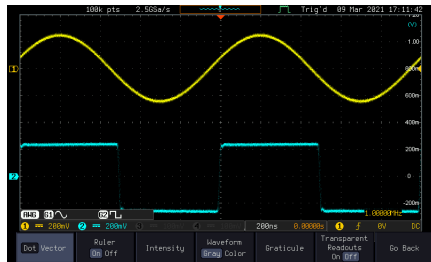


Select Display Graticule

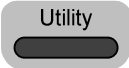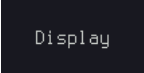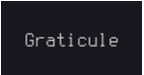
- Panel Operation
1. Press the *Utility* key. 
 2. Press the *Display* key. 
 3. Press *Graticule* from the bottom menu. 
 4. From the side menu choose the graticule display type.

	<i>Full</i> : Shows the full grid; X and Y axis for each division.
	<i>Grid</i> : Show the full grid without the X and Y axis.
	<i>Cross Hair</i> : Shows only the center X and Y frame.
	<i>Frame</i> : Shows only the outer frame.

Transparent Readouts

Readout background in transparent or opaque setting.

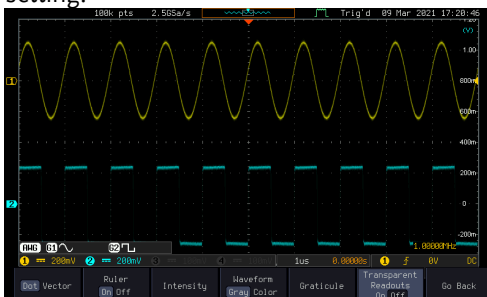

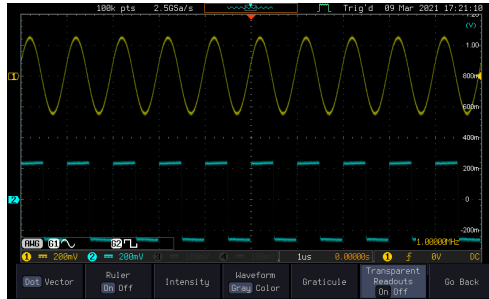

Freeze the Waveform (Run/Stop)

For more details about Run/Stop mode, see page 39.

- Panel Operation
1. Press the *Run/Stop* key. The *Run/Stop* key turns red and waveform acquisition is paused.



2. The waveform and the trigger freezes. The trigger indicator on the top right of the display shows Stop.



3. To unfreeze the waveform, press the *Run/Stop* key again. The *Run/Stop* key turns green again and acquisition resumes.



Turn Off Menu

- Panel Operation
1. Press the *Menu Off* key below the side menu keys to reduce a menu. The menu key needs to be pressed each time to reduce one menu.



See page 30 for more information.

ARBITRARY WAVE GENERATOR


Arbitrary Wave Generator Operation	198
Overview	198
Rear Panel	198
AWG Display Overview	199
Generator Connection	199
Output Setup	200
Select the Active Channel	200
Turn the Output On for the Selected Channel	201
Setting the Load Impedance	201
Setting the Phase	201
GEN1 and GEN2 Setup	202
Selecting a Waveform	202
Waveform Settings	203
AM Modulation	205
FM Modulation	207
FSK Modulation	210
Sweep	211
Manage Arbitrary Waveforms	213
Create New ARB Waveform	213
Edit an Existing ARB Waveform	215
Load ARB Waveform	222
Save ARB Waveform	224
Coupling and tracking waveforms settings	226

Arbitrary Wave Generator Operation

Overview

Background	The AWG is a full-function dual channel arbitrary waveform generator.
Waveforms	Arbitrary, Sine, Square, Pulse, Ramp, DC, Noise, Sinc, Gaussian, Lorentz, Exp. Rise, Exp. Fall, Haversine, Cardiac
Functions	AM, FM, FSK, Sweep

Rear Panel

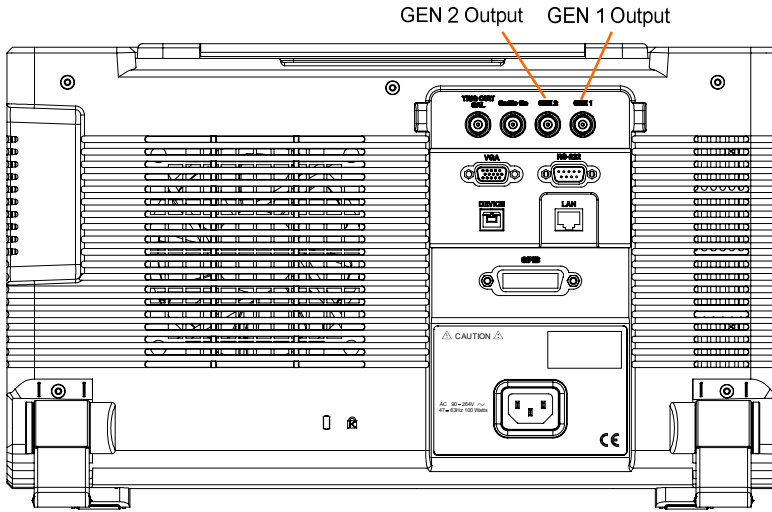

GEN1 and GEN2 Output



Outputs for the Generator 1 or Generator 2 signals.

AWG Display Overview



State Display The state display is used to visually show the major channel settings when you are in the AWG menu.

AWG Generator Status Indicators The AWG channel status indicators show the active channels, output waveforms and function.

AWG AWG status indicator

G1 Channel status indicator (G1, G2)


Waveform icon Waveform indicator of the indicated channel (Sine, arbitrary, pulse etc...).

+AM Function indicator for the indicated channel (AM, FM, FSK, SWP).

Generator Connection

Background This section will explain how to connect a DUT to the channel outputs.

- Connection
1. Connect the BNC output (GEN1 or GEN2) to the DUT using the GTL-101 BNC-Alligator clip cables.

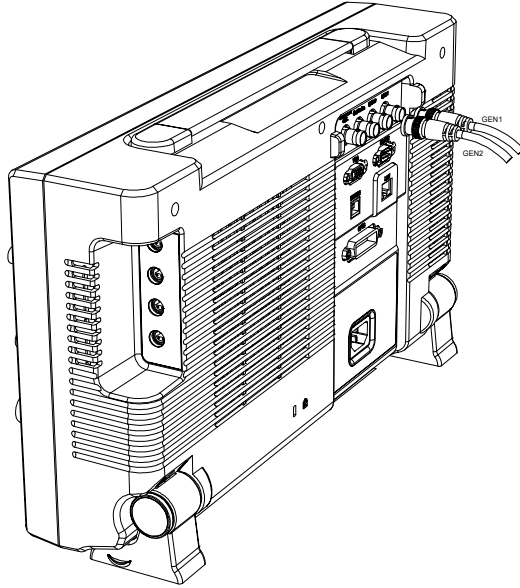

Output Setup

The Output Setup menu allows you to select a channel, to turn the output on or off for the selected channel, configure the load impedance and the phase of the output.

Select the Active Channel

Background Before any operations can be performed on a channel it must first be selected.

Panel Operation 1. Press the LA/AWG key.


LA/ AWG



2. Press *AWG* from the bottom menu.



3. Press *Output Setup*.

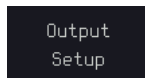

4. Press *Select* from the side menu and choose GEN1 or GEN2.



Turn the Output On for the Selected Channel

Background The output for each generator channel can be turned on or off independently.


Panel Operation 1. Press *Output* to toggle the selected channel on or off.



Setting the Load Impedance

Background The load impedance can be independently set for each generator channel.

Panel Operation 1. Press *Load* to toggle the impedance between 50 Ω and High Z.

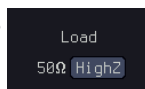

Setting the Phase

Background The output phase can only be set for the GEN1 output. GEN2 is always set to an output phase of 0°.

Panel Operation 1. Press *Phase* and use the *VARIABLE* knob to set the phase.



Phase -180 ° to 180 °

- Reset Phase 2. The phase can be reset by pressing *S_Phase*.



GEN1 and GEN2 Setup

The GEN1 Setup and GEN2 Setup selects the output waveform, waveform settings (amplitude, frequency, offset), modulation mode or allows you to create arbitrary waveforms.

Selecting a Waveform

- Background The AWG option has 14 selectable waveforms, including a user-created arbitrary waveform. When using the modulation function, the waveform selected here is also used as the carrier wave.


- Panel Operation 1. From the AWG menu press *GEN1 Setup* or *GEN2 Setup* to select the waveform for generator 1 or generator 2, respectively.



or



2. Press *Waveform* from the bottom menu.

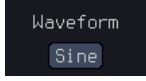

3. From the side menu press the waveform softkey and select a waveform using the *VARIABLE* knob.




Selectable waveforms Arbitrary, sine, square, pulse, ramp, DC, Noise, Sinc, Gaussian, Lorentz, Exp. Rise, Exp. Fall, Haversine, Cardiac.


Waveform Settings

Background The Waveform Settings sub menu selects the Frequency, amplitude and offset settings for currently selected waveform in the GEN1 or GEN2 Setup menu.

1. From the Waveform menu, press *Waveform Settings* from the side menu.

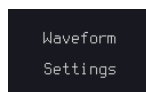


Set the Frequency 2. Press *Frequency* to set the frequency rate of the waveform.

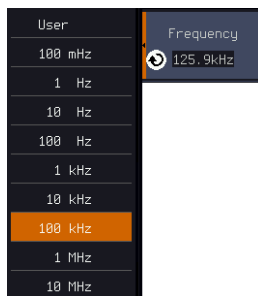


When *Frequency* is initially pressed the *VARIABLE* knob can be used to quick-select the frequency step-resolution. The *VARIABLE* knob can then be used to set the frequency in increments of the step resolution.

Range Arbitrary, Sine: 100 mHz to 25 MHz
 Square, Pulse: 100 mHz to 15 MHz
 Others: 100 mHz to 1 MHz


Set the Amplitude 3. Press *Amplitude* to set the amplitude of the waveform (use *VARIABLE* knob to input value).

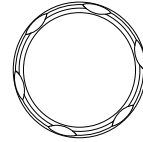

4. Use the Left and Right arrow keys to select a base unit and use *VARIABLE* knob to increase the amplitude by that base unit, as shown in the Amplitude window. Or use the numerical keypad to input value.

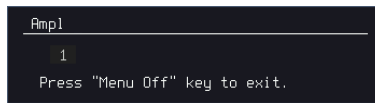



5. Press *Go Back* to leave the menu.

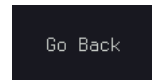


Range	10 mVpp to 2.5 Vpp (Load:50 Ω) 20 mVpp to 5 Vpp (Load: High Z)
-------	---

Default	1.00 Vpp
---------	----------

Set the Offset 6. Press *Offset* to set the offset of the waveform.

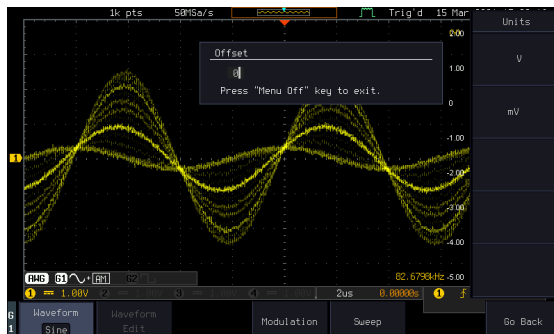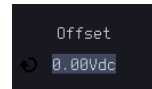


- Use the Left and Right arrow keys to select a base unit and use *VARIABLE* knob to increase the offset by that base unit, as shown in the Offset window. Or use the numerical keypad to input value.

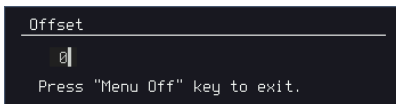

- Default can be pressed to set the Offset to 0.00 Vdc.


- Press Go Back to leave the menu.

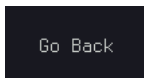

Range	-1.245 to +1.245 (Load: 50 Ω) -2.49 to + 2.49 (Load: High Z)
Default	0.00 Vdc

Exit Waveform Settings

- Press *Go Back* to exit the waveform settings.

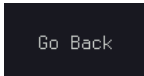


AM Modulation

Background

Amplitude modulation can be used for either channel. All waveforms except Noise and DC can be used as the carrier wave. Sine, square, pulse, ramp and noise can be selected as the modulating waveform.

Example

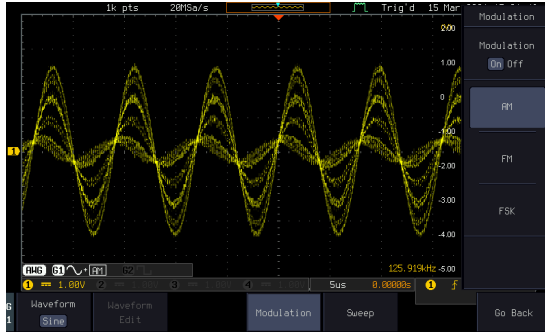

Panel Operation

1. Select the carrier waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.




Press *Waveform* from the bottom menu.




Select the waveform from the side menu. This will be the carrier wave.

Carrier Waves Sine, square, pulse, ramp, sinc, gaussian, Lorentz, exp. rise, exp. fall, haversine, cardiac.

2. Press the *Modulation* from the bottom menu.

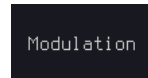

3. From the side menu, turn *Modulation* on.

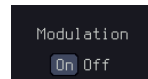








4. Press *AM* to select AM modulation and to enter the AM modulation setup menu.



5. Press *Depth* to set the modulation depth.

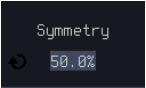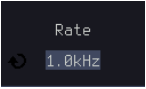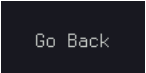


Set the Modulation Depth	Depth	0.0 % to 120.0 %	
Modulation Frequency	6. Press <i>AM Freq</i> to set the modulation frequency.		
	Frequency	1 Hz to 200 kHz	
Shape	7. Press <i>Shape</i> to set the modulating wave shape.		
	Shape	Sine, square, pulse, ramp, noise	
Phase (Sine wave only)	8. Press <i>Phase</i> to set the phase of the modulated wave (sine wave).		
	Phase	-180.0 ° to 180.0 °	
Duty Cycle (Pulse wave only)	9. Press <i>Duty Cycle</i> to set the duty cycle (pulse wave).		
	Duty Cycle	2.0 % to 98 %	
Symmetry (Ramp wave only)	10. Press <i>Symmetry</i> to set the symmetry (pulse wave).		
	Symmetry	0 % to 100 %	
Rate (Noise wave only)	11. Press <i>Rate</i> to set the rate (noise wave).		
	Noise	1 kHz to 10 MHz	
Exit AM Settings	12. Press <i>Go Back</i> to exit the AM settings.		

FM Modulation

Background Frequency modulation can be used for either channel. The carrier wave can only be sine, square and ramp waveforms. Sine, square, pulse, ramp and noise can be selected as the modulating waveform.

Example

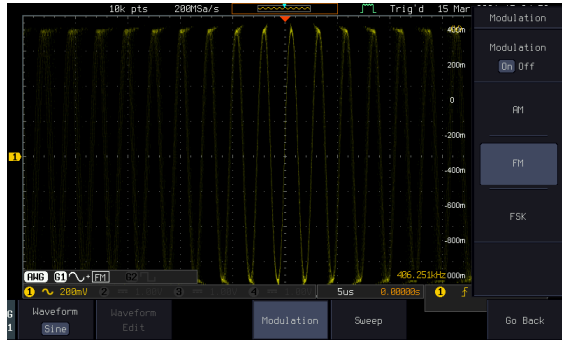

Panel Operation 1. Select the carrier waveform from the GEN1 Setup/GEN2 Setup menu:

2. Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.




3. Press *Waveform* from the bottom menu.



4. Select the waveform from the side menu. This will be the carrier wave.



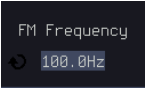





Carrier Waves Sine, square, ramp

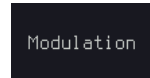5. Press the *Modulation* from the bottom menu.




6. From the side menu, turn *Modulation* on.

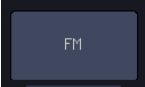

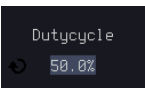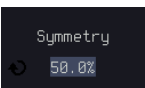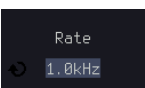	7. Press <i>FM</i> to select FM modulation and to enter the FM modulation setup menu.	
Set the Frequency Deviation	8. Press <i>Freq Dev</i> to set the frequency deviation.	
	Deviation 0.1 Hz to 12.5 MHz	
Modulation Frequency	9. Press <i>FM Freq</i> to set the modulation frequency.	
	Frequency 1 Hz to 200 kHz	
Shape	10. Press <i>Shape</i> to set the modulating wave shape.	
	Shape Sine, square, pulse, ramp, noise	
Phase (Sine wave only)	11. Press <i>Phase</i> to set the phase of the modulated wave (sine wave).	
	Phase -180.0 ° to 180.0 °	
Duty Cycle (Pulse wave only)	12. Press <i>Duty Cycle</i> to set the duty cycle (pulse wave).	
	Dutycycle 1 % to 99 %	
Symmetry (Ramp wave only)	13. Press <i>Symmetry</i> to set the symmetry (ramp wave).	
	Symmetry 0 % to 100 %	
Rate (Noise wave only)	14. Press <i>Rate</i> to set the rate (noise wave).	
	Rate 1 kHz to 10 MHz	


Exit FM Settings 15. Press *Go Back* to exit the FM settings.

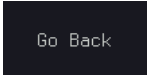

FSK Modulation

Background Frequency Shift Keying Modulation is used to shift the frequency output of the function generator between two preset frequencies (carrier frequency, hop frequency).

Example

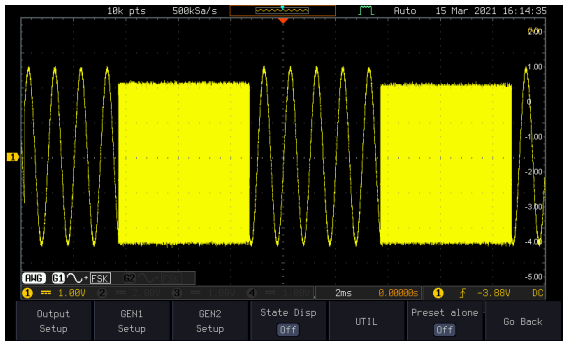

Panel Operation 1. Select the carrier waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.




Press *Waveform* from the bottom menu.








Select the waveform from the side menu. This will be the carrier wave.

Carrier Waves Sine, square, ramp

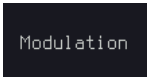2. Press the *Modulation* from the bottom menu.

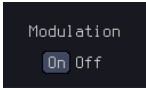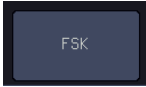


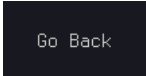- | | | |
|-------------------|---|---|
| | 3. From the side menu, turn <i>Modulation</i> on. |  |
| | 4. Press <i>FSK</i> to select FSK modulation and to enter the FSK modulation setup menu. |  |
| Set the Hop Freq | 5. Press <i>Hop Freq</i> to set the hop frequency. |  |
| | Hop Freq 0.1 Hz to 25 MHz | |
| FSK Rate | 6. Press <i>FSK Rate</i> to set the rate at which the waveform switches from the carrier and hop frequency. |  |
| | FSK Rate 1 Hz to 200 kHz | |
| Exit FSK Settings | 7. Press <i>Go Back</i> to exit the FSK settings. |  |

Sweep

Background The Sweep function can be used with sine, square and ramp waveforms for either channel. The function supports linear or logarithmic sweeping as well as up or down sweeping.

Example

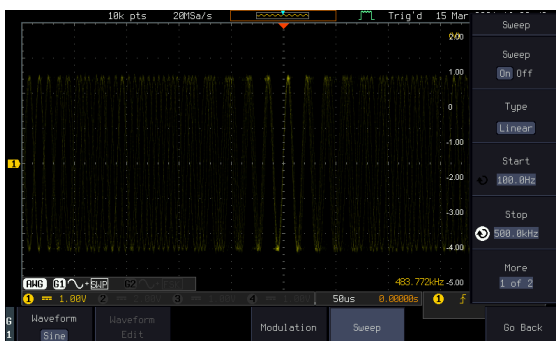

Panel Operation 1. Select the waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.



Press *Waveform* from the bottom menu.




Select the waveform from the side menu.

Sweep Waves Sine, square, ramp.


2. Press the *Sweep* from the bottom menu.



3. From the side menu, turn *Sweep* on.


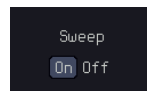


Type of Sweep 4. Press *Type* to set the sweep to linear or logarithmic.

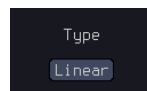

Type Linear, Log

Start and Stop Frequency 5. Press the *Start* or *Stop* soft-keys to set the start and stop frequency, respectively.

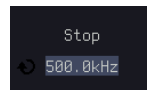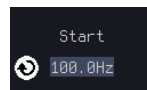

Start/Stop 0.1 Hz to 25 MHz



Note

To configure a up sweeping, set the start frequency at a lower value than the stop frequency. To configure a down sweeping, set the start frequency at a higher value than the stop frequency.


Center Frequency & Span Alternatively the center frequency and span can be set instead of the start and stop frequencies.

6. Press *More 1 of 2*.




Sweep Time

7. Press *SWP Time* to set how long the sweep takes to go from the start to the stop frequency.

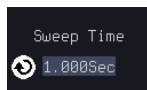

Sweep time 5.0 us to 10 s

8. Press *Span* to set the frequency span of the sweep.

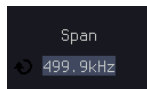

9. Press *Center* to set the center frequency for the configured span.



Span -24.9 MHz to 24.9 MHz
Center 0.1 Hz to 25 MHz



Note

To configure a up sweeping, set the span with a positive frequency. To configure a down sweeping, set the span with a negative frequency.

Manage Arbitrary Waveforms


The Arbitrary Waveform menus allow you to create, edit, recall and save arbitrary waveforms. The menus are accessible via the *Waveform Edit* button on the bottom menu once GEN1 or GEN2 has been setup with an arbitrary waveform.

Create New ARB Waveform

Background

The Create New menu is used to load an inbuilt waveform with a defined length in order to build the shape of the arbitrary waveform. Supported waveforms include: Sine, Square, Pulse, Ramp and Noise.

Example

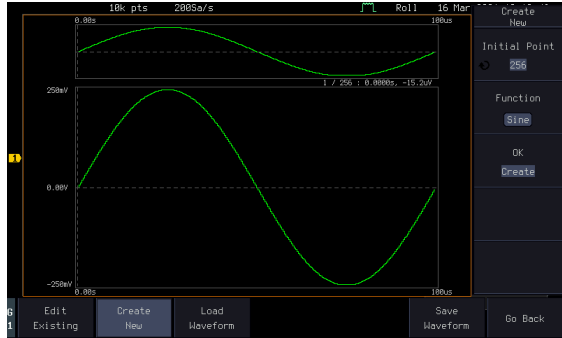

- Panel Operation
1. Select an arbitrary waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.




Press *Waveform* from the bottom menu.




Select *Arbitrary* from the side menu.

2. Press the *Waveform Edit* from the bottom menu.

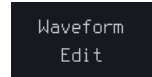

3. From the bottom menu select *Create New*.

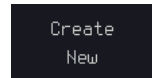

4. Press *Initial Points* to set the number of points for the waveform length.




Initial Points 2 to 16384

5. Press *Function* to choose an inbuilt waveform:



Function: Sine, Square, Pulse, Ramp, Noise

6. Press *OK Create* to create the arbitrary waveform shape.

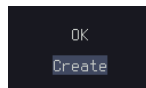

Edit an Existing ARB Waveform

Background Use the Edit Existing menu to edit a newly created waveform and further shape it according to your requirements. You can also use the Edit Existing menu for arbitrary waveforms that have been recalled (see Load Waveform page 222). There are two main options that can be used to edit waveforms: Normal Edit and Function Edit.

Editing Methods Normal Edit:

The Normal Edit function allows you to insert or delete points at any position on a waveform.

Function Edit:


The Function Edit function allows you to edit the waveforms in a number of different ways:

- Point/Line: Insert a point or horizontal line into the ARB waveform.
- Diagonal: Insert a diagonal line
- Scale: Scales the ARB waveform vertically.
- Copy/Paste: Copy or paste a section of the ARB waveform.
- Clear: Clears a section of the ARB waveform and replaces it with a 0 V DC waveform.

Insert Point:


To insert a point, you must first set the position of the point to be inserted.

- a. Press *Point* to set the x-axis position of the point.

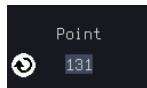


Point 1 to user-defined point position

- b. Press *Level* to set the amplitude of the point. The max/min amplitude depends on the waveform amplitude settings, see page 203.

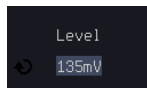


Level ±1.25 Vdc (Load: 50 Ω)
 ±2.5 Vdc (Load: High Z)

- c. Press *Insert Point*. The inserted point will increase the length of the waveform by one point.

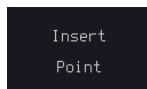


Delete Point:

- d. Press *Delete Point* to delete the point set with the “Point” soft-key.

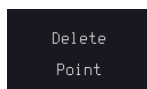


The overall length of the waveform will be shortened by one point.

- Exit Normal Edit 5. Press *Go Back* to exit the Normal Edit.

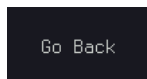

- Function Edit 6. Press *Function Edit* to perform more advanced editing functions.

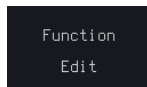


7. Press *Edit Method* to choose the editing method:



Edit Method: Point/Line
 Diagonal
 Scale
 Copy/Paste
 Clear

8. Press *Action* to begin using the selected editing method:

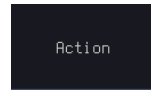

Point/Line:

a. Press *Point/Level* once to select the point's X-axis start point.




Press *Point/Level* again to select the amplitude (Level)

Point 1 to user-defined point position

Level ± 1.25 Vdc (Load: 50 Ω)
 ± 2.5 Vdc (Load: High Z)

b. Press *Length* to set the length of the line.

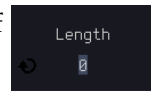

Length 0 to user-defined point length

c. The *Adjustment* soft-key can be used to toggle the step resolution of the *VARIABLE* knob when editing values in this menu.




Adjustment Fine, Coarse


d. Press *Preview*. The desired edit will then be previewed on the screen.



e. Press *Done* to confirm the edit, or press *Undo* to cancel.

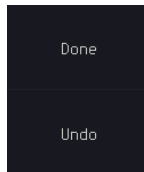

f. Press *Go Back* to go back to the previous menu.

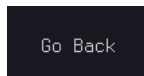

Diagonal:

a. Press *Point1/Level1* once to select the point's X axis start point.



Press *Point1/Level1* again to select the amplitude (Level) of the start point.

Point1 1 to user-defined point position

Level1 ±1.25 Vdc (Load: 50 Ω)
±2.5 Vdc (Load: High Z)

b. Press *Point2/Level2* once to select the point's X axis end point.



Press *Point2/Level2* again to select the amplitude (Level) of the end point.

Point2 1 to user-defined point position


Level2 ±1.25 Vdc (Load: 50 Ω)
±2.5 Vdc (Load: High Z)

- c. The *Adjustment* soft-key can be used to toggle the step resolution of *VARIABLE* knob when editing values in this menu.




Adjustment Fine, Coarse


- d. Press *Preview*. The desired edit will then be previewed on the screen.

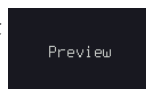

- e. Press *Done* to confirm the edit, or press *Undo* to cancel.

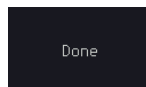


- f. Press *Go Back* to go back to the previous menu.

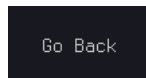

Scale:

- a. Press *Scale* and use *VARIABLE* knob to set the scale of the waveform vertically.

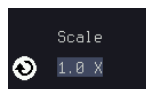


Note

If the waveform exceeds the maximum amplitude it will be clipped.

Scale 0.1 x to 10 X

- b. Press *Go Back* to go back to the previous menu.

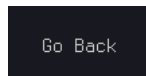


Copy/Paste:

- a. Press *Start* to set the start point of the section you want to copy.



- b. Press *Length* to set the size of the section you want to copy from the start point.

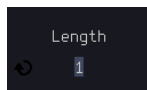


The copied section will be shown as a grey box on the display

Start 1 to user-defined point position

Length 1 to user defined point length

- c. Press *Paste To* to choose where the selected section is copied to.

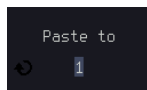


Paste To 1 to user defined point position


- d. Press *Preview*. The desired edit will then be previewed on the screen. The pasted section will be shown as a yellow box on the screen.



- e. Press *Done* to confirm the edit, or press *Undo* to cancel.

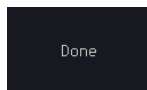

- f. Press *Go Back* to go back to the previous menu.

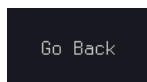


Clear Section:

- a. Press *Start* to set the start point of the section you want to clear.



Press *Length* to set the size of the section you want to clear.

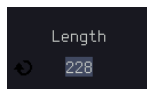

Start 1 to user-defined point position

Length 1 to user-defined point length

b. Press *Undo* to clear the selected section.



c. Alternatively, press *All* to clear the entire waveform from the screen.



d. Press *Go Back* to go back to the previous menu.



Load ARB Waveform


Background ARB waveforms can be loaded from internal memory or from an external USB storage. It can also be loaded directly from the input channels

Panel Operation 1. Select a waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.



Press *Waveform* from the bottom menu.

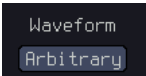

Select *Arbitrary* from the side menu.


2. Press *Waveform Edit* from the bottom menu.



3. From the bottom menu select *Load Waveform*.




- To load a file from one of the internal memory slots, press *From* to choose the ARB waveform to load the current waveform in channel or Ref to Ref4.

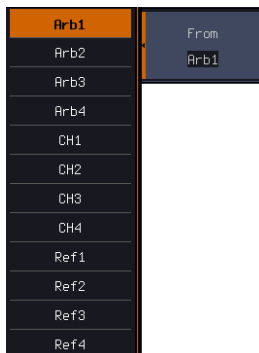


ARB: Arb1, Arb2, Arb3, Arb4, CH1 to CH4, Ref1 to Ref4

- To load a file from an external USB or from the internal flash memory, press *From File*.

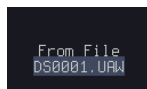


The last file that was saved to USB or the internal flash memory will be displayed in the icon.

- To recall the displayed file, press *Recall Now*.

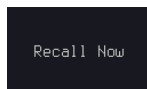


- Alternatively, press *File Utilities*.

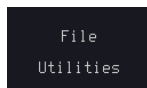

Use the *VARIABLE* knob to select the desired ARB waveform.

Press the *Select* key to load the selected ARB waveform in the file utilities screen.

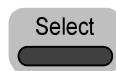

Press *File Utilities* to manage the files on the internal disk or an inserted USB disk. See page 367 for details.

Save ARB Waveform


Background ARB waveforms can be saved to internal memory or to an external USB storage.

Panel Operation 1. Select a waveform from the GEN1 Setup/GEN2 Setup menu:

Press *GEN1 Setup* or *GEN2 Setup* for generator 1 or generator 2, respectively.




Press *Waveform* from the bottom menu.

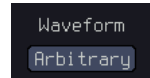


Select *Arbitrary* from the side menu.

2. Press *Waveform Edit* from the bottom menu.

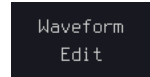

3. From the bottom menu select *Save Waveform*.

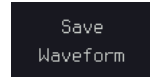


4. To save to one of the internal memory slots, press *To* to choose the ARB waveform to save:




ARB: Arb1, Arb2, Arb3, Arb4


Press *Save* to save the waveform to the selected memory slot, Arb1, Arb2, Arb3 or Arb4.

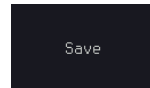

5. Alternatively, to save to a USB drive or to the internal flash memory, press *To File*.

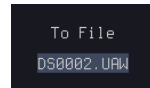


6. To save the selected file, press *Save* waveform.

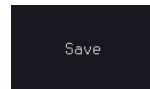

7. You will automatically be taken to a file utility where you will be able to edit the name of the file.
8. To edit the file name, use the *VARIABLE* knob to highlight a character.




Press *Enter Character* or the *Select* key to select a number or letter.

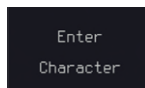

Press *Back Space* to delete a character.




9. Press *Save Now* to save the file.

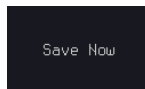


Note

Pressing *Cancel* will cancel the save operation and return you to the *Save Waveform* menu.

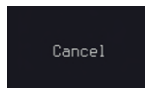

After *Save Now* has been pressed the file will be saved.

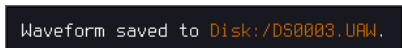


Note

The file will not be saved if the power is turned off or the USB drive is taken out before the message ends.

File Utility

Alternatively, to edit the internal memory or the USB flash drive contents (create/ delete/ rename files and folders) or to edit the default file path, press *File Utilities* from the side menu. See the user manual for details

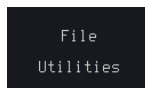

Coupling and tracking waveforms settings

Background GEN1 and GEN2 waveforms can be coupled in terms of frequency and/or amplitude. Similarly, waveform settings can also be tracked and be duplicated from one waveform to the other.

Panel Operation 1. From the bottom menu of the AWG menu:


Press *UTIL* to enter the Utility menu.



You can press on the *Preset* button from the side menu to reset both wave generators to a 0 V DC waveform.



2. Press *Dual Chan* from the side menu to enter the coupling and tracking menus.

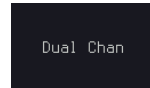

Tracking settings 3. From the side menu press *Tracking* to set the tracking mode to ON or OFF.



Tracking ON, OFF


When Tracking is ON, all parameters set to one waveform will be copied to the other one and vice-versa.



Note

Tracking mode cannot be used together with the Frequency or Amplitude Coupling. Setting the Tracking mode to ON will disable any Coupling settings.

Frequency coupling 4. From the side menu press *Freq Couple*

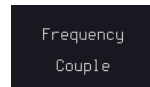


5. Press *Freq Couple Type* to set the type of frequency coupling.




Freq Cpl Type OFF, Offset, Ratio

Frequency from both generated waveforms can be coupled with a fixed offset or with a constant ratio.

6. Select *Offset* from the *Freq Couple Type* menu and press *Offset* on the side menu to configure the offset of the frequency coupling.

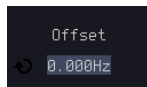


7. Use the Left and Right arrow keys to select a base unit and use the *VARIABLE* knob to increase or decrease the offset by that base unit, as shown in the Offset window. Use the *VARIABLE* knob or numerical keypad to input value.

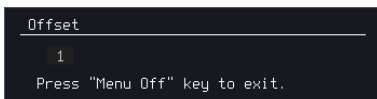

8. Default can be pressed to set the Offset to 0.0 Hz.


9. Press Go Back to leave the menu.

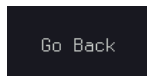

10. Select *Ratio* from the *Freq Couple Type* menu and press *Ratio* on the side menu to configure the ratio of the frequency coupling.




11. Use the *VARIABLE* knob or numerical keypad to input value.

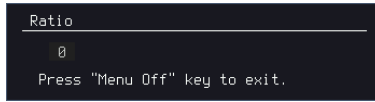


12. Default can be pressed to set the Ratio to 1.000.

13. Press *Go Back* to leave the menu.

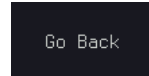

14. Press again *Go Back* to leave the menu Frequency Coupling menu.

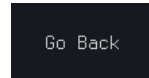

Note

Frequency Coupling cannot be set if Tracking is ON. Configuring Frequency Coupling parameters will disable the Tracking mode.

Amplitude coupling

15. Press *Amplitude Couple* to set the amplitude coupling to ON or OFF.



Amplitude Couple OFF, ON

When set to ON, amplitude from both generated waveforms will be duplicated from one to the other one.




Note

Amplitude Coupling cannot be set if Tracking is ON. Configuring Amplitude Coupling will disable the Tracking mode.

Reset the phase

16. You can also reset the phase to 0° between the two waveforms by pressing *S_Phase*.

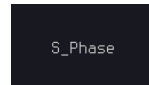

POWER ANALYSIS

(OPTIONAL)

Power Analysis Overview	231
Set the Deskew	231
Power Quality	233
Power Quality parameter overview	233
Using Power Quality Measurements	234
Switching Loss	237
Using Switching loss Measurements	237
Harmonics	242
Harmonics parameter overview	242
Define Harmonic Inputs	243
Choosing a Harmonic Standard Test	244
Harmonics Setup – Default (None)	245
Harmonics Setup – IEC	246
Harmonics Display options	248
Save Harmonic Measurements	250
Ripple	252
Using Ripple Measurements	252
Inrush	254
Using Inrush Current Measurements	254
Modulation	256
Using Modulation Measurements	256
Safe Operation Area	260
Using Safe Operation Area Measurements	260
Transient	264
Using Transient Measurements	264
Efficiency	267
Using Efficiency Measurements	267
B-H curve	270
Using B-H curve Measurements	270
Control Loop Response	274
Using Control Loop Response Measurements	274

Source	276
Setup amplitude profile.....	276
Setup AWG.....	278
Quit.....	280
Analysis mode	280
Measure.....	280
Bode Plot.....	281
Overlay.....	283
File Utilities	284
Power Supply Rejection Ratio (PSRR).....	286
Using PSRR Measurements	286
Source	289
Setup amplitude profile.....	289
Setup AWG.....	289
Quit.....	289
Analysis mode	289
Measure.....	289
Bode Plot.....	289
Overlay.....	289
File Utilities	289
Turn On/Off.....	290
Using Turn On/Off Measurements.....	290




Power Analysis Overview

Power analysis provides automatic measurement for a number of advanced measurement types which allows user to acquire, measure, and analyze various switching power supply signals at multiple test points. This optional power analysis tool provides simple and direct way to obtain results about switching devices, magnetic components, and compliance tests to EN 61000-3-2 standard for Switch mode Power supply.


Set the Deskew

The deskew function is used to compensate for the propagation delay between the oscilloscope and the probe. For power measurements this is especially important as voltage and current probes are often used in measurements and have differing propagation delays.

Background The deskew function allows the time delay between voltage and current probes to be equalized.

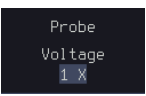- Panel operation**
1. If there is necessary, configure a channel as a voltage probe and another channel as a current probe.
 2. Press one of the *Channel* keys that was set as the voltage or current probe. 
 3. Press the *More* key from the bottom menu. 
 4. Press the *Probe* key from the right menu. 

5. Press *Deskew* on the side menu and use the *VARIABLE* knob to set the deskew time.

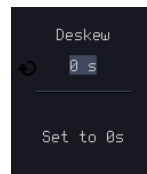

Alternatively, press *Set to 0s* to reset the deskew time. Typically, both channels should line up with a common edge.

Range	-50 ns to 50 ns, 10 ps increments
-------	-----------------------------------

6. If necessary, repeat the procedure for the other channel.

Power Quality

Power Quality parameter overview

All the following parameters are used for power quality measurements.

Measurement	Measurement Group			
	Normal	Inrush	Ballast	Turn On
V RMS	✓	✓	✓	✓
I RMS	✓		✓	✓
True Power	✓		✓	✓
Apparent Power	✓		✓	✓
Reactive Power	✓		✓	✓
Frequency	✓	✓	✓	✓
Power Factor	✓		✓	✓
Phase Angle	✓			✓
V Crest Factor	✓		✓	✓
I Crest Factor	✓		✓	✓
(+)V Peak		✓	✓	✓
(-)V Peak		✓	✓	✓
(+)I Peak		✓	✓	✓
(-)I Peak		✓	✓	✓
DC Voltage			✓	✓
DC Current			✓	✓
Impedance				✓
Resistance				✓
Reactance				✓

Using Power Quality Measurements

Background For typical power measurements, one channel is used to measure voltage using a differential probe and the other channel is used to measure current using a current probe.

In the example below, the power quality of an AC power source is tested.




WARNING



Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

- Setup**
1. Deskew the current and voltage probes.
 2. Connect the differential probe and current probe to an input channel.
 3. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


- Panel operation**
1. Press the *Power analysis* key on the front panel.
 2. Use the *VARIABLE* knob to select the *Power Quality* function from the screen.

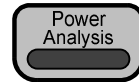

VARIABLE

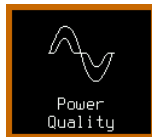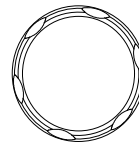


3. The measurements for power quality appear.

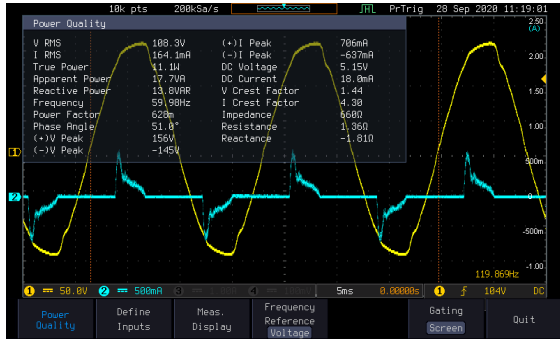

Define Inputs

1. Press *Define Inputs* from the lower menu.

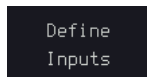


2. Choose the *Voltage* input (differential voltage source) from the side menu.



3. Choose the *Current* input (current probe source) from the side menu.




4. Press *Meas. Display*.

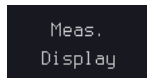

5. Choose what type of automatic measurements should be displayed from the side menu.

- | | |
|-------|--------------------|
| Range | Turn Off All Meas. |
| | Normal |
| | Inrush |
| | Ballast |
| | Turn On |

6. Press *Frequency Reference* from the bottom menu.

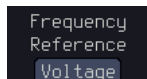


7. Choose *Voltage* or *Current* as the frequency reference.

Range	Voltage, Current
-------	------------------

Gating

To set the measurement area press *Gating* from the bottom menu and select the *Gating* mode from the side menu. See the user manual for more details.

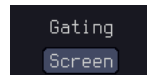

Gating	Off (Full Record), Screen, Between Cursors
--------	--

Switching Loss

Using Switching loss Measurements

Background As the need to improve power efficiency and extend the operating time of battery powered devices increases, the ability to analyze power loss and optimize the efficiency of power supplies will become even more important. The switching loss analysis calculates the power dissipation arising in a switching device.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

- Setup**
1. Connect the positive terminal of the differential probe to the Drain(D) of the FET circuit, the negative terminal to the Source (S), and the current probe is connecting to the Source (S).
 2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


- Panel operation**
1. Press the *Power analysis* key on the front panel.

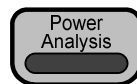

2. Use the *VARIABLE* knob to select *Switching Loss* function on the screen




3. The switching loss measurement is shown on the screen.

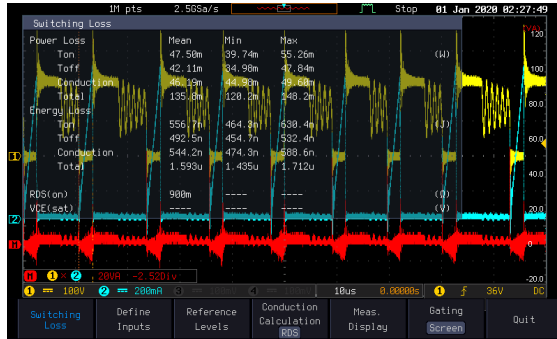

Define Inputs

1. Press *Define Inputs* key from the lower menu.
2. Choose the *Voltage* input (source) from the side menu.
3. Choose the *Current* input (source) from the side menu.
4. When a so-called “Enhance mode” is enabled, it is possible to define another voltage input source with an enhanced vertical resolution as compared to the original voltage input. Usually, the enhanced channel is also differentially probing on the same test point as is the original voltage channel pointing to but with a smaller scale.

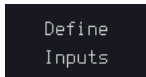

For instance, while the original voltage input CH1 uses a scale of 100V, an enhanced channel, say CH3, may adopt a finer scale such as 50 V or 20 V. In that way, the so-called enhanced channel can improve the digital representation

of a near-zero volt state during the conduction period, which in turn will result in a more accurate conduction loss measurement.

Range CH1 to CH4 (valid options are those other than the voltage and current inputs)

Reference Levels

1. Press *Reference Levels* key from the lower menu for the High/ Middle/ Low of switching edges.




The value is in percentage of the maximum switch voltage/current. User can adjust this value to ignore noise floors or null offset that is difficult to eliminate in current probes. The reference level specifies the threshold that is used to determine the switching edges.


Range 0 % to 100 %

2. Use the *VARIABLE* knob or numerical keypad to input value.

VARIABLE

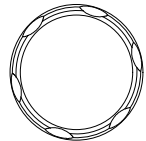


or

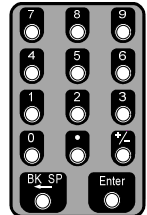


Conduction Calculation


1. Press the *Conduction Calculation* key from the lower menu to choose the algorithm of conduction calculation. It can be voltage waveform(V Wfm), RDS(on), or VCE(sat).

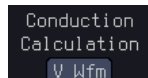

2. When voltage waveform is selected, the conduction simply uses Power = V x I formula.

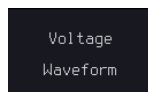

3. Press the *Enhance Mode* key to toggle the state of the Enhance Mode.

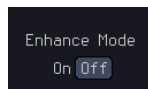

4. For RDS(on), Power = I² x RDS(on).




5. Press the *RDS(on)* key and the additional softkey to specify Rds(on).



Range 0 Ω to 100 Ω

6. Power = VCE(sat) x I when VCE(sat) is set.

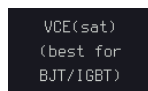


7. Press the *VCE(sat)* key and the additional softkey to specify VCE(sat).




Range 0 V to 100 V

Meas. Display


The voltage and current waveforms are displayed, as well as the power waveform (waveform MATH multiply of the voltage and current). Also displayed are these automatic power measurements and statistics

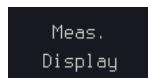


1. Press the *All* key to display all measurement items including Power Loss, Energy Loss, RDS(on) and VCE(sat).

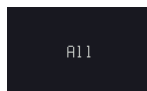


2. Press the *Power loss* key to display only Power Loss.

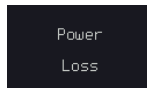


3. Press the *Energy loss* key to display only Energy Loss.

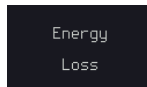

4. Press the *Position* key and then use the VARIABLE knob to adjust MATH waveform trace position.

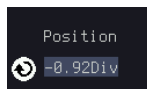


VARIABLE

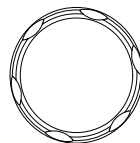

5. Press the *Unit/div* Key and then use the VARIABLE knob to adjust vertical scale of MATH waveform trace.




VARIABLE

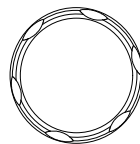

Gating

To set the measurement area, press *Gating* key from the bottom menu and select the gating mode from the side menu.

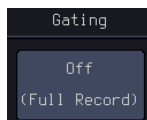

Gating Off (Full Record), Screen, Between Cursors

Harmonics

Harmonics parameter overview


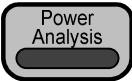
All the following parameters are used for harmonic measurements.

Measurement	None	IEC 61000-3-2 *
Frequency (Hz)	✓	✓ All classes
Magnitude (%)	✓	✓ All classes
Mag. RMS (A)	✓	✓ All classes
Phase (°)	✓	
Limit (A)		✓ A, B C.1, C.3,D
Limit (%)		✓ C.2
Pass Fail		✓ All classes
Max all Windows (A)		✓ All classes
200 % Limit		✓ All classes
POHC Limit		✓ All classes
THD-F	✓	✓ All classes
THD-R	✓	
RMS	✓	✓ All classes
Overall		✓ All classes
POHC		✓ All classes
POHL		✓ All classes
Input Power		✓ C.3, D
Power Factor		✓ C.1, C.2, C.3
Fundamental Current		✓ C.1, C.2, C.3
DF**		✓ C.3



*A, B, C.1, C.2, C.3, D are Class A, Class B, Class C (Table 1), Class C (Table2), Class C (Table 3), Class D

**DF (displacement factor) is one of the important factor for LED lights measurement.

Define Harmonic Inputs

Background	Current and voltage inputs must be defined for harmonic measurements.
Background	For harmonic measurements, one channel is used to measure voltage using a differential probe and the other channel is used to measure current using a current probe. In the example below, the harmonic content of an AC power source is tested.
 WARNING	Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.
Setup	<ol style="list-style-type: none"> 1. Deskew the current and voltage probes. 2. Connect the differential probe and current probe to an input. 3. Connect to the power cord and turn on the power switch when all the connections have been made and configured.
Panel operation	<ol style="list-style-type: none"> 1. Press the <i>Power analysis</i> key on the front panel. 

- Use the *VARIABLE* knob to select *Harmonics* function from the screen.

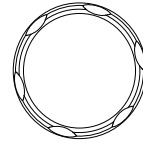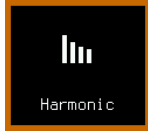


- The measurements for harmonics appear



Define Inputs


- Press *Define Inputs* from the lower menu.
- Choose the *Voltage* input (source) from the side menu.
- Choose the *Current* input (source) from the side menu.

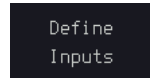



Choosing a Harmonic Standard Test

Panel operation


- Press the *Power analysis* key on the front panel.

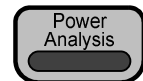


2. Use the *VARIABLE* knob to select *Harmonics* function from the screen.

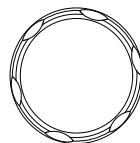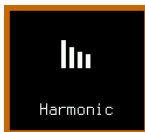

3. Press *Test to Standard* key from the lower menu.

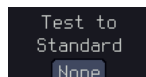

4. Choose a desired Test Standard from the side menu.

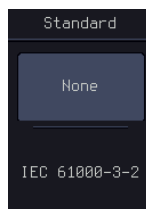


Standard None, IEC 61000-3-2



Harmonics Setup – Default (None)


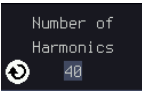
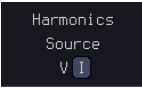
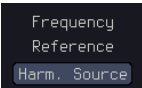

Background It provides self-defined parameters for use in the frequency range of 10 Hz to 400 Hz and 20 to 400 number of harmonics.

- Panel operation** 1. Press the *Power analysis* key on the front panel.

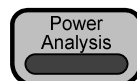




2. Use the *VARIABLE* knob to select *Harmonics* function from the screen.

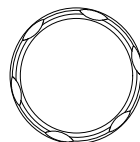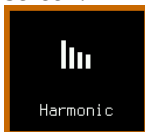


- | | |
|--|---|
| 3. Press <i>Setup</i> key from the lower menu. |  |
| 4. Set the <i>Number of Harmonics</i> from the side menu. |  |
| Range 20 to 400 | |
| 5. Choose the <i>Harmonics Source</i> . |  |
| Source V, I | |
| 6. Set the <i>Frequency Reference</i> . |  |
| Reference V, I, Harmonics source, Fixed | |
| 7. If Fixed is set as the frequency reference, set the <i>Fixed Reference</i> frequency. |  |
| Reference 10 Hz to 400 Hz | |

Harmonics Setup – IEC


Background The following Setup menu is only applicable when IEC is chosen as the testing standard. See page 244 for details.

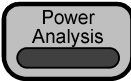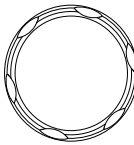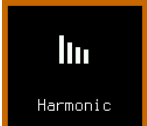- | | | |
|-----------------|--|---|
| Panel operation | 1. Press the <i>Power analysis</i> key on the front panel. |  |
| | 2. Use the <i>VARIABLE</i> knob to select <i>Harmonics</i> function from the screen. | <p>VARIABLE</p>  |
| |  | |

3. Press *Test to Standard* key from the lower menu. Select *IEC 61000-3-2* from side menu.

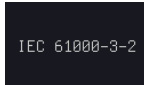

4. Press *Setup* from the lower menu.

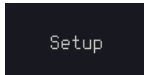

5. Press the *Line Frequency* key from the side menu.



Range 50 Hz, 60 Hz


6. Choose the *Observation Period*.



Time 200 ms to 150 seconds

Default Settings

Press *Set to IEC Defaults* key to set to IEC default settings.

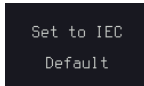

Default Observation Period. 10s
 Grouping. On
 Filter. On


Device Class

Four device classes can be chosen for the IEC standard.

1. Press *More* from the Setup side menu.




2. Choose a *Device Class* from the side menu.

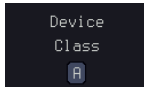

Class A, B, C(Table 1), C(Table 2),
 C(Table3), D


3. For class C devices, choose the *Power Factor* and *Current*.

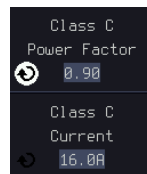

Pow. Fact. 0.0 to 1.00

Current 100 mA to 16.0 A

4. For class C (Table 3) and Class D devices, choose the *Input Power*.


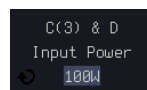


Power 0 W to 600 W, 10 Watt increments

Filter, Grouping and Hysteresis

The filter function applies a 1.5 second smoothing filter function. The Grouping function groups inter-harmonic measurements.

1. Press *more* twice from the side menu.
2. Press *Filter* to toggle the filter time on or off for 1.5 seconds.

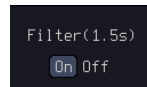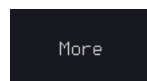

Filter On, Off

Grouping

3. Press *Grouping* to toggle grouping on or off.



Grouping On, Off


Harmonics Display options

Background

Harmonic measurements can be displayed on-screen in graph or table format. When in graph format, a harmonic must be chosen for individual measurements.



Panel operation

1. Press the *Power analysis* key on the front panel.

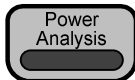


2. Use the *VARIABLE* knob to select *Harmonics* function from the screen.


VARIABLE

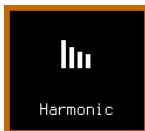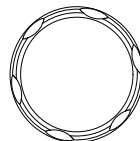

3. Press *Display* from the lower menu

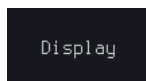

4. Choose to display harmonic measurements as a graph or as a table.

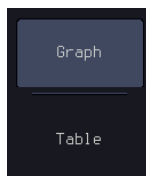


Range Table, Graph

5. Toggle between viewing *All, Odd* or *Even* harmonics.







Harmonic All, Odd, Even

6. Press *Select* and use the *VARIABLE* knob to choose a harmonic measurement to view or to navigate the harmonic list.

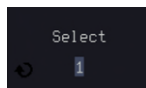

Select 1 to number of measurement results

Save Harmonic Measurements

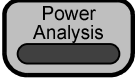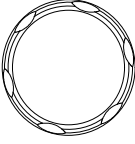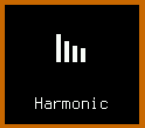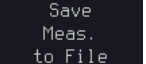Background	All harmonic measurements can be saved internally or to USB. The files are stored as .CSV.	
Panel operation	<ol style="list-style-type: none"> 1. Press the <i>Power analysis</i> key on the front panel. 2. Use the <i>VARIABLE</i> knob to select <i>Harmonics</i> function from the screen. 3. Press <i>Save Meas. To File</i> from the lower menu. 	   
File Type	Each measurement that is saved is saved as HarmXXXX.CSV into the designated USB file path. Each file is numbered sequentially from 0000 to 9999. For example the first file will be saved as Harm0000.CSV, the second as Harm0001.CSV, and so on.	
Data	The data that is saved depends on whether <i>Test to Standard</i> is set to <i>None</i> or to <i>IEC 61000-2-3</i> . Please page 242 for details.	

Example

Below shows an example of the harmonic data that is saved.

GW GDS-3354A, serial number P930116, version V1.05				
Harmonics				
THD-F	113 %			
THD-R	75.10 %			
RMS	353 mA			
	Freq	Mag	Mag RMS	Phase
	Hz	%	A	Degrees
1	60.07	100	217 m	0
2	120.1	29.4	640 μ	-135
3	180.2	62.1	135 m	31.4
4	240.2	24.1	524 μ	-135
5	300.3	47.2	102 m	29
6	360.4	53.4	1.16 m	79.1
7	420.5	44.8	97.5 m	10.3
8	480.5	1.27	2.77 m	2.35

Ripple

Using Ripple Measurements

Background The ripple function allows power supply ripple to be measured with ease. The function allows automatic vertical scaling to maximize the vertical resolution of the measurement by isolating the AC component from the DC waveform.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup

1. With the power disconnected from the power source, connect the differential voltage or current probe to the positive and negative output terminals.
2. Connect the differential or current probe to an output.
3. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

Panel operation 1. Press the *Power analysis* key on the front panel.

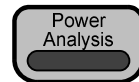


2. Use the *VARIABLE* knob to select *Ripple* function from the screen.

VARIABLE




3. The measurements for ripple appear.

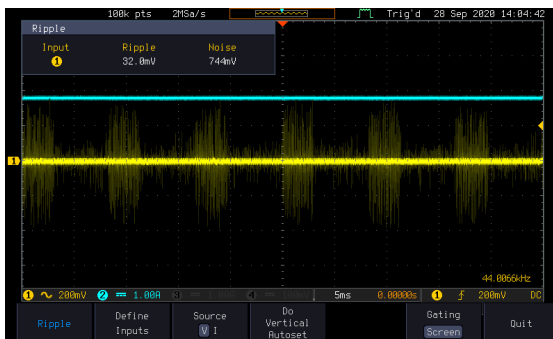


Define Inputs

1. Press *Define Inputs* from the lower menu.
2. Choose the *Voltage* input (source) from the side menu.
3. Choose the *Current* input (source) from the side menu.
4. Press *Source* from the bottom menu to toggle the ripple source type.

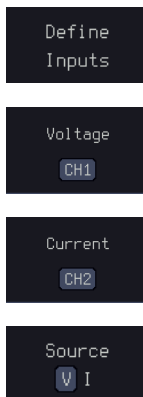


Source V, I

5. To automatically set the vertical scale, press *Do Vertical Autoset*. This will offset the DC component to maximize the accuracy of the ripple measurement.

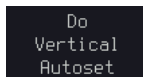

Gating

To set the measurement area, press *Gating* key from the bottom menu and select the gating mode from the side menu.

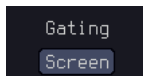

Gating Off (Full Record), Screen, Between Cursors

Inrush

Using Inrush Current Measurements

Background The GDS-3000A is able to quickly measure the inrush current generated when a power supply is first turned on. The Inrush function can measure the first and second peak.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup


1. With the power disconnected from the power source, connect the current probe to Line wire.
2. Connect the current probe to an input.
3. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

Panel operation 1. Press the *Power analysis* key on the front panel.

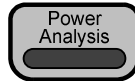


2. Use the *VARIABLE* knob to select *Inrush Current* function from the screen.

VARIABLE

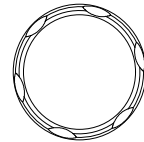


3. The measurements for inrush current appear measuring the first and second inrush current peaks.

Example

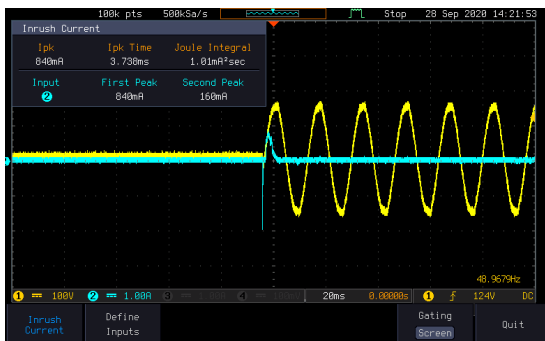

4. Press *Define Inputs* from the lower menu.
5. Choose the *Current* input (source) from the side menu.

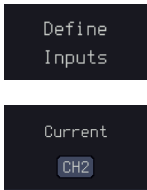

Note

To effectively measure inrush current, use the oscilloscope in Single mode to capture the inrush current when it occurs.

A voltage source cannot be selected for inrush current.

Modulation

Using Modulation Measurements

Background The Modulation analysis measures the control pulse signal to a switching device (MOSFET) and observes the trending of the pulse width, duty cycle, period, frequency, etc. of the control pulse signal in response to different events.



WARNING


Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup

1. Connect the differential probe the Source (S) and Gate (G) of the FET circuit, and the current probe is connecting to the Drain (D).
2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


Panel operation

1. Press the *Power analysis* key on the front panel.

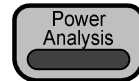


2. Use the *VARIABLE* knob to select *Modulation* function from the screen.

VARIABLE



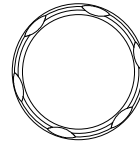


3. The measurements for modulation is appeared.

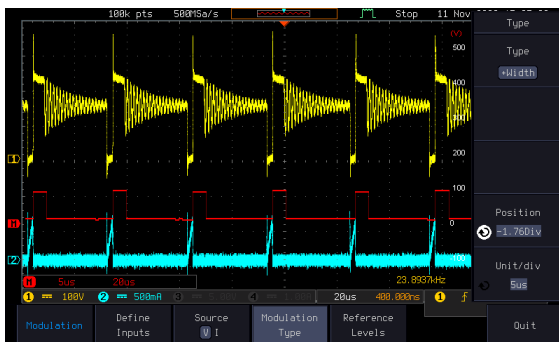

Define inputs


1. Press *Define Inputs* from the lower menu.
2. Choose the *Voltage* input (source) from the side menu.
3. Choose the *Current* input (source) from the side menu.
4. Press *Source* from the bottom menu to toggle the ripple source type.

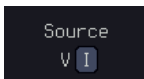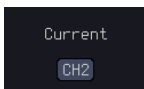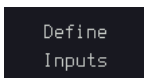

Source V, I


Modulation Type

1. Press the *Modulation Type* key and then turn the *VARIABLE* knob to select the type of measurement to make in the modulation analysis

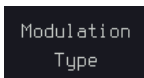


Type +Width, -Width, Period, Frequency, +Duty, -Duty

2. Press *Position* key and then use the *VARIABLE* knob to adjust position of MATH waveform trace.

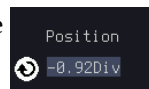

VARIABLE

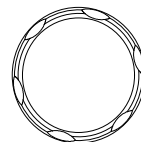


Range ± 12 Div

3. Press *Unit/div* key and then use the *VARIABLE* knob to, depending on different Modulation Type options, adjust value of target unit of MATH waveform trace.



VARIABLE

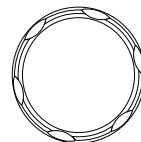


Reference Levels Press *Reference Level* key from the lower menu for the High/ Middle/ Low of switching edges. The value is in percentage of the maximum switch voltage/current. User can adjust this value to ignore noise floors or null offset that is difficult to eliminate in current probes. This preents value specifies the threshold that is used to determine the switching edges.




Range 0 % to 100 %

1. Use the *VARIABLE* knob or numerical keypad to input value.

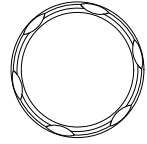VARIABLE

OR

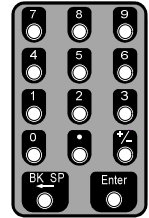

2. Press *Set to default* key to set value at 50 %.

Set to
Default

Safe Operation Area

Using Safe Operation Area Measurements

Background The safe operating area (SOA) of the switching transistor in a switch-mode power supply defines the current that can run through the transistor at a given voltage.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup


1. Connect the positive terminal of the differential probe to the Drain(D) of the FET circuit, the negative terminal to the Source (S) which fixed connection on CH1 or CH3, and the current probe is connecting to the Source (S) which fixed connection on CH2 or CH4 .
2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

Panel operation 1. Press the *Power analysis* key on the front panel.

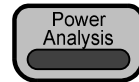


2. Use the *VARIABLE* knob to select the desired measurement as below and then press "Select" key to launch it.

VARIABLE

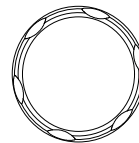


3. The measurements for SOA appear.

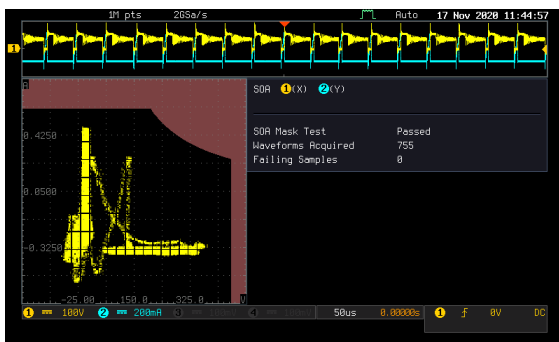

Define inputs

1. Press *Define Inputs* from the lower menu.

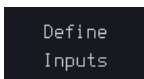


2. Select the SOA input pair.(A four-channel model example)




The automated SOA analysis allows switch voltage, switch current and corresponding power to be simultaneously and automatically monitored as operating conditions vary.

Define Axes

1. Press *Define Axes* key from the lower menu.

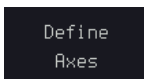


2. Press *Log/Linear* key to select Log or Linear scale display method.

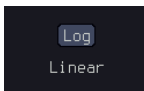







3. Press the side bar menu in right side to set Y Axis Max/Min, X Axis Max/Min.

SOA Axes define the maximum and minimum value for both voltage(X-Axis) and current(Y-Axis) based on the specification of the underlying power transistor.

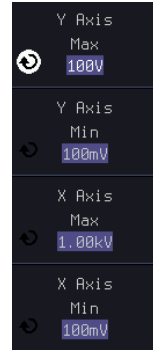


Define Mask

1. Press *Define Mask* key from the lower menu.
2. Press *Set Limits* key. The function of “Set Limits” defines a mask based on the maximum voltage, maximum current, and power limits according to the data sheet of the underlying power transistor.
3. Alternatively, press *Set Points* key. The function of “Set Points” allows user to construct a mask in a point-by-point manner. (up to 10 points are available).
4. Use the *VARIABLE* knob or numerical keypad to edit the coordinate (X,Y) of the selected point.
5. Press *Insert Point* key to adding a new point in front of the selected point.

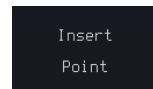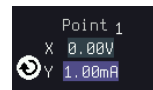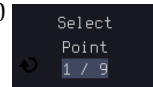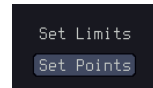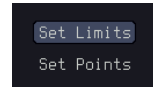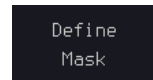


6. Press *Delete Point* key to delete the currently set Point.

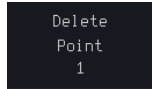

Action on Violation

1. Press *Action On Violation* key from the lower menu.

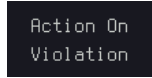

2. Press *Stop* key (on/off) to determine the action to be taken (stopping or not) if the power transistor fails in the SOA test.



Gating

To set the measurement area, press *Gating* key from the bottom menu and select the gating mode from the side menu.



Gating Off (Full Record), Screen, Between Cursors

Transient

Using Transient Measurements

Background The Transient analysis measures the time for the output DC voltage to settle within a user-set percentage of the expected output level after a sudden change in output load (increase or decrease in output current).



WARNING


Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup

1. With the power disconnected from the power source, connect the differential voltage probe to the positive and negative output terminals.
2. Connect the passive probe (or differential probe) to the OUTPUT terminal of the circuit and the current probe to the OUTPUT terminal
3. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


Panel operation

1. Press the *Power analysis* key on the front panel.

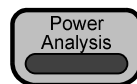


2. Use the *VARIABLE* knob to select *Transient* function from the screen.

VARIABLE


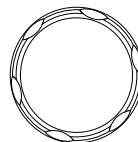


3. The measurements for transient appear.

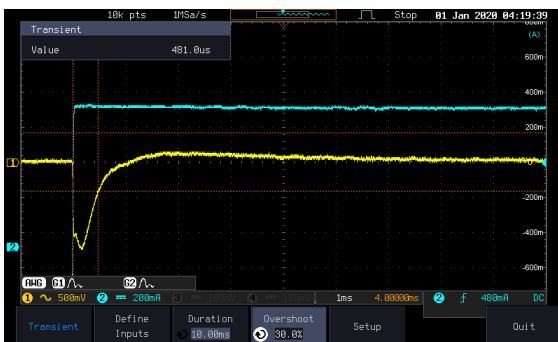


Define inputs

1. Press *Define Inputs* from the lower menu.
2. Choose the Voltage input (source) from the side menu.
3. Choose the Current input (source) from the side menu.

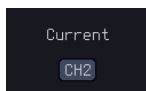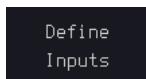

Duration


1. Press the *Duration* key and then use the *VARIABLE* knob or numerical keypad to input duration value.

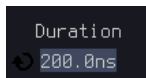

Range 10 ns to 10000 s

Overshoot

1. Press the *Overshoot* key and then use the *VARIABLE* knob or numerical keypad to input overshoot value.

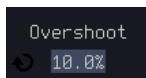

Range 0.1 % to 100 %

Setup

1. Press *Setup* key from the lower menu.



2. Press the *Steady Vout* key and then use the *VARIABLE* knob or numerical keypad to set steady output voltage value.



3. Press the *Low Current* key and then use the *VARIABLE* knob or numerical keypad to set low current value.




4. Press the *High Current* key and then use the *VARIABLE* knob or numerical keypad to set high current value.



Efficiency

Using Efficiency Measurements

Background Efficiency measurement is measuring the input real power and output power in order to compute the efficiency of the power supply (Efficiency = $\text{Power}(\text{out})/\text{Power}(\text{in}) \times 100$).

 **WARNING** Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup


1. This function requires a 4-channel GDS-3000A oscilloscope to measure the input/output voltage and output current (2 channels GDS-3000A series need to measure twice and calculate the percentage).

When testing, connect the differential probe to the output/input of the circuit and the current probe to the output/input of the circuit, and set the corresponding voltage/current settings on the oscilloscope.

2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


Panel operation

1. Press the *Power analysis* key on the front panel.

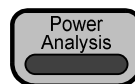


2. Use the *VARIABLE* knob to select *Efficiency* function from the screen.

VARIABLE

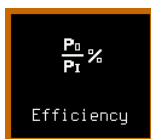


3. The measurements for efficiency appear.

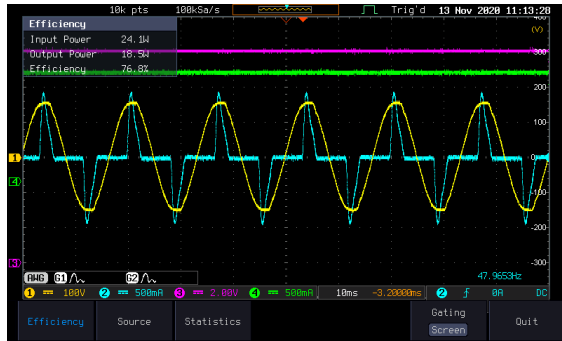

Source

1. Press *Source* key from the lower menu.

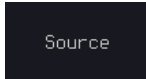


2. Choose the Voltage input channel from the side menu.



Range CH1 to CH4

3. Choose the Current input channel from the side menu.

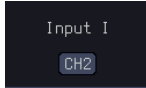

Range CH1 to CH4

4. Choose the Voltage output channel from the side menu.



Range CH1 to CH4


5. Choose the Current output channel from the side menu.



Range CH1 to CH4

Statistics


1. Press *Statistics* key from the lower menu.

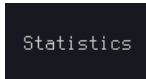

2. Press *Statistics* (on/off) key to turn on or off Statistics.




3. Press the *Mean & Std Dev Samples* key and then use the *VARIABLE* knob or numerical keypad to set value of Mean and standard deviation of the sample.

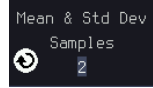

Range 2 to 1000

4. Press the *Reset Statistics* key to reset the value of Statistics.

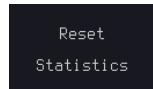

Gating

To set the measurement area, press Gating key from the bottom menu and select the gating mode from the side menu.



Gating Off (Full Record), Screen, Between Cursors

B-H curve

Using B-H curve Measurements

Background B-H curve measurements are often used to verify the saturation (or lack thereof) of the magnetic elements in a switching supply and provide a measure of the energy lost per cycle in a unit volume of core material.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.



Setup

1. Connect the CH1/CH2 probes (or CH3/CH4) to the transformer's N1, N2 side of the circuit
2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.


Panel operation 1. Press the *Power analysis* key on the front panel.

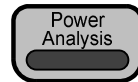

2. User the *VARIABLE* knob to select *VARIABLE B-H curve* function from the screen.

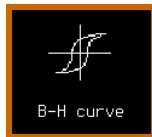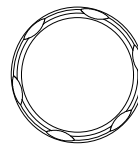


3. The measurements for B-H curve appear.

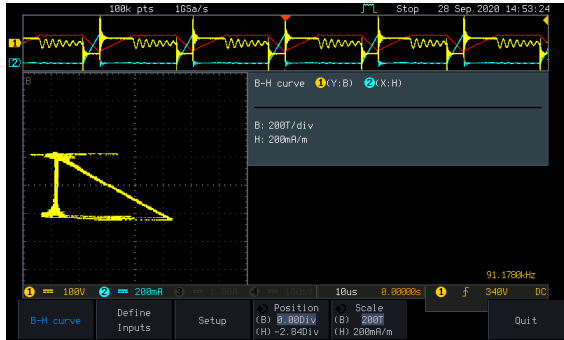

Define inputs

1. Press *Define Inputs* key from the lower menu.

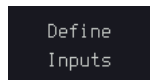

The voltage across a waveform which acquired with a differential voltage probe, is set as the voltage source. The current through the device is captured with a current probe. The hysteresis plot is presented as the integrated voltage across the magnetic device versus the current through the device.

2. 2CH model is available for one input setting.
4CH model is available for two input settings
Fixed CH1 or CH3 is Voltage input.
CH2 or CH4 is Current input.




Setup

1. Press *Setup* key from the lower menu.




- Press the *Windings* key and then use the *VARIABLE* knob or numerical keypad to set value of windings magnetic element.

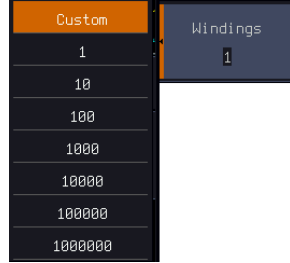


Range 1 to 1000000

- Press the *Cross Section Area(mm²)* key and then use the *VARIABLE* knob or numerical keypad to set value of Cross Section Area.

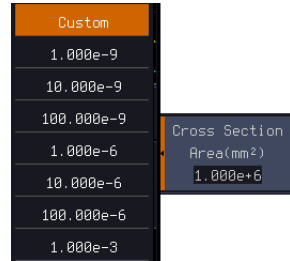

Range 1.000 to 1.000e+6


- Press the *Magnetic Length(m)* key and then use the *VARIABLE* knob or numerical keypad to set value of Magnetic Length.

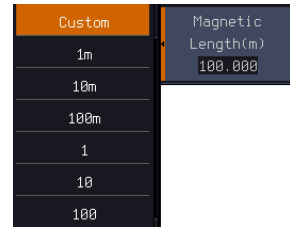


Range 1.000 to 100.00

Position

- Press *Position* key from the lower menu. Use the *VARIABLE* knob or numerical keypad to adjust the position of (B) magnetic flux Density & (H) Magnetic Field Strength on the screen.

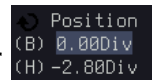


VARIABLE

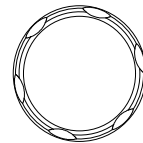

Range +/- 12 divisions

Scale

1. Press *Scale* key from the lower menu. Use the *VARIABLE* knob or numerical keypad to adjust the scale of (B) magnetic flux Density & (H) Magnetic Field Strength.

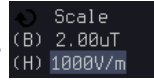

VARIABLE



Control Loop Response

Using Control Loop Response Measurements

Background The Control Loop Response measurement performs a gain/phase plot over frequency sweep. This is used to determine the margin of a control loop.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup


1. Connect the probe of the corresponding channel to the INPUT/OUTPUT side of the DUT and connect the output of AWG to the Injection Transformer.
2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

Panel operation 1. Press the *Power analysis* key on the front panel.

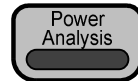


2. Use the *VARIABLE* knob to select *Control Loop Response* function from the screen.

VARIABLE

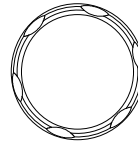

3. The measurements for Control Loop Response appear.

Example: an example with complete result of control loop response

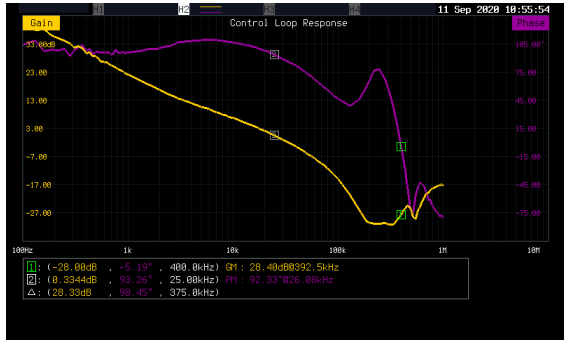


Note

Please be aware that the total time required for measuring the frequency response may vary according to your setup, e.g. the number of points per decade or when sweeping at lower frequencies.


Please note that the control loop response measurement only allows a DSO record length of 10,000 points.

- In Setting mode (*Run* button appeared), press the *Run* button to start testing the control loop response.




- The data acquisition will stop automatically when the stop frequency is reached. The  button is then toggled back to STOP and the data is ready for analysis.




If the user needs to cancel an ongoing control loop response measurement, the  button can be pressed.

- Using the second *Analyze* menu button will switch to the Analysis mode. Details regarding this mode will be explained in later sections.

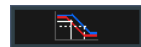

7. Press the icon to return to the upper-level menu.

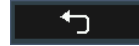

Source


Background Use the Source menu to define the input source and output source.




Note

Please make sure that the two analog channels used by the control loop response measurement must be activated first.

- Panel operation**
1. Toggle the *Source* button.

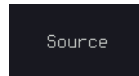

2. Press *Input Source* from the side menu and select the channel that is connected to the input of the DUT.

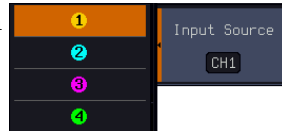

3. Press *Output Source* from the side menu and select the channel that is connected to the output of the DUT.




Setup amplitude profile

Background The function of amplitude profile aims to customize the signal level across the test bands.

- Panel operation**
1. Press the *Setup* button.




- When amplitude profile is enabled, you can edit it. When amplitude profile is disabled, amplitude can be selected and changed only in the AWG Setup option.

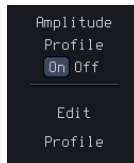


Edit profile

- Press *Edit Profile* from side menu. Amplitude profile is used to test at lower amplitudes at frequency where the DUT is sensitive, and test at higher amplitudes where it is less sensitive to distortion.

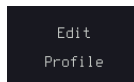

- Press *Select* from side menu and select the frequency band that needs a customized signal level.

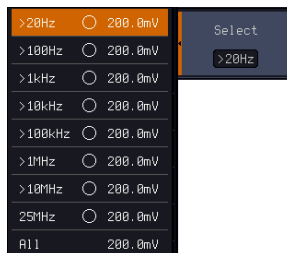


Amplitude


- Press *Amplitude* to configure the amplitude of the frequency band.



Use the *VARIABLE* knob or numerical keypad to input value.

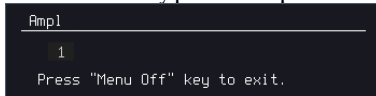

- Press *Go Back* to return to the previous menu.

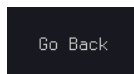

Range	0.01 V _{pp} to 2.5 V _{pp} (50 Ω load)
	0.02 V _{pp} to 5 V _{pp} (High-Z load)

Linear Interpolation

1. Press *Linear Interpolation* to enable or disable generating linearly interpolated amplitudes between two neighboring band edges. With this option, one can construct a linear sweep rather than a stair-case amplitude profile.



Setup AWG

Background

Use the Setup menu to configure the AWG output GEN1.

Panel operation

1. Press the *Setup* button.
2. Set unit of the frequency axis: Logarithmic or Linear. For the logarithmic unit, each frequency decade is equally divided in a preset number of points. By pressing the *Points/Decade* button and using the *VARIABLE* knob, you will define the number of points per decade of frequency.











Example

For the 100 Hz to 1000 Hz decade and 15 points per decade, the frequency sweep step is given by $(1000-100)/15 = 60$ Hz, i.e. measurements will be taken at 100 Hz, 160 Hz, 220 Hz, 280 Hz, ..., 940 Hz.

Range 10, 15, 30, 45, 90 for logarithmic scale
 2 to 1000 for linear scale

3. Then press the *AWG Setup* button from the side menu to configure the frequency-swept input signal.

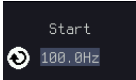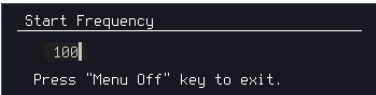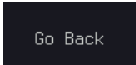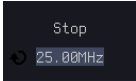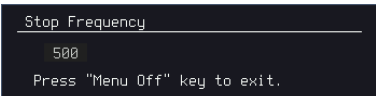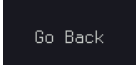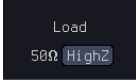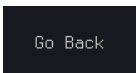


Start	1. Press <i>Start</i> button to configure the start frequency.	
	2. Use the <i>VARIABLE</i> knob or numerical keypad to input value.	
	3. Press <i>Go Back</i> to return to the previous menu.	
	Range	20 Hz to 25 MHz
Stop	1. Press <i>Stop</i> to configure the stop frequency.	
	2. Use the <i>VARIABLE</i> knob or numerical keypad to input value.	
	3. Press <i>Go Back</i> to return to the previous menu.	
	Range	20 Hz to 25 MHz
Load	1. Press <i>Load</i> button to configure the load resistance.	
	2. Press repeatedly the <i>Load</i> button to select the 50 Ω or High Z load resistance.	
	Range	50 Ω, High Z
Go Back	Press <i>Go Back</i> to return to the Setup menu.	

Quit

Background Quit the control loop response measurement.

Panel operation Toggle the *Quit* button to return the Power Analysis menu.

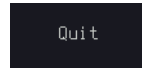

Analysis mode

There are four main functions in the Analyze menu. Users can perform the cursor measurement, adjust the scale and the offset of the plot, overlap several test waveforms together and save measurement results for future recall as well as post-processing on the computer.

Measure

Background Control loop response measurement uses cursors to precisely measure the data in absolute or relative values.

Panel operation 1. Under Analysis mode, press the *Measure* button to enter the Measure menu.




2. Press the *Select* button and use the *VARIABLE* knob and then the *Select* key to set the active trace, showing on top of all other traces, and refresh the cursor measurement accordingly.




Range H1, H2, H3, H4 (depends on how many traces have been stored in the system memory)

- The cursor 1 and 2 will appear along the active trace whenever the cursor state turns on. Press Select button to change the active cursor highlighted in green color.

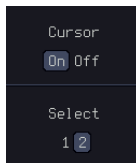

Move the active cursor along the active trace using the *VARIABLE* knob. The corresponding frequency value in Hz (X-axis), gain value in dB (left Y-axis) and phase value in degree (right Y-axis) messages are shown below.

VARIABLE

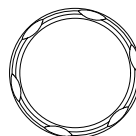







A delta between two cursor measurements is also shown below.

Δ: (7.22dB , 7.68° , 76.76Hz)

Bode Plot

Background

The Scale Bode Plot menu allows the user to adjust the scale and the offset of the plot on the display.

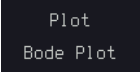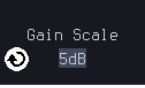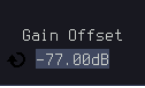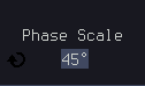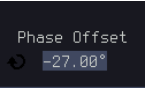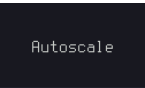
Panel operation	1. When in Analysis mode, press the <i>Plot Bode Plot</i> button to enter the scale bode plot menu.	
	2. There are four settings which can be adjusted: <i>Gain Scale</i> , <i>Gain Offset</i> , <i>Phase Scale</i> , and <i>Phase Offset</i> , respectively. Press the <i>Autoscale</i> button to automatically preset these parameters suitable for viewing the displayed traces.	
Gain Scale	1. Press the <i>Gain Scale</i> from the side menu and use the <i>VARIABLE</i> knob to adjust the value.	
	Range 5 dB, 10 dB, 15 dB, 20 dB	
Gain Offset	1. Press the <i>Gain Offset</i> from the side menu and use the <i>VARIABLE</i> knob to adjust the value.	
	Range (-300 + 4 * Gain Scale) dB to (300 - 4 * Gain Scale) dB	
Phase Scale	1. Press the <i>Phase Scale</i> from the side menu and use the <i>VARIABLE</i> knob to adjust the value.	
	Range 15 °, 30 °, 45 °, 60 °	
Phase Offset	1. Press the <i>Phase Offset</i> from the side menu and use the <i>VARIABLE</i> knob to adjust the value.	
	Range (-720 + 4 * Phase Scale) degrees to (720 - 4 * Phase Scale) degrees	
Autoscale	1. Alternatively, users can press the <i>Autoscale</i> from the side menu to have the system automatically adjust these parameter to fit in all displayed traces.	

Overlay


Background User is able to recall the previously saved test waveforms for comparison. Waveforms corresponding to a maximum of four experimental trials can be simultaneously shown on the display.

Panel operation


1. Press the *Add* button to select the previously saved data and display the data on the screen.

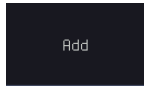


Browse through the folders and files to locate a FRA file (file.FRD) and press the Select key to recall it. A pop-up window then subsequently confirms the success of the operation. For a successful recall, the display will immediately show the newly recalled data on the current plot.

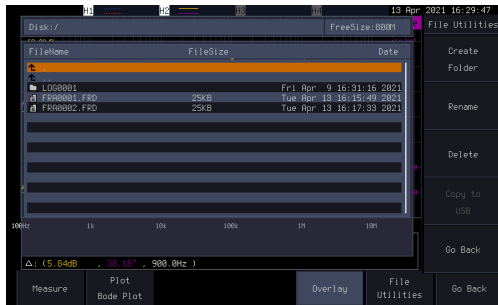

2. Press the *Select* button to choose which group of waveform data is to be operated.
3. Press the *Remove* button to delete selected waveform data and remove APP.
4. Press the *Display On/Off* button to display or not display selected waveform data.

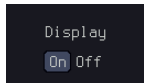


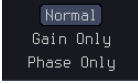5. Press the <i>Normal/Gain Only/Phase Only</i> button to select display item.	
Normal	Display both Gain and Phase.
Gain Only	Display only Gain
Phase Only	Display only Phase

File Utilities

Background With File Utilities, users can save in-memory data into files(in both binary and CSV formats), and recap test conditions in the Info panel.

Panel operation 1. When in Analysis mode, press the *File Utility* button to enter the File utility.

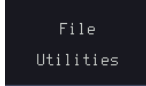


Select 2. Select target waveform to be saved.




Save to File (.FRD) 3. Press the *Save to File (.FRD)* from the side menu and save the present plotted data to a file for future reference.




Save to CSV 4. Press the *Save to CSV* button to save the present plotted data in the CSV format for post processing on the computer.

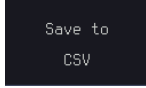


Info 5. For more information regarding the current plotted data, press this *Info* button.

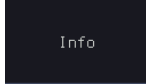

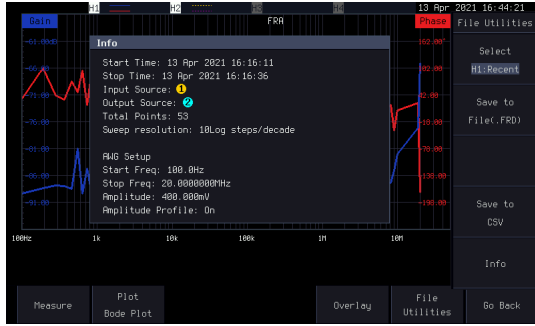

Go Back

6. Press Go Back button to return to the Setting menu.

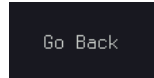

Power Supply Rejection Ratio (PSRR)

Using PSRR Measurements

Background The Power Supply Rejection Ratio test is used to verify the rejection of ripple noise in power supply devices over different frequency ranges.



WARNING


Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.

Setup



1. For example, connect the corresponding probe to the INPUT/OUTPUT terminal, and connect the AWG output to the INPUT terminal of the operation amplifier.
2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

Panel operation

1. Press the *Power analysis* key on the front panel.
2. Use the *VARIABLE* knob to select *PSRR* function from the screen.

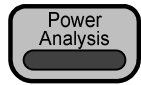


VARIABLE

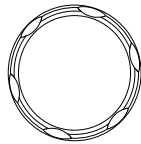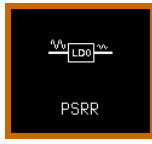

3. The measurements for PSRR appear.

Example : a PSRR test graph

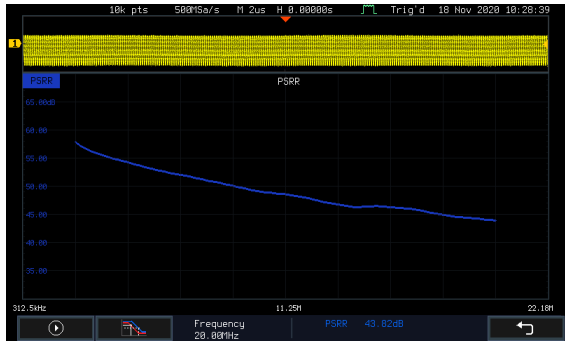


Note

Please be aware that the total time required for measuring the frequency response may vary according to your setup, e.g. the number of points per decade or when sweeping at lower frequencies.


Please note that the control loop response measurement only allows a DSO record length of 10,000 points.

- 4. In Setting mode (*Run* button appeared), press the *Run* button to start the frequency response analysis.



- 5. The data acquisition will stop automatically when the stop frequency is reached. The  button is then toggled back to STOP and the data is ready for analysis.



If the user needs to cancel an ongoing control loop response measurement, the  button can be pressed.

- Using the second *Analyze menu* button will switch to the Analysis mode. Details regarding this mode will be explained in later sections.



- Press the icon to return to the upper-level menu.



Source

Please refer to section “Source” on page 276.

Setup amplitude profile

Please refer to paragraph “Setup amplitude profile” on page 276.

Setup AWG

Please refer to paragraph “Setup AWG” on page 278.

Quit

Please refer to paragraph “Quit” on page 280.

Analysis mode

Please refer to section “Analysis mode” on page 280.

Measure

Please refer to paragraph “Measure” on page 280 .

Bode Plot

Please refer to paragraph “Bode Plot” on page 281.

Overlay

Please refer to paragraph “Overlay” on page 283.

File Utilities

Please refer to paragraph “File Utilities” on page 284.

Turn On/Off

Using Turn On/Off Measurements

Background The Turn On measurement determines how fast a turned on power supply takes to reach 85 % of its steady state output.

The Turn Off measurement determines how fast a turned off power supply takes to reduce its output voltage to 15 % of maximum.




WARNING

Ensure safe working practices are adhered to when working with live voltages. Failure to do so could lead to electric shock or loss of life.


- Setup**
1. Connect the differential probe and current probe of the corresponding channel to the INPUT terminal of the circuit, and connect the OUTPUT terminal to another set of passive probes.
 2. Connect to the power cord and turn on the power switch when all the connections have been made and configured.

- Panel operation**
1. Press the *Power analysis* key on the front panel.

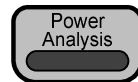


2. Use the *VARIABLE* knob to select *Turn On/Off* function from the screen.

VARIABLE

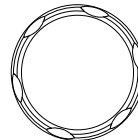


3. The measurements for Turn On/Off appear.

Example

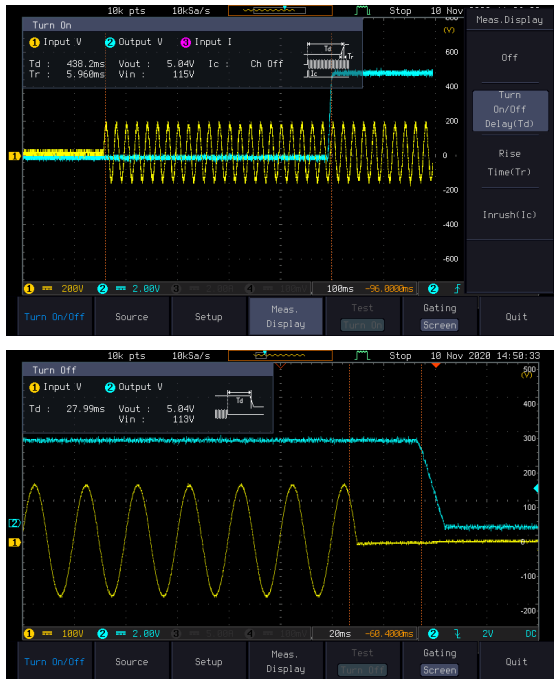

Source

4. Toggle the *Source* button.

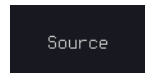

5. Press *Input V* from the side menu and select the channel that is connected to the input of the DUT.



Range CH1 to CH4

6. Press *Output V* from the side menu and select the channel that is connected to the output of the DUT.



Range CH1 to CH4

7. Press *Input I* from the side menu and select the channel that is connected to the output of the DUT.




Range CH1 to CH4

Setup

1. Press *Setup* key from the lower menu.




2. Press the *Duration* key and then use the *VARIABLE* knob or numerical keypad to set value of Duration.

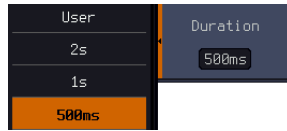


Range 500 ms/1 s/2 s/User

3. Press *Save Setup* key to save current setting (select Duration:User followed by pressing *Apply* key for next time use).

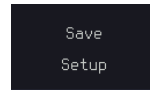

4. Set a suitable Duration followed by pressing the *Apply* key to begin the test.

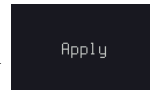


5. Lastly, press the “Single” key on the panel to wait for trigger.



Meas. Display


1. When trigger occurs and it enters the Stop status, press *Meas. Display* key from the lower menu to choose measurement item.

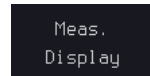


2. Press *OFF* key to turn off the measured result on the screen and return back to the level prior to executing test.




3. When “Turn On” is selected for Test and the trigger occurs and it enters the Stop status, the measurement of Turn On/Off Delay (Td), Rise Time(Tr) & Inrush (Ic) will be executed and the measured value will be displayed accordingly.

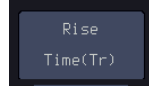

4. When “Turn Off” is selected for Test and the trigger occurs and it enters the Stop status, the measurement of Turn On/Off Delay (Td) will be executed and the measured value will be displayed accordingly.

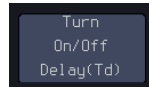


5. Press *Test* key from bottom menu to select either executing Test On or Test Off measurement.

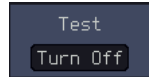

Gating

To set the measurement area, press Gating key from the bottom menu and select the gating mode from the side menu.

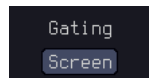

Gating Off (Full Record), Screen, Between
Cursors

SPECTRUM ANALYZER


Spectrum Analyzer operation	295
Overview	295
Display Overview	295
Connections	297
Configuration	297
Selecting the source	297
Setting the trace mode options (Trace type)	298
Setting the Detection Method	300
Configuring the Frequencies and Span	302
Configuring the Bandwidth	305
Configuring the Amplitude	306
Display	307
Measurement	309
Using the Search function	309
Using the Cursors	311

Spectrum Analyzer operation

Overview

Background	The Spectrum Analyzer is a dual channel spectrum analyzer with spectrogram specially designed for the GDS-3000A series. It conveniently allows users to analyze the signal in the frequency domain.
Windows	Hanning, Rectangular, Hamming, Blackman
Frequency range	DC to 2.5 GHz Max. (Frequency which exceeds analog front end bandwidth is uncalibrated)
Span	1 kHz to 2.5 GHz Max.
Resolution bandwidth	1 Hz to 2.5 MHz Max.
Functions	Compatible with the search and cursor functions for accurate measurement in the frequency domain.

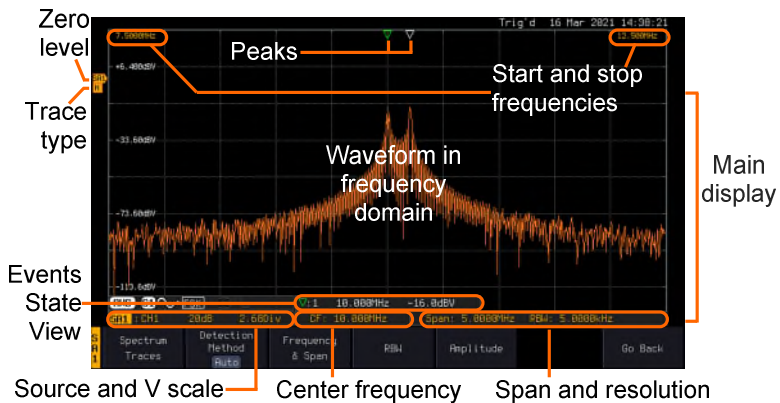


Display Overview



Main display The Spectrum Analyzer main display can show various spectrum traces of the selected analog source channel, such as the normal, max-hold, min-hold and averaged trace. The start and stop frequency of the span are displayed at both top sides. The remaining frequency span information is displayed at the bottom as well as the vertical scale. The zero level is shown for reference on the Y axis on the left. When the search function is enabled, frequency peaks will be detected and summarized in the Events State View window at the bottom left of the display.

Frequency domain information	7.5000MHz	12.500MHz
	Start frequency (shown on the upper left corner of the main spectrum display)	Stop frequency (shown on the upper right corner of the main spectrum display)
	CF: 10.000MHz	Span: 5.0000MHz
	Center frequency of the span	Width of the span
	RBW: 5.0000kHz	
	Resolution bandwidth	

Vertical scale information	SA1 : CH1	20dB
	Active source channel for the spectrum analyzer	Vertical scale per one division
	2.68Div	SA1 N
	Zero level position	Shows the zero position along the Y-axis (SP) and the type of trace (N = Normal)

Peaks	 Peak mark	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Overall: 3</div> Total number of peaks detected (according to the search function parameters).
	 Current active peak	
	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 1</div> Active peak marker	

Connections

Background	The Spectrum Analyzer uses the analog channel inputs of the GDS-3000A SERIES.
------------	---

Connection	<ol style="list-style-type: none"> 1. Connect the desired signal source to one of the analog channel input of the DSO using BNC connectors.
------------	--

Configuration

Setting up a spectrum trace can be done by following the subsequent steps: selecting the source turning on the trace with its associated detection options, configuring the frequencies and span, configuring the window type and the frequency resolution and lastly configuring the vertical scale.


Selecting the source

Background	Before any visualization or measurement can be performed on the spectrum analyzer, it must first be associated with a source.
------------	---


Panel Operation	<ol style="list-style-type: none"> 1. Press the <i>Spectrum</i> key.
-----------------	---




<ol style="list-style-type: none"> 2. Press <i>Input Setup</i> from the bottom menu.

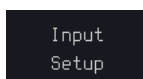


3. Press the Select in the right side to select the first spectrum analyzer (SA1) or SA2 setting.

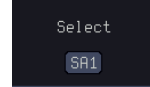

4. Press the Input in the right side to turn On or Off the SA1 or SA2 input.

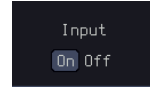

5. Press *Source* from the side menu and choose a source.

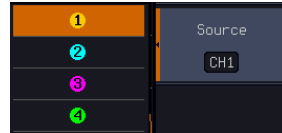


Range CH1 to CH4

Setting the trace mode options (Trace type)


Background	Trace options determine how the trace data is stored or manipulated before being displayed. The Spectrum Analyzer updates the trace according to the type of trace.
Definitions	<p>Normal: the Spectrum Analyzer continuously updates the display with each sweep.</p> <p>Max/Min Hold: the maximum/minimum points are maintained for the selected trace. The trace points are updated each sweep if a new maximum/minimum point is found.</p> <p>Average: this mode averages the trace for a user-defined number of times before it is displayed. This type of trace smooths the noise level, but it is slower to update.</p>

Example


Normal trace:

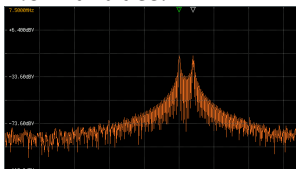


MaxHold:

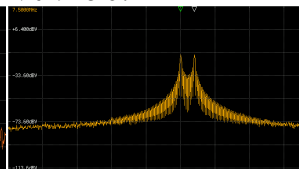

Average:






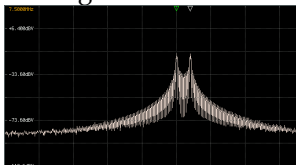


MinHold:

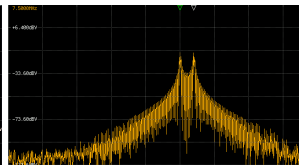

Panel Operation

1. Press the *Spectrum* key to enter the Spectrum Analyzer menu.
2. Press the SA1 setup or SA2 setup to enter the trace setting.
3. Press the *Spectrum Traces* button from the bottom menu.
4. From the side menu, press once on the *Normal* button to toggle this trace option to *On*. Press again to toggle it to *Off*.
5. From the side menu, press once on the *MaxHold* button to toggle this trace option to *On*. Press again to toggle it to *Off*.
6. From the side menu, press once on the *MinHold* button to toggle this trace option to *On*. Press again to toggle it to *Off*.

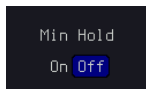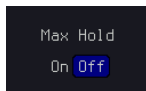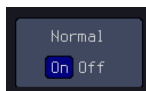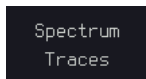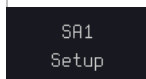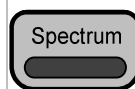


- From the side menu, press once on the *Average* button to toggle this trace option to *On*. Use the *VARIABLE* knob to change the number of sweeps the average will be based on. Press again to toggle it to *Off*.



Range 2 to 512


- Press the *Reset Spectrum Traces* button to clear all current active traces on the screen and then restart the spectrum calculation process.

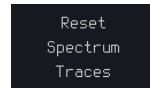

Note

The four different trace types can be activated at the same time, allowing a quick comparison for the maximum, minimum and averaged spectrum magnitude of the underlying signal.

Example


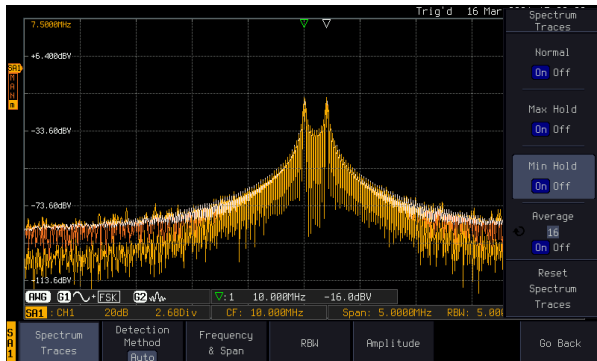

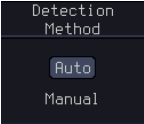
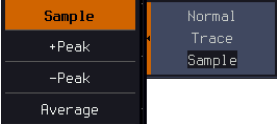




Setting the Detection Method


Background

Each time the Spectrum Analyzer samples data, a number of samples are usually taken for each point to display, known as a sample bucket. The actual value of each point is determined by the detection method.

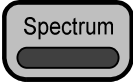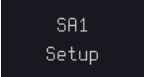Each trace type (Normal, Max and Min Hold, Average) can use a different detection method.

- Panel Operation
1. Press the *Spectrum* key to enter the Spectrum Analyzer menu. 
 2. Press the SA1 setup or SA2 setup to enter the trace setting. 
 3. Press the *Detection* button from the bottom menu. 
 4. By default, the detection method is set to *Auto*. When selected, the analyzer automatically chooses a detection method suitable for each type of trace. 
 5. Press the button *Auto/Manual* once to toggle the detection method to *Manual* and be able to fine tune the detection method for each type of trace. Press the *Auto/Manual* button once more to toggle it back to *Auto*.
 6. Press on the *Normal Trace* button to see a list of detection options. Use the *VARIABLE* knob and the *Select* key to select one. 
 7. Repeat the same operation for the *Max Hold Trace* button. 
 8. Repeat the same operation for the *Min Hold Trace* button. 


- Repeat the same operation for the *Average Trace* button.

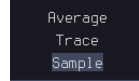

Configuring the Frequencies and Span

Center Frequency The Center Frequency function sets the center frequency. The display will be centered on this frequency.


- Panel Operation**
- Press the *Spectrum* key to enter the Spectrum Analyzer menu.

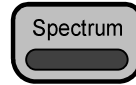


- Press the SA1 setup or SA2 setup to enter the trace setting.



- Press the *Freq & Span* button to enter the frequencies and span menu.

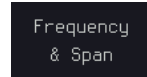


- Press the *Center* button to display a list of frequencies step-resolution.

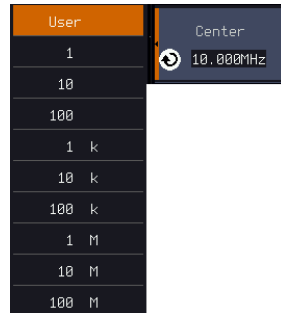


the *VARIABLE* knob can be used to select one. Press again on the *Center* button; the *VARIABLE* knob can now be used to set the frequency in increments of the chosen step resolution.

- Or use the numerical keypad to input value.

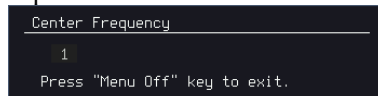


Press *Go Back* to return to the previous menu and validate the user-defined value.

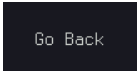

Range 0 Hz to 2.5 GHz


Span The Span function sets the frequency range of the sweep. The sweep will be centered around the center frequency.

Panel Operation 6. Press the *Span* button to display a list of frequencies step-resolution.

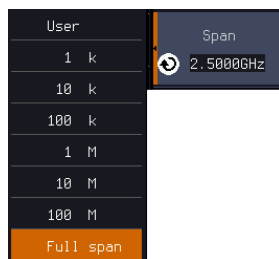


The *VARIABLE* knob can be used to select one. Press again on the *Span* button; the *VARIABLE* knob can now be used to set the frequency in increments of the chosen step resolution.

7. Or use the numerical keypad to input value.

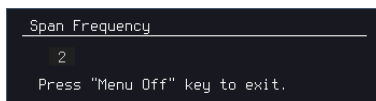

8. Press *Go Back* to return to the previous menu and validate the user-defined value.

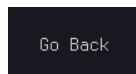

Range 1 kHz to 2.5 GHz

Start and Stop Frequencies The Start and Stop frequencies can also be used to specify the span frequency.




Note

The Start and Stop frequencies are automatically adjusted when configuring the Center and the Span. Conversely, configuring the Start and Stop frequencies will automatically configure the Center and the Span.


The Stop frequency must always be higher than the Start frequency. As a consequence, when one crosses the other's value, the Start or Stop frequency will automatically be adjusted to the next highest/smallest step.

Panel Operation 9. Press the *Start* or *Stop* button to display a list of frequencies step-resolution.


The *VARIABLE* knob can be used to select one. Press again on the *Start* or *Stop* button; the *VARIABLE* knob can now be used to set the frequency in increments of the chosen step resolution.

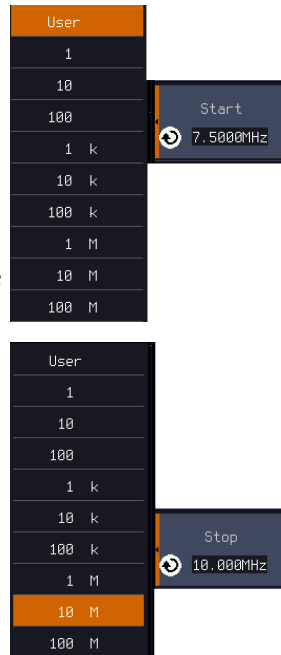

10. Use the numerical keypad to input value.

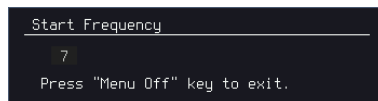

Press *Go Back* to return to the previous menu and validate the user-defined value.

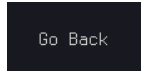

Range Start: 0 Hz to 2.4999 GHz
 Stop: 500 Hz to 2.5 GHz

Peak to center

Pressing this button will set the frequency location of the spectrum peak as the new center frequency of the Spectrum Analyzer.





Configuring the Bandwidth

Background

The bandwidth menu gives the possibility of configuring the resolution bandwidth as well as the type of window used for the spectral analysis.

Panel Operation

1. Press the *Spectrum* key to enter the Spectrum Analyzer menu.
2. Press the SA1 setup or SA2 setup to enter the trace setting.
3. Press the *RBW* button to enter the bandwidth menu.
4. The resolution bandwidth can be set automatically according to a configurable ratio defined between the span and the frequency resolution. To choose that option, set the *RBW Mode* button to *Auto*, press on the *Span: RBW* button and tune the ratio using the *VARIABLE* knob.

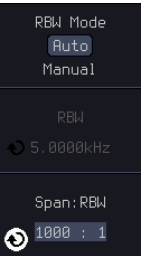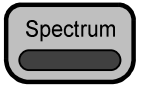


Range 5,000 : 1 to 1,000 : 1

- Alternatively, set the *RBW Mode* button to *Manual* to manually configure the frequency resolution.




- Press the *RBW* button to select the RBW frequency. the *VARIABLE* knob can be used to select.

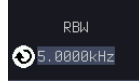

Window type

The type of window used for spectrum analysis can be chosen. Each window type is characterized by making a tradeoff between the frequency resolution and the amplitude accuracy. Please see the note below.

- Press the *Window* button and change the window type using the *VARIABLE* knob. Press again the *Window* button to confirm the change.

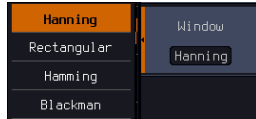

Note

Hanning and Hamming windows are both good to analyze periodic signals. The rectangular window is more suitable for single shot phenomenon. The Blackman window is most suitable for amplitude measurement on periodic signals. Please refer to the Section “Math operations”, paragraph “FFT Overview” on page 66 and 68 for more details.



Configuring the Amplitude

Background


The vertical scale and the zero reference position can be configured in this menu.

Panel Operation

- Press the *Spectrum* key to enter the Spectrum Analyzer menu.
- Press the SA1 setup or SA2 setup to enter the trace setting.

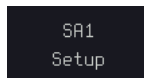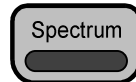

3. Press the *Amplitude* button to enter the vertical scale menu.

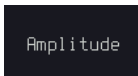

4. Choose a vertical unit by toggling the *Vertical Units* button to *dBV RMS*, *Linear RMS*, *dBm* or *dBm* using the *VARIABLE* knob.



Note


When the setting unit is dBm, connect a 50 Ohm feed through termination on BNC.

5. You can define the scale of the vertical axis by pressing on the *Unit/div* button and using the *VARIABLE* knob.



Range	1 dB to 20 dB (dBV RMS, dBm)
	2 mV to 1 kV (Linear RMS)

6. You can define the zero level position by pressing on the *Position* button and using the *VARIABLE* knob.

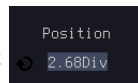

Range	-12.00 to 12.00 Div
-------	---------------------

AWG

AWG fast switch button. This button is used for user to observe the AWG waveform change easily in the spectrum after changing waveform parameters.




Display

Background

Display key allows user to select either normal spectrum display or spectrogram display, which is useful for viewing frequency or power in the time domain. Use the *VARIABLE* knob to select.


- Panel Operation 1. Press the *Spectrum* key to enter the Spectrum Analyzer menu.

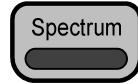

2. Press *Display* key from the side menu.



An example of both spectrum and spectrogram displaying on the LCD screen at the same time.

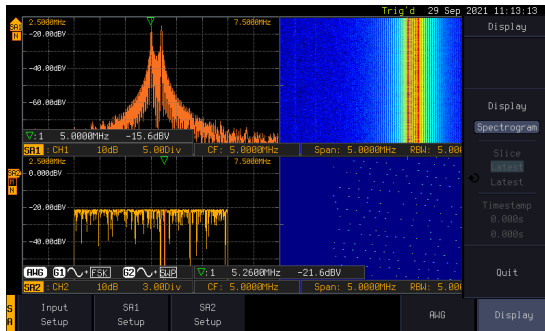


3. Choose a display mode by toggling between *Spectrum* button and *Spectrogram* button using the *VARIABLE* knob.




4. In the midst of spectrogram execution, press the *Run/Stop* key and turn the *VARIABLE* knob to observe the correlation between slice and frequency domain from the spectrogram display.




VARIABLE

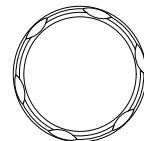

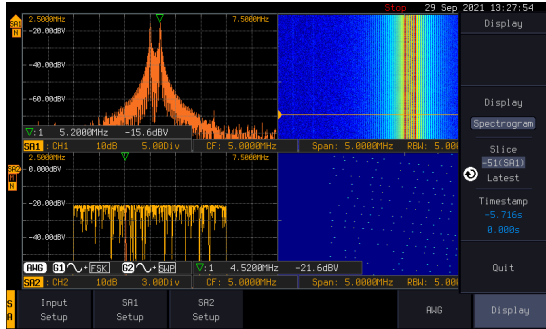


Operation

5. Press the *Run/Stop* key followed by pressing the *Slice* key and rotate the *VARIABLE* knob to observe input signal. And it's spectrogram on the same date time axis.

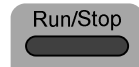


VARIABLE

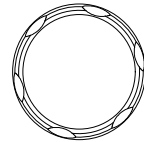

Timestamp

6. The information on the *Timestamp* displays current slice time.


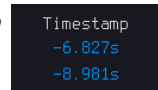


Measurement



The Spectrum Analyzer of the GDS-3000A is compatible with a certain number of measurement tools such as the search function and the use of cursors, enabling detailed analysis of the signal characteristics in the frequency domain.


Using the Search function


Background When the Spectrum Analyzer is on, pressing the *Search* key and turning on the Search function will automatically pre-configure the *Search Type* and the *Source* (respectively set to *SP Peak* and *SP*) in order to search for spectrum peaks. Please also note that it is not possible to search for spectrum peaks if the Spectrum Analyzer Option is not on.

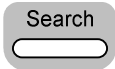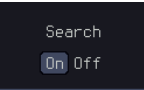- Panel Operation**
1. When the Spectrum Analyzer is on, press the Search key. 
 2. Press the *Search* button from the bottom menu to turn the Search function on. 
 3. Configure the Search Method by pressing the *Method* button from the bottom menu and choose between two methods:


Max Peak: search for a defined number of peaks. Threshold: search for peaks above a defined threshold level.

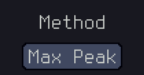

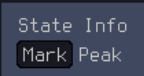 4. You can configure the Event state display by toggling the State Info button either to Mark or to Peak.

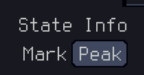Mark: displays the overall number of peaks and the current active peak. 

Peak: gives frequency and level details of the current active peak. 

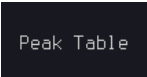5. Press on the Peak Table button from the bottom menu to examine all the searched spectrum peaks in a tabulated form or save it as files on an external USB drive.


 Peak Table


Note

For more details about the Search function, please refer to the section “Search” on page 177 for more details.


Using the Cursors

Background Horizontal and vertical cursors can be used together with the Spectrum Analyzer.

Panel Operation 1. When the Spectrum Analyzer is on, press the cursor key.



2. Move the horizontal cursors along the trace to perform accurate measurement of frequency and level. Use the horizontal cursor to further measure points of interest in both absolute and delta values.

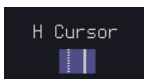

Note

For more details about the *cursor* function, please refer to the section “Cursor” on page 59 for more details.

Use the Save / Recall menu to save the spectrum data as a CSV file in SA mode, but you can't recall the file to the screen.

A APPLICATIONS

Introduction.....	313
Overview.....	313
Running Applications.....	314
Go-NoGo application.....	316
DVM application.....	321
Data Log application.....	323
Digital Filter application.....	325
Mask application.....	327
Select the source channel.....	327
Configure the mask violation.....	328
Auto Mask.....	329
User Defined Mask/ Create Mask.....	332
User-defined Mask File Format.....	336
FRA application.....	338
Connections.....	339
Launching the FRA application.....	340
Setting mode.....	340
FRA Run.....	341

Introduction

Overview

Background The Application (APP) function allows different software applications to be run. The GDS-3000A comes pre-installed with a number of apps, as described below. Please see your local GW Instek distributor for the latest information on new apps.


Included Applications	Go/No-Go	The Go/No-Go application can be used to set threshold boundaries for input signals. Go/No-Go tests to see if a waveform will fit inside a user-specified maximum and minimum amplitude boundary (template).
	DVM	The DVM application displays a digital voltage meter readout that floats on the top left-hand side of the screen.
	Data Log	The Data Log app will log waveform data and/or screenshots at set intervals for set duration of time.
	Digital Filter	Adds a digital low, high or band pass filter to any of the input channels. Each filter can have a user-defined cutoff frequency set.
	Frequency response analyzer	The Frequency Response Analyzer (FRA) is a feature application for digital storage oscilloscope with an integrated arbitrary waveform generator.

Mask	Create shape templates for signal comparison.
Mount Remote Disk	This app allows the scope to mount a network share drive.
Demo	The Demo app, when combined with the GDB-03 demo board, allows the scope to trigger a number of different signals from the demo board.


Running Applications

Background The GDS-3000A comes pre-installed with a number of apps which can be activated from a dedicated menu.

- Panel Operation**
1. Press the *APP* key.
 2. Press *APP* from the bottom menu.
 3. Scroll through each application using the *VARIABLE* knob.

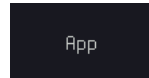


VARIABLE

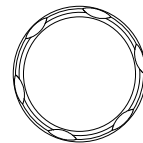



4. Select an application by pressing the *Select* key *twice*.

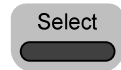


×2

Go-NoGo application

Background

The Go-NoGo test checks if a waveform fits inside a user-specified maximum and minimum boundary. Boundary templates are automatically created from a source channel. Boundary tolerances and violation conditions can be set.

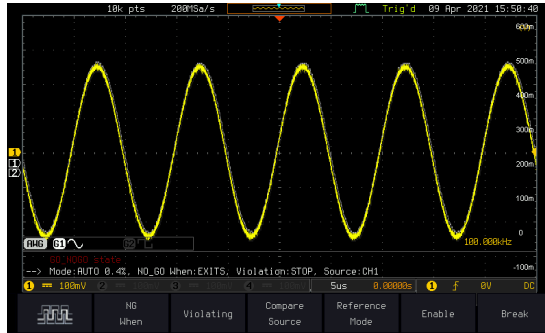


Choose the Go_NoGo application from the APP menu. See page 314.



Set Go-NoGo Conditions

Select the Go-NoGo conditions (NG When) and actions when a Go-NoGo condition has been met (Violating).

1. Press *NG When* from the bottom menu and select the NoGo conditions:

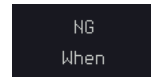








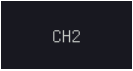
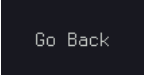

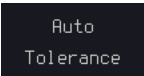
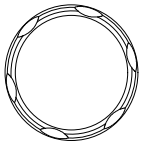
Enter: Sets the NoGo condition to when the input signal stays within the limit boundary.



Exit: Sets the NoGo condition to when the input signal exceeds the limit boundary.

2. Press *Go Back* to return to the previous menu.

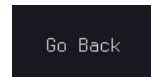

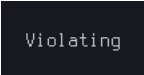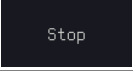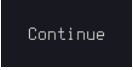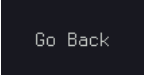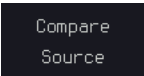Set Go-NoGo Actions	3. Press <i>Violating</i> to set what action to perform when a signal violates the Go-NoGo conditions.	
	 The waveform stops when the conditions are violated.	
	 Ignore violations and continue to monitor the signal. Each violation is counted.	
	4. Press <i>Go Back</i> to return to the previous menu.	
Set Go-NoGo Source	5. Press <i>Compare Source</i> from the bottom menu to set the Go-NoGo boundary source.	
	 Sets CH1 as the source.	
	 Sets CH2 as the source. There are up to four channels.	
	6. Press <i>Go Back</i> to return to the previous menu.	
Set Boundary Tolerance	7. To set the Go-NoGo boundary tolerance, press <i>Reference Mode</i> .	
Auto Tolerance	8. To set the boundary tolerance as a percentage offset from the source waveform, press <i>Auto Tolerance</i> and use the <i>VARIABLE</i> knob.	
		
	Offset	0.4 % to 40 % (0.4 % steps)


Maximum and Minimum Position	9. To manually set the template tolerance, press <i>Minimum Position</i> or <i>Maximum Position</i> and use the <i>VARIABLE</i> knob to set the absolute minimum or maximum position.	<div style="background-color: #333; color: #fff; padding: 5px; margin-bottom: 10px; text-align: center;">Minimum Position</div> or <div style="background-color: #333; color: #fff; padding: 5px; margin-top: 10px; text-align: center;">Maximum Position</div>
------------------------------	---	---

Range Voltage division range


Save Boundary Template	10. Press <i>Save Operation</i> to save the tolerance boundaries.	<div style="background-color: #333; color: #fff; padding: 5px; text-align: center;">Save Operation</div>
	11. The Maximum Position tolerance will be saved to reference waveform R1, and the Minimum Position tolerance to R2.	
	12. Press <i>Go Back</i> to return to the previous menu.	<div style="background-color: #333; color: #fff; padding: 5px; text-align: center;">Go Back</div>

Start Go-NoGo Press *Enable* to start the Go-NoGo test. Then the Enable button will change to Disable. Pressing *Disable* will stop the Go-NoGo test and toggle the button back to Enable.

If the Violating setting was set to Stop, press *Enable* to restart the test after it has stopped.

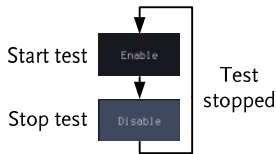


Results When Go-NoGo is running, the violation/test ratio is displayed in the bottom left-hand corner. The first digit represents the number of violations, and the right hand digit represents the number of tests.

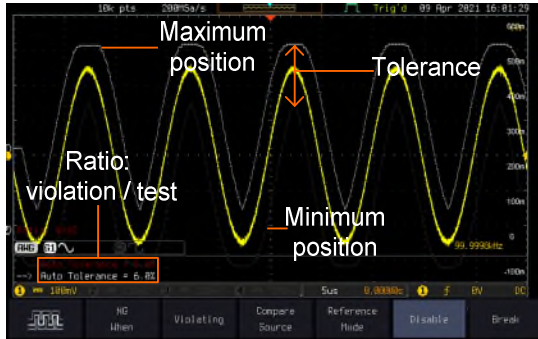

Exit the Application

To exit the application, press *Break*.

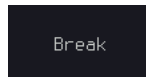

Note

After you exit the Go/NoGo app, the boundary templates that were saved to R1 & R2 reference waveforms will still be turned on. See page 365 to turn the reference waveforms off.


Using the Go-NoGo Output

To output the Go-NoGo results to an external device, the Go-NoGo rear panel terminal (open collector) can be used. The Go-NoGo terminal will output a positive pulse each time a NoGo violation has occurred for a minimum of 500 us. The voltage of the pulse depends on the external pull-up voltage.


Go/No Go



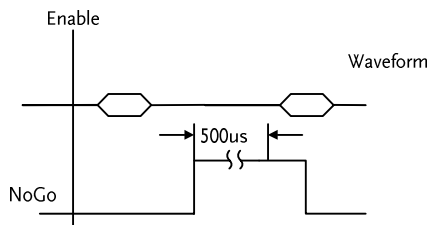


Timing Diagram

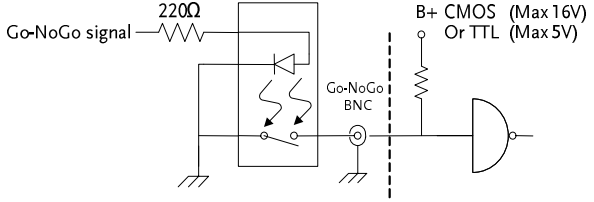

Circuit Diagram



Set Source	<p>1. Press <i>Source</i> and select the source channel for the DVM. The probe type setting (voltage or current) determines whether the function acts as a digital voltmeter or as a digital current meter for the selected source. See page 111 to set the probe type.</p>	
Source CH1 to CH4		
Mode	<p>The Mode setting determines the measurement mode for the meter.</p> <p>2. Press <i>Mode</i> and select the mode.</p>	
Mode AC RMS, DC, DC RMS, Duty, Frequency		
Turn On/Off	<p>3. Press <i>DVM</i> and toggle DVM on. The DVM app will remain running in the background even if other functions are turned on.</p>	

Data Log application


Background

The Data Log app will log the current waveform data or screenshot at set intervals for a set duration of time.

Basic Features:


- Log up to 1000 hours of images or waveform data.
- The minimum interval is 2 seconds, or 5 seconds, and the Interval time needs to be lengthened because of the longer memory length. If you use the USB flash drive to store data, it may require a longer interval which depends on the storing data speed of the USB flash drive.

Example

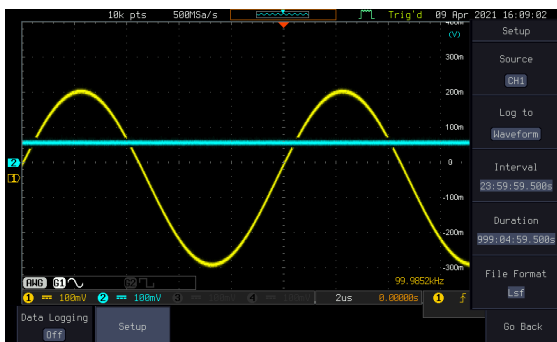


Panel Operation


Choose the Data Log application from the APP menu. See page 314.

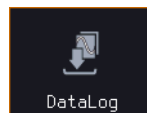

1. Press *Setup*.

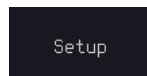


2. Press *Log to* from the side menu and select what type of data to log, waveform data or screenshots.

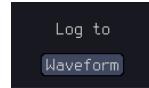


Log to Image, Waveform

3. Press *Source* from the side menu and select a source channel to log if waveforms are to be logged.

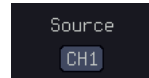


Source CH1 to CH4, All Displayed

4. Press *Interval* and set the logging interval time.

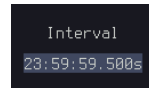

Interval Data: 2 sec to 23 h 59 m 59.5 s
 Image: 5 sec to 23 h 59 m 59.5 s

5. Press *Duration* and select the logging duration time.

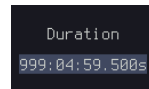


Duration 5 sec to 999 h 59 m 59.5 s

6. From the bottom menu, press *File FORMAT* and set the save file format. See the Save/Recall chapter (page 367) for details.

Turn On/Off

7. Press *Data Logging* from the bottom menu and toggle Data Logging on.

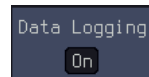

The data/images will be saved to the designated file path when Data Logging is turned on.

Digital Filter application


Background

The Digital Filter app is a digital high, low, band pass filter with a selectable cutoff frequency. The digital filter can be applied to analog channel individually or together using the tracking functionality.

Basic Features:

- High, low, band pass filtering of analog channels.
- Selectable cutoff frequencies.
- Tracking function

Example

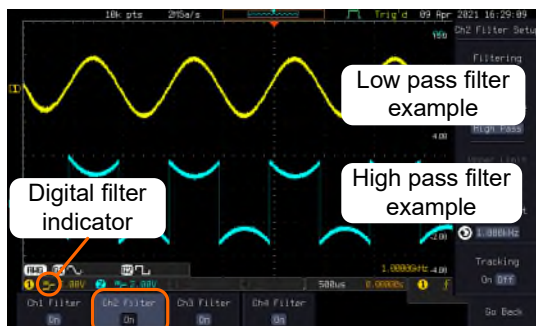


Digital filter
type or status

CH1 input: 2 Vpp 1 kHz square wave, low pass filter with 1 kHz cutoff frequency.

CH2 input: 2 Vpp 1 kHz square wave, high pass filter with 1 kHz cutoff frequency.

Panel Operation

Choose the Digital filter application from the APP menu. See page 314.

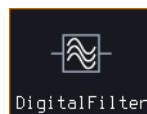

Set Source


1. Select a source channel by pressing *Ch1 Filter*, *Ch2 Filter* and for 4-channel model, *Ch3 Filter*, *Ch4 Filter*.



2. From the side menu press *Filtering* and turn on.




3. Press *Filter Type* and select low, high, or band pass filter.

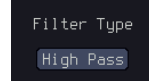

Type	Low Pass, High Pass, Band Pass
------	--------------------------------

4. If Low Pass was selected, press *Upper Limit* to set the low pass cutoff frequency. Likewise if High Pass was selected, press *Lower Limit* to set the high pass cutoff frequency. Only one option will be available at a time.

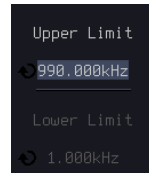


Upper Limit	1 Hz to 0.495 x sampling frequency
-------------	------------------------------------

Lower Limit	1 Hz to 0.495 x sampling frequency
-------------	------------------------------------

Tracking

5. Press *Tracking* if you want the settings of the digital filter on each channel to be the same. When a setting is changed on one channel, it is reflected on the other channels.

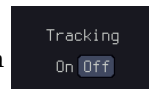


Note

The digital filter settings will still apply to the relevant input signals after leaving the app, unless turned off.

Mask application


Background The Mask application allows the user to create shape templates for easy comparison of an input signal with a defined shape.

Panel Operation Choose the Mask application from the APP menu. See page 314.

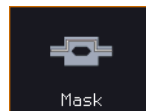

Select the source channel



Step 1. Press the *Compare Source* button from the bottom menu.

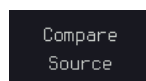

2. Press the CH1 button from the side menu and use the *VARIABLE* knob to select a source channel (CH1, CH2 for 2 channels models; CH3 CH4 for 4 channels models) as a compare source.




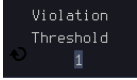
VARIABLE

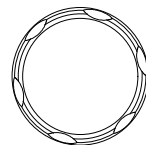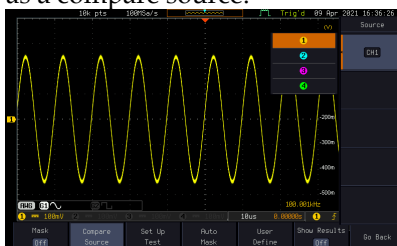


Configure the mask violation


- Step
1. Press the *Set up test* button from the bottom menu.


 2. Press *Violating Threshold* to set the number of violations that can occur before a test status is considered.



 3. Press *Stop After Time* to set the test to stop after a set amount of time elapses.





Range 1 s to 172,800 s (infinite)
 4. Press *stop After Waveform* to set the test to stop after a set number of waveforms.




Range 1 to 1,000,000 (infinite)
 5. Press *Select Action* to set how the oscilloscope responds to test failure. User can set multiple actions as shown in the figure below.

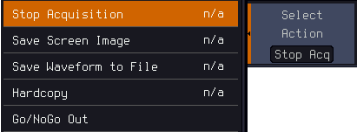
 6. Press *Action on Failure On/Off*. The above setting will be executed only when Failure On or Off occurs.

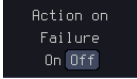
 7. Press *Action on Test Completion On/Off*.

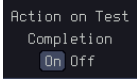

- Press "Go/NoGo Out" option to set how the oscilloscope will respond to test completion.

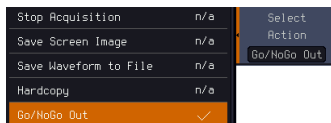

- Press *Pre-Test Delay* to set a delay before starting a test.



- Press *Repeat on Completion (On/Off)* to set on for the test to repeat when it has run the minimum number of waveforms or the minimum amount of time




Set off for the test to run a single time and not repeat.


Auto Mask

Step

- Press the *Auto Mask* button from the bottom menu to create a mask shaped out from an existing waveform.
- Press the *Reference Source* button from the side menu to select the pattern the mask will be shaped on.

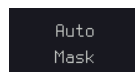


- Use the *VARIABLE* knob to select the reference source (CH1 or CH2 for 2 channels model; CH3 or CH4 for 4 channels model).

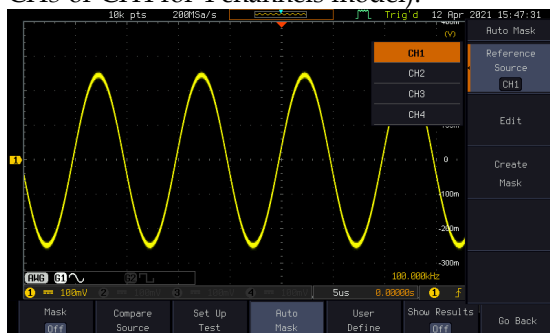


- Press the *Edit* button from the side menu if you want to further adjust the mask pattern. Otherwise, go to step 9 below to create the mask directly without adjustment.

Edit
- Press the *Unit* button from the side menu and use the *VARIABLE* knob to select either *Divisions* (graticule division fractions) or *Current* (X or Y axis actual scale units) as the units to set the mask deviation from its original pattern.

- Press the *X Mask* button from the side menu and use the *VARIABLE* knob to adjust the horizontal deviation of the mask compared to its original pattern.

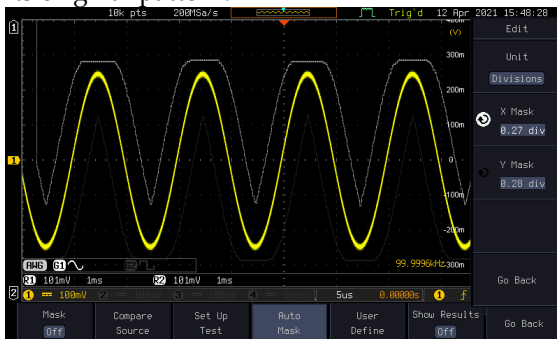

- Press the *Y Mask* button from the side menu and use the *VARIABLE* knob to adjust the vertical deviation of the mask compared to its original pattern.

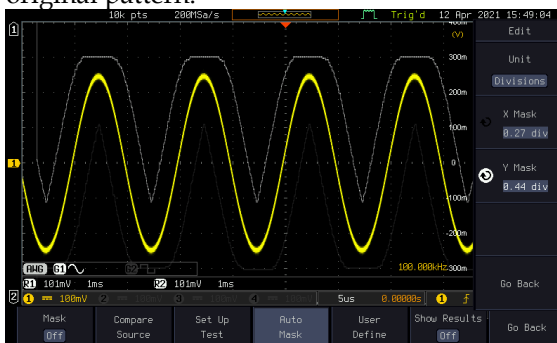


- Press the *Go Back* button from the side menu.

Go Back

- Press the *Create Mask* button from the side menu.

Create
Mask


A mask is created (as shown in the below diagram) and can now be used.

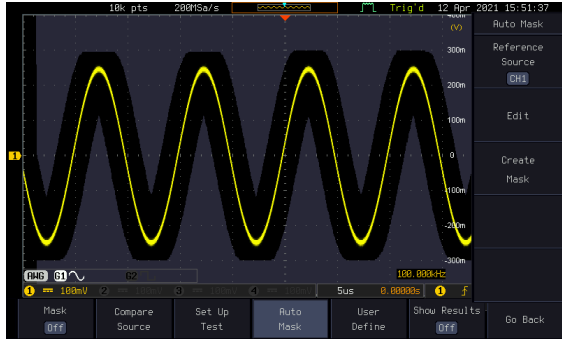

10. Press the *Auto Mask* button from the bottom menu to close auto mask function.



11. Press the *Mask ON* button from the bottom menu to execute the mask function and start comparing the source channel (set in the compare source menu) with the mask.

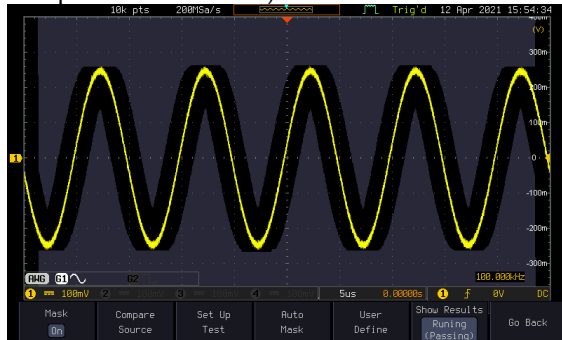


User Defined Mask/ Create Mask


Background

A user-defined mask can be created. Up to 8 areas of any form, each made of up to 10 points, can be built out and juxtaposed to each other to form the user-defined mask pattern.


Step

1. Press the *User Define* button from the bottom menu.

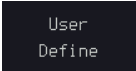

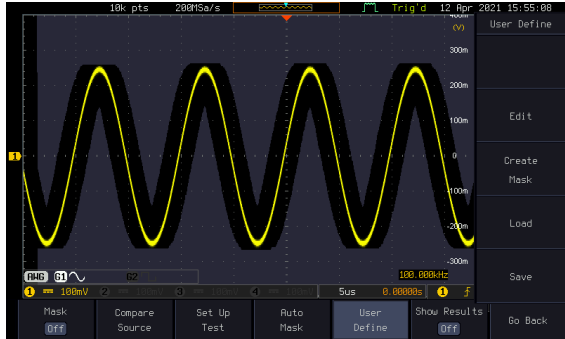


2. Press the *Edit* button from the side menu.

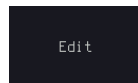


Create an area

3. Press the *Area Number* button from the side menu and use the *VARIABLE* knob to select 1 out of 8 areas that can be created to build the mask pattern and start to shape it.

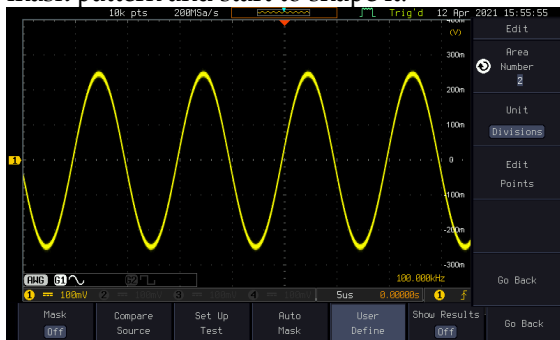


4. Press the *Unit* button from the side menu and use the *VARIABLE* knob to either select *Divisions* (graticule division fractions) or *Current* (Actual oscilloscope X- and Y-axis scale units) as the points position units.

5. Press the *Edit Points* button from the side menu to start shaping the pattern of the area you selected.

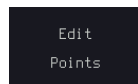

- Edit the first point 6. Press the *Points Number* button from the side menu and use the *VARIABLE* knob to select the first point that will shape the area pattern. Up to 10 points can form an area pattern.
7. Press the *Points Number ON* button from the side menu to activate the point.
 8. Press the *Y Mask* button from the side menu and use the *VARIABLE* knob to adjust the vertical position of the point (Y-axis).
 9. Press the *X Mask* button from the side menu and use the *VARIABLE* knob to adjust the horizontal position of the point (X-axis).

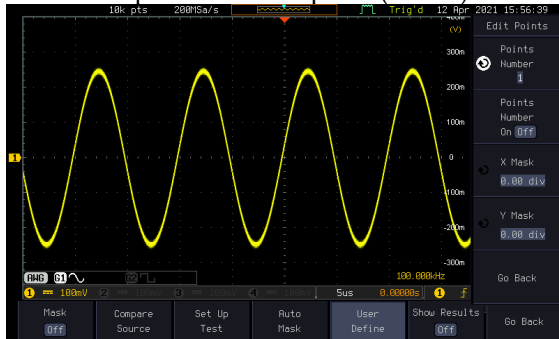

Edit the other points


10. Repeat the above steps 6 to 9 to add other points to the area and until you finalize the shape of this first area. Then press the *Go Back* button to exit the Edit Points menu.

Create other areas 11. Repeat the above steps for as many areas as you need to create your mask pattern.


12. Press the *Go Back* button again from the side menu.

Go Back

13. Press the *Create Mask* button from the side menu.

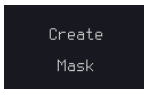


A user-defined mask is created (as shown in the below diagram) and can now be used.

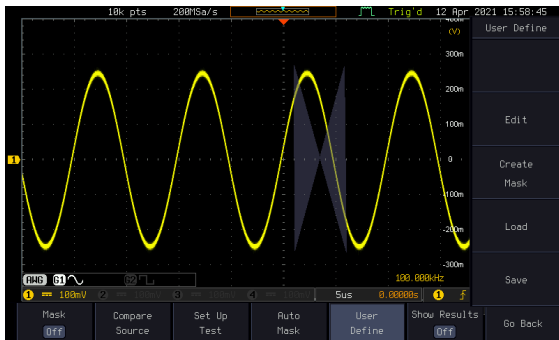


Save the user-defined mask

14. Press the *Save* button from the side menu.

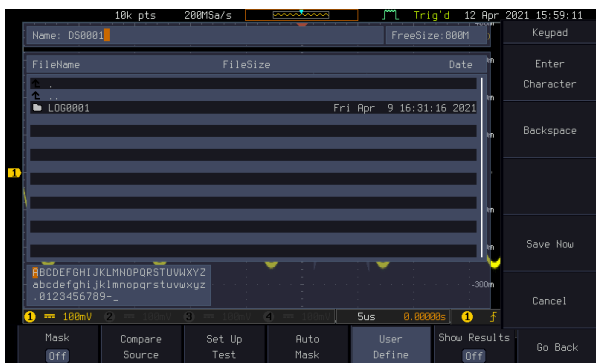

15. Use the *VARIABLE* knob and the select key to change the name of the file if needed and press the *Save Now* button from the side menu to save the user-defined mask.

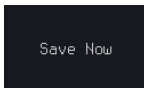

Load a user-defined mask

16. From the User Define menu, you can also load an existing mask. Press the *Load* button from the side menu, use the *VARIABLE* knob to select the file, and press the *Select* key twice to load the mask.



User-defined Mask File Format

Background

The user-defined mask files can be created out of support (from an external computer for example) and uploaded to the GDS-3000A Mask application with a USB flash disk.

Create an unformatted text file respecting the format described below.

File extension

File_name.MSK

Format


Format (XX: version number)
 Total Area Number,1,
 Area Number,1,
 Points Number,3,
 0.00,2.00,
 1.00,1.00,
 -1.00,1.00,

Example (with Division units)	Format (XX: version number) Total Area Number,2, Area Number,1, Points Number,4, 0.00,2.00, 1.00,1.00, 0.00,0.00, -1.00,1.00, Area Number,2, Points Number,3, 0.00,-2.00, 1.00,-1.00, -1.00,-1.00,
-------------------------------------	--


FRA application

Background The Frequency Response Analyzer (FRA) is a feature application for digital storage oscilloscope with an integrated arbitrary waveform generator. It can plot gain and phase responses at the output of a device-under-test (DUT) when its input is excited by a frequency-swept sinusoidal signal. Bode plots can be created, stored for future reference and analyzed. The FRA application uses the output of the Arbitrary Wave Generator (AWG) to generate the frequency-swept signal.

- Functions**
- Bode plots.
 - Stores plots for future use and analysis.
 - Precise analysis of the measured data in a plot with the aid of cursor measurement.
 - Amplitude profile implemented along with independent interpolation control for all test frequency bands.

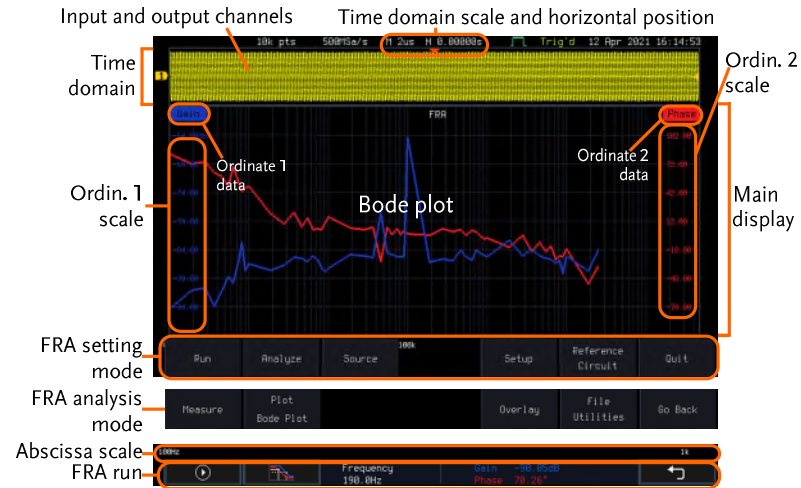

Introduction The FRA application is divided into two main operation modes: Setting and Analysis mode.

When in Setting mode (the  menu icon appeared), the user can setup the FRA analysis and then start it right after the FRA Run button is pressed.


Time domain When the FRA application is in Setting mode, the top portion of the display window shows time-domain waveforms of the input and the output channel. This window disappears when in Analysis mode.


Main display In either mode, the FRA main display shows a Bode plot with corresponding abscissa and ordinates scales.

Connections

Background The FRA application uses two analog channels of the DSO as well as the GEN1 output of the Arbitrary Wave Generator (AWG).

- Connection**
1. Connect the AWG output GEN1 to the input of the Device-Under-Test (DUT).
 2. Connect one DSO analog channel to the input of the DUT.
 3. Connect the output of the DUT to another DSO analog channel.


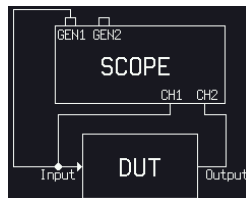


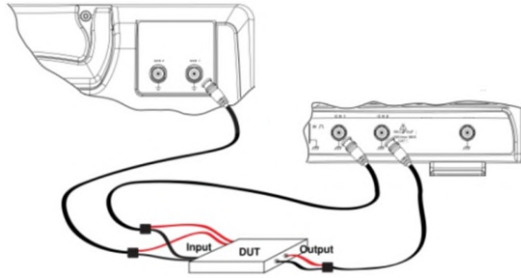

Launching the FRA application

Background The FRA application is launched from the *APP* menu.

- Panel Operation**
1. Press the *APP* key.
 2. Press the *APP* button from the bottom menu.
 3. Scroll through the applications using the *VARIABLE* knob until the FRA application is highlighted.
 4. Launch the FRA application by pressing the *Select* key twice.

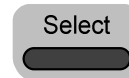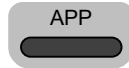

×2

Setting mode

In Setting mode (*FRA Run* button appeared), the user can define the sources and setup the frequency-swept sinusoidal signal generated by the AWG. In addition, FRA data acquisition is launched from this mode.

FRA Run

Background Once the FRA application is fully setup and the DUT is correctly connected, data can be acquired by pressing the *Run* button.



Note


Please be aware that the total time required for measuring the frequency response may vary according to your setup, e.g. the number of points per decade or when sweeping at lower frequencies.

Please note that the FRA application only allows a DSO record length of 10,000 points.


Panel operation

1. In Setting mode (*FRA Run* button appeared), press the *FRA Run* button to start the frequency response analysis.



2. The data acquisition will stop automatically when the stop frequency is reached. The  button is then toggled back to STOP and the data is ready for analysis.




If the user needs to cancel an ongoing FRA measurement, the  button can be pressed.

3. Using the second *Analyze menu* button will switch to the Analysis mode. Details regarding this mode will be explained in later sections.



4. Press the icon to return to the upper-level menu.

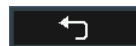

Source

Please refer to section “Source” on page 276.

Setup amplitude profile

Please refer to paragraph “Setup amplitude profile” on page 276.

Setup AWG

Please refer to paragraph “Setup AWG” on page 278.

Quit

Please refer to paragraph “Quit” on page 280.

Analysis mode

Please refer to section “Analysis mode” on page 280.

Measure

Please refer to paragraph “Measure” on page 280 .

Bode Plot

Please refer to paragraph “Bode Plot” on page 281.

Overlay

Please refer to paragraph “Overlay” on page 283.

File Utilities

Please refer to paragraph “File Utilities” on page 284.

SAVE/RECALL

File Format/Utility	344
Image File Format.....	344
Waveform File Format.....	344
Spreadsheet File Format.....	345
Setup File Format.....	347
Create/Edit Labels	350
Save	353
File Type/Source/Destination.....	353
Save Image.....	353
Save Waveform.....	356
Save Setup.....	358
Recall.....	360
File Type/Source/Destination.....	360
Recall Default Panel Setting.....	360
Recall Waveform	362
Recall Setup	363
Reference Waveforms.....	365
Recall and Display Reference Waveforms	365

File Format/Utility

Image File Format

Format	*.bmp or *.png
Default Filename	DSxxxx.bmp/png
Contents	The display image is 800 by 480 pixels. The background color can be inverted (Ink saver function). Each image file is saved to the current file path as a bitmap or PNG file.

Waveform File Format

Format	DSxxxx.lsf, CH1 to CH4.lsf
	The LSF file format efficiently stores waveforms. This is the file format used for storing and recalling all waveforms that are used with the GDS-3000A series.
Filename	DSxxxx.lsf
Waveform Type	CH1 to CH4 Input channel signal
	REF Reference waveform
	Math Math operation result (page 66)
Storage Location	Wave1 to Wave20 Waveform files stored to the internal memory. Stored waveforms can transfer to Ref1/Ref2/Ref3/Ref4 which can be viewed on the display. (W1 to W20 waveforms cannot be directly recalled on the display).
	Ref1 to Ref4 Reference waveforms stored in the internal memory, separate from W1 to W20. Reference waveforms (Ref1 to Ref4) can be displayed directly onto the display with amplitude and frequency information. Ref 1 to Ref4

are useful for reference purposes. Other waveforms (LSF and W1 to W20) must be recalled to Ref1 to Ref4 before being displayed.

Contents: The waveform data can be used for detailed
Waveform Data analysis. It consists of the horizontal and vertical data used by the waveform.

Spreadsheet File Format

Format *.csv (Comma-separated values format, can be opened in spreadsheet applications such as Microsoft Excel).

CSV-formatted files can be stored in either a short-memory format or a long-memory format: Detail CSV, Fast CSV. The number of points that are saved depends on the record length settings.

Detail CSV will record both the horizontal and vertical sample points of the waveform. All the points are recorded in scientific notation for analog data.

Fast CSV will only record the vertical amplitude of the sample points. Fast CSV also contains data that enables the horizontal data points to be reconstructed, such as trigger position, etc. Data is recorded as integers.

Note, however, that only fast CSV can be recalled to the internal memory. Detailed CSV cannot be recalled.

Filename DSxxxx.csv

Waveform Type CH1 to CH4 Input channel signal
Ref1 to Ref4 Reference waveform
Math Math operation result (page 66)
All Displayed All the waveforms on the display.

Contents: The following information is included in the Fast
Fast CSV CSV waveform files, where applicable:

- Format (scope type)
- Input distance (input trigger distance)
- Trigger level
- Vertical units
- Vertical units extend div
- Probe type
- Vertical scale
- Horizontal units
- Horizontal position
- Sinc ET mode (sampling mode)
- Horizontal old scale
- Firmware
- Mode
- Memory length
- Trigger address
- Source
- Vertical units div
- Label
- Probe ratio
- Vertical position
- Horizontal scale
- Horizontal mode
- Sampling period
- Horizontal old position
- Time
- Raw vertical waveform data

Contents: Detail CSV waveform data contains channel
Detail CSV information such as vertical and horizontal position of a signal for all the recorded points. The following information is included in Detail CSV, where applicable:

- Format (scope type)
- Input distance (input trigger distance)
- Trigger level
- Vertical units
- Memory length
- Trigger address
- Source
- Vertical units div

- Vertical units extend div
- Probe type
- Vertical scale
- Horizontal units
- Horizontal position
- Sinc ET mode (sampling mode)
- Horizontal old scale
- Firmware
- Mode
- Horizontal data
- Label
- Probe ratio
- Vertical position
- Horizontal scale
- Horizontal mode
- Sampling period
- Horizontal old position
- Time
- Raw vertical waveform data
- Vertical data

Setup File Format

Format DSxxxx.set (proprietary format)
 The setup file saves or recalls the following settings.

Contents	Acquire	<ul style="list-style-type: none"> • Mode • Sample rate • XY 	<ul style="list-style-type: none"> • Sample mode • Record Length
	Display	<ul style="list-style-type: none"> • Mode • Persistence • Waveform intensity • Graticule intensity 	<ul style="list-style-type: none"> • Backlight intensity • Graticule • Backlight • Auto-dim

Channel	<ul style="list-style-type: none"> • Scale • Channel • Coupling • Impedance • Invert • Bandwidth 	<ul style="list-style-type: none"> • Expand • Position • Probe • Probe attenuation • Deskew
Cursor	<ul style="list-style-type: none"> • Horizontal cursor • H Unit 	<ul style="list-style-type: none"> • Vertical cursor • V Unit
Measure	<ul style="list-style-type: none"> • Source • Gating • Statistics 	<ul style="list-style-type: none"> • Display • High-Low • Reference levels
Horizontal	<ul style="list-style-type: none"> • Scale 	
Math	<ul style="list-style-type: none"> • Source1 • Operator • Source2 	<ul style="list-style-type: none"> • Position • Unit/Div • Math Off
FFT Math	<ul style="list-style-type: none"> • Source • Vertical Units • Window 	<ul style="list-style-type: none"> • Vertical position • Horizontal position
Advanced Math	<ul style="list-style-type: none"> • Expression • VAR1 • VAR2 	<ul style="list-style-type: none"> • Position • Unit/Div
Trigger	<ul style="list-style-type: none"> • Type • Source • Coupling • Alternate • Rejection • Noise Rejection 	<ul style="list-style-type: none"> • Slope • Level • Mode • Trigger When • Timer • Holdoff

Utility

- Language
- Hardcopy key
- File Format
- Ink Saver
- Assign Save
- Probe Comp.

Save/
recall

- Image file format
- Data file format

Create/Edit Labels


Overview

Reference files, Setup files and the analog and digital input channels can have individual file labels set.

For the analog channels and reference waveforms, the file label can be displayed next to the channel/reference indicator.

The file labels are also used to easily identify reference files, setup files or channels when saving or recalling waveforms and setups.



Example

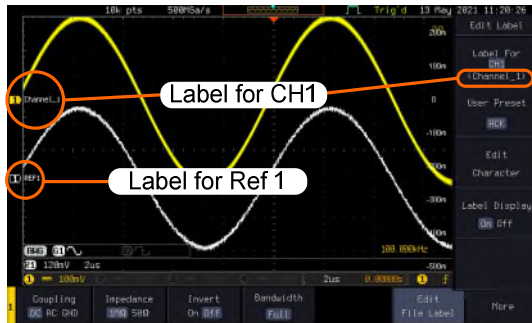

In the example above, the file label for channel 1 is displayed next to the channel indicator and is also displayed in the *Edit Label* menu. The Ref_1 label is shown next to the reference indicator.

Panel Operation

1. Press the *Save/Recall* key from the front panel.
2. Press *Edit File Label* from the bottom menu.
3. Press *Label For* and select the item that you want to create the label for.

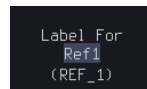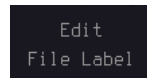

Label For CH1 to CH4, Ref1 to Ref4, Set1 to Set20, Math


- To choose a preset label, Press *User Preset* from the side menu and choose a label.



Labels ACK, AD0, ANALOG, BIT, CAS, CLK, CLOCK, CLR, COUNT, DATA, DTACK, ENABLE, HALT, INT, IN, IRQ, LATCH, LOAD, NMI

Edit Label

- Press *Edit Character* to edit the current label.

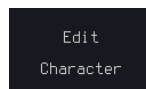


- The Edit Label window appears.



- Use the *VARIABLE* knob to highlight a character.



Press *Enter Character* to select a number or letter.

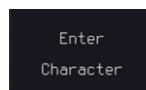

Press *Back Space* to delete a character.

A dark rectangular button with the text "Backspace" in a light gray font.

Press *Save Now* to save the label and return to the previous menu.


A dark rectangular button with the text "Save Now" in a light gray font.

To cancel the editing the label and return to the previous menu, press *Cancel*.

A dark rectangular button with the text "Cancel" in a light gray font.

Display Label

To display the currently selected file label on the screen next to its respective indicator, toggle *Label Display* to On.

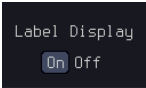A dark rectangular button with the text "Label Display" at the top. Below it is a toggle switch with a blue square containing the letter "On" and the word "Off" to its right.

Conversely, if you want to remove the currently selected file label from the display, toggle *Label Display* to Off.

Save

File Type/Source/Destination

Item	Source	Destination
Panel Setup (DSxxx.set)	<ul style="list-style-type: none"> • Front panel settings 	<ul style="list-style-type: none"> • Internal memory: Set1 to Set20 • File system: Disk, USB
Waveform Data (DSxxx.csv) (DSxxx.lsf) (CH1 to CH4.lsf, Ref1 to Ref4.lsf, Math.lsf)* ALLxxx.csv	<ul style="list-style-type: none"> • CH1 to CH4 • Math operation result • Reference waveform Ref1 to Ref4 • All displayed waveforms 	<ul style="list-style-type: none"> • Internal memory: Reference waveform Ref1 to Ref4, Wave1 to Wave20 • File system: Disk, USB
Display Image (DSxxx.bmp/png) (Axxx1.bmp/png)**	<ul style="list-style-type: none"> • Display image 	<ul style="list-style-type: none"> • File system: Disk, USB

* Stored in ALLXXXX directories when All Displayed waveforms are saved.

** Stored in ALLXXXX directories when the Hardcopy key is assigned to save Waveform, Setup or All.




Note

By default all filenames/directories are named DSxxx/ALLxxx where xxx is a number starting from 0001 and is incremented by one after each save.

Save Image

Images can be saved either using the Save/Recall key or by using the Hardcopy key. To save images using the Hardcopy key, see the hardcopy section on page 374.


Panel Operation 1. To save to USB, connect a USB drive to the front panel USB port. If a USB drive is not connected, images can still be saved to the internal memory.

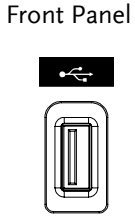

2. Press the *Save/Recall* key from the front panel.



3. Press *Save Image* from the bottom menu.

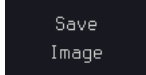


4. Press *File Format* to choose PNG or BMP file types.



Range DSxxxx.bmp, DSxxxx.png

5. Press *Ink Saver* to toggle Ink Saver On or Off.

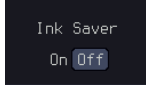


Ink Saver On



Ink Saver Off



6. Press *Save* from the side menu to save the display as an image file.

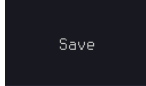


7. You will automatically be taken to a file utility where you will be able to edit the name of the file.


8. To edit the file name, use the *VARIABLE* knob to highlight a character.




Press *Enter Character* or the *Select* key to select a number or letter.

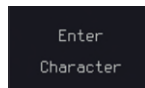

Press *Back Space* to delete a character.

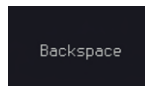

9. Press *Save Now* to save the file. The file name need not have been edited to save the file.

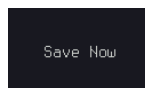


Note

Pressing *Cancel* will cancel the save operation and return you to the *Save/Recall* menu.



After *Save Now* has been pressed the file will be saved.

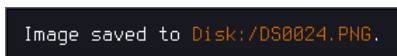


Note

The file will not be saved if the power is turned off or the USB drive is taken out before the message ends.


File Utility

To edit the internal memory or the USB flash drive contents (create/delete/rename files and folders) or to edit the default file path, press *File Utilities* from the side menu.

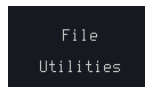


Save Waveform

Panel Operation 1. To save to an external USB flash drive, connect the drive to the front panel USB port. If a USB drive is not connected, files can still be saved to the internal memory.

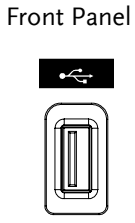


2. Press the *Save/Recall* key from the front panel.

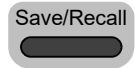

3. Press *Save Waveform* from the bottom menu.



4. Choose the *From* waveform on the side menu.

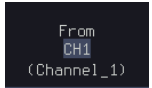

Source CH1 to CH4, Math, Ref1 to Ref4, All Displayed

5. Press *To* (internal memory) or *To File* and choose a destination to save.



To Ref1 to Ref4, Wave1 to Wave20


To File Format: LSF, Detail CSV, Fast CSV

6. Press *Save* to save the file.



7. If you are saving to a file, a file utility appears where you will be able to edit the name of the file from the default "DSXXX" filename.


8. To edit the filename, use the *VARIABLE* knob to highlight a character.

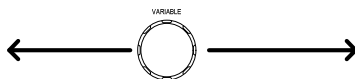

```

AB C DEFGHI JKLMNOPQRSTU VWXYZ
abc defghi jklmnopqrstuvw xyz
. 0123456789 - _
    
```


Press *Enter Character* or the *Select* key to select a number or letter.

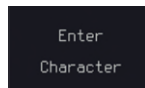

Press *Back Space* to delete a character.




9. Press *Save Now* to save the file. The filename need not have been edited to save the file.

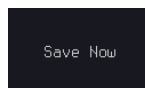

Note

Pressing *Cancel* will cancel the save operation and return you to the *Save/Recall* menu.

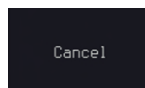

After *Save Now* has been pressed the file will be saved.

```

Waveform saved to Disk:/DS0002.CSV.
    
```




Note

The file will not be saved if the power is turned off or the USB drive is taken out before the message ends.


File Utility

To edit the internal memory or the USB flash drive contents (create/delete/rename files and folders), press *File Utilities*.

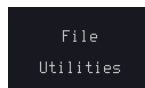


Save Setup


Panel Operation 1. To saving to an external USB flash drive connect the drive to the Front Panel drive connect the drive to the front or rear panel USB port. If a USB drive is not connected, files can be saved to the internal memory.

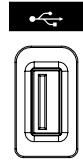

2. Press the *Save/Recall* key from the front panel.

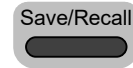

3. Press *Save Setup* from the bottom menu.

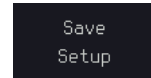


4. Press *To* (internal memory) or *To File* and choose a destination to save to.



To Set1 to Set20

To File DSxxxx.set

5. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.

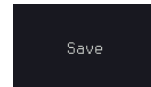


6. If you are saving to a file, a file utility appears where you will be able to edit the name of the file from the default "DSxxxx" filename.


7. To edit the filename, use the *VARIABLE* knob to highlight a character.




Press *Enter Character* or the *Select* key to select a number or letter.

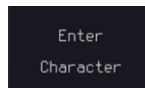

Press *Back Space* to delete a character.

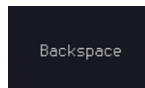

8. Press *Save Now* to save the file. The filename need not have been edited to save the file.

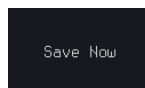


Note

Pressing *Cancel* will cancel the save operation and return you to the *Save/Recall* menu.



After *Save Now* has been pressed the file will be saved.

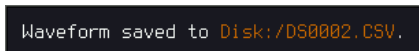


Note

The file will not be saved if the power is turned off or the USB drive is taken out before the message ends.


File Utility

To edit the internal memory or the USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*.

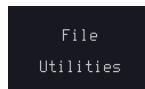

Edit Label

To edit labels for Setup files, press *Edit Label*. For more details on editing labels, see page 350.

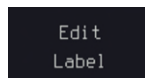

Recall

File Type/Source/Destination


Item	Source	Destination
Default Panel Setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel
Reference Waveform	<ul style="list-style-type: none"> Internal memory: Ref1 to Ref4 	<ul style="list-style-type: none"> Current front panel
Panel Setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 to S20 File system: Disk, USB 	<ul style="list-style-type: none"> Current front panel
Waveform Data (DSxxxx.lsf, DSxxxx.csv**, (CH1 to CH4.lsf, Ref1 to Ref4.lsf, Math.lsf)*	<ul style="list-style-type: none"> Internal memory: Wave 1 to Wave20 File system: Disk, USB 	<ul style="list-style-type: none"> Reference waveform 1 to waveform 4

*Recalled from ALLXXX directories. Note that Allxxxx.csv cannot be recalled to the oscilloscope.

**Detail CSV files cannot be recalled to the oscilloscope.

Recall Default Panel Setting


Panel Operation 1. Press the *Default* key.

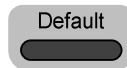

2. The screen will update with the default panel settings.

Setting Contents The following is the default (factory) setting contents.

Acquire	Mode: Sample	XY: OFF
	Record Length: 10 k	Expand: By Center

Display	Mode: Vector	Persistence: 240 ms
	Waveform intensity: 50 %	Graticule intensity: 50 %
	Backlight Intensity: 80 %	Backlight Auto-dim: On
	Time: 10 min	Graticule: full 
Channel	Scale: 100 mV/Div	CH1: On
	Coupling: DC	Impedance: 1 MΩ
	Invert: Off	Bandwidth: full
	Expand: By Ground	Position: 0.00 V
	Probe: Voltage	Probe attenuation: 1 x
	Deskew: 0 s	
Cursor	Horizontal cursor: Off	Vertical Cursor: Off
Measure	Source: CH1	Gating: Screen
	Display All: Off	High-Low: Auto
	Statistics: Off	Mean & Std Dev
		Samples: 2
	High Ref: 90.0 %	Mid Ref: 50.0 %
	Low Ref: 10.0 %	
Horizontal	Scale: 10 us/Div	Position: 0.000 s
Math	Source1: CH1	Operator: +
	Source2: CH2	Position: 0.00 Div
	Unit/Div: 200 mV	Math Off
FFT	Source: CH1	Vertical Units: dBV RMS
	Window: Hanning	Vertical: 20 dB
	Horizontal: 5 MHz/div	
Advanced Math	Expression: CH1+CH2	VAR1: 0
	VAR2: 1	Position: 0.00 Div

	Unit/div: 500 mV	
APP	App: Go-NoGo, DVM, Datalog, Mount Remote Disk	
Trigger	Type: Edge	Source: CH1
	Coupling: DC	Alternate: Off
	Noise Rejection: Off	Slope: Positive
	Level: 0.00 V	Mode: Auto
	Holdoff: 10.0 ns	
Utility	Hardcopy: Save	Ink Saver: Off
	Assign Save To: Image	File Format: Bmp
	Probe Comp.: 1 kHz	


Recall Waveform

Panel Operation 1. For recalling from an external USB Front Panel flash drive, connect the drive to the front or rear panel USB port.




2. The waveform must be stored in advance. See page 356 for waveform store details.


3. Press the *Save/Recall* key.

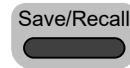

4. Press *Recall Waveform* from the bottom menu. The Recall menu appears.

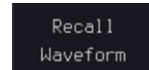

5. Press *From* (internal memory) or *From File* and choose a source to recall from.

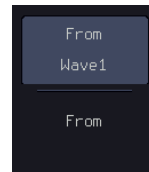

From Wave1 to Wave20


From File* File format: Lsf, Fast Csv

* Only files in the current file path will be available, this includes files saved in the ALLxxx directories.

Allxxx.csv files cannot be recalled to the oscilloscope.


Only the "Fast CSV", "LSF" files can be recalled to the oscilloscope.

6. Press *To* and select the reference waveform to recall to.

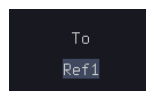


To Ref1 to Ref4

7. Press *Recall Now* to recall the waveform. The reference waveform will appear on the screen when successful.

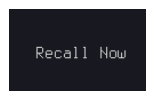

File Utility

To edit USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*.

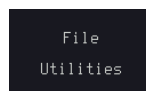


Recall Setup


Panel Operation

1. (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port.


Front Panel

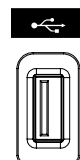


2. Press the *Save/Recall* key.

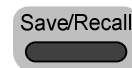

3. Press *Recall Setup* from the bottom menu.

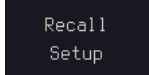

4. Press *From* (internal memory) or *From File* and choose a source to recall from.

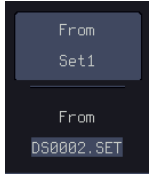


From Set1 to Set20

From File DSxxxx.set (USB, Disk)*

* Only files in the current file path will be available.


5. Press *Recall Now* to confirm recalling. When completed, a message appears at the bottom of the display.

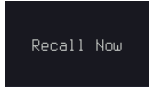

Note The file will not be recalled if the power is turned off or the USB drive is taken out before the message appears.

File Utility

To edit the internal memory or the USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*.

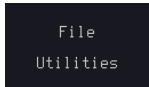

Edit Label

To edit labels for Setup files, press *Edit label*. For more details on editing labels, see page 350.



Reference Waveforms

Recall and Display Reference Waveforms

Panel Operation A reference waveform must be stored in advance. See page 356 to store waveforms as reference waveforms.

1. Press the REF key on the front panel.





2. Pressing R1 to R4 repeatedly will toggle the corresponding reference waveform OFF/ON.




Turning R1 to R4 ON will open the corresponding reference menu.


3. If a reference waveform is ON but not active, its reference menu can be opened by pressing the corresponding R1 to R4 key from the bottom menu.

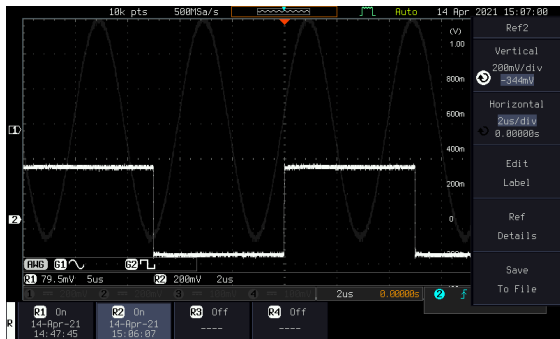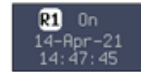


Vertical Navigation Press *Vertical* repeatedly from the side menu to choose to edit the vertical position or Unit/Div. Use the *VARIABLE* knob to edit the values.

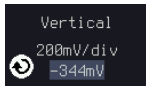


Horizontal Navigation Press *Horizontal* repeatedly from the side menu to choose to edit the Time/Div or the horizontal position. Use the *VARIABLE* knob to edit the value.

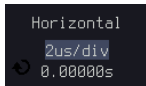


View Reference Waveform Details Pressing *Ref Details* will display the reference waveform details.

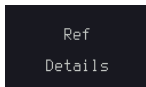


Details Sample Rate, Record Length, Date

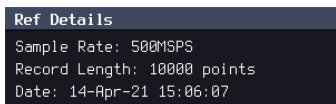

Edit Labels To edit labels for Setup files, press *Edit Labels*. For more details on editing labels, see page 350.

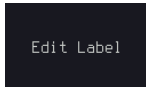

Save Reference Waveforms To save reference waveforms, press *Save to File*. For more details on saving waveforms, see page 356.

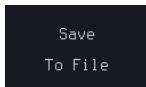

FILE UTILITIES


The file utilities are used each time files need to be saved to internal or external memory. The file utilities can create, delete and rename directories or files as well as copy files from internal memory to USB. The File Utilities menu also sets the file path for saving and recalling files from the Save/Recall menu.

File Navigation.....	367
Create Folder.....	368
Rename File.....	370
Delete File or Folder.....	371
Copy File to USB.....	372


File Navigation

The File Utilities menu can be used to choose files or to set the file path for saving/recalling files.


File System

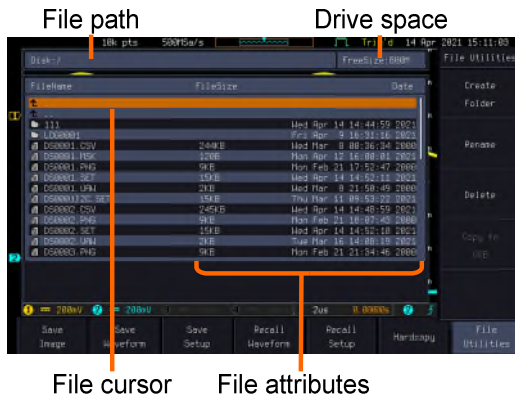


Panel Operation 1. Press the *Save/Recall* key.

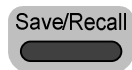

2. Press *File Utilities* from the bottom menu.

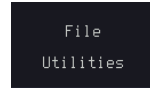


3. The file system appears.

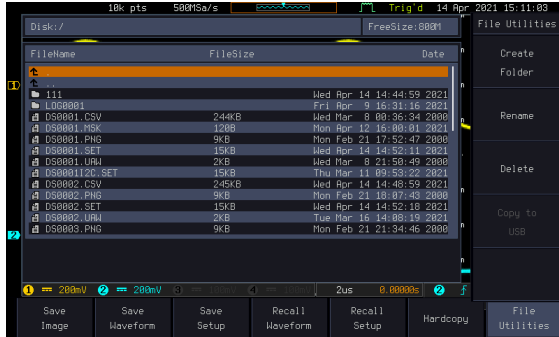

4. Use the *VARIABLE* knob to move the file cursor up and down.

VARIABLE

Use the *Select* key to choose a file or directory or to set the file path.

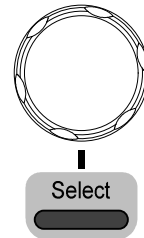


Note


When a USB flash drive is used, the file path is remembered each time the USB flash drive is used. This saves you the hassle of setting the USB file path each time the USB flash drive is inserted into the scope.

Create Folder



1. Press the *Save/Recall* key.

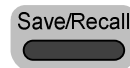

2. Press *File Utilities* from the bottom menu.

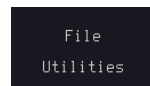


- Use the *VARIABLE* knob and *Select* key to navigate the file system. The preview thumbnail will be shown in the lower-right corner if the data selected by user refers to image.

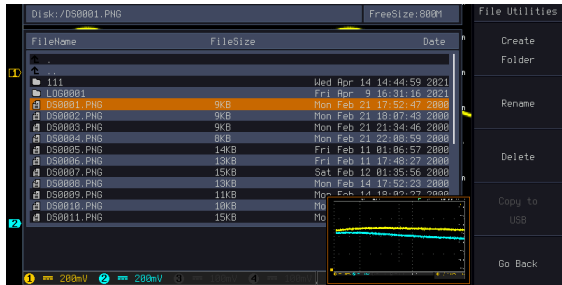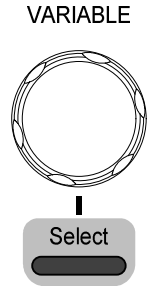


Create Folder


- Press *Create Folder* to make a new directory at the selected location.

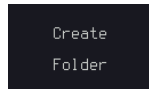

- Use the *VARIABLE* knob to highlight a character.

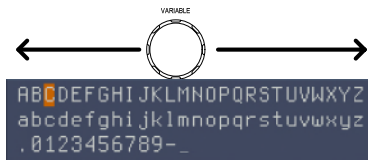


Press *Enter Character* or the *Select* key to select a number or letter.

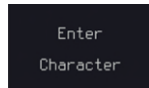


Press *Back Space* to delete a character.



- Press *Save Now* to create the folder.

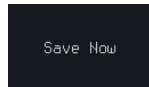


Cancel Press *Cancel* to cancel the operation.

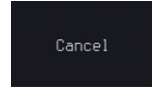


Rename File

Panel Operation 1. Press the *Save/Recall* key.


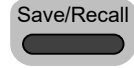


2. Press *File Utilities* from the bottom menu.

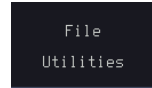


3. Use the *VARIABLE* knob and *Select* key to choose a file to rename.

VARIABLE


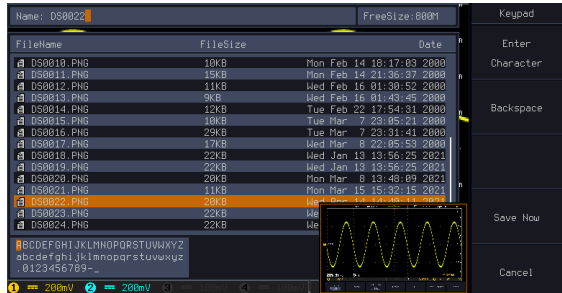
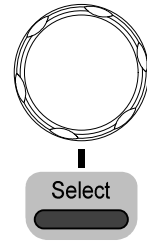


4. Press *Rename* when a file is chosen.

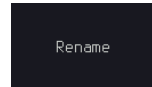


5. Use the *VARIABLE* knob to highlight a character.

VARIABLE

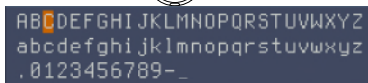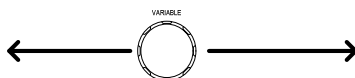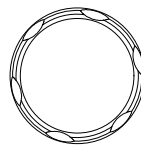


Press *Enter Character* or the *Select* key to select a number or letter.

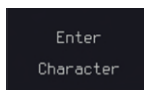

Press *Back Space* to delete a character.




6. Press *Save Now* to rename the folder or file.

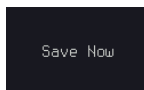


Delete File or Folder

- Panel Operation
1. Press the *Save/Recall* key.


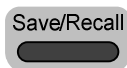



2. Press *File Utilities* from the bottom menu.

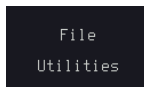


3. Use the *VARIABLE* knob and *Select* key to navigate the file system to choose a file.

VARIABLE

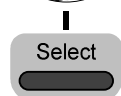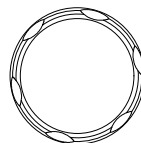

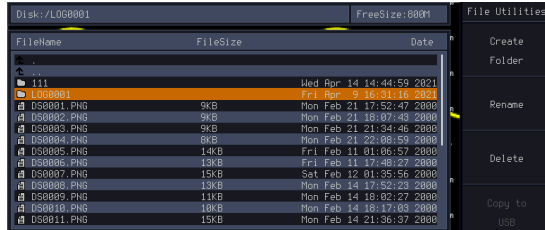

4. Press *Delete* to delete the selected file.
5. Press *Delete* again to confirm the deletion.

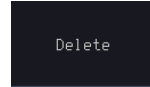


Copy File to USB




Panel Operation


1. Connect a USB drive to the front panel USB port.

Front Panel

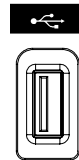


2. Press the *Save/Recall* key.
3. Press *File Utilities* from the bottom menu.
4. Use the *VARIABLE* knob and *Select* key to navigate the file system to choose a file from internal memory.

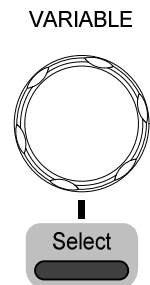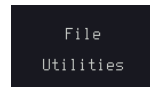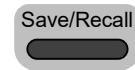

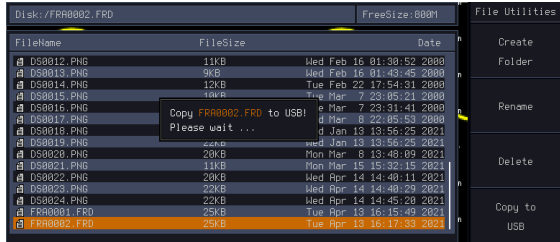

5. Press *Copy to USB* to copy the selected file to the USB drive.

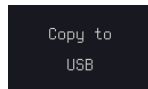

If the same file name already exists on the USB drive, it will be copied over.

H ARDCOPY KEY


The Hardcopy key is used as quick-save. The Hardcopy key can be used to save a screen shot, a waveform, or the current setup.

Save - Hardcopy Key



Background When the Hardcopy key is assigned to “Save”, pressing the Hardcopy key can be used to save a screen shot, a waveform, or the current setup, depending on the configuration.

Panel Operation 1. If you wish to save to USB, connect a USB drive to the front panel USB port, otherwise the file will save to internal memory.

Front Panel

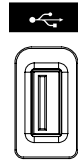

1. Press the *Save/Recall* key.
2. Press *Hardcopy* from the bottom menu.
3. Press *Assign Save To* and select which type of file will be saved when the Hardcopy key is pressed.

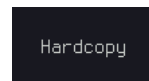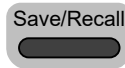

File Type: Image, Waveform, Setup, All

4. Press the *Hardcopy* key to save the file*.



A message will appear when the save is successful.

Image saved to Disk:/DS0025.PNG.

Image File
Format

5. For image files the file format can be selected with the *File Format* key.

File Format
Png


Format BMP, PNG

Ink Saver

6. To have a white background for image files, set *Ink Saver* to On.

Ink Saver
On Off

Ink Saver On

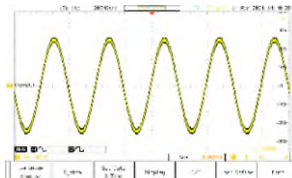

Ink Saver Off



Note

*Each time the Hardcopy key is used to save waveforms or setup files, the files are saved into a new directory. The save directory is labeled ALLXXXX, where XXXX is a number that is incremented with each save. This directory is created in either the internal memory or to a USB flash drive.

REMOTE CONTROL

CONFIG

This chapter describes basic configuration for remote control. For a complete command list, refer to the programming manual downloadable from GW Instek website, www.gwinstek.com.

Interface Configuration	377
Configure USB Interface.....	377
Configure the Ethernet Interface	379
Configure RS-232C Interface	382
Configure Socket Server.....	384
Socket Server Functionality Check.....	385
Web Server.....	390
Web Server Overview.....	390




Interface Configuration

Configure USB Interface

USB Configuration	PC side connector	Type A, host
	GDS-3000A side connector	Type B, device
	Speed	1.1/2.0
	USB Class	USBTMC 488.2 class device for remote connectivity

Panel Operation

1. Press the *Utility* key.
2. Press *I/O* from the bottom menu.
3. Rotate the *VARIABLE* knob to select the *USB Device Port* function.
4. Select *Computer* from the side menu.

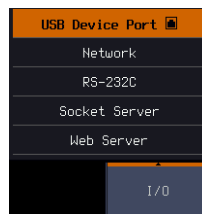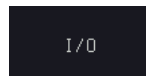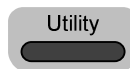







5. This oscilloscope is a USB-TMC device. Please install the National Instruments NI-VISA library which can download from the National Instruments web site. Newer versions are likely, and should be compatible with this instrumentation. Download the latest version available for the operating system being used by the controlling computer.



Configure the Ethernet Interface


Ethernet Configuration	MAC Address	Domain Name
	Instrument Name	DNS IP Address
	User Password	Gateway IP Address
	Instrument IP Address	Subnet Mask

Background The Ethernet interface is used for remote control using a socket server connection. For details, please see the Socket Server section on page 379.

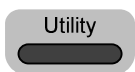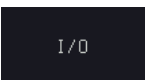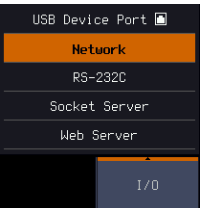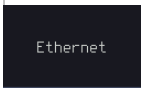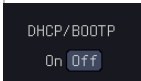- Panel Operation**
1. Connect the Ethernet cable to the LAN port on the rear panel.
 
 2. Press the *Utility* key.
 
 3. Press *I/O* from the bottom menu.
 
 4. Rotate the *VARIABLE* knob to select the *Network* function.
 
 5. Press *Ethernet* from the side menu.
 
 6. Set *DHCP/BOOTP* to *On* or *Off* from the side menu.
 

 **Note**

IP addresses will automatically be assigned with DHCP/BOOTP set to on. For Static IP Addresses, DHCP/BOOTP should be set to off.

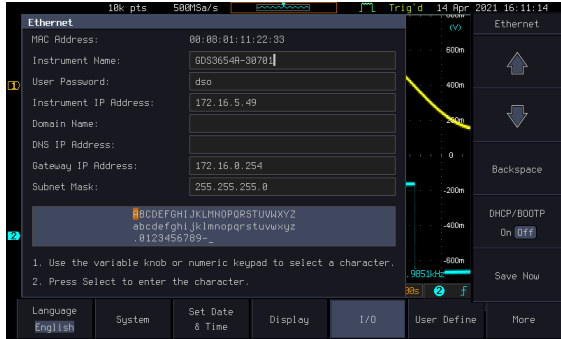


7. Use the Up and Down arrows on the side menu or use the numerical keypad on front panel to navigate to each Ethernet configuration item.



Items MAC Address, Instrument Name, User Password, Instrument IP Address, Domain Name, DNS IP Address, Gateway IP Address, Subnet Mask

8. Use the *VARIABLE* knob to highlight a character and use the *Select* key to choose a character.

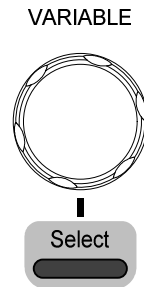

Press *Backspace* to delete a character.

A dark rectangular button with the text "Backspace" centered in a light gray font.

Backspace

Press *Save Now* to save the configuration. Complete will be displayed when successful.


A dark rectangular button with the text "Save Now" centered in a light gray font.

Save Now

Configure RS-232C Interface

RS-232C Configuration	Connector	DB-9, Male
	Baud rate	2400, 4800, 9600, 19200, 38400, 57600, 115200
	Parity	None, Odd, Even
	Data bit	8 (fixed)
	Stop bit	1, 2


Panel Operation 1. Press the *Utility* key.

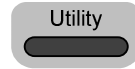

2. Press *I/O* from the bottom menu.



3. Rotate the *VARIABLE* knob to select the *RS-232C* function.

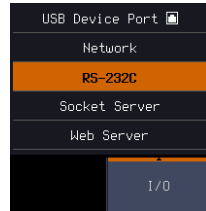


4. Use the side menu to set the Baud Rate.



Baud Rate 2400, 4800, 9600, 19200, 38400, 57600, 115200

5. Press *Stop Bit* to toggle the number of stop bits.

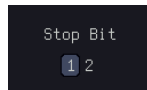

Stop Bits 1, 2

6. Press *Parity* to toggle the parity.




Parity Odd, Even, None


7. Press *Save Now* to save the settings.



8. Connect the RS-232C cable to the rear panel port: DB-9 male connector.

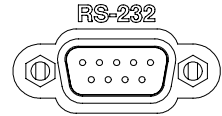

Pin Assignment

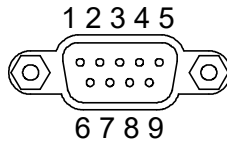

2: RxD (Receive data)


3: TxD (Transmit data)

5: GND

4, 6 to 9: No connection

PC Connection

Use the Null Modem connection as in the below diagram.

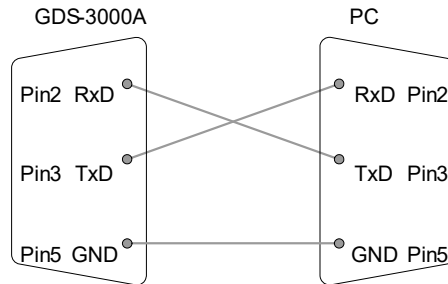

Configure Socket Server


The GDS-3000A supports socket server functionality for direct two-way communication with a client PC or device over LAN. By default, the Socket Server is off.

Configure Socket Server 1. Configure the IP address for the GDS-3000A. Page 379


2. Press the *Utility* key.




3. Press *I/O* from the bottom menu.

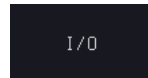

4. Rotate the *VARIABLE* knob to select the *Socket Server* function.

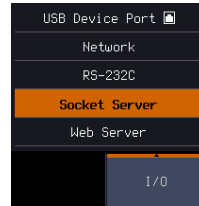


5. Press *Select Port* and choose the port number with the *VARIABLE* knob. The default port is set to 5025.

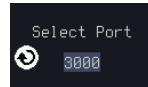

Range 1024 to 32767


6. Press *Set Port* to confirm the port number.

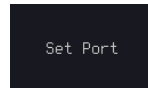

7. The *Current Port* icon will update to the new port number.



8. Press *Server* and turn the socket server On.

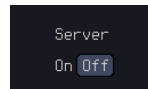

Socket Server Functionality Check

NI Measurement and Automation Explorer To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com.


- | | |
|-----------|---|
| Operation | <ol style="list-style-type: none"> 1. Configure the IP address for the GDS-3000A. Page 379 2. Configure the socket port. Page 379 3. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press: |
|-----------|---|



Start>All Programs>National Instruments>Measurement & Automation




4. From the Configuration panel access; My System>Devices and Interfaces>Network Devices
5. Right click Network Devices and select Create New Visa TCP/IP Resource...

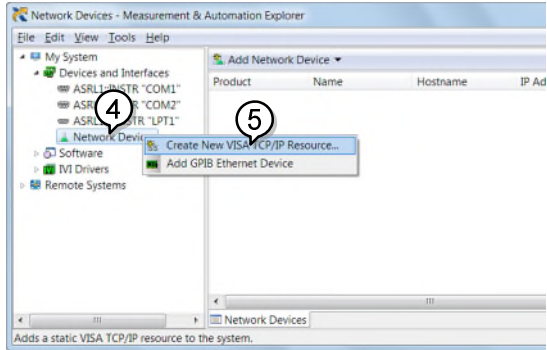

6. Select *Manual Entry of Raw Socket* from the popup window.
7. Click *Next*.



8. Enter the GDS-3000A's IP address and socket port number.
9. Click *Validate*.
10. A popup will appear to tell you if a VISA socket session was successfully created.
11. Click *Next*.

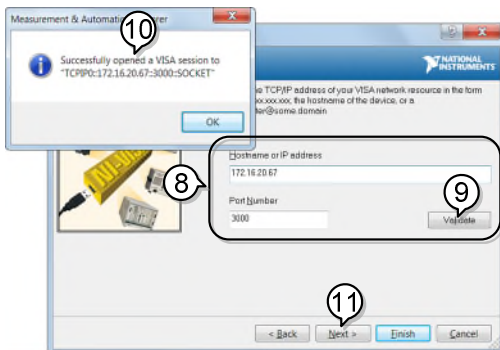

12. Choose an alias for the socket connection if you like.


13. Click *Finish* to finish the configuration.



14. The GDS-3000A will now appear under Network Devices in the Configuration Panel.

Functionality Check

15. Click the *Open Visa Test Panel* to send a remote command to the GDS-3000A.

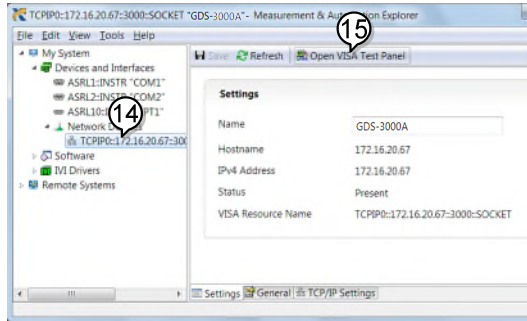


16. Click on the *Configuration* icon.

17. Select the *I/O Settings* tab.

18. Mark the *Enable Termination Character* checkbox. Make sure the termination character is a line feed (/n, value: xA).

19. Click Apply Changes.

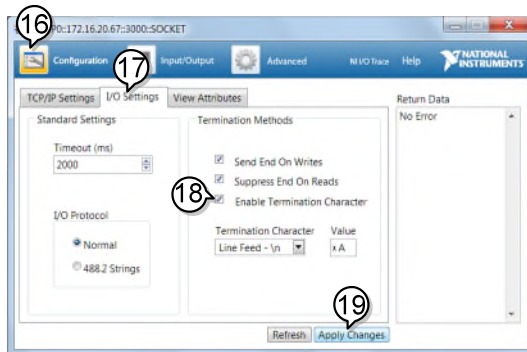


20. Click the *Input/Output* icon.

21. Make sure the **IDN?* query is selected in the *Select or Enter Command* drop box.

22. Click on *Query*.

23. The manufacturer, model number, serial number and firmware version will be displayed in the buffer. For example: GW-INSTEK, GDS-3102A,PXXXXXX,V1.00

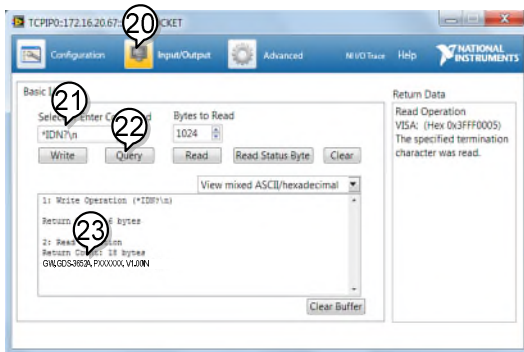

Note

For further details about remote control and remote commands, please see the programming manual.


Web Server

Web Server Overview

Background The GDS-3000A has an inbuilt web server that can be used to:

- view the system information (Welcome Page)
- set/view the network configuration settings (Network Configuration)
- remotely view the current display image on the unit (Get Display Image)
- execute SCPI command
- send the internal profile of oscilloscope to PC side or receive profile
- Web control function: control oscilloscope remotely from browser and display waveform in real-time


- System Information:**
- Manufacturer
 - IP Address
 - Serial Number
 - Subset Mask
 - Firmware version
 - DNS
 - Hostname
 - MAC Address
 - Domain name
 - DHCP State



System Information	
Manufacturer :	GW
Serial Number :	P000701
Description :	GWGDS-3054A
Firmware Version :	V0.62.0487
Hostname :	GDS3054A-30701
mDNS Hostname :	GDS3054A-30701.local
IP Address :	172.16.5.49
Subnet Mask :	255.255.255.0
Gateway :	172.16.0.254
DNS :	
MAC Address :	00:08:01:11:22:33
DHCP State :	OFF
VISA TCP/IP Connect String :	TCP/IP: 172.16.5.49:2268::SOCKET


Network Configuration

- Hostname
- Domain name
- IP Address
- Subnet mask
- Gateway
- DNS
- DHCP State

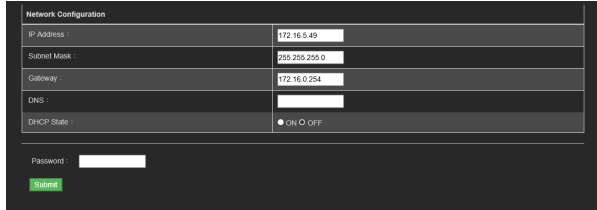


Get Display Image

- Current display image

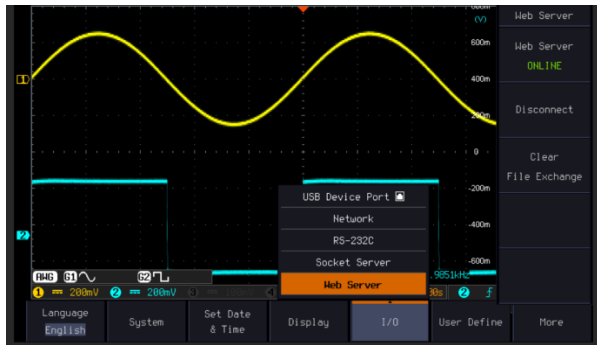


File Exchange

Upload or download profile (*.set) to oscilloscope Web

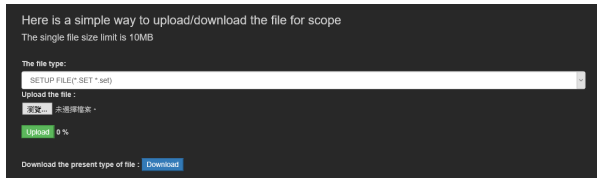


SCPI command

Control oscilloscope remotely from browser via executing SCPI command

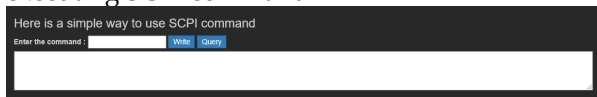

Web control

Control oscilloscope remotely from browser via graphical user interface (GUI) to display real-time waveform

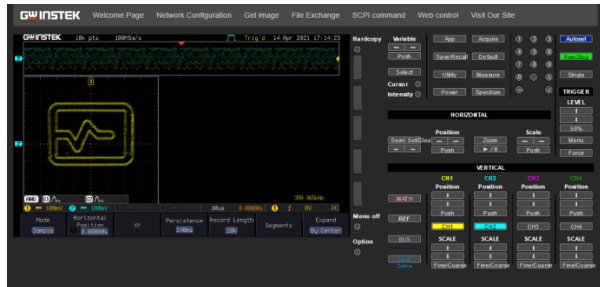


- Panel Operation
1. Configure the Ethernet interface. Page 379
 2. Enter the IP address of the GDS-3000A unit into the address bar of a web browser.


For example

<http://172.16.20.255>

3. Press *I/O* from the bottom menu.

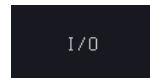

4. Rotate the *VARIABLE* knob to select the *Web Server* function.

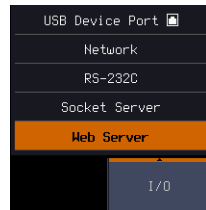

5. Press the *Connect* button in the side menu to connect to internet.



6. The “ONLINE” will be shown for web server when internet connection is established.



7. The GDS-3000A web browser welcome page appears.

GW INSTEK

[Welcome Page](#)
 [Network Configuration](#)
 [Get Image](#)
 [File Exchange](#)
 [SCPI command](#)
 [Web control](#)
 [Visit Our Site](#)

GDS-3000A Series Web Browser Pages

Thanks For Your Using.

Use the left menu to select the features you need.

More How-to
Please refer to user manual.



System Information	
Manufacturer :	GW
Serial Number :	P930701
Description :	GW GDS-3654A
Firmware Version :	V0.65.0407
Hostname :	GDS3654A-30701
mDNS Hostname :	GDS3654A-30701.local
IP Address :	172.16.5.49
Subnet Mask :	255.255.255.0
Gateway :	172.16.0.254
DNS :	
MAC Address :	00:08:01:11:22:33
DHCP State :	OFF
VISA TCP/IP Connected String :	TCP/IP: 172.16.5.49:2284 SOCKET

Copyright 2020 © Good Will Instrument Co., Ltd All Rights Reserved.

M AINTENANCE




Three types of maintenance operations are available: Signal Path Compensation, Vertical Accuracy Calibration and Probe Compensation. Run these operations when using the GDS-3000A in a new environment.

How to use the SPC function.....	394
Vertical Accuracy Calibration.....	395
Probe Compensation	396

How to use the SPC function

Background Signal Path Compensation (SPC) is used to compensate the internal signal path due to ambient temperature. SPC is able to optimize the accuracy of the oscilloscope with respect to the ambient temperature.


- Panel Operation**
1. Press the *Utility* key.
 2. Press *System* from the bottom menu.
 3. Press *SPC* from the side menu. A message showing a brief introduction to SPC appears on the screen.

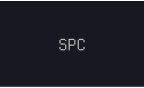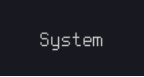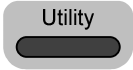

Disconnect all probes and cables from all channels before calibrating.

The DSO needs to be warmed up for at least 30 minutes before using the SPC function.


4. Press *Start* on the side menu to start SPC calibration.

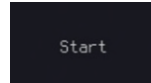


5. The SPC Calibration will proceed one channel at a time, from channel 1 to channel 4.

Vertical Accuracy Calibration


- Panel Operation
1. Press the *Utility* key.

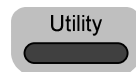


2. Press *System* from the bottom menu.

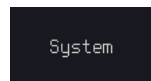


3. Press *more 1 of 3* from the side menu.

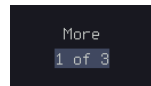


4. Press *Self Cal* on the side menu.

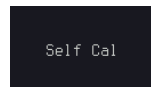

5. Press *Vertical* on the side menu.

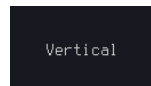

6. A message appears to “Now performing vertical calibration...
CH1
Connect the CAL output to channel, then press the Vertical key”.
7. Connect the calibration signal from the rear panel to the Channel 1 input with a BNC cable.

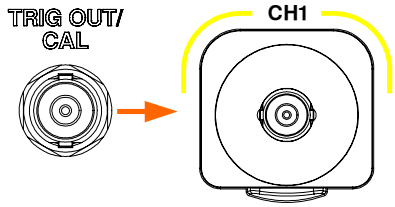

8. Press *Vertical* again after connecting CAL to the channel 1 input.



The calibration for Channel 1 starts and ends automatically, in less than 5 minutes. A message is displayed when the calibration procedure has ended.


Repeat the above step for Channel 2, 3* and 4* when prompted.

*4 channel models


9. When the calibration for all channels has completed, the display goes back to the default state.

Probe Compensation


- Panel Operation
1. Connect the probe between the Channel 1 input and the probe compensation output (default set as 2 Vp-p, 1 kHz square wave) on the front panel. Set the probe attenuation to x10.
 2. Alternatively, the probe compensation frequency can be changed. See page 188 for details.

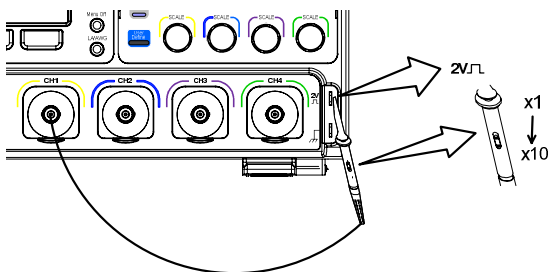

3. Press the *CH1* key to activate CH1.

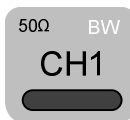


4. Set the *Coupling* to DC from the bottom menu.

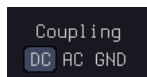



5. Set the Probe attenuation to *Voltage, 10X*.

Page 112



6. Press the *Autoset* key. The compensation signal appears on the display.

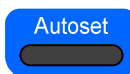

7. Press the *UTILITY* key followed by pressing the *DISPLAY* button in the bottom menu, then set the display type to *Vector*.

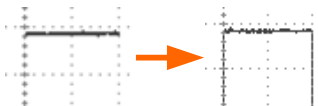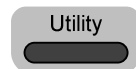

8. Turn the adjustment point on the probe to make the waveform as square as possible.

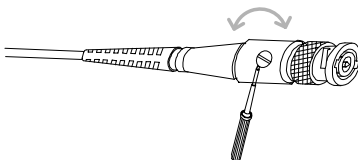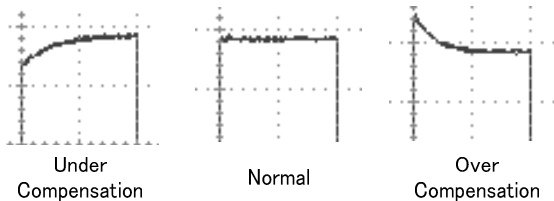

F FAQ

-
- I connected the signal but it does not appear on the display.
 - I want to remove the (Measurement result/ FFT result/ Help contents) from the display.
 - The waveform does not update (frozen).
 - The probe waveform is distorted.
 - Autoset does not catch the signal well.
 - The date and time settings are not correct.
 - The accuracy does not match the specification.

I connected the signal but it does not appear on the display.

Make sure you have activated the channel by pressing the Channel key (the channel key lights up).

I want to remove the (Measurement result/ FFT result/ Help contents) from the display.

To clear automatic measurement results, press the Measure key, select Remove Measurement and choose Remove All. See page 49.

To clear individual measurements from the screen, press the Measure key, select Display All and choose Off. See page 53.

To clear the FFT result, press the Math key twice. See page 66 for details.

To clear the Help result, press the Help key again. See page 35 for details.

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page 39 for details.

If this does not help, the trigger mode might be set to Single. Press the Single key to exit Single mode. See page 141 for Single trigger details.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page 396.

Autoset does not catch the signal well.

The Autoset function cannot catch signals under 10 mV or 20 Hz. Please use the manual operation. See page 38 for Autoset details.

The date and time settings are not correct.

For date and time setting details, please see page 186. If it does not help, the internal battery controlling the clock might be worn out. Contact your dealer or GW Instek.

The accuracy does not match the specification.

Make sure the device is powered on for at least 30 minutes, within +20 °C to +30 °C. This is necessary to stabilize the unit to match the specification.

For more information, contact your local dealer or GW Instek at www.gwinstek.com / marketing@goodwill.com.tw.

APPENDIX


Updating the Firmware	402
GDS-3000A Series Specifications	404
Model-specific	404
Common	404
Probe Specifications	411
Model-specific Probe Specifications	411
Common Probe Specifications	411
Dimensions	412
Certificate Of Compliance	413

Updating the Firmware

Background New firmware can be downloaded from the our website in the oscilloscope products section.



Place a copy of the firmware file (xxx.upg) onto the root directory of a USB flash disk.

Panel Operation 1. Put the USB drive that contains the firmware into the front panel USB port.

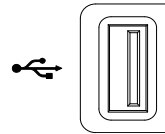

2. Power up the oscilloscope and at the same time, rotating the *VARIABLE* knob several times until the oscilloscope boot in the firmware upgrade mode as in the snapshot below.

VARIABLE

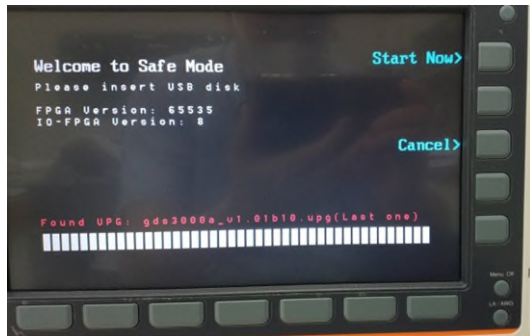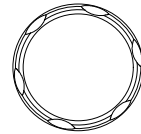

3. When the firmware file of USB flash disk has been recognized by oscilloscope, a message of “Found UPG: xxx.upg” will appear on the lower corner.

4. Press the "Start Now" (F1) key. The oscilloscope will automatically start upgrading the firmware. Or press the "Cancel" (F3) key to quit the firmware upgrading procedure.



5. When the status indicator shows the complete status (status indicator in yellow completely) and a message of "Update NAND flash success" will appear on the top of status indicator. The firmware upgrading procedure is completed.



6. Restart the oscilloscope manually. Check the firmware version by pressing the "Utility" → "System" → "System Info". The system information screen that it is being updated.

GDS-3000A Series Specifications

The specifications apply when the GDS-3000A series is powered on for at least 30 minutes under +20 °C to +30 °C.

Model-specific

GDS-3102A	Channels	2 + Ext
	Bandwidth	DC to 1 GHz (-3 dB) @50 Ω input impedance
		DC to 500 MHz (-3 dB) @1 MΩ input impedance
	Rise Time	350 ps (calculated)
Bandwidth Limit	20 MHz/100 MHz/200 MHz/350 MHz*	
GDS-3104A	Channels	4 + Ext
	Bandwidth	DC to 1 GHz (-3 dB) @50 Ω input impedance
		DC to 500 MHz (-3 dB) @1 MΩ input impedance
	Rise Time	350 ps (calculated)
Bandwidth Limit	20 MHz/100 MHz/200 MHz/350 MHz*	

*: The tolerance of bandwidth limit is ±10 %.

Common

Vertical Sensitivity	Resolution	8 bits, (Max.12 bits with “Hi Res”) For 1 MΩ input impedance: 1 mV* to 10 V/div For 50 Ω input impedance: 1 mV* to 1 V/div
	Input Coupling	AC, DC, GND
	Input Impedance	1 MΩ// 22 pF approx.
	DC Gain Accuracy	1 mV: ±5 % full scale ≥2 mV: ±3 % full scale
	Polarity	Normal & Invert
	Maximum Input Voltage	For 1 MΩ input impedance: 300 Vrms, CAT II For 50 Ω input impedance: 5 Vrms

	Offset Position Range	For 1 M Ω input impedance: 1 mV/div to 20 mV/div : ± 1 V 50 mV/div to 500 mV/div : ± 10 V 1 V/div to 5 V/div : ± 100 V 10 V/div : ± 1000 V For 50 Ω input impedance: 1 mV/div to 50 mV/div : ± 1 V 100 mV/div to 1 V/div : ± 10 V
	Waveform Signal Process	+, -, \times , \div , FFT, User Defined Expression FFT: Spectral magnitude. Set FFT Vertical Scale to Linear RMS or dBV RMS, and FFT Window to Rectangular, Hamming, Hanning or Blackman.
Trigger	Source	CH1, CH2, CH3**, CH4**, Line, EXT
	Trigger Mode	Auto (supports Roll Mode for 100 ms/div and slower), Normal, Single
	Trigger Type	Edge, Pulse Width (Glitch), Video, Pulse Runt, Rise & Fall (Slope), Timeout, Alternate, Event-Delay (1 to 65535 events), Time-Delay (Duration, 4 ns to 10 s), Bus (UART, I2C, SPI, CAN, LIN)
	Holdoff range	4 ns to 10 s
	Coupling Sensitivity	AC, DC, LF rej., Hf rej., Noise rej. 1 div
External Trigger	Range	± 20 V
	Sensitivity	DC to 100 MHz Approx. 100 mV 100 MHz to 350 MHz Approx. 150 mV
	Input Impedance	1 M Ω ± 3 % // 22 pF
*: The bandwidth is limited to 20 MHz at 2 mV/div or below for all models; . The bandwidth is limited to 900 MHz at 5 mV/div for GDS-3102A and GDS-3104A.		
**: For 4CH models only.		
Horizontal	Time base Range	1 ns/div to 1000 s/div (1-2-5 increments) ROLL: 100 ms/div to 1000 s/div
	Pre-trigger	10 div maximum
	Post-trigger	10,000,000 div maximum (depend on time base).
	Timebase Accuracy	± 5 ppm, about ± 2 ppm increase in error per year
Signal Acquisition	Real Time Sample Rate	5 GSa/s half channels; 2.5 GSa/s all channels
	Record Length	Max. 200 Mpts / ch
	Acquisition Mode	Normal, Average, High Resolution, Peak Detect, Single
	Peak Detection	400 ps (typical)

	Average	Selectable from 2 to 512
	Number of Segments	1 to 490,000 maximum
X-Y Mode	X-Axis Input	Channel 1, Channel 3 (for 4CH models)
	Y-Axis Input	Channel 2, Channel 4 (for 4CH models)
	Phase Shift	$\pm 3^\circ$ at 100 kHz
Cursors and Measurement	Cursors	Amplitude, Time, Gating available; Unit: Seconds(s), Hz (1 /s), Phase (degree), Ratio (%).
	Automatic Measurement	38 sets with indicator: Pk-Pk, Max, Min, Amplitude, High, Low, Mean, Cycle Mean, RMS, Cycle RMS, Area, Cycle Area, ROVShoot, FOVShoot, RPRESshoot, FPRESshoot, Frequency, Period, RiseTime, FallTime, +Width, -Width, Duty Cycle, +Pulses, -Pulses, +Edges, -Edges, %Flicker, Flicker Idx ,FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF, Phase.
	Cursors measurement	Voltage difference between cursors (ΔV) Time difference between cursors (ΔT)
	Auto counter	6 digits, range from 2 Hz minimum to the rated bandwidth
Control Panel Function	Autoset	Single-button, automatic setup of all channels for vertical, horizontal and trigger systems, with “Undo Autoset”, “Fit Screen”/ “AC Priority” mode, and “Fine Scale” functions.
	Save Setup	20 sets
	Save Waveform	20 sets
	Save Reference Waveform	4 sets
	Power Analysis (Optional)	Power Quality, Harmonics, Ripple, In-rush current, Switching Loss, Modulation, SOA, Transient, Efficiency, B-H curve, Control Loop Response, PSRR, Turn On/Off
AWG	General	
	Channels	2
	Sample Rate	200 MSa/s
	Vertical Resolution	14 bits
	Max. Frequency	25 MHz
	Waveforms	Arbitrary, Sine, Square, Pulse, Ramp, DC, Noise, Sinc, Gaussian, Lorentz, Exponential Rise, Exponential Fall, Haversine, Cardiac
Output Range	20 mVpp to 5 Vpp, HighZ; 10 mVpp to 2.5 Vpp, 50 Ω	

Output Resolution	1 mV
Output Accuracy	2 % (1 kHz)
Offset Range	± 2.5 V, HighZ; ± 1.25 V, 50 Ω
Offset Resolution	1 mV
Sine	
Frequency Range	100 mHz to 25 MHz
Flatness (relative to 1 kHz)	± 0.5 dB < 15 MHz; ± 1 dB 15 MHz to 25 MHz
Harmonic Distortion	-40 dBc
Stray (Non- harmonic)	-40 dBc
Total Harmonic Distortion	1 %
S/N Ratio	40 dB
Square/Pulse	
Frequency Range	Square: 100 mHz to 15 MHz
Rise/Fall Time	< 15 ns
Overshoot	< 3 %
Duty Cycle	Square: 50 % Pulse: 0.4 % to 99.6 %
Min. Pulse Width	30 ns
Jitter	500 ps
Ramp	
Frequency Range	100 mHz to 1 MHz
Linearity	1 %
Symmetry	0 to 100 %

Spectrum Analyzer	Frequency Range	DC to 2.5 GHz Max, dual channel with spectrogram (based on Advanced FFT). Notice: Frequency which exceeds analog front end bandwidth is uncalibrated	
	Span	1 kHz to 2.5 GHz (Max.)	
	Resolution Bandwidth	1 Hz to 2.5 MHz (Max.)	
	Reference Level	-80 dBm to +40 dBm in steps of 5 dBm	
	Vertical Units	dBV RMS; Linear RMS; dBm	
	Vertical Position	-12 divs to +12 divs	
	Vertical Scale	1 dB/div to 20 dB/div in a 1-2-5 Sequence	
	Displayed Average Noise Level	1 V/div ← -40 dBm, Avg : 16 100 mV/div ← -60 dBm, Avg : 16 10 mV/div ← -80 dBm, Avg : 16	
	Spurious Response	2nd harmonic distortion < 35 dBc 3rd harmonic distortion < 40 dBc	
	Frequency Domain Trace Types	Normal; Max Hold; Min Hold; Average (2 to 256)	
	Detection Methods	Sample; +Peak; -Peak; Average	
	FFT Windows	FFT Factor: Hanning 1.44 Rectangular 0.89 Hamming 1.30 Blackman 1.68	
	Logic Analyzer (Option)	Sample Rate	1 GSa/s per channel
		Bandwidth	200 MHz
		Record Length	Per Channel 10 M points (max)
Input Channels		16 Digital (D15 to D0)	
Trigger type		Edge, Pattern, Pulse Width, Serial bus (I ² C, SPI, UART, CAN, LIN), Parallel Bus	
Thresholds Quad		Settable thresholds for: D0 to D3, D4 to D7, D8 to D11, D12 to D15	
Threshold selections		TTL, CMOS(5 V,3.3 V,2.5 V), ECL, PECL,0V ,User Defined	
User-defined Threshold Range		±5 V	
Maximum Input Voltage		±40 V	
Minimum Voltage Swing		±250 mV	
Vertical Resolution		1 bit	

Frequency Response Analyzer	Frequency Range	20 Hz to 25 MHz	
	Input and Output Sources	Channel 1 to 2 for 2 CH models Channel 1 to 4 for 4 CH models	
	Number of Test Points	10, 15, 30, 45, 90 points per decade selectable for logarithm scale; 2 to 1000 points selectable for linear scale	
	Dynamic Range	> 80 dB (typical)	
	Test Amplitude	10 mVpp to 2.5 Vpp into 50 Ω, 20 mVpp to 5 Vpp into High-Z, Fixed test amplitude or custom amplitude for each decade.	
	Test Results	Logarithmic or linear overlaid gain and phase plot, may also overlay with reference plots for cross comparison. Test results saved in csv format for offline analysis.	
	Manual Measurements	Tracking gain and phase markers	
	Plot Scaling	Auto-scaled during test	
	Display	TFT LCD Type	10.2" TFT LCD WVGA color display
		Display Resolution	800 horizontal × 480 vertical pixels (WVGA)
Interpolation		Sin (x)/x	
Waveform Display		Dots, vectors, variable persistence (16 ms to 4 s), infinite persistence, gray or color waveforms.	
Waveform Update Rate		200,000 waveforms per second, maximum	
Display Graticule		8 x 10 divisions	
Display Mode		YT, XY	
Interface	USB Port	USB 2.0 High-speed host port X1, USB High-speed 2.0 device port X1	
	Ethernet Port (LAN)	RJ-45 connector X1, 10 M/100 Mbps with HP Auto-MDIX	
	Go-NoGo BNC	5 V Max/10 mA TTL open collector output X1	
	Power Supply Receptacles	±12 V / 600 mA for current probe use. Two sets of power supply receptacles for 2 CH models; Four sets of power supply receptacles for 4 CH models.	
	RS232C	DB-9 male connector X1	
	VGA Video Port	DB-15 female connector X1, monitor output for display on VGA monitor	

	Optional GPIB Module	Fully programmable with IEEE488-2 compliance
	Kensington Style Lock	Rear-panel security slot connects to standard Kensington-style lock.
Miscellaneous	Multi-language menu	Available
	Operation Environment	Temperature: 0 °C to 50 °C. Relative Humidity ≤ 80 % at 40 °C or below; ≤ 45 % at 41 °C to 50 °C.
	On-screen help	Available
	Time clock	Time and Date, Provide the Date/Time for saved data
	Internal Flash Disk	800 Mega bytes Single-Level Cell memory
	Installed APP	Go/NoGo, DVM, DataLog, Digital Filter, Frequency Response Analyzer, Mask, Mount Remote Disk, Demo
	User Define Key	User can select one of the several different preset functions as shortcut key.
	Power Consumption	100 W
	Weight	Approx. 4.6 kg
	Dimensions	420 mm(W)X 253 mm(H)X 113.8 mm(D)

Probe Specifications


Model-specific Probe Specifications

GTP-501R	Applicable to	GDS-3102A/ GDS-3104A
	Bandwidth	DC to 500 MHz
	Rise time	0.7 ns
	Input Capacitance	11.5 pF Approx. @ 100 MHz
	Compensation	8 pF to 20 pF
	Range	

Common Probe Specifications

Position x 10	Attenuation Ratio	10:1 (fixed) with readout pin
	Input Resistance	10 MΩ when used with 1 MΩ input oscilloscope
	Maximum Input Voltage	500 V CAT I, 300 V CAT II derating with frequency
Operating Condition	Temperature	-0 °C to 50 °C
	Relative Humidity	≤85 % @35 °C
Safety Standard	EN61010-031 CAT II	

Dimensions

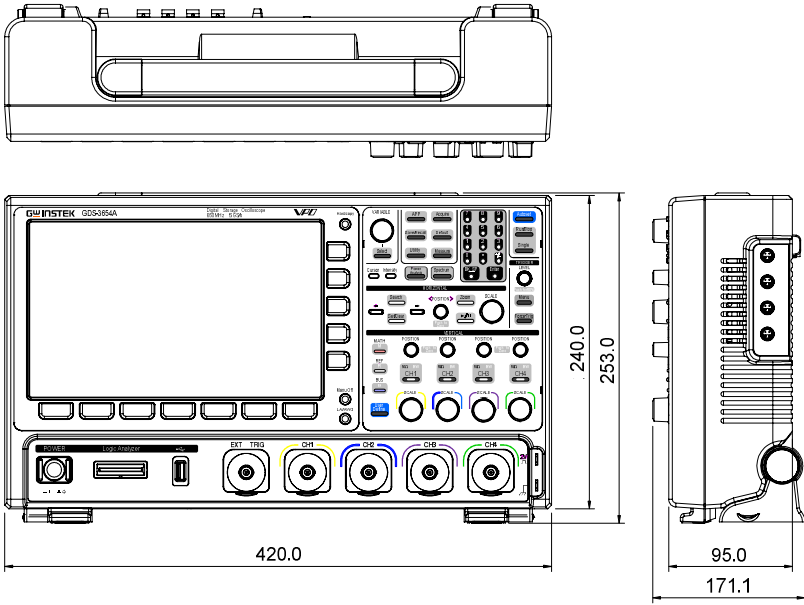

Certificate Of Compliance

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the CE marking mentioned product

satisfies all the technical relations application to the product within the scope of council:

Directive: EMC; LVD; WEEE; RoHS

The product is in conformity with the following standards or other normative documents:

Ⓢ EMC	
EN 61326-1	Electrical equipment for measurement, control and laboratory use — EMC requirements
Conducted & Radiated Emission EN 55011 / EN 55032	Electrical Fast Transients EN 61000-4-4
Current Harmonics EN 61000-3-2 / EN 61000-3-12	Surge Immunity EN 61000-4-5
Voltage Fluctuations EN 61000-3-3 / EN 61000-3-11	Conducted Susceptibility EN 61000-4-6
Electrostatic Discharge EN 61000-4-2	Power Frequency Magnetic Field EN 61000-4-8
Radiated Immunity EN 61000-4-3	Voltage Dip/ Interruption EN 61000-4-11 / EN 61000-4-34
Ⓢ Safety	
EN 61010-1 :	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements

GOODWILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng District, New Taipei City 236, Taiwan

Tel: [+886-2-2268-0389](tel:+886-2-2268-0389)

Fax: [+886-2-2268-0639](tel:+886-2-2268-0639)

Web: <http://www.gwinstek.com>

Email: marketing@goodwill.com.tw

GOODWILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: [+86-512-6661-7177](tel:+86-512-6661-7177)

Fax: [+86-512-6661-7277](tel:+86-512-6661-7277)

Web: <http://www.instek.com.cn>

Email: marketing@instek.com.cn

GOODWILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: [+31-\(0\)40-2557790](tel:+31-(0)40-2557790)

Fax: [+31-\(0\)40-2541194](tel:+31-(0)40-2541194)

Email: sales@gw-instek.eu

INDEX

AC coupling.....	105	AM.....	205
AC Priority mode.....	39	channel activation.....	200
Acquisition.....	80	connection.....	199
average.....	80	Coupling and tracking.....	226
indicator.....	25	Create new ARB waveform.....	213
peak detect.....	80	edit existing waveform.....	215
record length.....	84	FM.....	208
sample.....	80	FSK.....	210
XY mode.....	81	function edit.....	217
Advanced math.....		impedance.....	201
expression.....	72	load ARB waveform.....	222
operation.....	73	normal edit.....	216
source.....	72	overview.....	198
Amplitude measurements.....	44	phase.....	201
APP.....		Save ARB waveform.....	224
Data Log.....	323	select waveform.....	202
digital filter.....	325	specification.....	406
DVM.....	321	sweep.....	211
Go-NoGo.....	316	turn on output.....	201
mask.....	327	waveform settings.....	203
overview.....	313	Bandwidth filter.....	107
run.....	314	Blackman window.....	69
Area measurements.....	44	Bus.....	
Auto trigger.....	144	CAN.....	128
Auto-dim.....	194	cursors.....	137
Automatic measurement.....		encoding.....	130
Add measurement.....	47	event tables.....	132, 135
display all.....	53	I ² C.....	119
gated mode.....	53	labels.....	135
High-Low.....	54	LIN.....	129
overview.....	43	serial bus overview.....	115
Reference levels.....	57	threshold.....	131
remove measurement.....	49, 50, 51	trigger settings.....	
Statistics.....	56	CAN.....	166
Autoset.....	38	I ² C.....	162
AC Priority mode.....	39	LIN.....	169
effect on channel.....	39	Parallel.....	172
exception.....	39	SPI.....	165
Fit Screen mode.....	39	UART.....	160
AWG.....		UART.....	117
		Channel.....	37

- status indicator25
- Connection..... 339
- Control panel function
 - specification.....406
- Conventions 30
- Coupling mode 104
- Cursor
 - horizontal59
 - specification.....406
 - vertical62
- Data logging..... 323
- Date setting..... 188
 - indicator.....25
- DC coupling 105
- Declaration of conformity..... 413
- Default setup 360
 - contents.....360
 - effect on channel.....38
- Delay measurements 46
- Deskew..... 112, 231
- Detection mode 280
- Digital filter 325
- Dimensions
 - diagram.....412
- Display
 - AWG**199
 - bus114
 - search178
 - segmented memory.....86
 - specification.....409
 - Spectrum Analyzer.....296
- Dots..... 191
- DVM 321
- Edge Trigger..... 149
- EN61010
 - measurement category.....5
 - pollution degree.....6
- Erase memory 186, 187
- Ethernet
 - interface379
- Expand by ground/center 110
- External trigger 142
 - input terminal20
 - specification.....405
- FAQ 399
- FFT
 - horizontal cursor 60
 - vertical cursor 63
- File
 - create folder 368
 - delete371
 - rename.....370
- File navigation.....367
- File path.....368
- Firmware update.....402
- Firmware version.....185
- First time use 27
- Fit Screen mode 39
- Frequency measurements 45
- Go-NoGo
 - circuit diagram 320
- Go-NoGo 316
 - timing319
- Ground
 - coupling 105
- Hamming window 68
- Hanning window 68
- Harmonics.....242
- Holdoff148
- Horizontal
 - basic operation 40
 - position.....95
 - scale96
 - specification.....405
- Image file format 344
- Impedance.....105
- Initialization.....27
- Input frequency indicator 25
- Inrush 237, 254, 256, 260, 264, 267, 270, 274, 286, 290
- Intensity..... 191, 192
- Interface.....377
 - specification409
- Invert waveform 106, 109
- Keys overview15
- Labels350
- Language selection 185
- List of features..... 10
- Logic Analyzer
 - specification.....408
- Logic trigger 173
- Mask 327

auto mask.....	329	QR code reader function.....	189
user-defined mask.....	332	Rear panel diagram	198
Math		Recall	360
Advanced math overview	72	default setup.....	360
basic	66	reference.....	365
FFT operation.....	69	setup	363
FFT overview	68	waveform.....	362
Mean measurements	44	Rectangular window	69
Memory bar		Reduce any menu	33
indicator	25	Reduce lower menu.....	33
Menu on/off	196	Reduce side menu.....	32
Miscellaneous		Remote control	376
specification	410	interface configuration.....	377
Model differences.....	10	webserver	390
Normal trigger.....	144	Ripple	252
NTSC.....	146	Rise and fall trigger	157
Overshoot measurements.....	45	RMS measurements.....	44
Overview	338	Roll mode.....	97
PAL.....	146	RS-232C	
Parallel bus		interface.....	382
configuration	123	Run/Stop	39, 196
encoding.....	125	horizontal position.....	95
event table.....	125	Horizontal scale	96
labels	126	Safety Instructions	
threshold	124	Caution symbol.....	4
Peak measurements	43	Cleaning the instrument	6
Peak search.....	280, 281, 283, 284	Disposal instructions.....	7
Peak to peak measurement	43	Ground symbol.....	4
Play waveform.....	100	Operation Environment.....	6
Power Analysis.....	11, 231	Power on/off.....	5
harmonics overview.....	242	UK power cord.....	8
Inrush...237, 254, 256, 260, 264, 267,		Warning symbol	4
270, 274, 286, 290		Save.....	353
power quality overview	233	hardcopy key.....	374
ripple.....	252	image.....	354
Power quality.....	233	setup	358
Probe		waveform.....	356
attenuation level.....	112	Screen dimmer	194
attenuation type	111	Search	
deskew.....	112, 231	configuration.....	177
Probe compensation.....	396	copying search events	179
Probe compensation frequency		copying trigger events.....	179
.....	188	FFT Peak	181
Pulse runt trigger.....	156	navigation.....	179
Pulse measurements	45	save marks.....	180
Pulse width trigger.....	152	set/clear events.....	181
		SECAM.....	146

Segmented memory	
configuration.....	87
infomation.....	94
measurement.....	91
navigation.....	89
overview.....	85
play back.....	90
run.....	88
Serial Bus	
SPI.....	120
Serial number.....	185
Service operation	
about disassembly.....	5
contact.....	400
Setup	
default contents.....	361
file format.....	347
Signal path compensation.....	394
Single trigger mode.....	145
Run/Stop.....	40
Socket server	
function check.....	385
Socket server	
interface.....	384
Source.....	276, 278, 340
SPC.....	394
Specifications.....	404
Spectrum Analyzer	
bandwidth.....	305
center frequency.....	302
connections.....	297
cursors.....	311
detection mode.....	300
Overview.....	295
peak search.....	310
source.....	297
span.....	303
start and stop frequency.....	303
trace options.....	298
vertical scale.....	306, 307
window type.....	306
Spreadsheet file format.....	345
System information.....	185
Tilt stand.....	26
Time setting.....	188
indicator.....	25
Trigger.....	139
Bus	
CAN.....	166
I ² C.....	162
LIN.....	169
Parallel.....	172
SPI.....	165
UART.....	160
edge.....	149
holdoff.....	148
indicator.....	25
logic.....	173
mode.....	149
parameters.....	142
pulse runt.....	156
pulse width.....	152
Rise and fall.....	157
Single.....	40
specification.....	405
status indicator.....	25
Timeout.....	158
overview.....	148
video.....	154
Updating the firmware.....	402
USB	
remote control interface.....	377
Vectors.....	191
Vertical.....	103
accuracy calibration.....	395
basic operation.....	42
position.....	103
scale.....	104
specification.....	404
Vertical scale.....	341
Video trigger.....	154
Waveform	
CSV file contents.....	346
file contents.....	345
how to recall.....	362
how to save.....	356
invert waveform.....	106, 109
play/pause key.....	100
roll mode.....	97
zoom mode.....	98
Waveform color.....	24
Waveform file format.....	344
XY	
specification.....	406
Zoom waveform.....	98