Rack Adapter Panel

GRA-440



Assembly Manual
GW INSTEK PART NO. 82RA-44000M01

This assembly manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.







GRA-440

The GRA-440 rack mount is suited for the GPT-12000 / 15000. The GRA-440 supports the EIA standards for use with standard-sized rack units. The GRA-440 holds one GPT unit and fits in a standard 19" 4U rack.


Rack Mount Adapter Component List and Assembly

| Description | Please check to make sure all the components of the GRA-440 rack mount kit are provided. | | | |
|-------------|--|---------------|---|-----|
| CDA 440 | Item | Part NO. | Description | QTY |
| GRA-440 | 1 | 62RA-440HP101 | L type bracket | 5 |
| Assembly | 2 | 594B-W3008NS1 | Screw BMS M3*8 ISO N (WASHER P.S), ROHS | 2 |
| | 3 | 594B-W4008NS1 | SCREW BMS ,+ ,4*08*0.7P ,ISO ,N (WASHER P.S) ,RoHS | 5 |
| | 4 | 62RA-440LO101 | GRA-440 Bottom cover | 1 |
| | 5 | 62RA-440FP101 | GRA-440 Front plate | 1 |
| | 6 | 62PA-340HD101 | CA PA 3U Handle, ROHS | 2 |
| | 7 | 592B-W4016NS1 | SCREW PMS ,+,4*16 ,ISO ,N , (WASHER P.S) ,RoHS | 4 |

Assembly


Initial setup

1. Remove the 2 screws from rear side of the unit.

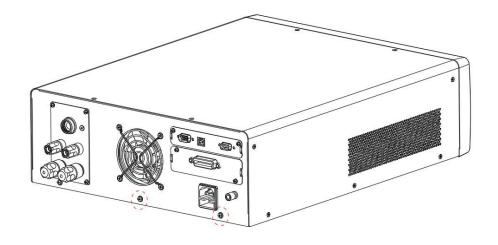




2. Attach the L-type bracket to the unit followed by fixing the 594B-W3008NS1 screws to the unit.

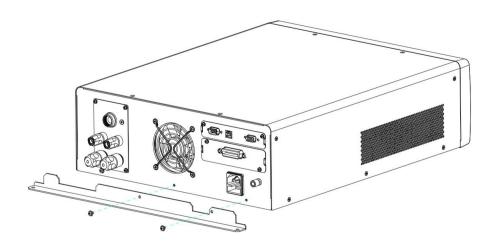


3. Attach the front plate and handles to the bottom plate with fastening the screws.

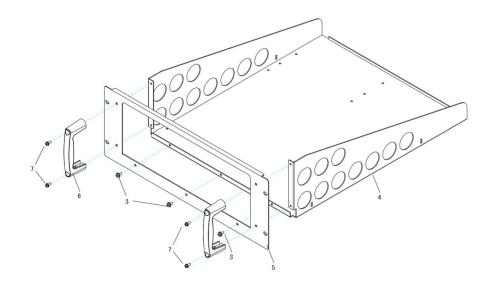



4. Attach the unit with the L-bracket and the 594B-W4010NS1 screws to the bottom plate. Make sure the front panel clicks into the front plate of the rack.

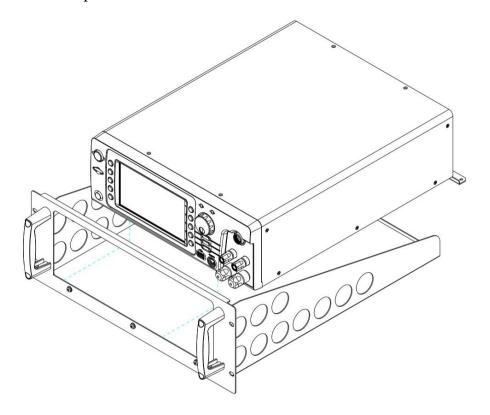

5. Fasten the 2 screws into the L-bracket and the bottom plate firmly to complete assembly.

