

# Multi-phase Programmable AC/DC Power Source

ASR-6000 Series

---

PROGRAMMING MANUAL

Rev. E



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

# Table of Contents

<b>SAFETY INSTRUCTIONS .....</b>	<b>4</b>
<b>GETTING STARTED .....</b>	<b>8</b>
ASR-6000 Series Overview .....	9
Appearance .....	13
<b>REMOTE CONTROL .....</b>	<b>21</b>
Interface Configuration .....	23
Command Syntax.....	44
Command List .....	48
Status Register Overview .....	176
Error List.....	192
<b>APPENDIX .....</b>	<b>201</b>
Factory Default Settings .....	201
<b>INDEX .....</b>	<b>216</b>

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the instrument.

---



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the ASR-6000 or to other properties.



**DANGER** High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

General Guideline • Do not place any heavy object on the ASR-6000.



CAUTION

- Avoid severe impact or rough handling that leads to damaging the ASR-6000.
- Do not discharge static electricity to the ASR-6000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the ASR-6000 unless you are qualified.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- Due to the fact that ASR-6000 unit weights greater than 18kg, please resort to the standard kit GRA-451-E for transport or remove the unit by at least two persons in case of danger occurred.

## Power Supply



## WARNING

- AC Input voltage range:  
200 Vac to 240 Vac  $\pm 10\%$  phase voltage  
380 Vac to 415 Vac  $\pm 10\%$ , line voltage
- Frequency: 47 ~ 63 Hz
- To avoid electrical shock, connect the protective grounding conductor of the AC power cord to an earth ground.
- The power switch that is included in the instrument is not considered a disconnecting device.
- The permanently connected power input is used as the disconnecting device and shall remain readily operable.
  - a. A switch or circuit-breaker must be included in the installation
  - b. It must be suitably located and easily reached
  - c. It must be marked as the disconnecting device for the equipment.
  - d. It shall be located near the equipment
- Do not position the equipment so that it is difficult to operate the disconnecting device.
- Ask for professional technician for installation.
- It requires 200Vac input condition and the maximum input current [30A (ASR-6450), 35A (ASR-6500), 40A (ASR-6600), 45A (ASR-6660)], which conforms to cord diameter by local regulations.
- Breaker, of which the specification is required to larger than 30A (ASR-6450), 35A (ASR-6500), 40A (ASR-6600), 45A (ASR-6660) individually, should be in the near proximity of unit.
- The ASR-6000 model shall be employed in rack-based applications and it shall not be connected to external cord directly. In addition, installation shall be done by a qualified person in accordance with local regulations. The ASR-6000 model is not to be used in standalone scenario.

- Cleaning the ASR-6000
- Disconnect the circuit-breaker or permanently connected power input before cleaning.
  - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
  - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

Operation  
Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 80%, no condensation
- Altitude: < 2000m
- Temperature: 0°C to 40°C

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The ASR-6000 falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage  
environment

- Location: Indoor
- Temperature: -10°C to 70°C
- Relative Humidity: ≤90%, no condensation

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

# G **ETTING STARTED**

This chapter describes the ASR-6000 power supply in a nutshell, including its main features and front / rear panel introduction.

## ASR-6000 series



<b>ASR-6000 Series Overview</b> .....	<b>9</b>
Series lineup .....	9
Main Features .....	10
Accessories .....	11
<b>Appearance</b> .....	<b>13</b>
Front Panel .....	13
Rear Panel.....	18

## ASR-6000 Series Overview

### Series lineup

The ASR-6000 series consists of 4 models, the ASR-6450, ASR-6500, ASR-6600 and ASR-6660, differing in capacity. Note that throughout the user manual, the term “ASR-6000” refers to any of the models, unless stated otherwise.

### 1P Output Condition

Model Name	Power Rating	Max. Output Current	Max. Output Voltage
ASR-6450	4500 VA	45 A / 22.5 A	350 Vrms / 500 Vdc
ASR-6500	5000 VA	50 A / 25 A	350 Vrms / 500 Vdc
ASR-6600	6000 VA	60 A / 30 A	350 Vrms / 500 Vdc
ASR-6660	6600 VA	66 A / 33 A	350 Vrms / 500 Vdc

### 1P3W Output Condition

Model Name	Power Rating	Max. Output Current	Max. Output Voltage
ASR-6450	3000 VA	15 A / 7.5 A	700 Vrms / 1000 Vdc
ASR-6500	3333 VA	16.67 A / 8.33 A	700 Vrms / 1000 Vdc
ASR-6600	4000 VA	20 A / 10 A	700 Vrms / 1000 Vdc
ASR-6660	4400 VA	22 A / 11 A	700 Vrms / 1000 Vdc

### 3P Output Condition (Pre phase)

Model Name	Power Rating	Max. Output Current	Max. Output Voltage
ASR-6450	1500 VA	15 A / 7.5 A	350 Vrms / 500 Vdc
ASR-6500	1667 VA	16.67 A / 8.33 A	350 Vrms / 500 Vdc
ASR-6600	2000 VA	20 A / 10 A	350 Vrms / 500 Vdc
ASR-6660	2200 VA	22 A / 11 A	350 Vrms / 500 Vdc

## Main Features

---

- |             |   |
|-------------|---|
| Performance | <ul style="list-style-type: none"><li>• Maximum phase voltage is 350 Vrms, line voltage is 700 Vrms</li><li>• Maximum DC output voltage is 1000 Vdc</li><li>• Maximum output frequency is 2000 Hz</li><li>• Adjustable Voltage rising time</li><li>• DC full capacity output ability</li><li>• Output voltage total harmonic distortion is less than 0.3% at 50 and 60 Hz</li><li>• Maximum crest factor reached 4 times</li></ul>  |
| Features    | <ul style="list-style-type: none"><li>• Include sine, square, triangle, arbitrary and DC output waveforms</li><li>• Variable voltage, frequency and current limiter</li><li>• 100 steps Harmonic voltage and current analysis ability</li><li>• Supported three phase unbalanced output mode</li><li>• Sequence, simulate and preset memory functions</li><li>• AC line frequency synchronized output</li><li>• USB memory save and recall</li><li>• Remote sense compensator</li><li>• Supported 1P, 1P3W and 3P output phase</li><li>• External control I/O and signal input applications</li><li>• Voltage and current monitor output</li><li>• Voltage control amplifier output</li><li>• PC software, web control and data log functions</li></ul> |
| Interface   | <ul style="list-style-type: none"><li>• Built-in LAN, USB host, USB device and RS232 interface</li><li>• Optional GPIB, DeviceNet and CAN BUS interface</li></ul>   |

## Accessories

Before using the ASR-6000 power source unit, check the package contents to make sure all the standard accessories are included.

Standard Accessories	Part number	Description
		Quick Start Guide
	82GW1SAFE0M*1	Safety guide
	62SR-6K0SC401	Input terminal cover
	62SR-6K0SC301	Output terminal cover
	62SR-6K0CP101	Copper plate for delta connection input (Mark 1)
	62SR-6K0CP201	Copper plate for single phase and Y connection input (Mark 2)
	62SR-6K0CP301	Copper plate for delta connection input (Mark 3)
	62SR-6K0CP401	Copper plate for 1P output (Mark 4)
	GRA-451-E	Rack mount adapter (EIA)
	GTL-246	USB cable (USB 2.0 Type A - Type B cable, approx. 1.2M)
Optional Accessories	Part number	Description
	GRA-451-J	Rack mount adapter (JIS)
	GPW-008	Power Cord SJT 10AWG/3C, 3m Max Length, 105oC, RV5-5*3P, RV5-5*3P UL TYPE
	GPW-012	Power Cord H05VV-F 2.5mm2/5C, 3m Max Length, 105oC, RVS3-5*5P, RVS3-5*5P VDE TYPE
	GPW-013	Power Cord VCTF 2.0mm2/5C, 3m Max Length, 105oC, , RVS2-5*5P, RVS2-5*5P PSE TYPE

GPW-014	Power Cord SJT 10AWG/4C, 3m Max Length, 105oC, RV5-5*4P, RV5-5*4P UL TYPE
GPW-015	Power Cord H05VV-F 2.5mm2/4C, 3m Max Length, 105oC, RVS3-5*4P, RVS3-5*4P VDE TYPE
GTL-232	RS232C cable, approx. 2M
GTL-248	GPIB cable, approx. 2M
ASR-003	GPIB interface card
ASR-004	DeviceNet interface card
ASR-005	CAN BUS interface card
ASR-006	External parallel cable

---




## Note

- GPW-008 is for single phase input only.
  - GPW-012 and 013 are for Y connection input only.
  - GPW-014 and 015 are for Delta connection input only.
-

# Appearance


## Front Panel

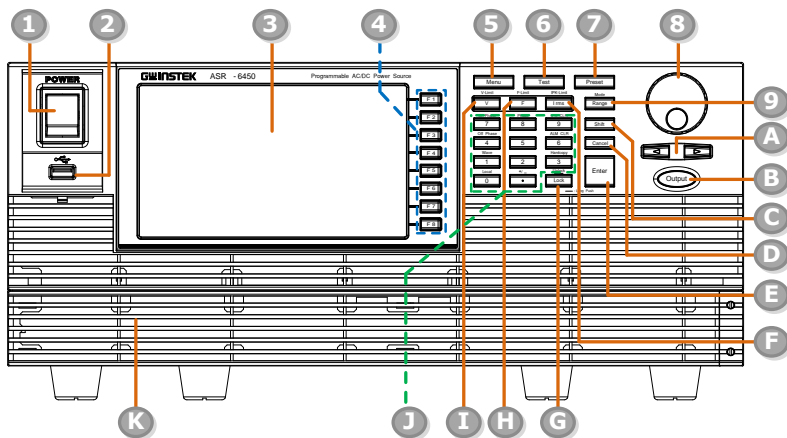



Item Index	Description
1	Power switch button
2	USB interface connector (A Type)
3	LCD screen
4	Function keys (blue zone)
5	Menu key
6	Test key
7	Preset key
8	Scroll wheel
9	Range key/Output mode key
A	Arrow keys
B	Output key
C	Shift key


D	Cancel key
E	Enter key
F	Irms/IPK-Limit button
G	Lock/Unlock button
H	F/F-Limit button
I	V/V-Limit button
J	Numerical Keypad with additional "Shift + key" shortcut functions (green zone)
K	Air inlet











Item	Description
------	-------------

Power Switch		Turn on the mains power
--------------	---	-------------------------

USB A Port		The USB port is used for data transfers and upgrading software. Also, it is available for screenshot hardcopy.
		It supports FAT32 format with maximum 32G storage.















LCD Screen	Displays the setting and measured values or menu system
------------	---

















Function Keys		Assigned to the functions displayed on the right side of the screen.
---------------	---	--

Menu Key		Enters the Main menu or goes back to one of the display modes.
Test Key		Puts the instrument into the Sequence and Simulation control mode.
Preset Key		Puts the instrument into Preset mode.
Arrow Keys		The arrow keys are used to select the digit power of a value that is being edited.
Range Key		Switches between the 100V, 200V and AUTO ranges
Output Mode	 + 	Selects between the AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync and AC-VCA modes.
Scroll Wheel		Used to navigate menu items or for increment/decrement values one step at a time.
Output Key		Turns the output on or off.
Shift Key		Turns on the shift state, which enables shortcut operations with an icon <b>Shift</b> indicated on the top status bar. The shift state, which allows continuous shortcut operations, is kept until another press on shift key again.




When performing shortcut operations, press shift key followed by another shortcut function key. Do Not press both shift key and shortcut function key simultaneously.

Cancel Key		Used to cancel function setting menus or dialogs.
Enter Key		Confirms selections and settings.
Irms	IPK-Limit 	Used for setting the maximum output current.
IPK-Limit	 + IPK-Limit 	Used to set the peak output current limit value.
Lock/Unlock Key	Unlock  — : Long Push	Used to lock or unlock the front panel keys except output key. Simply press to lock, whilst long press to unlock.
F	F-Limit 	Used for setting the output frequency (DC mode N/A).
F-Limit	 + F-Limit 	Used for setting the output frequency limit value (DC mode N/A).
V	V-Limit 	Used for setting the output voltage.
V-Limit	 + V-Limit 	Used for setting the output voltage limit value.
Keypad		Used to input power of a value directly. The  key is used to input decimal / plus or minus.

On Phase	 On Phase 	+ Sets the on phase for the output voltage.
Off Phase	 Off Phase 	+ Sets the off phase for the output voltage.
Output Waveform	 Wave 	+ Selects between the Sine, Square, Triangle and ARB 1~253 waveforms (not available for DC-INT, AC+DC-EXT and AC-EXT).
Local Mode	 Local 	+ Switches operation back to local mode from remote mode.
IPK CLR	 IPK CLR 	+ Used to clear peak output current value.
ALM CLR	 ALM CLR 	+ Clears alarms.
Hardcopy Key	 Hardcopy 	+ Used to take a screenshot. Make sure an USB flash disk is well inserted before the action.
Output Phase	 Phase 	+ Used to switch output phase 1P2W, 1P3W or 3P4W.


Rear Panel

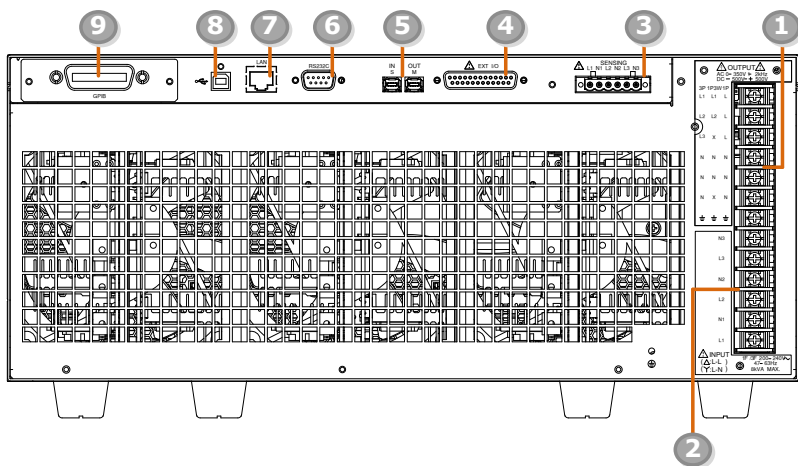

Item Index	Description
1	Output terminal
2	AC power input terminal
3	Remote sensing input terminal
4	External I/O connector
5	External IN/OUT connection in parallel function
6	RS232 connector
7	Ethernet (LAN) connector
8	USB interface connector (B Type)
9	Optional interface Slot <ul style="list-style-type: none"> <li>▪ GPIB card (ASR-003)</li> <li>▪ DeviceNet card (ASR-004)</li> <li>▪ CAN BUS card (ASR-005)</li> </ul>


Item	Description
Output Terminal	<div data-bbox="397 231 588 542" style="display: inline-block; vertical-align: top;"> </div> <div data-bbox="593 231 980 327" style="display: inline-block; vertical-align: top; padding-left: 20px;"> <p>Output terminal (M4 screw type, 8 ~ 18 AWG) (Screw torque value:18kgf-cm)</p> </div>
AC Power Input Terminal	<div data-bbox="397 582 588 869" style="display: inline-block; vertical-align: top;"> </div> <div data-bbox="593 582 980 678" style="display: inline-block; vertical-align: top; padding-left: 20px;"> <p>AC inlet (M4 screw type, 8 ~ 18 AWG) (Screw torque value:18kgf-cm)</p> </div>
Remote Sensing Input Terminal	<div data-bbox="397 909 588 989" style="display: inline-block; vertical-align: top;"> </div> <div data-bbox="593 901 980 1101" style="display: inline-block; vertical-align: top; padding-left: 20px;"> <p>Remote sensing input terminal is for compensation of load wire voltage drop. (M2.5 screw type, 12 ~ 30 AWG) (Screw torque value: 0.5N*m) (Strip length: 7 ~ 8mm)</p> </div>
External Control I/O Connector	<div data-bbox="397 1133 588 1204" style="display: inline-block; vertical-align: top;"> </div> <div data-bbox="593 1133 980 1236" style="display: inline-block; vertical-align: top; padding-left: 20px;"> <p>Used to control ASR-6000 externally by using the logic signal and monitor Sequence function status.</p> </div>
External IN/OUT Connection in Parallel Function	<div data-bbox="397 1268 588 1364" style="display: inline-block; vertical-align: top;"> </div> <div data-bbox="593 1268 980 1369" style="display: inline-block; vertical-align: top; padding-left: 20px;"> <p>The IN (Slave) and OUT (Master) ports are used for connection with external unit in parallel function.</p> </div>

RS232C Connector




The RS232C connector for controlling the ASR-6000 remotely.

Ethernet LAN Port

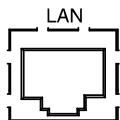


The Ethernet port is used for remote control.

USB B-type Port




USB port for controlling the ASR-6000 remotely.

Optional GPIB Connector




The optional GPIB connector for controlling the ASR-6000 remotely.

Optional CAN BUS Connector



The optional CAN BUS connector for controlling the ASR-6000 remotely.

Optional DeviceNet Connector



The optional DeviceNet connector for controlling the ASR-6000 remotely.

# REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control.

---

<b>Interface Configuration .....</b>	<b>23</b>
Ethernet Remote Interface .....	23
USB Remote Interface .....	24
USB Remote Control Function Check.....	25
RS-232 Remote Interface .....	26
RS232 Remote Control Function Check .....	29
Using Realterm to Establish a Remote Connection	30
Optional Remote Interface .....	33
GPIB Function Check .....	34
Web Server Remote Control Function Check .....	38
Socket Server Function Check.....	39
<b>Command Syntax .....</b>	<b>44</b>
<b>Command List .....</b>	<b>48</b>
<b>Status Register Overview .....</b>	<b>176</b>
Introduction to the Status Registers .....	176
The Status Registers .....	177
Questionable Status Register Group .....	178
Operation Status Register Group .....	181
Warning Status Register Group .....	183
System Lock Status Register Group .....	186
Standard Event Status Register Group.....	188
Status Byte Register & Service Request Enable Register .....	190

<b>Error List .....</b>	<b>192</b>
Command Errors .....	192
Execution Errors .....	196
Device Specific Errors .....	198
Query Errors .....	199

## Interface Configuration

### Ethernet Remote Interface

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.

The ASR-6000 supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.



However, if the DHCP is not present, it will automatically assign an IP address between 169.254.1.0 and 169.254.254.255 using the AUTO-IP configuration when the instrument set on DHCP.

---

Ethernet Parameters	Connection Status(display only)	MAC (display only)
	DHCP	IP Address
	Subnet Mask	Gateway
	DNS	Socket Port (display only)



---

### Ethernet Configuration

1. Connect a LAN cable from the PC to the Ethernet port on the rear panel. 
2. Press the *Menu* key. The Menu setting will appear on the display. 
3. Use the scroll wheel to go to item 3, LAN and press *Enter*.
4. If the LAN cable is installed correctly a connection is active, the *Connection Status* will show *Online*.




- |      |   |
|------|---|
| Mode | <ul style="list-style-type: none"> <li>▪ CDC (communications device class)</li> <li>▪ TMC (test and measurement class)</li> </ul> |
|------|---|

- |       |   |
|-------|---|
| Steps | <ol style="list-style-type: none"> <li>1. Connect the Type A-Type B USB cable from the PC to the rear panel USB B port. </li> <li>2. Press the <i>Menu</i> key. The Menu setting will appear on the display. </li> <li>3. Use the scroll wheel to go to item 4, <i>USB Device</i>.</li> </ol> |
|-------|---|
- 
- |      |          |
|------|----------|
| Mode | CDC, TMC |
|------|----------|
- 
4. If the connection is successful *Connection Status* will change from Offline to Online.

**USB configuration**



- |      |  |
|------|--|
| Exit | <ol style="list-style-type: none"> <li>5. Press <i>Exit[F8]</i> to exit from the rear panel USB settings. </li> </ol> |
|------|--|

**USB Remote Control Function Check**

---

Functionality  
Check

Invoke a terminal application such as Realterm.

ASR-6000 will appear as a COM port on the PC.

To check the COM settings in Windows, see the Device Manager. For example, in Win10 go to the Control panel → System → Hardware tab.

---



Note

If you are not familiar with using a terminal application to send/receive remote commands via a USB connection, please see page 30 for more information.

---

Run this query command via the terminal after the instrument has been configured for USB remote control (page 24).

\*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

GW-INSTEK, ASR-6XXX, GXXXXXXXXX, XX.XX

Manufacturer: GW-INSTEK

Model number : ASR-6XXX

Serial number : GXXXXXXXXX

Software version : XX.XX

---



Note


For further details, please see the programming manual, available on the GW Instek web site @ [www.gwinstek.com](http://www.gwinstek.com).

---


## RS-232 Remote Interface



---

RS-232 Configuration	Connector	BD-9, male
	Parameters	Baud rate, data bits, parity, stop bits.

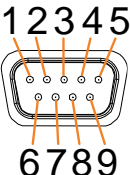Pin Assignment		<p>2: RxD (Receive data)</p> <p>3: TxD (Transmit data)</p> <p>5: GND</p> <p>4, 6 ~ 9: No connection</p>
----------------	---	---


**Pin Connection** Use a Null Modem connection (RS-232 cable) as shown in the diagram below.



- Steps**
1. Connect the RS-232C cable from the PC to the rear panel RS-232 port. 
  2. Press the *Menu* key. The Menu setting will appear on the display. 
  3. Use the scroll wheel to go to item 5, RS232C and press *Enter*.
  4. Set the RS232C relative settings.
 

Baud rate	1200, 2400, 4800, 9600(default), 19200, 38400, 57600, 115200,
Data bits	7 bits, 8 bits(default)
Parity	None(default), Odd, Even
Stop bits	1 bit(default), 2 bits

### RS232C Configuration

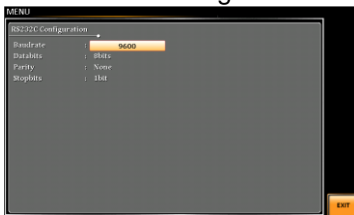

Exit

5. Press *Exit*[F8] to exit from the RS232C settings.



The standard accessory does Not include RS232 data cable. Please purchase the additional GTL-232 which will meet your need for RS232 connection.

## RS232 Remote Control Function Check

---

Functionality  
Check

Invoke a terminal application such as Realterm.

For RS-232, set the COM port, baud rate, stop bit, data bit and parity accordingly.

To check the COM settings in Windows, see the Device Manager. For example, in Win10 go to the Control panel → System → Hardware tab.

---



Note

If you are not familiar with using a terminal application to send/receive remote commands from the serial port, please see page 30 for more information.

---

Run this query command via the terminal after the instrument has been configured for RS-232 remote control (page 26).

\*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

GW-INSTEK, ASR-6XXX, GXXXXXXXX, XX.XX

Manufacturer: GW-INSTEK

Model number : ASR-6XXX

Serial number : GXXXXXXXX

Software version : XX.XX

---



Note

For further details, please see the programming manual, available on the GW Instek web site @ [www.gwinstek.com](http://www.gwinstek.com).

---

## Using Realterm to Establish a Remote Connection

---

**Background** Realterm is a terminal program that can be used to communicate with a device attached to the serial port of a PC or via an emulated serial port via USB.

The following instructions apply to version 2.0.0.70. Even though Realterm is used as an example to establish a remote connection, any terminal program can be used that has similar functionality.

---



Note

Realterm can be downloaded on Sourceforge.net free of charge.


For more information please see <http://realterm.sourceforge.net/>

---

- Operation**
1. Download Realterm and install according to the instructions on the Realterm website.
  2. Connect the ASR-6000 via USB (page 24) or via RS-232 (page 26).
  3. If using RS-232, make note of the configured baud rate, stop bits and parity.
  4. Go to the Windows device manager and find the COM port number for the connection. For example, go to the Start menu > Control Panel > Device Manager.

Double click the *Ports* icon to reveal the connected serial port devices and the COM port for the each connected device.

If using USB, the baud rate, stop bit and parity settings can be viewed by right-clicking the connected device and selecting the *Properties* option.

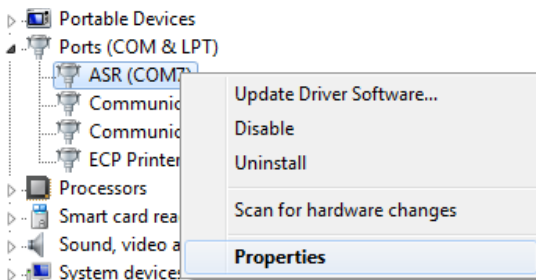

5. Start Realterm on the PC as an administrator.  
Click:  
Start menu>All Programs>RealTerm>realterm


Tip: to run as an administrator, you can right click the Realterm icon in the Windows Start menu and select the *Run as Administrator* option.

6. After Realterm has started, click on the *Port* tab.

Enter the *Baud*, *Parity*, *Data bits*, *Stop bits* and *Port number* configuration for the connection.

The *Hardware Flow Control*, *Software Flow Control* options can be left at the default settings.

Press *Open* to connect to the ASR-6000.

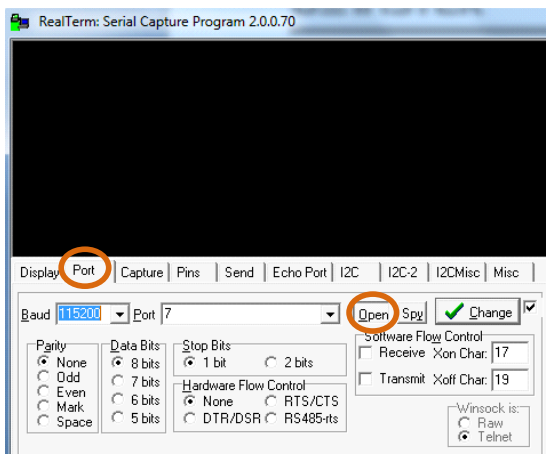

Note

For USB, the baud rate should be fixed to 115,200.


7. Click on the *Send* tab.

In the *EOL* configuration, check on the *+LF* check boxes.

Enter the query:

*\*idn?*

Click on *Send ASCII*.

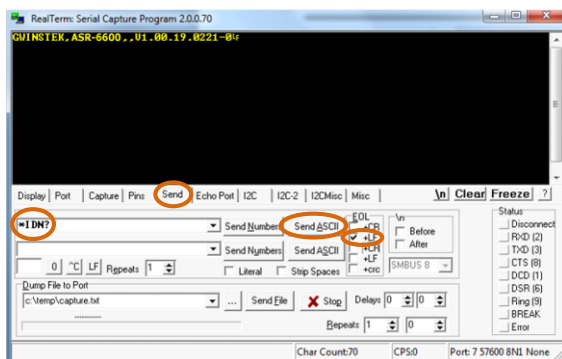

8. The terminal display will return the following:

GW-INSTEK, ASR-6XXX, GXXXXXXXXX, XX.XX  
(manufacturer, model, serial number, software version)

9. If Realterm fails to connect to the ASR-6000, please check all the cables and settings and try again.

### Optional Remote Interface

---

There are up to 3 optional remote interfaces available (GPIB, CAN BUS, DeviceNet) and we simply engage in GPIB here due to SCPI-format programming document. For information related to other remote interfaces like CAN BUS & DeviceNet, please refer to CAN BUS and DeviceNet programming manual, respectively.

#### GPIB Configuration

1. Connect a GPIB cable from the PC to the GPIB port on the rear panel.



2. Press the *Menu* key. The Menu setting will appear on the display.




3. Use the scroll wheel to go to item 6, *Option Interface* and press *Enter*.
4. Set the GPIB address.

---

GPIB Address	0 ~ 30 (10 by default)
--------------	------------------------

---

### GPIB Configuration

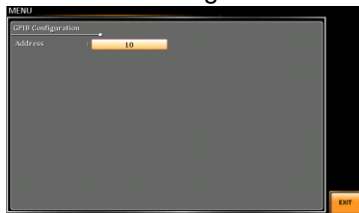

Note

- Only one GPIB address can be used at a time.
- ASR-6000 series can detect optional interface card automatically and the corresponding option interface page will be displayed accordingly.

Exit

5. Press *Exit*[F8] to exit from the GPIB settings.



GPIB Constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
- Unique address assigned to each device
- At least 2/3 of the devices turned On
- No loop or parallel connection



Note

The standard accessory does Not include GPIB data cable. Please purchase the additional GTL-248 which will meet your need for GPIB connection.

### GPIB Function Check

Functionality  
Check

Please use the National Instruments Measurement & Automation Controller software to confirm GPIB/LAN functionality.

See the National Instrument website, <http://www.ni.com> for details.



Note

- For further details, please see the programming manual, available on the GW Instek web site @ [www.gwinstek.com](http://www.gwinstek.com)
- Operating System: Windows XP, 7, 8, 10

Operation

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:




*Start>All Programs>NI MAX*




2. From the Configuration panel access;  
My System>Devices and Interfaces>GPIB0

3. Press the *Scan for Instruments* button.
4. In the *Connected Instruments* panel the ASR-6000 should be detected as *Instrument 0* with the address the same as that configured on the ASR-6000.
5. Double click the *Instrument 0* icon.

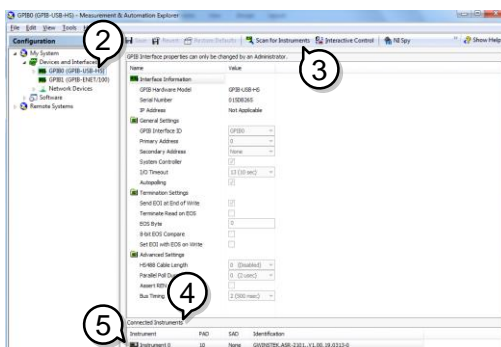

6. Click on *Communicate with Instrument*.
7. Under the Communicator tab, ensure *\*IDN?* is written in the *Send String* text box.
8. Click on the *Query* button to send the *\*IDN?* query to the instrument.
9. The instrument identification string will be returned to the buffer area:

GW-INSTEK, ASR-6XXX, GXXXXXXXXX, XX.XX  
 (manufacturer, model, serial number, software version)

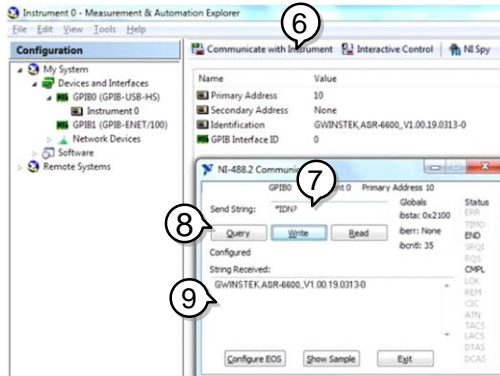

10. The function check is complete.

## Web Server Remote Control Function Check

---


### Functionality Check

Enter the IP address of the power supply (for example: `http://XXX.XXX.XXX.XXX`) in a web browser after the instrument has been configured for LAN (page 23).

The web interface allows you to:

- View the system and information and the network configuration.
- Monitor of measurements and/or full control of the power supplies. If the operator is not near the actual instruments being controlled, particular care must be taken to the appropriate access control limits.

Example:

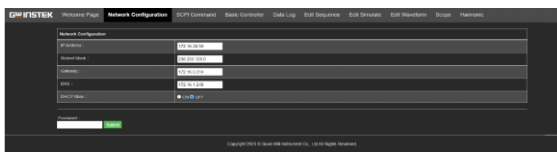

## Socket Server Function Check

---

**Background** To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, [www.ni.com](http://www.ni.com), via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

---

**Requirements** Operating System: Windows XP, 7, 8, 10

---

**Functionality Check** 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


*Start>All Programs>NI MAX*




2. From the Configuration panel access;

*My System>Devices and Interfaces>Network Devices*


3. Press *Add New Network Device>Visa TCP/IP Resource...*

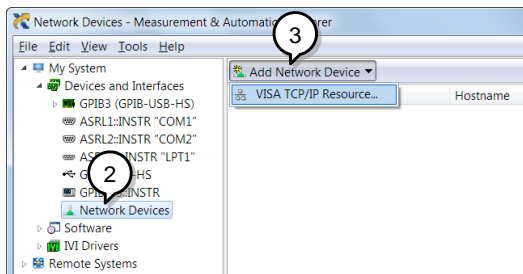


4. Select *Manual Entry of Raw Socket* from the popup window.

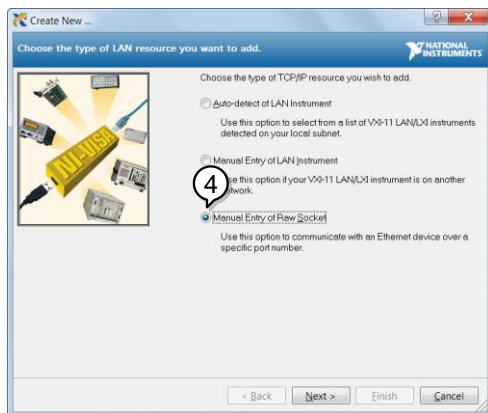


5. Enter the IP address and the port number of the ASR-6000. The port number is fixed at 5025.
6. Double click the Validate button and press *Next*.

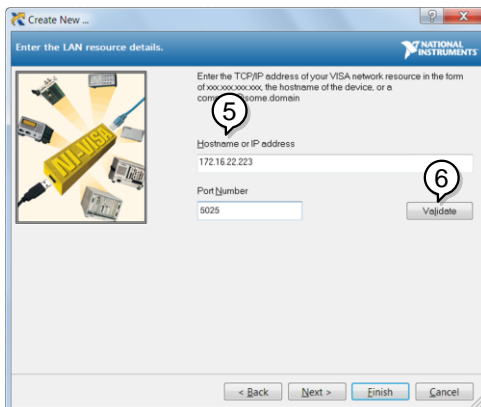

7. Next configure the Alias (name) of the ASR-6000 connection. In this example the Alias is: ASR
8. Click finish.

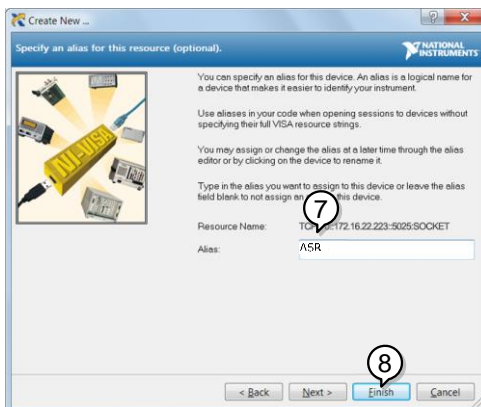

9. The IP address of the power supply will now appear under Network Devices in the configuration panel. Select this icon now.
10. Press *Open VISA Test Panel*.

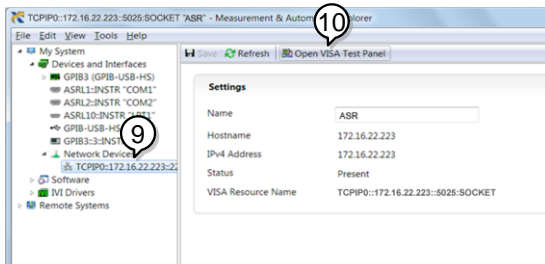


11. Click the *Configuration* Icon. Under the *IO Settings* tab check *Enable Termination Character*. The termination character should be set as *Line Feed - \n*.



12. Click the *Input/Output* icon. Under the *Basic I/O* tab, make sure *\*IDN?\n* is entered in the *Select or Enter Command* drop box.
13. Click *Query*.

The ASR-6000 will return the machine identification string into the buffer area:

GW-INSTEK, ASR-6XXX, GXXXXXXXXX, XX.XX

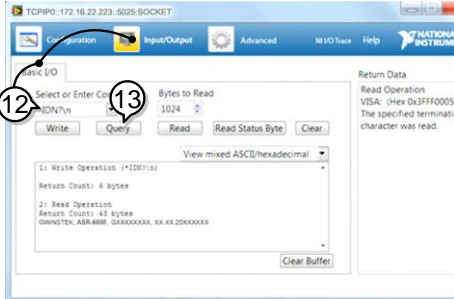

Note


For further details, please see the programming manual, available on the GW Instek web site @ [www.gwinstek.com](http://www.gwinstek.com).

## Command Syntax

Compatible Standard	IEEE488.2	Partial compatibility
	SCPI, 1999	Partial compatibility

**Command Structure**  
 SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

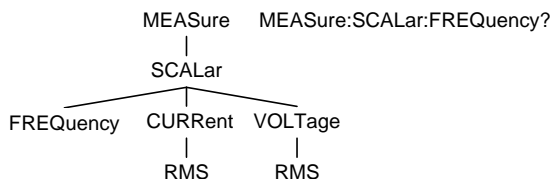

**Command types**  
 There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

### Command types

**Simple**                      A single command with/without a parameter

**Example**                    \*IDN?

---

Query	A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.
-------	--

Example	meas:curr?
---------	------------

---

Compound	Two or more commands on the same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).
----------	---

A semi-colon is used to join two related commands, with the caveat that the last command must begin at the last node of the first command.

Example	meas:volt?;curr?
---------	------------------

A semi-colon and colon are used to combine two commands from different nodes.

Example	meas:volt?;:sour:volt?
---------	------------------------

---



Note  
(Further  
explanation)

A semi-colon(;) is used to connect two commands. A colon(:) at the start of a command indicates that the command starts from the root node. The first command can ignore that first colon. Any commands after the first command (for compound commands) that do not begin with a colon, must begin at the last node of the first command.

---

**Command Forms**      Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.

Long form	:SYSTem:ERRor?
	:SYSTEM:ERROR?
	:system:error?
Short form	SYST:ERR?
	syst:err?

**Square Brackets**      Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.

For example the query “:OUTPut[:STATe]?” has two valid forms, “:OUTPut:STATe?” and “:OUTPut?”.

**Command Format**

	<ol style="list-style-type: none"> <li>1. Command header</li> <li>2. Space</li> <li>3. Parameter 1</li> <li>4. Comma (no space before/after comma)</li> <li>5. Parameter 2</li> </ol>
--	---

---

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<block data>	Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow.	

---

Message Terminator	LF	Line feed code	
--------------------	----	----------------	--

---

## Command List

Common Commands	*CLS.....	56
	*ESE .....	56
	*ESR.....	57
	*IDN .....	57
	*OPC.....	57
	*RCL .....	58
	*RST .....	58
	*SAV .....	58
	*SRE.....	59
	*STB.....	59
	*WAI.....	59
Data/Trace Commands	:DATA   TRACe:SEQuence:CLear .....	60
	:DATA   TRACe:SEQuence:RECall .....	60
	:DATA   TRACe:SEQuence:STORe .....	61
	:DATA   TRACe:SIMulation:CLear .....	61
	:DATA   TRACe:SIMulation:RECall .....	61
	:DATA   TRACe:SIMulation:STORe .....	62
	:DATA   TRACe:WAVe:CLear.....	62
	:DATA   TRACe:WAVe[:DATA] .....	63
Measure Commands	:MEASure[:SCALar]:CURRent:CFACtor .....	65
	:MEASure[:SCALar]:CURRent:HIGH.....	65
	:MEASure[:SCALar]:CURRent:LOW .....	65
	:MEASure[:SCALar]:CURRent:PEAK:HOLD .....	65
	:MEASure[:SCALar]:CURRent[:RMS] .....	65
	:MEASure[:SCALar]:CURRent[:RMS]:TOTal.....	66
	:MEASure[:SCALar]:CURRent:AC .....	67
	:MEASure[:SCALar]:CURRent:AVERage .....	67
	:MEASure[:SCALar]:CURRent:HARMonic[:RMS] ..	67
	:MEASure[:SCALar]:CURRent:HARMonic:RATio..	67
	:MEASure[:SCALar]:FREQuency .....	67
	:MEASure[:SCALar]:LINE:VOLTage[:RMS] .....	68
	:MEASure[:SCALar]:LINE:VOLTage:AVERage....	68

:MEASure[:SCALar]:LINE:VOLTage:HIGH .....	68
:MEASure[:SCALar]:LINE:VOLTage:LOW .....	68
:MEASure[:SCALar]:PEAK:CLear .....	69
:MEASure[:SCALar]:POWer[:AC]:APParent .....	69
:MEASure[:SCALar]:POWer[:AC]:APParent:TOTal ..	69
:MEASure[:SCALar]:POWer[:AC]:PFACTOR .....	69
:MEASure[:SCALar]:POWer[:AC]:PFACTOR:TOTal..	70
:MEASure[:SCALar]:POWer[:AC]:REACTive.....	70
:MEASure[:SCALar]:POWer[:AC]:REACTive:TOTal	70
:MEASure[:SCALar]:POWer[:AC][:REAL] .....	70
:MEASure[:SCALar]:POWer[:AC][:REAL]:TOTal	70
:MEASure[:SCALar]:VOLTage[:RMS] .....	70
:MEASure[:SCALar]:VOLTage[:RMS]:TOTal.....	71
:MEASure[:SCALar]:VOLTage:AC .....	71
:MEASure[:SCALar]:VOLTage:AVERage .....	71
:MEASure[:SCALar]:VOLTage:HIGH .....	71
:MEASure[:SCALar]:VOLTage:LOW .....	71
:MEASure[:SCALar]:VOLTage:HARMonic[:RMS] ...	73
:MEASure[:SCALar]:VOLTage:HARMonic:RATio...	73
:MEASure:CONFigure:SENSing .....	73
:MEASure:AVERage:COUNT .....	74
:MEASure:UPDate:RATE .....	75

Fetch Commands :FETCh[:SCALar]:CURRent:CFACor .....	77
:FETCh[:SCALar]:CURRent:HIGH .....	77
:FETCh[:SCALar]:CURRent:LOW.....	77
:FETCh[:SCALar]:CURRent:PEAK:HOLD .....	77
:FETCh[:SCALar]:CURRent[:RMS] .....	77
:FETCh[:SCALar]:CURRent[:RMS]:TOTal .....	78
:FETCh[:SCALar]:CURRent:AC.....	78
:FETCh[:SCALar]:CURRent:AVERage.....	78
:FETCh[:SCALar]:CURRent:HARMonic[:RMS] .....	78
:FETCh[:SCALar]:CURRent:HARMonic:RATio.....	79
:FETCh[:SCALar]:FREQuency .....	79
:FETCh[:SCALar]:LINE:VOLTage[:RMS].....	79
:FETCh[:SCALar]:LINE:VOLTage:AVERage .....	79
:FETCh[:SCALar]:LINE:VOLTage:HIGH.....	79
:FETCh[:SCALar]:LINE:VOLTage:LOW .....	80
:FETCh[:SCALar]:POWer[:AC]:APParent.....	80

	:FETCh[:SCALar]:POWer[:AC]:APParent:TOTal .....	81
	:FETCh[:SCALar]:POWer[:AC]:PFACtor .....	81
	:FETCh[:SCALar]:POWer[:AC]:PFACtor:TOTal .....	81
	:FETCh[:SCALar]:POWer[:AC]:REACTive.....	81
	:FETCh[:SCALar]:POWer[:AC]:REACTive:TOTal.....	82
	:FETCh[:SCALar]:POWer[:AC][:REAL] .....	82
	:FETCh[:SCALar]:POWer[:AC][:REAL]:TOTal.....	82
	:FETCh[:SCALar]:VOLTage[:RMS].....	82
	:FETCh[:SCALar]:VOLTage[:RMS]:TOTal.....	82
	:FETCh[:SCALar]:VOLTage:AC .....	82
	:FETCh[:SCALar]:VOLTage:AVERage .....	83
	:FETCh[:SCALar]:VOLTage:HIGH.....	83
	:FETCh[:SCALar]:VOLTage:LOW .....	83
	:FETCh[:SCALar]: VOLTage:HARMonic[:RMS] .....	83
	:FETCh[:SCALar]: VOLTage:HARMonic:RATio.....	85
Memory	:MEMory:RCL.....	86
Commands	:MEMory:SAV .....	86
Output	:OUTPut:IMPedance .....	87
Commands	:OUTPut:IMPedance:INDuctance.....	87
	:OUTPut:IMPedance:RESistance .....	88
	:OUTPut[:STATe] .....	89
	:OUTPut:PON .....	89
	:OUTPut:PROTection:CLEar .....	90
	:OUTPut:RELay .....	90
	:OUTPut:SStart[:STATe][:RISE] .....	90
	:OUTPut:SStart[:STATe]:FALL.....	90
	:OUTPut:SStart:TIME[:RISE] .....	91
	:OUTPut:SStart:TIME:FALL.....	91
Status Commands	:STATus:OPERation:CONDition.....	92
	:STATus:OPERation:ENABLE .....	92
	:STATus:OPERation[:EVENT] .....	93
	:STATus:OPERation:NTRansition.....	93
	:STATus:OPERation:PTRansition.....	93
	:STATus:QUEStionable[:EVENT].....	94

	:STATus:QUESTionable:CONDition .....	94
	:STATus:QUESTionable:ENABle .....	94
	:STATus:QUESTionable:NTRansition .....	94
	:STATus:QUESTionable:PTRansition .....	95
	:STATus:PRESet .....	95
	:STATus:WARNIing:CONDition .....	96
	:STATus:WARNIing:ENABle .....	96
	:STATus:WARNIing[:EVENt] .....	96
	:STATus:WARNIing:NTRansition .....	97
	:STATus:WARNIing:PTRansition .....	97
	:STATus:LOCK:CONDition .....	97
	:STATus:LOCK:ENABle .....	97
	:STATus:LOCK[:EVENt] .....	98
	:STATus:LOCK:NTRansition .....	98
	:STATus:LOCK:PTRansition .....	98
System	:SYSTem:ARBITrary:EDIT:BUILtin .....	100
Commands	:SYSTem:ARBITrary:EDIT:SURGe .....	101
	:SYSTem:ARBITrary:EDIT:STAir .....	101
	:SYSTem:ARBITrary:EDIT:CFACTOR2 .....	102
	:SYSTem:ARBITrary:EDIT:CFACTOR1 .....	102
	:SYSTem:ARBITrary:EDIT:CLIP .....	103
	:SYSTem:ARBITrary:EDIT:STORE .....	103
	:SYSTem:ARBITrary:EDIT:TRIangle .....	104
	:SYSTem:ARBITrary:EDIT:DIP .....	105
	:SYSTem:ARBITrary:EDIT:LFRing .....	106
	:SYSTem:ARBITrary:EDIT:RIPple .....	108
	:SYSTem:ARBITrary:EDIT:HARMonic .....	109
	:SYSTem:ARBITrary:EDIT:STORE:APPLY<1   3> ..	111
	:SYSTem:BEEPPer:STATE .....	112
	:SYSTem:COMMunicate:INTerface:ADDRes .....	112
	:SYSTem:COMMunicate:INTerface:BAUD .....	113
	:SYSTem:COMMunicate:LAN:DHCP .....	113
	:SYSTem:COMMunicate:LAN:DNS .....	114
	:SYSTem:COMMunicate:LAN:GATeway .....	114
	:SYSTem:COMMunicate:LAN:IPADdress .....	114
	:SYSTem:COMMunicate:LAN:MAC .....	115
	:SYSTem:COMMunicate:LAN:SMASK .....	115
	:SYSTem:COMMunicate:RLState .....	115

:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:BAUD .....	116
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:BITS .....	116
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:PARity .....	117
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:SBITs .....	118
:SYSTem:COMMunicate:TCPIP:CONTRol .....	118
:SYSTem:COMMunicate:USB:FRONt:STATe .....	119
:SYSTem:COMMunicate:USB:REAR:STATe .....	119
:SYSTem:CONFigure[:MODE] .....	119
:SYSTem:CONFigure:EXTio[:STATe] .....	120
:SYSTem:CONFigure:EXTernal:INPut.....	120
:SYSTem:CONFigure:MONitor:AMPLitude.....	120
:SYSTem:CONFigure:MONitor:SOURce<1   2> ...	121
:SYSTem:CONFigure:TRIGger:OUTPut:SElect ...	121
:SYSTem:CONFigure:TRIGger:OUTPut:SOURce ..	122
:SYSTem:CONFigure:TRIGger:OUTPut:WIDTh...	123
:SYSTem:ERRor .....	123
:SYSTem:ERRor:ENABle .....	123
:SYSTem:HOLD:STATe .....	124
:SYSTem:PKHold:TIME.....	124
:SYSTem:KLOCK .....	124
:SYSTem:REBoot.....	125
:SYSTem:VUNit .....	125
:SYSTem:INTerlock.....	125

Source	:SYSTem:CONFigure:PHASe.....	127
Commands	:INSTrument:EDIT .....	128
	:INSTrument:SElect .....	128
	[:SOURce]:CURRent:LIMit:PEAK:HIGH .....	129
	[:SOURce]:CURRent:LIMit:PEAK:LOW .....	129
	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude] .....	129
	[:SOURce]:CURRent:LIMit:PEAK:MODE.....	130
	[:SOURce]:CURRent:LIMit:RMS:MODE .....	131
	[:SOURce]:FREQuency:LIMit:HIGH .....	131
	[:SOURce]:FREQuency:LIMit:LOW .....	132
	[:SOURce]:FREQuency[:IMMEdiate] .....	132

	[.:SOURce]:FUNctIon[:SHAPe][:IMMediate].....	133
	[.:SOURce]:FUNctIon:THD:FORMat .....	135
	[.:SOURce]:LINE:VOLTage[:LEVel][:IMMediate][:AM PLitude] .....	135
	[.:SOURce]:LINE:VOLTage[:LEVel][:IMMediate]:OFFS et .....	136
	[.:SOURce]:MODE.....	136
	[.:SOURce]:PHASe:BALance .....	137
	[.:SOURce]:PHASe:MODE .....	137
	[.:SOURce]:PHASe:PHASe.....	138
	[.:SOURce]:PHASe:RELock.....	138
	[.:SOURce]:PHASe:SEtChange:STATe.....	139
	[.:SOURce]:PHASe:STARt:STATe .....	139
	[.:SOURce]:PHASe:STOP:STATe.....	140
	[.:SOURce]:PHASe:STARt[:IMMediate].....	140
	[.:SOURce]:PHASe:STOP[:IMMediate] .....	141
	[.:SOURce]:PHASe:SYNC[:IMMediate] .....	141
	[.:SOURce]:READ .....	142
	[.:SOURce]:VOLTagE:RANGe .....	143
	[.:SOURce]:VOLTagE:RESPonse .....	143
	[.:SOURce]:VOLTagE:LIMit:RMS .....	144
	[.:SOURce]:VOLTagE:LIMit:PEAK.....	144
	[.:SOURce]:VOLTagE:LIMit:HIGH.....	145
	[.:SOURce]:VOLTagE:LIMit:LOW .....	145
	[.:SOURce]:VOLTagE[:LEVel][:IMMediate] [:AMPLitude] .....	146
	[.:SOURce]:VOLTagE[:LEVel][:IMMediate]:OFFSet	146
	[.:SOURce]:SQUare:DCYCLE.....	147
Sequence	[.:SOURce]:SEQuence:INSTrument:SElect.....	148
Commands	[.:SOURce]:SEQuence:CPARAmeter .....	149
	[.:SOURce]:SEQuence:CSTep.....	150
	[.:SOURce]:SEQuence:CTIME.....	150
	[.:SOURce]:SEQuence:CJUMp:CNT .....	150
	[.:SOURce]:SEQuence:NSPARAmeter .....	151
	[.:SOURce]:SEQuence:SPARAmeter .....	152
	[.:SOURce]:SEQuence:STEP .....	153
	[.:SOURce]:SEQuence:CONDition .....	154
	:TRIGger:SEQuence:SElectEd:EXECute .....	154


Simulate	[:SOURce]:SIMulation:CONDition .....	156
Commands	[:SOURce]:SIMulation:ABNormal:CODE .....	156
	[:SOURce]:SIMulation:ABNormal:FREQuency .....	157
	[:SOURce]:SIMulation:ABNormal:PHASe	
	:START:ENABLE.....	157
	[:SOURce]:SIMulation:ABNormal:PHASe	
	:START[:IMMediate] .....	157
	[:SOURce]:SIMulation:ABNormal:PHASe	
	:STOP:ENABLE .....	158
	[:SOURce]:SIMulation:ABNormal:PHASe	
	:STOP[:IMMediate] .....	158
	[:SOURce]:SIMulation:ABNormal:TIME .....	159
	[:SOURce]:SIMulation:ABNormal:VOLTage .....	159
	[:SOURce]:SIMulation:CSTep.....	160
	[:SOURce]:SIMulation:CTIME .....	161
	[:SOURce]:SIMulation:CREPeat:COUNt? .....	161
	[:SOURce]:SIMulation:INITial:CODE .....	162
	[:SOURce]:SIMulation:INITial:FREQuency .....	162
	[:SOURce]:SIMulation:INITial:PHASe:START:ENABLE	
	.....	163
	[:SOURce]:SIMulation:INITial:PHASe:START[:IMMediate]	
	ate] .....	163
	[:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE	
	.....	164
	[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate]	
	ate] .....	164
	[:SOURce]:SIMulation:INITial:VOLTage .....	165
	[:SOURce]:SIMulation:NORMal<1   2>:CODE.....	165
	[:SOURce]:SIMulation:NORMal 1:FREQuency .....	166
	[:SOURce]:SIMulation:NORMal<1   2>	
	:PHASe:START:ENABLE .....	166
	[:SOURce]:SIMulation:NORMal<1   2>	
	:PHASe:START[:IMMediate].....	167
	[:SOURce]:SIMulation:NORMal<1   2>	
	:PHASe:STOP:ENABLE.....	167
	[:SOURce]:SIMulation:NORMal<1   2>	
	:PHASe:STOP[:IMMediate] .....	168
	[:SOURce]:SIMulation:NORMal<1   2>:TIME .....	168

	[.:SOURce]:SIMulation:NORMal 1:VOLTage .....	169
	[.:SOURce]:SIMulation:REPeat:COUNt .....	169
	[.:SOURce]:SIMulation:REPeat:ENABle.....	170
	[.:SOURce]:SIMulation:TRANsition<1   2>:TIME ...	170
	[.:SOURce]:SIMulation:TRANsition<1   2>:CODE .	171
	:TRIGger:SIMulation:SELected:EXECute .....	171
Input Commands	:INPut:SOURce .....	172
	:INPut:GAIN.....	172
	:INPut:SYNC:SOURce.....	173
Display	:DISPlay[:WINDow]:DESign:MODE.....	174
Commands	:DISPlay[:WINDow]:MEASure:SOURce<1   2   3   4> .	174

## Common Commands

*CLS.....	56
*ESE.....	56
*ESR.....	57
*IDN.....	57
*OPC.....	57
*RCL.....	58
*RST.....	58
*SAV.....	58
*SRE.....	59
*STB.....	59
*WAI.....	59



### \*CLS



**Description** The \*CLS command clears all the event registers, including the status byte, event status and error queue.

**Syntax** \*CLS

### \*ESE



**Description** Sets or queries the Standard Event Status Enable register.

**Syntax** \*ESE <NR1>

**Query Syntax** \*ESE?

**Parameter** <NR1> 0~255

**Return parameter** <NR1> Returns the bit sum of the Standard Event Status Enable register.

**\*ESR**

→ Query

**Description**            Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read.

**Query Syntax**            \*ESR?

**Return parameter**    <NR1>    Returns the bit sum of the Standard Event Status (Event) register and clears the register.

**\*IDN**

→ Query

**Description**            Queries the manufacturer, model name, serial number, and firmware version of the ASR.

**Query Syntax**            \*IDN?

**Return parameter**    <string>    Returns the instrument identification as a string in the following format:  
 GW-INSTEK,ASR-XXXX,GXXXXXXXX,XX.XX  
 Manufacturer: GW-INSTEK  
 Model number : ASR-XXXX  
 Serial number : GXXXXXXXX  
 Firmware version : XX.XX

**\*OPC**


→ Query

**Description**            The \*OPC? Query returns 1 when all the outstanding commands have completed.

**Query Syntax**            \*OPC?

**Return parameter**    1            Returns 1 when all the outstanding commands have completed.

**\*RCL**




**Description**      Recalls the contents stored in memory slot M0 ~ M9. These memory slots are mapped to the preset settings.

**Syntax**            \*RCL {<NR1> | MINimum | MAXimum}

<b>Parameter</b>	<b>&lt;NR1&gt;</b>	0 ~ 9 (as memory M0 ~ M9)
	<b>MIN</b>	Recalls the M0 memory contents.
	<b>MAX</b>	Recalls the M9 memory contents.


**\*RST**



**Description**      Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.

**Syntax**            \*RST



**\*SAV**





**Description**      Saves the settings into memory slot M0 ~ M9. These memory slots are mapped to the preset settings.

**Syntax**            \*SAV {<NR1> | MINimum | MAXimum}

<b>Return parameter</b>	<b>&lt;NR1&gt;</b>	0 ~ 9 (as memory M0 ~ M9)
	<b>MIN</b>	Saves to the M0 memory slot.
	<b>MAX</b>	Saves to the M9 memory slot.

 	
<b>*SRE</b>	
Description	Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests.
Syntax	*SRE <NR1>
Query Syntax	*SRE?
Parameter	<NR1> 0~255
Return parameter	<NR1> Returns the bit sum of the Service Request Enable register.

	
<b>*STB</b>	
Description	Queries the bit sum of the Status Byte register with MSS (Master summary Status) replacing the RQS bit (bit 6).
Query Syntax	*STB?
Return parameter	<NR1> Returns the bit sum of the Status Byte register with the MSS bit (bit 6).

	
<b>*WAI</b>	
Description	Prevents any other commands or queries from being executed until all outstanding commands have completed.
Syntax	*WAI

## Trace/Data Commands




Note

The TRACE and DATA node for the following commands are functionally equivalent.


:DATA   TRACe:SEQuence:CLEAr .....	60
:DATA   TRACe:SEQuence:RECall .....	60
:DATA   TRACe:SEQuence:STORE .....	61
:DATA   TRACe:SIMulation:CLEAr .....	61
:DATA   TRACe:SIMulation:RECall .....	61
:DATA   TRACe:SIMulation:STORE .....	62
:DATA   TRACe:WAVe:CLEAr.....	62
:DATA   TRACe:WAVe[:DATA] .....	63

### :DATA | TRACe:SEQuence:CLEAr



Description	Clears the sequence data for the selected save memory (Seq0 ~ Seq9).	
Syntax	:DATA   TRACe:SEQuence:CLEAr {<NR1>   MINimum   MAXimum}	
Parameter	<NR1>	0~9
	MIN	0
	MAX	9
Example	:DATA:SEQ:CLE 1 Clears the sequence data from Seq1.	

### :DATA | TRACe:SEQuence:RECall



Description	Loads the sequence data. This command is the equivalent to recalling a sequence memory in the Sequence mode.	
Syntax	:DATA   TRACe:SEQuence:RECall {<NR1>   MINimum   MAXimum}	
Parameter	<NR1>	0~9 (Seq0 ~ Seq9).
	MIN	0

MAX 9

Example :DATA:SEQ:REC 1  
Loads the data from Seq1.

**:DATA|TRACe:SEQuence:STORe** (Set) →

Description Saves the sequence data. This command is the equivalent to saving a sequence memory in Sequence mode.

Syntax :DATA|TRACe:SEQuence:STORe  
{<NR1>|MINimum|MAXimum}

Parameter <NR1> 0~9 (Seq0 ~ Seq9).  
MIN 0  
MAX 9

Example :DATA:SEQ:STOR 1  
Saves the data from Seq1.

**:DATA|TRACe:SIMulation:CLEAr** (Set) →

Description Clears the simulation data for the selected save memory (SIM0 ~ SIM9).

Syntax :DATA|TRACe:SIMulation:CLEAr  
{<NR1>|MINimum|MAXimum}

Parameter <NR1> 0~9 (SIM0 ~ SIM9).  
MIN 0  
MAX 9

Example :DATA:SIM:CLE 1  
Clears the simulation data from SIM1.

**:DATA|TRACe:SIMulation:RECall** (Set) →

Description Loads the simulation data. This command is the equivalent to recalling a simulation memory in the Simulation mode (SIM0~SIM9).

Syntax	:DATA TRACe:SIMulation:RECall {<NR1> MINimum MAXimum}
Parameter	<NR1> 0~9 (SIM0 ~ SIM9). MIN 0 MAX 9
Example	:DATA:SIM:REC 1 Loads the data from SIM1.

**:DATA|TRACe:SIMulation:STORE Set →**

Description	Saves the simulation data. This command is the equivalent saving a simulation memory in Simulation mode (SIM0 ~ SIM9).
Syntax	:DATA TRACe:SIMulation:STORE {<NR1> MINimum MAXimum}
Parameter	<NR1> 0~9 (SIM0 ~ SIM9). MIN 0 MAX 9
Example	:DATA:SIM:STOR 1 Saves the data from SIM1.

**:DATA|TRACe:WAVe:CLEAr Set →**

Description	Clears the ARB 1-253 data for the selected wave group.
Syntax	:DATA TRACe:WAVe:CLEAr {<NR1> MINimum MAXimum}
Parameter	<NR1> 1~253 (ARB1 ~ ARB253). MIN 1 (ARB1) MAX 253 (ARB253)
Example	:DATA:WAV:CLE 13 Clears the wave data from ARB13.

:DATA | TRACe:WAVE[:DATA]

Set →

Description	Sets the arbitrary wave.
Syntax	:DATA   TRACe:WAVE[:DATA] {<NR1>   <Binary Data>}
Parameter	<p>&lt;NR1&gt; 1 - 253 (ARB 1 - 253)</p> <p>Binary Data includes the #48192&lt;DAB&gt;...&lt;DAB&gt;</p> <ul style="list-style-type: none"> <li># Indicates the block data is sent.</li> <li>4 Indicates the number of subsequent numbers.</li> <li>8192 Indicates the number of subsequent byte data.</li> <li>&lt;DAB&gt;... Indicates 16-bit with 4096 words waveform data. Plus, the data format of wave is the big endian in the form of two's complement.</li> <li>&lt;DAB&gt;</li> </ul>
Example	TRAC:WAV 1, #48192<DAB>...<DAB>

## Measure Commands

:MEASure[:SCALar]:CURRent:CFACtor .....	65
:MEASure[:SCALar]:CURRent:HIGH .....	65
:MEASure[:SCALar]:CURRent:LOW .....	65
:MEASure[:SCALar]:CURRent:PEAK:HOLD .....	65
:MEASure[:SCALar]:CURRent[:RMS] .....	65
:MEASure[:SCALar]:CURRent[:RMS]:TOTal.....	66
:MEASure[:SCALar]:CURRent:AC .....	67
:MEASure[:SCALar]:CURRent:AVERAge .....	67
:MEASure[:SCALar]:CURRent:HARMonic[:RMS] ..	67
:MEASure[:SCALar]:CURRent:HARMonic:RATio..	67
:MEASure[:SCALar]:FREQuency .....	67
:MEASure[:SCALar]:LINE:VOLTag[:RMS] .....	68
:MEASure[:SCALar]:LINE:VOLTag:AVERAge....	68
:MEASure[:SCALar]:LINE:VOLTag:HIGH .....	68
:MEASure[:SCALar]:LINE:VOLTag:LOW.....	68
:MEASure[:SCALar]:PEAK:CLEar.....	69
:MEASure[:SCALar]:POWer[:AC]:APParent .....	69
:MEASure[:SCALar]:POWer[:AC]:APParent:TOTal..	69
:MEASure[:SCALar]:POWer[:AC]:PFACtor.....	69
:MEASure[:SCALar]:POWer[:AC]:PFACtor:TOTal .	70
:MEASure[:SCALar]:POWer[:AC]:REACTive .....	70
:MEASure[:SCALar]:POWer[:AC]:REACTive:TOTal .	70
:MEASure[:SCALar]:POWer[:AC][:REAL] .....	70
:MEASure[:SCALar]:POWer[:AC][:REAL]:TOTal	70
:MEASure[:SCALar]:VOLTag[:RMS] .....	70
:MEASure[:SCALar]:VOLTag[:RMS]:TOTal .....	71
:MEASure[:SCALar]:VOLTag:AC.....	71
:MEASure[:SCALar]:VOLTag:AVERAge.....	71
:MEASure[:SCALar]:VOLTag:HIGH .....	71
:MEASure[:SCALar]:VOLTag:LOW.....	71
:MEASure[:SCALar]:VOLTag:HARMonic[:RMS]...	73
:MEASure[:SCALar]:VOLTag:HARMonic:RATio ..	73
:MEASure:CONFigure:SENSing .....	73
:MEASure:AVERAge:COUNT.....	74
:MEASure:UPDate:RATE.....	75

:MEASure[:SCALar]:CURRent:CFACtor → [Query](#)

Description Returns the output current crest factor (CF).

Query syntax :MEASure[:SCALar]:CURRent:CFACtor?

Return parameter <NR2> Returns the crest factor.

:MEASure[:SCALar]:CURRent:HIGH → [Query](#)

Description Returns the output current maximum peak value (Imax).

Note: Current maximum peak value is defined as the highest peak value in the complete period.

Query syntax :MEASure[:SCALar]:CURRent:HIGH?

Return parameter <NR2> Returns the Imax value in amps.

:MEASure[:SCALar]:CURRent:LOW → [Query](#)

Description Returns the output current minimum value (Imin).

Note: Current minimum value is defined as the lowest value in the complete period.

Query syntax :MEASure[:SCALar]:CURRent:LOW?

Return parameter <NR2> Returns the Imin value in amps.

:MEASure[:SCALar]:CURRent:PEAK:HOLD → [Query](#)

Description Returns the current peak hold value in amps (IPK Hold).

Query syntax :MEASure[:SCALar]:CURRent:PEAK:HOLD?

Return <NR2> Returns the peak hold value in amps.

:MEASure[:SCALar]:CURRent[:RMS] → [Query](#)

Description	Returns the output current (Irms).
Query syntax	:MEASure[:SCALar]:CURRent[:RMS]?
Return	<NR2> Returns the current value in Irms.

**:MEASure[:SCALar]:CURRent[:RMS]:TOTal**      → **Query**

Description	Returns the total of output current (Irms).
Query syntax	:MEASure[:SCALar]:CURRent[:RMS]:TOTal?
Return	<NR2> Returns the total of current value in Irms.

**:MEASure[:SCALar]:CURRent:AC** → **Query**

Description	Returns the output AC current (Irms).
Query syntax	:MEASure[:SCALar]:CURRent:AC?
Return	<NR2> Returns the AC current value in Irms.

**:MEASure[:SCALar]:CURRent:AVERage** → **Query**

Description	Returns the current average value (Iavg).
Query syntax	:MEASure[:SCALar]:CURRent:AVERage?
Return	<NR2> Returns the current average value in amps.

**:MEASure[:SCALar]:CURRent:HARMonic[:RMS]** → **Query**

Description	Returns 101 values covering Total and order 1 to 100 current (Irms) in harmonic. (Only AC-INT and 50 / 60 Hz Active)
Query syntax	:MEASure[:SCALar]:CURRent:HARMonic[:RMS]?
Return	<NR2>,<NR2>, <NR2>, <NR2>..., etc. Returns the entire 101 values containing Total and order 1 to 100 current (Irms) in harmonic.

**:MEASure[:SCALar]:CURRent:HARMonic:RATio** → **Query**

Description	Returns 101 values covering Total and order 1 to 100 current (Ratio) in harmonic. (Only AC-INT and 50 / 60 Hz Active)
Query syntax	:MEASure[:SCALar]:CURRent:HARMonic:RATio?
Return	<NR2>,<NR2>, <NR2>, <NR2>..., etc. Returns the entire 101 values containing Total and order 1 to 100 current (Ratio) in harmonic.

**:MEASure[:SCALar]:FREQuency** → **Query**

Description Returns the SYNC signal source frequency in Hz. The external sync signal frequency measurement range is 10.0 Hz to 2100.0 Hz. (Only AC+DC-sync or AC-sync Active)

Query syntax :MEASure[:SCALar]:FREQUency?

Return <NR2> Returns the SYNC frequency in Hz.

**:MEASure[:SCALar]:LINE:VOLTage[:RMS]** → **Query**

Description Returns the line voltage (Vrms).

Syntax :MEASure[:SCALar]:LINE:VOLTage[:RMS]?

Return <NR2> Returns the line voltage value in Vrms.

**:MEASure[:SCALar]:LINE:VOLTage:AVERage** → **Query**

Description Returns the line voltage average value (Vavg).

Syntax :MEASure[:SCALar]:LINE:VOLTage:AVERage?

Return <NR2> Returns the line voltage average value in volts.

**:MEASure[:SCALar]:LINE:VOLTage:HIGH** → **Query**

Description Returns the output line voltage maximum peak value (Vmax).

Note: Line voltage maximum peak value is defined as the highest peak value in the complete period.

Query syntax :MEASure[:SCALar]:LINE:VOLTage:HIGH?

Return parameter <NR2> Returns the line Vmax value in volts.

**:MEASure[:SCALar]:LINE:VOLTage:LOW** → **Query**

Description Returns the output line voltage minimum value (Vmin).

Note: Line voltage minimum value is defined as the lowest value in the complete period.

Query syntax :MEASure[:SCALar]:VOLTage:LOW?

Return parameter <NR2> Returns the line Vmin value in volts.

**:MEASure[:SCALar]:PEAK:CLEar** (Set) →

Description Clears the peak-hold value.

Syntax :MEASure[:SCALar]:PEAK:CLEar <NR1>|ALL|L1|L2|L3

Parameter	ALL   0	Clear the All phase peak hold value.
	L1   1	Clear L1 phase peak hold value.
	L2   2	Clear L2 phase peak hold value.
	L3   3	Clear L3 phase peak hold value.

Example :MEASure[:SCALar]:PEAK:CLEar ALL  
Clear the All phase peak hold value.

**:MEASure[:SCALar]:POWER[:AC]:APParent** → (Query)

Description Returns the apparent power (S).

Query syntax :MEASure[:SCALar]:POWER[:AC]:APParent?

Return <NR2> Returns the apparent power in VA.

**:MEASure[:SCALar]:POWER[:AC]:APParent:TOTal** → (Query)

Description Returns the total of apparent power (S).

Query syntax :MEASure[:SCALar]:POWER[:AC]:APParent:TOTal?

Return <NR2> Returns the total of apparent power in VA.

**:MEASure[:SCALar]:POWER[:AC]:PFACTOR** → (Query)

Description Returns the power factor (PF).

Query syntax :MEASure[:SCALar]:POWER[:AC]:PFACTOR?

Return <NR2> Returns the power factor.

**:MEASure[:SCALar]:POWER[:AC]:PFACTOR:TOTAL** → **Query**

Description	Returns the total of power factor (PF).
Query syntax	:MEASure[:SCALar]:POWER[:AC]:PFACTOR:TOTAL?
Return	<NR2> Returns the total of power factor.

**:MEASure[:SCALar]:POWER[:AC]:REACTIVE** → **Query**

Description	Returns the reactive power (Q).
Query syntax	:MEASure[:SCALar]:POWER[:AC]:REACTIVE?
Return	<NR2> Returns the reactive power in VAR.

**:MEASure[:SCALar]:POWER[:AC]:REACTIVE:TOTAL** → **Query**

Description	Returns the total of reactive power (Q).
Query syntax	:MEASure[:SCALar]:POWER[:AC]:REACTIVE:TOTAL?
Return	<NR2> Returns the total of reactive power in VAR.

**:MEASure[:SCALar]:POWER[:AC][:REAL]** → **Query**

Description	Returns the active power in Watts (P).
Query syntax	:MEASure[:SCALar]:POWER[:AC][:REAL]?
Return	<NR2> Returns the power in Watts.

**:MEASure[:SCALar]:POWER[:AC][:REAL]:TOTAL** → **Query**

Description	Returns the total of active power in Watts (P).
Query syntax	:MEASure[:SCALar]:POWER[:AC][:REAL]:TOTAL?
Return	<NR2> Returns the total of power in Watts.

**:MEASure[:SCALar]:VOLTage[:RMS]** → **Query**

Description	Returns the voltage (Vrms).
-------------	-----------------------------

Query syntax	:MEASure[:SCALar]:VOLTage[:RMS]?
Return	<NR2> Returns the voltage value in Vrms.

### :MEASure[:SCALar]:VOLTage[:RMS]:TOTal → Query

Description	Returns the total of voltage (Vrms).
Query syntax	:MEASure[:SCALar]:VOLTage[:RMS]:TOTal?
Return	<NR2> Returns the total of voltage value in Vrms.

### :MEASure[:SCALar]:VOLTage:AC → Query

Description	Returns the AC voltage (Vrms).
Query syntax	:MEASure[:SCALar]:VOLTage:AC?
Return	<NR2> Returns the AC voltage value in Vrms.

### :MEASure[:SCALar]:VOLTage:AVERage → Query

Description	Returns the voltage average value (Vavg).
Query syntax	:MEASure[:SCALar]:VOLTage:AVERage?
Return	<NR2> Returns the voltage average value in volts.

### :MEASure[:SCALar]:VOLTage:HIGh → Query

Description	Returns the output voltage maximum peak value (Vmax).
-------------	---

Note: Voltage maximum peak value is defined as the highest peak value in the complete period.

Query syntax	:MEASure[:SCALar]:VOLTage:HIGh?
Return parameter	<NR2> Returns the Vmax value in volts.

### :MEASure[:SCALar]:VOLTage:LOW → Query

Description	Returns the output voltage minimum value (Vmin).
-------------	--

Note: Voltage minimum value is defined as the lowest value in the complete period.

---

Query syntax :MEASure[:SCALar]:VOLTage:LOW?

---

Return parameter <NR2> Returns the Vmin value in volts.

**:MEASure[:SCALar]: VOLTage:HARMonic[:RMS]** → **Query**

**Description** Returns 101 values covering Total and order 1 to 100 voltage (Vrms) in harmonic. (Only AC-INT and 50 / 60 Hz Active)

**Query syntax** :MEASure[:SCALar]: VOLTage:HARMonic[:RMS]?

**Return** <NR2>,<NR2>, Returns the entire 101 values containing Total and order 1 to 100 voltage (Vrms) in harmonic.  
<NR2>,  
<NR2>..., etc.

**:MEASure[:SCALar]: VOLTage:HARMonic:RATio** → **Query**

**Description** Returns 101 values covering Total and order 1 to 100 voltage (Ratio) in harmonic. (Only AC-INT and 50 / 60 Hz Active)

**Query syntax** :MEASure[:SCALar]: VOLTage:HARMonic:RATio?

**Return** <NR2>,<NR2>, Returns the entire 101 values containing Total and order 1 to 100 voltage (Ratio) in harmonic.  
<NR2>,  
<NR2>..., etc.

**Set** →

**:MEASure:CONFigure:SENSing** → **Query**

**Description** Sets or queries the remote sense configuration. (Only AC-INT, DC-INT, AC-SYNC Mode and 100V, 200V Range and SIN Wave Shape and Output Impedance is Truned off)

**Syntax** :MEASure:CONFigure:SENSing {<bool>|OFF|ON}


**Query Syntax** :MEASure:CONFigure:SENSing?

**Parameter** OFF | 0 Turns the remote sense off.  
ON | 1 Turns the remote sense on.

**Return parameter** <bool> Returns the status of remote sense.

**Example** :MEAS:CONF:SENS 0


Sets the remote sense off.



**:MEASure:AVERage:COUNT**

Description	Sets or queries the averaging count for Measure Function.	
Syntax	:MEASure:AVERage:COUNT <NR1>   MINimum	
Query Syntax	MAXimum :MEASure:AVERage:COUNT? [ MINimum   MAXimum ]	
Parameter	<NR1>	1 ~ 128
	MINimum	1
	MAXimum	128
Return parameter	<NR1>	Returns the averaging count for Measure Function
Example	:MEASure:AVERage:COUNT? 1 Returns the averaging count for Measure Function	
Averaged Parameter	Vrms & Vmax & Vmin & Irms & Imax & Imin & P & S & Q & PF & CF & Vavg & Iavg	
Not Averaged Parameter	Vpkh & Ipkh & Freq & THDv & THDi	

**:MEASure:UPDate:RATE**



Description	Sets or queries the data update interval for Measure Function.	
Syntax	:MEASure:UPDate:RATE <Time(NR2)>   FAST	
Query Syntax	:MEASure:UPDate:RATE?	
Parameter	<Time(NR2)>	0.1   0.25   0.5   1   2   5   10   20
Return parameter	FAST	Select update rate at fast(update as soon as possible)
Example	:MEASure:UPDate:RATE? Fast Returns the data update interval for Measure Function	
Use Update Rate Parameter	Vrms & Vmax & Vmin & Irms & Imax & Imin & P & S & Q & PF & CF & Vavg & Iavg	
Not Use Update Rate Parameter	Vpkh & Ipkh & Freq & THDv & THDi (update as soon as possible)	

## Fetch Commands

:FETCh[:SCALar]:CURRent:CFACor .....	77
:FETCh[:SCALar]:CURRent:HIGH .....	77
:FETCh[:SCALar]:CURRent:LOW .....	77
:FETCh[:SCALar]:CURRent:PEAK:HOLD .....	77
:FETCh[:SCALar]:CURRent[:RMS] .....	77
:FETCh[:SCALar]:CURRent[:RMS]:TOTal .....	78
:FETCh[:SCALar]:CURRent:AC .....	78
:FETCh[:SCALar]:CURRent:AVERAge .....	78
:FETCh[:SCALar]:CURRent:HARMonic[:RMS] .....	78
:FETCh[:SCALar]:CURRent:HARMonic:RATio .....	79
:FETCh[:SCALar]:FREQuency .....	79
:FETCh[:SCALar]:LINE:VOLTag[:RMS] .....	79
:FETCh[:SCALar]:LINE:VOLTag:AVERAge .....	79
:FETCh[:SCALar]:LINE:VOLTag:HIGH .....	79
:FETCh[:SCALar]:LINE:VOLTag:LOW .....	80
:FETCh[:SCALar]:POWer[:AC]:APParent .....	80
:FETCh[:SCALar]:POWer[:AC]:APParent:TOTal .....	81
:FETCh[:SCALar]:POWer[:AC]:PFACtor .....	81
:FETCh[:SCALar]:POWer[:AC]:PFACtor:TOTal .....	81
:FETCh[:SCALar]:POWer[:AC]:REACTive .....	81
:FETCh[:SCALar]:POWer[:AC]:REACTive:TOTal .....	82
:FETCh[:SCALar]:POWer[:AC][:REAL] .....	82
:FETCh[:SCALar]:POWer[:AC][:REAL]:TOTal .....	82
:FETCh[:SCALar]:VOLTag[:RMS] .....	82
:FETCh[:SCALar]:VOLTag[:RMS]:TOTal .....	82
:FETCh[:SCALar]:VOLTag:AC .....	82
:FETCh[:SCALar]:VOLTag:AVERAge .....	83
:FETCh[:SCALar]:VOLTag:HIGH .....	83
:FETCh[:SCALar]:VOLTag:LOW .....	83
:FETCh[:SCALar]:VOLTag:HARMonic[:RMS] .....	83
:FETCh[:SCALar]:VOLTag:HARMonic:RATio .....	85

:FETCh[:SCALar]:CURRent:CFACor → Query

---

Description Returns the read output current crest factor (CF).

Query syntax :FETCh[:SCALar]:CURRent:CFACtor?

Return parameter <NR2> Returns the read crest factor.

:FETCh[:SCALar]:CURRent:HIGH → Query

---

Description Returns the read output current maximum peak value (Imax).

Note: Current maximum peak value is defined as the highest peak value in the complete period.

Query syntax :FETCh[:SCALar]:CURRent:HIGH?

Return parameter <NR2> Returns the read Imax value in amps.

:FETCh[:SCALar]:CURRent:LOW → Query

---

Description Returns the read output current minimum value (Imin).

Note: Current minimum value is defined as the lowest value in the complete period.

Query syntax :FETCh[:SCALar]:CURRent:LOW?

Return parameter <NR2> Returns the read Imin value in amps.

:FETCh[:SCALar]:CURRent:PEAK:HOLD → Query

---

Description Returns the read output current peak hold value in amps (IPK Hold).

Query syntax :FETCh[:SCALar]:CURRent:PEAK:HOLD?

Return <NR2> Returns the read peak hold value in amps.

:FETCh[:SCALar]:CURRent[:RMS] → Query

---

Description	Returns the read output current (Irms).
Query syntax	:FETCh[:SCALAr]:CURRent[:RMS]?
Return	<NR2> Returns the read current value in Irms.

**:FETCh[:SCALAr]:CURRent[:RMS]:TOTal** → Query

Description	Returns the read total of output current (Irms).
Query syntax	:FETCh[:SCALAr]:CURRent[:RMS]:TOTal?
Return	<NR2> Returns the read total of current value in Irms.

**:FETCh[:SCALAr]:CURRent:AC** → Query

Description	Returns the read output AC current (Irms).
Query syntax	:FETCh[:SCALAr]:CURRent:AC?
Return	<NR2> Returns the read AC current value in Irms.

**:FETCh[:SCALAr]:CURRent:AVERAge** → Query

Description	Returns the read current average value (Iavg).
Query syntax	:FETCh[:SCALAr]:CURRent:AVERAge?
Return	<NR2> Returns the read current average value in amps.

**:FETCh[:SCALAr]:CURRent:HARMonic[:RMS]** → Query

Description	Returns read 101 values covering Total and order 1 to 100 current (Irms) in harmonic. (Only AC-INT and 50 / 60 Hz Active)
Query syntax	:FETCh[:SCALAr]:CURRent:HARMonic[:RMS]?
Return	<NR2>, <NR2>, <NR2>, etc. Returns the read entire 101 values containing Total and order 1 to 100 current (Irms) in harmonic.

**:FETCh[:SCALar]:CURRent:HARMonic:RATio** → **Query**

**Description** Returns read 101 values covering Total and order 1 to 100 current (Ratio) in harmonic. (Only AC-INT and 50 / 60 Hz Active)

**Query syntax** :FETCh[:SCALar]:CURRent:HARMonic:RATio?

**Return** <NR2>,<NR2>, Returns the read entire 101 values containing Total and order 1 to 100 current (Ratio) in harmonic.  
<NR2>,<NR2>..., etc.

**:FETCh[:SCALar]:FREQuency** → **Query**

**Description** Returns the read SYNC signal source frequency in Hz.The external sync signal frequency measurement range is 10.0 Hz to 2100.0 Hz. (Only AC+DC-sync or AC-sync Active)

**Query syntax** :FETCh[:SCALar]:FREQuency?

**Return** <NR2> Returns the read SYNC frequency in Hz.

**:FETCh[:SCALar]:LINE:VOLTage[:RMS]** → **Query**

**Description** Returns the read line voltage (Vrms).

**Syntax** :FETCh[:SCALar]:LINE:VOLTage[:RMS]?

**Return** <NR2> Returns the read line voltage value in Vrms.

**:FETCh[:SCALar]:LINE:VOLTage:AVERAge** → **Query**

**Description** Returns the read line voltage average value (Vavg).

**Syntax** :FETCh[:SCALar]:LINE:VOLTage:AVERAge?

**Return** <NR2> Returns the read line voltage average value in volts.

**:FETCh[:SCALar]:LINE:VOLTage:HIGH** → **Query**

Description	Returns the read output line voltage maximum peak value (Vmax).
Note:	Line voltage maximum peak value is defined as the highest peak value in the complete period.
Query syntax	:FETCh[:SCALar]:LINE:VOLTage:HIGH?
Return parameter	<NR2> Returns the read line Vmax value in volts.

**:FETCh[:SCALar]:LINE:VOLTage:LOW** → Query

Description	Returns the output read line voltage minimum value (Vmin).
Note:	Line voltage minimum value is defined as the lowest value in the complete period.
Query syntax	:FETCh[:SCALar]:VOLTage:LOW?
Return parameter	<NR2> Returns the read line Vmin value in volts.

**:FETCh[:SCALar]:POWER[:AC]:APParent** Set →

Description	Returns the read apparent power (S).
Query syntax	:FETCh[:SCALar]:POWER[:AC]:APParent?
Return	<NR2> Returns the read apparent power in VA.

**:FETCh[:SCALar]:POWer[:AC]:APParent:TOTal** → **Query**

**Description** Returns the read total of apparent power (S).

**Query syntax** :FETCh[:SCALar]:POWer[:AC]:APParent:TOTal?

**Return** <NR2> Returns the read total of apparent power in VA.

**:FETCh[:SCALar]:POWer[:AC]:PFACTOR** → **Query**

**Description** Returns the read power factor (PF).

**Query syntax** :FETCh[:SCALar]:POWer[:AC]:PFACTOR?

**Return** <NR2> Returns the read power factor.

**:FETCh[:SCALar]:POWer[:AC]:PFACTOR:TOTal** → **Query**

**Description** Returns the read total of power factor (PF).

**Query syntax** :FETCh[:SCALar]:POWer[:AC]:PFACTOR:TOTal?

**Return** <NR2> Returns the read total of power factor.

**:FETCh[:SCALar]:POWer[:AC]:REACTive** → **Query**

**Description** Returns the read reactive power (Q).

**Query syntax** :FETCh[:SCALar]:POWer[:AC]:REACTive?

**Return** <NR2> Returns the read reactive power in VAR.

**:FETCh[:SCALar]:POWer[:AC]:REACTIVE:TOTal** → **Query**

Description	Returns the read total of reactive power (Q).
Query syntax	:FETCh[:SCALar]:POWer[:AC]:REACTIVE:TOTal?
Return	<NR2> Returns the read total of reactive power in VAR.

**:FETCh[:SCALar]:POWer[:AC][:REAL]** → **Query**

Description	Returns the read active power in Watts (P).
Query syntax	:FETCh[:SCALar]:POWer[:AC][:REAL]?
Return	<NR2> Returns the read power in Watts.

**:FETCh[:SCALar]:POWer[:AC][:REAL]:TOTAl** → **Query**

Description	Returns the read total of active power in Watts (P).
Query syntax	:FETCh[:SCALar]:POWer[:AC][:REAL]:TOTAl?
Return	<NR2> Returns the read total of power in Watts.

**:FETCh[:SCALar]:VOLTage[:RMS]** → **Query**

Description	Returns the read voltage (Vrms).
Query syntax	:FETCh[:SCALar]:VOLTage[:RMS]?
Return	<NR2> Returns the read voltage value in Vrms.

**:FETCh[:SCALar]:VOLTage[:RMS]:TOTAl** → **Query**

Description	Returns the read total of voltage (Vrms).
Query syntax	:FETCh[:SCALar]:VOLTage[:RMS]:TOTAl?
Return	<NR2> Returns the read total of voltage value in Vrms.

**:FETCh[:SCALar]:VOLTage:AC** → **Query**

Description	Returns the read AC voltage (Vrms).
Query syntax	:FETCh[:SCALAr]:VOLTage:AC?
Return	<NR2> Returns the read AC voltage value in Vrms.

**:FETCh[:SCALAr]:VOLTage:AVERage** → Query

Description	Returns the read voltage average value (Vavg).
Query syntax	:FETCh[:SCALAr]:VOLTage:AVERage?
Return	<NR2> Returns the read voltage average value in volts.

**:FETCh[:SCALAr]:VOLTage:HIGh** → Query

Description	Returns the read output voltage maximum peak value (Vmax).
Note:	Voltage maximum peak value is defined as the highest peak value in the complete period.
Query syntax	:FETCh[:SCALAr]:VOLTage:HIGh?
Return parameter	<NR2> Returns the read Vmax value in volts.

**:FETCh[:SCALAr]:VOLTage:LOW** → Query

Description	Returns the read output voltage minimum value (Vmin).
Note:	Voltage minimum value is defined as the lowest value in the complete period.
Query syntax	:FETCh[:SCALAr]:VOLTage:LOW?
Return parameter	<NR2> Returns the read Vmin value in volts.

**:FETCh[:SCALAr]:VOLTage:HARMonic[:RMS]** → Query

Description	Returns read 101 values covering Total and order 1 to 100 voltage (Vrms) in harmonic. (Only AC-INT and 50 /60 Hz Active)
Query syntax	:FETCh[:SCALar]: VOLTage:HARMonic[:RMS]?
Return	<NR2>,<NR2>,<NR2>,<NR2>... , etc. Returns the read entire 101 values containing Total and order 1 to 100 voltage (Vrms) in harmonic.

:FETCh[:SCALar]: VOLTage:HARMonic:RATio

→ Query


---

Description	Returns the read 101 values covering Total and order 1 to 100 voltage (Ratio) in harmonic. (Only AC-INT and 50 /60 Hz Active)
Query syntax	:FETCh[:SCALar]: VOLTage:HARMonic:RATio?
Return	<NR2>,<NR2>,<NR2>,<NR2>..., etc. Returns the read entire 101 values containing Total and order 1 to 100 voltage (Ratio) in harmonic.

## Memory Commands

:MEMory:RCL.....	86
:MEMory:SAV.....	86

### :MEMory:RCL




**Description**      Recalls the settings from memory slot M0~M9. These memory slots are mapped to the preset settings. Equivalent to the \*RCL command.

**Syntax**            :MEMory:RCL {<NR1>|MINimum|MAXimum}

<b>Parameter</b>	<NR1>	0~9
	MINimum	0
	MAXimum	9

**Example**            :MEMory:RCL  
 Recall the settings from M1.

### :MEMory:SAV



**Description**      Saves the settings into memory slot M0 ~ M9. These memory slots are mapped to the preset settings. Equivalent to the \*SAV command.

**Syntax**            :MEMory:SAV {<NR1>|MINimum|MAXimum}

<b>Parameter</b>	<NR1>	0~9
	MINimum	0
	MAXimum	9

**Example**            :MEMory:SAV 1  
 Save the settings to M1.

## Output Commands

:OUTPut:IMPedance.....	87
:OUTPut:IMPedance:INDuctance .....	87
:OUTPut:IMPedance:RESistance .....	88
:OUTPut[:STATe] .....	89
:OUTPut:PON .....	89
:OUTPut:PROTection:CLEar .....	90
:OUTPut:RELAy .....	90
:OUTPut:SStart[:STATe][:RISE] .....	90
:OUTPut:SStart[:STATe]:FALL .....	90
:OUTPut:SStart:TIME[:RISE] .....	91
:OUTPut:SStart:TIME:FALL .....	91

### :OUTPut:IMPedance

Set →

→ Query

**Description** Sets or queries the output impedance state of power source.

**Syntax** :OUTPut:IMPedance {<bool>|OFF|ON}

**Query Syntax** :OUTPut:IMPedance?

**Parameter** OFF | 0 Turns the output impedance off.  
ON | 1 Turns the output impedance on.

**Return parameter** <bool> Returns output impedance status of the instrument.

**Example** :OUTP:IMP 0  
Sets power output impedance off.

Set →

→ Query

### :OUTPut:IMPedance:INDuctance


**Description** Sets or queries the phase and inductance value parameter for output impedance inductance.

**Syntax** :OUTPut:IMPedance:INDuctance <NR1> | L1 | L2|L3|ALL,<NR2> | MINimum | MAXimum

**Query Syntax** :OUTPut:IMPedance:INDuctance?

Parameter	<phase>, <NR1>	L1   0 L2   1 L3   2 ALL   3	L1 phase L2 phase L3 phase All phase
Parameter	<inductance> , <NR2>	inductance	0.0 ~ 2000 $\mu$ H
Minimum inductance	0.0		
Maximum inductance	2000		
Return parameter	<phase>, <inductance>	Returns the phase and inductance value parameter for output impedance inductance.	

**Example**           :OUTP:IMP:IND? ALL  
                           +0.1,+0.1,+0.1  
                           Returns the phase and inductance value parameter for output impedance inductance.



**:OUTPut:IMPedance:RESistance**

Description	Sets or queries the phase and inductance value parameter for output impedance resistance.		
Syntax	:OUTPut:IMPedance:RESistance <NR1>   L1   L2   L3   ALL, <NR2>   MINimum   MAXimum		
Query Syntax	:OUTPut:IMPedance:RESistance?		
Parameter	<phase>, <NR1>	L1   0 L2   1 L3   2 ALL   3	L1 phase L2 phase L3 phase All phase
Parameter	<resistance>, <NR2>	resistanc	0.0 ~ 1 $\Omega$
Minimum resistance	0.0		
Maximum resistance	1		

Return parameter <phase>,<r  
 esistance> Returns the phase and resistance value  
 parameter for output impedance resistance.

Example :OUTP:IMP:RES? ALL  
 0.1,+0.1,+0.1  
 Returns the phase and resistance value parameter for  
 output impedance resistance.

Set →

→ Query

**:OUTPut[:STATe]**

Description Sets or queries the output state of power source.

Syntax :OUTPut[:STATe] {<bool>|OFF|ON}

Query Syntax :OUTPut[:STATe]?

Parameter OFF | 0 Turns the output off.  
 ON | 1 Turns the output on.

Return parameter <bool> Returns output status of the instrument.

Example :OUTP 0  
 Sets power output off.

Set →

→ Query

**:OUTPut:PON**

Description Sets the output state at power-on.

Syntax :OUTPut:PON {<NR1>|OFF|ON|SEQ|SIM}

Return Syntax :OUTPut:PON?

Parameter <NR1> 0 ~ 3  
 OFF | 0 Disabled  
 ON | 1 Enabled  
 SEQ | 2 Sequence function  
 SIM | 3 Simulate function  
 Return parameter <NR1> Returns the selected output state at power-  
 on from 0 to 3.

Example :OUTPut:PON 2  
 Sets sequence function on at power-on.

**:OUTPut:PROTection:CLEAr**

Set →

**Description** The Command will clear alarms like Over Current, Over Peak Current, Output Over-Power, Output Short, Output Overvoltage, Sensing Voltage Error.

**Syntax** :OUTPut:PROTection:CLEAr

Set →

**:OUTPut:RELAy**

→ Query

**Description** Sets or queries the output relay of power source.

**Syntax** :OUTPut:RELAy {<bool>|OFF|ON}

**Query Syntax** :OUTPut:RELAy?

**Parameter** OFF | 0 Turns the output relay Disable.  
ON | 1 Turns the output relay Enable.

**Return parameter** <bool> Returns output relay of the instrument.

**Example** :OUTP:REL 1  
Sets output relay Enable.

Set →

**:OUTPut:SStArt[:STATe][:RISE]**

→ Query

**Description** Sets or queries the power soft start status.

**Syntax** :OUTPut:SStArt {<bool>|OFF|ON}

**Query Syntax** :OUTPut:SStArt?

**Parameter** OFF | 0 Turns the soft start Disable.  
ON | 1 Turns the soft start Enable.

**Return parameter** <bool> Returns the power soft start status.

**Example** :OUTP:SST 1  
Sets soft start Enable.

Set →

**:OUTPut:SStArt[:STATe]:FALL**

→ Query

**Description** Sets or queries the power soft stop status.

Syntax	:OUTPut:SStart:FALL {<bool> OFF ON}	
Query Syntax	:OUTPut:SStart:FALL?	
Parameter	OFF   0	Turns the soft stop Disable.
	ON   1	Turns the soft stop Enable.
Return parameter	<bool>	Returns the power soft stop status.
Example	:OUTP:SST:FALL 1 Sets soft stop Enable.	

Set →  
 → Query

**:OUTPut:SStart:TIME[:RISE]**

Description	Sets or queries the power soft start rise time.	
Syntax	:OUTPut:SStart:TIME <NR2>   MINimum   MAXimum	
Query Syntax	:OUTPut:SStart:TIME?	
Parameter/ Return parameter	NR2	Soft start rise time. MINimum 0.001 Maximum 30.000
Example	:OUTP:SST:TIME 0.1 Sets the soft start rise time.	

Set →  
 → Query

**:OUTPut:SStart:TIME:FALL**

Description	Sets or queries the power soft stop fall time.	
Syntax	:OUTPut:SStart:TIME:FALL <NR2>   MINimum	
Query Syntax	MAXimum :OUTPut:SStart:TIME:FALL?	
Parameter/ Return parameter	NR2	Soft stop fall time. MINimum 0.001 Maximum 30.000
Example	:OUTP:SST:TIME:FALL 0.1 Sets the soft stop fall time.	

## Status Commands

:STATus:OPERation:CONDition.....	92
:STATus:OPERation:ENABle .....	92
:STATus:OPERation[:EVENT] .....	93
:STATus:OPERation:NTRansition .....	93
:STATus:OPERation:PTRansition .....	93
:STATus:QUEStionable[:EVENT].....	94
:STATus:QUEStionable:CONDition.....	94
:STATus:QUEStionable:ENABle .....	94
:STATus:QUEStionable:NTRansition.....	94
:STATus:QUEStionable:PTRansition.....	95
:STATus:PRESet.....	95
:STATus:WARnIng:CONDition .....	96
:STATus:WARnIng:ENABle .....	96
:STATus:WARnIng[:EVENT] .....	96
:STATus:WARnIng:NTRansition .....	97
:STATus:WARnIng:PTRansition .....	97
:STATus:LOCK:CONDition .....	97
:STATus:LOCK:ENABle.....	97
:STATus:LOCK[:EVENT] .....	98
:STATus:LOCK:NTRansition .....	98
:STATus:LOCK:PTRansition .....	98

### :STATus:OPERation:CONDition → Query

**Description**      Queries the Operation Status register. This query will not clear the register.

**Syntax**            :STATus:OPERation:CONDition?

**Return**            <NR1>      Returns the bit sum of the Operation Condition register. (0~32767)

Set →

### :STATus:OPERation:ENABle → Query

**Description**      Sets or queries the bit sum of the Operation Status Enable register.

Syntax :STATus:OPERation:ENABLE <NR1>

Query Syntax :STATus:OPERation:ENABLE?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

**:STATus:OPERation[:EVENT]** → Query

Description Queries the Operation Status Event register and clears the contents of the register.

Syntax :STATus:OPERation[:EVENT]?

Return <NR1> Returns the bit sum of the Operation Status Event register.

Set →

**:STATus:OPERation:NTRansition** → Query

Description Sets or queries the bit sum of the negative transition filter of the Operation Status register.

Syntax :STATus:OPERation: NTRansition <NR1>

Query Syntax :STATus:OPERation:NTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

Set →

**:STATus:OPERation:PTRansition** → Query

Description Sets or queries the bit sum of the positive transition filter of the Operation Status register.

Syntax :STATus:OPERation:PTRansition <NR1>

:STATus:OPERation:PTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

**:STATus:QUESTionable[:EVENT]** → Query

**Description**            Queries the bit sum of the Questionable Status Event register. This query will also clear the contents of the register.

**Query Syntax**            :STATus:QUESTionable[:EVENT]?

**Return parameter**    <NR1>    0~32767

**:STATus:QUESTionable:CONDition** → Query

**Description**            Queries the status (bit sum) of the Questionable Status register. This query will not clear the register.

**Query Syntax**            :STATus:QUESTionable:CONDition?

**Return parameter**    <NR1>    0~32767

Set →

**:STATus:QUESTionable:ENABLE** → Query

**Description**            Sets or queries the bit sum of the Questionable Status Enable register.

**Syntax**                    :STATus:QUESTionable:ENABLE <NR1>

**Query Syntax**            :STATus:QUESTionable:ENABLE?

**Parameter**              <NR1>    0~32767

**Return parameter**    <NR1>    0~32767

Set →

**:STATus:QUESTionable:NTRansition** → Query

**Description**            Sets or queries the bit sum of the negative transition filter of the Questionable Status register.

**Syntax**                    :STATus:QUESTionable:NTRansition <NR1>

**Query Syntax**            :STATus:QUESTionable:NTRansition?

**Parameter**              <NR1>    0~32767

**Return parameter**    <NR1>    0~32767

**:STATus:QUEStionable:PTRansition** 
 →  
 →

**Description** Sets or queries the bit sum of the positive transition filter of the Questionable Status register.

**Syntax** :STATus:QUEStionable:PTRansition <NR1>

**Return Syntax** :STATus:QUEStionable:PTRansition?

**Parameter** <NR1> 0~32767

**Return parameter** <NR1> 0~32767

**:STATus:PRESet**  →

**Description** This command resets the ENABLE register, the PTRansition filter and NTRansition filter on the Operation Status, Questionable Status, Warning Status and System Lock Status Registers. The registers/filters will be reset to a default value.

Default Register/Filter Values	Setting
QUEStionable Status Enable	0x0000
QUEStionable Status Positive Transition	0x7FFF
QUEStionable Status Negative Transition	0x0000
Operation Status Enable	0x0000
Operation Status Positive Transition	0x7FFF
Operation Status Negative Transition	0x0000
WARning Status Enable	0x0000
WARning Status Positive Transition	0x7FFF
WARning Status Negative Transition	0x0000
System Lock Status Enable	0x0000
System Lock Status Positive Transition	0x7FFF
System Lock Status Negative Transition	0x0000

Summary: The Questionable Status Enable registers, the Operation Status Enable registers, Warning Status registers and System Lock Status registers are both reset to 0.

The Questionable Status, Operation Status, Warning Status and System Lock Status Positive Transition filters are all set high (0x7FFF) and the Negative Transition filters are all set low (0x0000). I.e., only positive transitions will be recognized for the Questionable Status, Operation Status, Warning Status and System Lock Status registers.

Syntax :STATus:PRESet

**:STATus:WARNIng:CONDition** → Query

Description Queries the Warning Status register. This query will not clear the register.

Syntax :STATus:WARNIng:CONDition?

Return <NR1> Returns the bit sum of the Warning Condition register. (0~32767)

Set →

**:STATus:WARNIng:ENABle** → Query

Description Sets or queries the bit sum of the Warning Status Enable register.

Syntax :STATus:WARNIng:ENABle <NR1>

Query Syntax :STATus:WARNIng:ENABle?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

**:STATus:WARNIng[:EVENT]** → Query

Description Queries the Warning Status Event register and clears the contents of the register.

Syntax :STATus:WARNIng[:EVENT]?

Return <NR1> Returns the bit sum of the Warning Status Event register.

Set →

**:STATus:WARNing:NTRansition**

→ Query

Description Sets or queries the bit sum of the negative transition filter of the Warning Status register.

Syntax :STATus:WARNing:NTRansition <NR1>

Query Syntax :STATus:WARNing:NTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

Set →

**:STATus:WARNing:PTRansition**

→ Query

Description Sets or queries the bit sum of the positive transition filter of the Warning Status register.

Syntax :STATus:WARNing:PTRansition <NR1>

:STATus:WARNing:PTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

**:STATus:LOCK:CONDition**

→ Query

Description Queries the System Lock Status register. This query will not clear the register.

Syntax :STATus:LOCK:CONDition?

Return <NR1> Returns the bit sum of the System Lock Status register. (0~32767)

Set →

**:STATus:LOCK:ENABLE**

→ Query

Description Sets or queries the bit sum of the System Lock Status Enable register.

Syntax :STATus:LOCK:ENABLE <NR1>

Query Syntax :STATus:LOCK:ENABLE?

Parameter	<NR1>	0~32767
Return parameter	<NR1>	0~32767

**:STATus:LOCK[:EVENT]** → Query

Description	Queries the System Lock Status Event register and clears the contents of the register.
-------------	--

Syntax	:STATus:LOCK [:EVENT]?
--------	------------------------

Return	<NR1>	Returns the bit sum of the System Lock Status Event register.
--------	-------	---

Set →

**:STATus:LOCK:NTRansition** → Query

Description	Sets or queries the bit sum of the negative transition filter of the System Lock Status register.
-------------	---

Syntax	:STATus:LOCK:NTRansition <NR1>
--------	--------------------------------

Query Syntax	:STATus:LOCK:NTRansition?
--------------	---------------------------

Parameter	<NR1>	0~32767
-----------	-------	---------

Return parameter	<NR1>	0~32767
------------------	-------	---------

Set →

**:STATus:LOCK:PTRansition** → Query

Description	Sets or queries the bit sum of the positive transition filter of the System Lock Status register.
-------------	---

Syntax	:STATus:LOCK:PTRansition <NR1>
--------	--------------------------------

	:STATus:LOCK:PTRansition?
--	---------------------------

Parameter	<NR1>	0~32767
-----------	-------	---------


Return parameter	<NR1>	0~32767
------------------	-------	---------

## System Function Commands

:SYSTem:ARBitrary:EDIT:BUILtin .....	100
:SYSTem:ARBitrary:EDIT:SURGe .....	101
:SYSTem:ARBitrary:EDIT:STAir .....	101
:SYSTem:ARBitrary:EDIT:CFACtor2.....	102
:SYSTem:ARBitrary:EDIT:CFACtor1.....	102
:SYSTem:ARBitrary:EDIT:CLIP .....	103
:SYSTem:ARBitrary:EDIT:STORe.....	103
:SYSTem:ARBitrary:EDIT:TRlngle.....	104
:SYSTem:ARBitrary:EDIT:DIP .....	105
:SYSTem:ARBitrary:EDIT:LFRing.....	106
:SYSTem:ARBitrary:EDIT:RIPPlE .....	108
:SYSTem:ARBitrary:EDIT:HARMonic .....	109
:SYSTem:ARBitrary:EDIT:STORe:APPLy<1   3> ..	111
:SYSTem:BEEPer:STATe .....	112
:SYSTem:COMMunicate:INTerface:ADDReSS.....	112
:SYSTem:COMMunicate:INTerface:BAUD.....	113
:SYSTem:COMMunicate:LAN:DHCP.....	113
:SYSTem:COMMunicate:LAN:DNS .....	114
:SYSTem:COMMunicate:LAN:GATeway .....	114
:SYSTem:COMMunicate:LAN:IPADdress.....	114
:SYSTem:COMMunicate:LAN:MAC.....	115
:SYSTem:COMMunicate:LAN:SMASK .....	115
:SYSTem:COMMunicate:RLState .....	115
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:BAUD .....	116
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:BITS .....	116
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:PARity .....	117
:SYSTem:COMMunicate:SERial[:RECeive]	
:TRANsmit:SBITs .....	118
:SYSTem:COMMunicate:TCPIP:CONTRol .....	118
:SYSTem:COMMunicate:USB:FRONT:STATe .....	119
:SYSTem:COMMunicate:USB:REAR:STATe .....	119
:SYSTem:CONFigure[:MODE].....	119
:SYSTem:CONFigure:EXTio[:STATe].....	120

:SYSTem:CONFIgure:EXTErnal:INPut..... 120  
 :SYSTem:CONFIgure:MONItor:AMPLItude..... 120  
 :SYSTem:CONFIgure:MONItor:SOURce<1 | 2> .... 121  
 :SYSTem:CONFIgure:TRIGger:OUTPut:SElect.... 121  
 :SYSTem:CONFIgure:TRIGger:OUTPut:SOURce. 122  
 :SYSTem:CONFIgure:TRIGger:OUTPut:WIDTh .. 123  
 :SYSTem:ERRor ..... 123  
 :SYSTem:ERRor:ENABle ..... 123  
 :SYSTem:HOLD:STATe ..... 124  
 :SYSTem:PKHOLD:TIME..... 124  
 :SYSTem:KLOCK ..... 124  
 :SYSTem:REBoot ..... 125  
 :SYSTem:VUNIt ..... 125  
 :SYSTem:INTerlock..... 125

:SYSTem:ARBItrary:EDIT:BUILtin



Description	Sets or queries the built in function of arbitrary edit	
Syntax	:SYSTem:ARBItrary:EDIT:BUILtin TRIangle   STAir   CLIP	
Query Syntax	CFACTor1   CFACTor2   SURGe   DST<01 30>   RIPple   DIP   LFRing   Harmonic	
	:SYSTem:ARBItrary:EDIT:BUILtin?	
Parameter/Return	TRIangle	Built In Triangle Wave Function
	STAir	Built In Stair Wave Function
	CLIP	Built In Clip Wave Function
	CFACTor1	Built In CF-1 Wave Function
	CFACTor2	Built In CF-2 Wave Function
	SURGe	Built In Surge Wave Function
	DST<01 30>	Built In DST01 ~ DST30 Wave Function
	RIPple	Built In DC Ripple Wave Function
	DIP	Built In DIP Wave Function.
	LFRing	Built In LFRing Wave Function.
	Harmonic	Built In Harmonic Wave Function.

Example :SYST:ARB:EDIT:BUIL?  
 TRI  
 Returns the built in function of arbitrary edit

Set →

→ Query

**:SYSTem:ARBitrary:EDIT:SURGe**

Description	Sets or queries the type and ACV and site parameter for built in Surge wave function	
Syntax	:SYSTem:ARBitrary:EDIT:SURGe <NR1>   SQU   SIN,	
Query Syntax	<NR1>   MINimum   MAXimum, <NR1>   MINimum   MAXimum	
	:SYSTem:ARBitrary:EDIT:SURGe?	
Parameter<Type>	SQU   0	Square waveform type
	SIN   1	Sine waveform type
Parameter<ACV>	<NR1>	ACV Ratio : 0 ~100(0 ~ 100%)
	MINimum	Minimum ACV Ratio : 0 (0%)
	MAXimum	Maximum ACV Ratio : 100 (100%)
Parameter<Site>	<NR1>	Site Ratio : 0 ~100(0 ~ 100%)
	MINimum	Minimum Site Ratio : 0 (0%)
	MAXimum	Maximum Site Ratio : 100 (100%)
Return parameter	<Type>,<ACV> ,<Site>	Returns the type and ACV and site parameter for built in Surge wave function

Example :SYST:ARB:EDIT:SURG?  
SIN,+50,+25  
Returns the type and ACV and site parameter for built in Surge wave function

Set →


→ Query

**:SYSTem:ARBitrary:EDIT:STAIr**

Description	Sets or queries the stair parameter for built in stair wave function	
Syntax	:SYSTem:ARBitrary:EDIT:STAIr <NR1>   MINimum	
Query Syntax	MAXimu	
	:SYSTem:ARBitrary:EDIT:STAIr? [ MINimum	
	MAXimum ]?	
Parameter	<NR1>	stair : 1 ~ 100
	MINimum	Minimum stair : 1
	MAXimum	Maximum stair : 100

Return parameter	<code>&lt;NR1&gt;</code>	Returns the stair parameter for built in stair wave function
------------------	--------------------------	--

Example           :SYST:ARB:EDIT:STA?  
+5  
Returns the stair parameter for built in stair wave function




**:SYSTem:ARBitrary:EDIT:CFACtor2**

Description	Sets or queries the crest factor parameter for built in CF-2 wave function	
-------------	--	--

Syntax	:SYSTem:ARBitrary:EDIT:CFACtor2 <NR2>   MINimum   MAXimum	
Query Syntax	:SYSTem:ARBitrary:EDIT:CFACtor2? [ MINimum   MAXimum ]?	

Parameter	<code>&lt;NR2&gt;</code>	crest factor : 1.5 ~ 2.0
	MINimum	Minimum crest factor : 1.5
	MAXimum	Maximum crest factor : 2.0
Return parameter	<code>&lt;NR2&gt;</code>	Returns the crest factor parameter for built in CF-2 wave function

Example           :SYST:ARB:EDIT:CFAC2?  
+1.5000  
Returns the crest factor parameter for built in CF-2 wave function



**:SYSTem:ARBitrary:EDIT:CFACtor1**

Description	Sets or queries the crest factor parameter for built in CF-1 wave function	
-------------	--	--

Syntax	:SYSTem:ARBitrary:EDIT:CFACtor1 <NR2>   MINimum   MAXimum	
Query Syntax	:SYSTem:ARBitrary:EDIT:CFACtor1? [ MINimum   MAXimum ]?	

Parameter	<code>&lt;NR2&gt;</code>	crest factor : 1.1 ~ 10.0
	MINimum	Minimum crest factor : 1.1
	MAXimum	Maximum crest factor : 10.0

Return parameter	<code>&lt;NR2&gt;</code>	Returns the crest factor parameter for built in CF-1 wave function
------------------	--------------------------	--

Example           :SYST:ARB:EDIT:CFAC1?  
                   +2.0000

Returns the crest factor parameter for built in CF-1 wave function

Set →  
 → Query

**:SYSTem:ARBITrary:EDIT:CLIP**

Description	Sets or queries the ratio parameter for built in clip wave function	
-------------	---	--

Syntax	:SYSTem:ARBITrary:EDIT:CLIP <NR2>   MINimum   MAXimum	
--------	---	--

Query Syntax	:SYSTem:ARBITrary:EDIT:CLIP? [ MINimum   MAXimum ]?	
--------------	---	--

Parameter	<code>&lt;NR2&gt;</code>	clip ratio : 0.00 ~ 1.00
	MINimum	Minimum clip ratio : 0.00
	MAXimum	Maximum clip ratio : 1.00

Return parameter	<code>&lt;NR2&gt;</code>	Returns the ratio parameter for built in clip wave function
------------------	--------------------------	---

Example           :SYST:ARB:EDIT:CLIP?  
                   +0.5000

Returns the ratio parameter for built in clip wave function

**:SYSTem:ARBITrary:EDIT:STORE** Set →

Description	Saves the waveform data of built in into ARB1 ~ ARB253	
-------------	--	--

Syntax	:SYSTem:ARBITrary:EDIT:STORE <NR1>   ARB1   ARB2   ARB3   ARB4   ...   ARB250   ARB251   ARB252   ARB253	
--------	--	--

Parameter	ARB1   1	Saves the waveform data of built in into ARB1
	ARB2   2	Saves the waveform data of built in into ARB2
	ARB3   3	Saves the waveform data of built in into ARB3
	ARB4   4	Saves the waveform data of built in into ARB4
	.	

	<ul style="list-style-type: none"> <li>•</li> <li>•</li> </ul>
ARB250	Saves the waveform data of built in into ARB250
ARB251	Saves the waveform data of built in into ARB251
ARB252	Saves the waveform data of built in into ARB252
ARB253	Saves the waveform data of built in into ARB253



**Example**           :SYST:ARB:EDIT:STOR ARB1  
                           Saves the waveform data of built in into ARB1

Set →  
 → Query

**:SYSTEM:ARBITRARY:EDIT:TRIANGLE**

<b>Description</b>	Sets or queries the symmetry parameter for built in triangle wave function	
<b>Syntax</b>	:SYSTEM:ARBITRARY:EDIT:TRIANGLE <NR1>   MINIMUM	
<b>Query Syntax</b>	MAXIMUM	
<b>Parameter</b>	<NR1>	Symmetry : 0 ~ 100(0 ~ 100%)
<b>Return parameter</b>	<NR1>	Minimum Symmetry : 0 (0%)
	MAXIMUM	Maximum Symmetry : 100 (100%)
	<NR1>	Returns the symmetry parameter for built in triangle wave function

**Example**           :SYST:ARB:EDIT:TRI?  
                           +50  
                           Returns the symmetry parameter for built in triangle wave function



**:SYSTem:ARBitrary:EDIT:DIP**

Description	Sets or queries the ST Phs and SP Phs and End Phs parameter for built in DIP wave function.	
Syntax	:SYSTem:ARBitrary:EDIT:DIP <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum	
Query Syntax	:SYSTem:ARBitrary:EDIT:DIP? [ MINimum   MAXimum ]	
Parameter< ST Phs >	<NR2>	0.1 ~ (SP Phs - 0.1)
	MINimum	0.1
	MAXimum	(SP Phs - 0.1)
Parameter< SP Phs >	<NR2>	(ST Phs+ 0.1) ~ (End Phs - 0.1)
	MINimum	(ST Phs+ 0.1)
	MAXimum	(End Phs - 0.1)
Parameter< End Phs >	<NR2>	(SP Phs+ 0.1) ~ 359.9
	MINimum	(SP Phs+ 0.1)
	MAXimum	359.9
Return parameter	< ST Phs(NR2) >, < SP Phs(NR2) >, < End Phs(NR2) >	Returns the ST Phs and SP Phs and End Phs parameter for built in DIP wave function
Example	:SYSTem:ARBitrary:EDIT:DIP? 45.0,54.0,172.0 Returns the ST Phs and SP Phs and End Phs parameter for built in DIP wave function	

Set →

← Query

**:SYSTem:ARBitrary:EDIT:LFRing**

Description	Sets or queries the ACV and Amp and Base_F and Ring_F and Decay and ST Phs and End Phs and Ring Phs parameter for built in LFRing wave function.	
Syntax	:SYSTem:ARBitrary:EDIT:LFRing <NR2>   MINimum   MAXimum, <NR1>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum, <NR2>   MINimum   MAXimum,	
Query Syntax	:SYSTem:ARBitrary:EDIT:LFRing? [ MINimum   MAXimum ]	
Parameter< ACV >	<NR2>	0.0 ~ 400.0
	MINimum	0.0
	MAXimum	400.0
Parameter< Amp >	<NR1>	140 ~ 200
	MINimum	140
	MAXimum	200
Parameter< Base_F >	<NR2>	50.0 ~ 200.0
	MINimum	50.0
	MAXimum	200.0
Parameter< Ring_F >	<NR2>	200.0 ~ 5000.0
	MINimum	200.0
	MAXimum	5000.0
Parameter< Decay >	<NR2>	-0.100 ~ 0.100
	MINimum	-0.100
	MAXimum	0.100
Parameter< ST Phs >	<NR2>	0.1 ~ (End Phs - 0.1)
	MINimum	0.1
	MAXimum	(End Phs - 0.1)

Parameter< End Phs >	<NR2>	(ST Phs+ 0.1) ~ 359.9
	MINimum	(ST Phs+ 0.1)
	MAXimum	359.9
Parameter< Ring Phs >	<NR2>	0.1 ~ 359.9
	MINimum	0.1
	MAXimum	359.9
Return parameter	< ACV(NR2) >, < Amp(NR1) >, < Base_F(NR2) >, < Ring_F(NR2) >, < Decay(NR2) >, < ST Phs(NR2) >, < End Phs(NR2) >, < Ring Phs(NR2) >	Returns the ACV and Amp and Base_F and Ring_F and Decay and ST Phs and End Phs and Ring Phs parameter for built in LFRing wave function

Example :SYSTem:ARBitrary:EDIT:LFRing  
 0.0,+140,50.0,200.0,0.005,60.0,120.0,30.0  
 Returns the ACV and Amp and Base\_F and Ring\_F and Decay and ST Phs and End Phs and Ring Phs parameter for built in LFRing wave function

Set →

→ Query

**:SYSTem:ARBitrary:EDIT:RIPple**

Description	Sets or queries the Times and VDC and Level parameter for built in DC Ripple wave function	
Syntax	:SYSTem:ARBitrary:EDIT:RIPple <NR1>   MINimum   MAXimum,<NR1>   MINimum   MAXimum, <NR1>   MINimum   MAXimum	
Query Syntax	:SYSTem:ARBitrary:EDIT:RIPple?	
Parameter <Times>	<NR1>	Times : 1   2   3   6
	MINimum	MINimum Times : 1
	MAXimum	MAXimum Times : 6
Parameter <VDC>	<NR1>	VDC Value : 1 ~ 100
	MINimum	MINimum VDC Value : 1
	MAXimum	MAXimum VDC Value : 100
Parameter <Level>	<NR1>	Level Ratio : 1 ~ 30(1 ~ 30%)
	MINimum	MINimum Level Ratio : 1(1%)
	MAXimum	MAXimum Level Ratio : 30(30%)
Return parameter	<Times>, <VDC>, <Level>	Returns the Times and VDC and Level parameter for built in DC Ripple wave function
Example	:SYST:ARB:EDIT:RIPP? 1,+48,+15 Returns the Times and VDC and Level parameter for built in DC Ripple wave function	

:SYSTem:ARBitrary:EDIT:HARMonic

Set →

← Query

**Description** Sets or queries the Amp and phase parameters for harmonic order 1 to 50 using the built-in harmonic wave function.

**Syntax** :SYSTem:ARBitrary:EDIT:HARMonic <NR2> | MINimum | MAXimum,<NR2> | MINimum |MAXimum,<NR2> | MINimum |MAXimum,<NR2> | MINimum |MAXimum,...,<NR2> | MINimum | MAXimum, <NR2> |MINimum | MAXimum, <NR2> |MINimum | MAXimumx,<NR2> | MINimum |MAXimum

**Query Syntax** :SYSTem:ARBitrary:EDIT:HARMonic? [ MINimum | MAXimum ]

Parameter <1-Phase>	<NR2>	1st order Phase : 0.0~359.9
	MINimum	MINimum Phase : 0.0
	MAXimum	MAXimum Phase : 359.9
Parameter <2-Amp>	<NR2>	2nd order Amp : 0.00~100.00%
	MINimum	MINimum Amp : 0.00 (0.00%)
	MAXimum	MAXimum Amp : 100.00 (100.00%)
Parameter <2-Phase>	<NR2>	2nd order Phase : 0.0~359.9
	MINimum	MINimum Phase : 0.0
	MAXimum	MAXimum Phase : 359.9
⋮		
Parameter <49-Amp>	<NR2>	49th order Amp : 0.00~100.00%
	MINimum	MINimum Amp : 0.00 (0.00%)
	MAXimum	MAXimum Amp : 100.00 (100.00%)
Parameter <49-Phase>	<NR2>	49th order Phase : 0.0~359.9
	MINimum	MINimum Phase : 0.0



:SYSTem:ARBitrary:EDIT:STORe:APPLy<1|3> Set →

Description	<p>Saves the waveform to L1 or L2 or L3 phase(into ARB1 ~ ARB253)/Output Mode/ACV/DCV/VPK+ Limit/VPK- Limit/V Unit(TRI, ARB) data(for Built in is RIPple)</p> <p>Saves the waveform to L1 or L2 or L3 phase(into ARB1 ~ ARB253)/Output Mode/ACV/DCV/VPK+ Limit/VPK- Limit/V Unit(TRI, ARB)/Freq/Freq Hi Limit/Freq Lo Limit data(for Built in is LFRing)</p> <p>For single-phase, only L1 can be set. For single-phase three-wire, L1 and L2,can be set.</p> <p>If instrument edit setting all,apply all phase.</p>	
Syntax	<p>:SYSTem:ARBitrary:EDIT:STORe:APPLy&lt;1 3&gt; &lt;NR1&gt;  ARB1 ARB2 ARB3 ARB4 ... ARB250 ARB251 ARB252 ARB253</p>	
Parameter	<p>ARB1   1</p> <p>ARB2   2</p> <p>ARB3   3</p> <p>ARB4   4</p> <p>•</p> <p>•</p> <p>•</p> <p>ARB250   250</p> <p>ARB251   251</p> <p>ARB252   252</p> <p>ARB253   253</p>	<p>Saves the waveform data of built in into ARB1</p> <p>Saves the waveform data of built in into ARB2</p> <p>Saves the waveform data of built in into ARB3</p> <p>Saves the waveform data of built in into ARB4</p> <p>Saves the waveform data of built in into ARB250</p> <p>Saves the waveform data of built in into ARB251</p> <p>Saves the waveform data of built in into ARB252</p> <p>Saves the waveform data of built in into ARB253</p>

**Example** :SYST:ARB:EDIT:STOR:APPL1 ARB2

Saves the waveform(into ARB2) and Output Mode(AC+DC-INT) / ACV / DCV / VPK+ Limit(max) / VPK- Limit(min) / /V Unit(TRI, ARB)(p-p) data(for Built in is RIPple)

Saves the waveform(into ARB2) and Output Mode(AC+DC-INT) / ACV / DCV / VPK+ Limit(max) / VPK- Limit(min) / /V Unit(TRI, ARB)(p-p)/Freq/Freq Hi Limit(max)/Freq Lo Limit(min) data(for Built in is LFRing)

Set →

→ Query


**:SYSTEM:BEEPer:STATE**

<b>Description</b>	Sets or queries the buzzer state on/off.	
<b>Syntax</b>	:SYSTEM:BEEPer:STATE {<bool> OFF ON}	
<b>Query Syntax</b>	:SYSTEM:BEEPer:STATE?	
<b>Parameter</b>	OFF   0	Turns the buzzer off.
	ON   1	Turns the buzzer on.
<b>Return parameter</b>	<bool>	Returns the buzzer status.

Set →

→ Query

**:SYSTEM:COMMunicate:INTERface:ADDRESS**

<b>Description</b>	Sets or queries the GPIB address or CAN Node ID or DeviceNet MAC ID.	
 <b>Note</b>	Depends on Option interface device.The setting will only be valid after the power has been cycled.	
<b>Syntax</b>	:SYSTEM:COMMunicate:INTERface:ADDRESS <NR1>	
<b>Query Syntax</b>	:SYSTEM:COMMunicate:INTERface:ADDRESS?	
<b>Parameter/ Return Parameter</b>	<NR1>	0~30(GPIB address) /1~127(CAN Node ID) / 0~63(DeviceNet MAC ID)


**Example** SYST:COMM:INT:ADDR 15

Sets the GPIB address or CAN Node ID or DeviceNet MAC ID to 15.

**:SYSTem:COMMunicate:INTerface:BAUD** 



**Description** Sets or queries the CAN Baudrate or DeviceNet Baudrate.

 **Note** Depends on Option interface device. The setting will only be valid after the power has been cycled.

**Syntax** :SYSTem:COMMunicate:INTerface:BAUD  
<Baudrate(NR1)> | AUTO

**Query Syntax** :SYSTem:COMMunicate:INTerface:BAUD?

<b>Parameter/Return Parameter</b>	<Baudrate(NR1)>	125000   250000   500000   1000000 (CAN Baudrate)
	<Baudrate(NR1)>	125000   250000   500000 (DeviceNet Baudrate)
<b>Return parameter</b>	AUTO	Automatic CAN or DeviceNet baudrate .

**Example** SYST:COMM:INT:BAUD?  
250000  
Returns the baud rate settings.

**:SYSTem:COMMunicate:LAN:DHCP** 



**Description** Turns DHCP on/off. Queries the DHCP status.

**Note:** The setting will only be valid after the power has been cycled.

**Syntax** :SYSTem:COMMunicate:LAN:DHCP {<bool>|OFF|ON}  
:SYSTem:COMMunicate:LAN:DHCP?

**Query Syntax**

<b>Parameter</b>	OFF   0	DHCP off
	ON   1	DHCP on
<b>Return parameter</b>	<bool>	Returns the DHCP status.

:SYSTem:COMMunicate:LAN:DNS 
 →  
 →

Description	Sets or queries the DNS address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:DNS <string>
Query Syntax	:SYSTem:COMMunicate:LAN:DNS?
Parameter/Return	<string> DNS in string format ("mask") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252.

:SYSTem:COMMunicate:LAN:GATeway 
 →  
 →

Description	Sets or queries the Gateway address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:GATeway <string>
Query Syntax	:SYSTem:COMMunicate:LAN:GATeway?
Parameter/Return	<string> Gateway address in string format ("address") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:GAT "172.16.0.254" Sets the LAN gateway to 172.16.0.254.

:SYSTem:COMMunicate:LAN:IPADdress 
 →  
 →

Description	Sets or queries LAN IP address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:IPADdress <string>
Query Syntax	:SYSTem:COMMunicate:LAN:IPADdress?
Parameter/Return	<string> LAN IP address in string format ("address") Applicable ASCII characters: 20H to 7EH



Parameter/Return parameter	LOCAL	All keys are valid. This instrument is controlled by the front panel controls.
	REMOte	All keys are invalid, except for the [local] key and the ability to turn the output off.
	RWLock	All keys are invalid. The instrument can only be controlled remotely.
	LRMOte	All keys are valid. This instrument is controlled by the front panel controls and remotely.

Example :SYST:COMM:RLST LOCAL  
Sets the operating mode to local.

:SYSTem:COMMunicate:SERial[:RECeive] Set →  
:TRANsmit:BAUD → Query

Description	Sets or queries the UART baud rate.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BAUD <NR1>	
Query Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BAUD?	
Parameter/Return	<NR1>	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Example SYST:COMM:SER:TRAN:BAUD?  
9600  
Returns the baud rate settings.

:SYSTem:COMMunicate:SERial[:RECeive] Set →  
:TRANsmit:BITS → Query



Description	Sets or queries the UART number of data bits.	
Note:	The setting will only be valid after the power has been cycled.	

Syntax :SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit  
:BITS <NR1>

Query Syntax :SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit  
:BITS?

Parameter	0	7 bits
	1	8 bits
Return parameter	+0	7 bits
	+1	8 bits

Example SYST:COMM:SER:TRAN:BITS?  
+1  
Indicates that 8 data bits are used for the UART connection.

:SYSTem:COMMunicate:SERial[:RECEive]   
:TRANsmit:PARity 

Description Sets or queries the parity of the UART connection.

Note: The setting will only be valid after the power has been cycled.

Syntax :SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit

Query Syntax :PARity {NONE|ODD|EVEN}  
:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit  
:PARity?

Parameter	NONE	No parity
	ODD	Odd parity
	EVEN	Even parity
Return parameter	+0	No parity
	+1	Odd parity
	+2	Even parity

Example SYST:COMM:SER:TRAN:PARity?  
+0  
Indicates that no parity is used for the UART connection.

:SYSTem:COMMunicate:SERial[:RECeive] Set →  
 :TRANsmit:SBITS →Query

**Description** Sets or queries the number of stop bits used for the UART connection.

**Note:** The setting will only be valid after the power has been cycled.

**Syntax** :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :SBITS <NR1>

**Query Syntax** :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :SBITS?

<b>Parameter</b>	0	1 stop bit
	1	2 stop bits
<b>Return parameter</b>	+0	1 stop bit
	+1	2 stop bits

**Example** SYST:COMM:SER:TRAN:SBITS?  
 +1  
 Indicates that one stop bit is used for the UART connection.

:SYSTem:COMMunicate:TCPIP:CONTRol →Query

**Description** Queries the socket port number.

**Query Syntax** :SYSTem:COMMunicate:TCPIP:CONTRol?

**Return parameter** <NR1> 0000 ~ 9999

**Example** SYST:COMM:TCP:CONTRol?  
 5025  
 Returns the socket port number.

**:SYSTem:COMMunicate:USB:FRONt:STATe** → **Query**

Description	Queries the front panel USB-A port state.	
Query Syntax	:SYSTem:COMMunicate:USB:FRONt:STATe?	
Return parameter	+0	<NR1>Absent
	+1	<NR1>Mass Storage

**:SYSTem:COMMunicate:USB:REAR:STATe** → **Query**

Description	Queries the rear panel USB-B port state.	
Query Syntax	:SYSTem:COMMunicate:USB:REAR:STATe?	
Return parameter	+0	<NR1>Absent
	+1	<NR1>Connected to the PC

→ **Set** →

**:SYSTem:CONFigure[:MODE]** → **Query**

Description	Sets or queries the test mode for the power supply.	
Syntax	:SYSTem:CONFigure[:MODE] {<NR1> CONTInuous SEQUence SIMUlation}  (SEQ is available for AC+DC-INT, AC-INT, DC-INT Modes, whilst SIM is available for AC+DC-INT Mode.)	
Query Syntax	:SYSTem:CONFigure[:MODE]?	
Parameter	CONTInuous   0	Continuous mode (normal operating mode)
	SEQUence   1	Sequence mode
	SIMUlation   2	Simulation mode
Return parameter	<NR1>	
	CONT	Continuous mode (normal operating mode)
	SEQ	Sequence mode
	SIM	Simulation mode

**:SYSTem:CONFigure:EXTio[:STATE]**

Set →

→ Query

Description	Sets or queries the external control state on/ off.	
Syntax	:SYSTem:CONFigure:EXTio[:STATE] {<bool>  OFF   ON}	
Query Syntax	:SYSTem:CONFigure:EXTio[:STATE]?	
Parameter	OFF   0	Turns the external control off.
	ON   1	Turns the external control on.
Return parameter	<bool>	Returns the external control status.

**:SYSTem:CONFigure:EXTErnal:INPut**

Set →

→ Query

Description	Sets or queries the external input set range.	
Syntax	:SYSTem:CONFigure:EXTErnal:INPut <NR1>	
Query Syntax	:SYSTem:CONFigure:EXTErnal:INPut?	
Parameter / Return Parameter	<NR1>	From 1 - 2, which represent different ranges, respectively. 1 ±5 2 ±2.5
Example	:SYST:CONF:EXT:INP 1 Sets the external input range set ±5.	

**:SYSTem:CONFigure:MONitor:AMPLitude**

Set →

→ Query

Description	Sets or queries the range for output monitor amplitude.	
Syntax	:SYSTem:CONFigure:MONitor:AMPLitude	
Query Syntax	{<NR1>  LOW   MIDDLE   HIGH}	
	:SYSTem:CONFigure:MONitor:AMPLitude?	
Parameter / Return Parameter	<NR1>	From 0 - 2, which represent different amplitude ranges, respectively. LOW   0 ±2.5 MIDDLE   1 ±5 HIGH   2 ±10

Example :SYST:CONF:MON:AMPL HIGH  
Sets the amplitude range to high.

Set →

:SYSTem:CONFigure:MONitor:SOURce<1|2> → Query

Description Sets or queries the source for monitor output1 or monitor output2. (For single-phase, only L1 can be set. For single-phase three-wire, L1 and L2, can be set.)

Syntax :SYSTem:CONFigure:MONitor:SOURce<1|2> L1Voltage|L2Voltage|L3Voltage|L1Current|L2Current|L3Current

Query Syntax :SYSTem:CONFigure:MONitor:SOURce<1|2>?

Parameter	<1 2>	Output 1 or Output 2
		L1Voltage   L1 phase voltage
		L2Voltage   L2 phase voltage
		L3Voltage   L3phase voltage
		L1Current   L1 phase current
		L2Current   L2 phase current
		L3Current   L3 phase current

Example :SYST:CONF:MON:SOUR1 L2Voltage  
Sets the monitor source1 L2 phase voltage.

Set →

:SYSTem:CONFigure:TRIGger:OUTPut:SElect → Query

Description Configures the select for the trigger output.  
Equivalent to the Output Pin > Select settings.


Syntax :SYSTem:CONFigure:TRIGger:OUTPut:SElect <NR1>

Query Syntax :SYSTem:CONFigure:TRIGger:OUTPut:SElect?

Parameter /	<NR1>	From 0 - 1, which represent different select, respectively.
	0	ZC. When the output waveform at zero cross will generate a trigger.
	1	On/Off. Turning the output on and off will generate a trigger.

Return Parameter ZC

Example :SYST:CONF:TRIG:OUTP:SEL?  
ZC



**:SYSTem:CONFigure:TRIGger:OUTPut:SOURce**

Description	Sets or queries the trigger output source. (For single-phase, only L1 can be set. For single-phase three-wire, L1 and L2 can be set. )	
Syntax	:SYSTem:CONFigure:TRIGger:OUTPut:SOURce{<NR1> L1 L2 L3}	
Query Syntax	:SYSTem:CONFigure:TRIGger:OUTPut:SOURce?	
Parameter/ Return parameter	<NR1>	From 0 ~ 2, which represent different phase select, respectively.
	L1   0	L1 phase
	L2   1	L2 phase
	L3   2	L3 phase
Example	:SYST:CONF:TRIG:OUTP:SOUR L2 Sets the trigger output source to L2.	

**:SYSTem:CONFigure:TRIGger:OUTPut:WIDTh** 
 →  
 →

Description	Sets or queries the type of trigger output. The trigger output can be set as a user-defined pulse width or as a trigger output level.	
Syntax	:SYSTem:CONFigure:TRIGger:OUTPut:WIDTh {<NR2> MINimum MAXimum}	
Query Syntax	:SYSTem:CONFigure:TRIGger:OUTPut:WIDTh? [MINimum MAXimum]	
Parameter	<NR2>	0.0001 ~ 0.06
	MINimum	0.0001
	MAXimum	0.06
Return parameter	<NR2>	Returns the trigger output width.
Example	:SYST:CONF:TRIG:OUTP:WIDT 0.005 Sets the trigger output width to 5ms.	

**:SYSTem:ERRor**  →

Description	Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue.	
Query Syntax	:SYSTem:ERRor?	
Return parameter	<string>	Returns an error code followed by an error message as a single string.
Example	SYSTem:ERRor? -100, "Command error"	

**:SYSTem:ERRor:ENABle**  →

Description	Clears the Error Queue and enables all error messages to be placed in the System Error Queue.	
Syntax	:SYSTem:ERRor:ENABle	

**:SYSTem:HOLD:STATE**

Set →

→ Query

Description	Sets or queries the freeze hold state on/off.	
Syntax	:SYSTem:HOLD:STATE {<bool> OFF ON}	
Query Syntax	:SYSTem:HOLD:STATE?	
Parameter	OFF   0	Turns the freeze hold off.
	ON   1	Turns the freeze hold on.
Return parameter	<bool>	Returns the freeze hold status.

**:SYSTem:PKHold:TIME**

Set →

→ Query

Description	Sets or queries the peak hold time for peak measurement when output on.	
Syntax	:SYSTem:PKhold:TIME {<NR1>}	
Query Syntax	:SYSTem:PKhold:TIME?	
Parameter	<NR1>	1~60,000
Example	:SYST:PKH:TIME 10 Sets the peak hold time 10ms to measure when output on.	

**:SYSTem:KLOCK**

Set →

→ Query

Description	Enables or disables the front panel key lock.	
Syntax	:SYSTem:KLOCK {<bool> OFF ON}	
Query Syntax	:SYSTem:KLOCK?	
Parameter	OFF   0	Panel keys unlocked
	ON   1	Panel keys locked
Return parameter	<bool>	Returns the key lock status.

**:SYSTem:REBoot**

Set →

Description Reboots the ASR system.

Syntax :SYSTem:REBoot

Set →

**:SYSTem:VUNit**

→ Query

Description Sets or Queries the Unit of Voltage Setting in Specific Wave Shape(TRI or ARB)

Syntax :SYSTem:VUNit <bool> | RMS | P-P

Query Syntax :SYSTem:VUNit?

Parameter	RMS   0	Sets V Unit (TRI, ARB) as rms
	P-P   1	Sets V Unit (TRI, ARB) as p-p
Return parameter	<bool>	Returns the V Unit(TRI, ARB) setting.

Example :SYSTem:VUNit?  
+1  
Returns the V Unit(TRI, ARB) setting.

Set →

**:SYSTem:INTERlock**

→ Query

Description Sets or queries Interlock setting.

Syntax :SYSTem:INTERlock {<bool>|OFF|ON}(Only Valid When External Control is ON)

Query Syntax :SYSTem:INTERlock?

Parameter	OFF   0	Sets the Interlock OFF.
	ON   1	Sets the Interlock ON.
Return parameter	<bool>	Returns the Interlock setting.

Example :SYST:INT OFF (Only Valid When External Control is ON)  
Sets the OFF for Interlock.

## Source Commands

:SYSTem:CONFigure:PHASe.....	127
:INSTrument:EDIT .....	128
:INSTrument:SElect .....	128
[:SOURce]:CURRent:LIMit:PEAK:HIGH .....	129
[:SOURce]:CURRent:LIMit:PEAK:LOW .....	129
[:SOURce]:CURRent:LIMit:RMS[:AMPLitude] .....	129
[:SOURce]:CURRent:LIMit:PEAK:MODE .....	130
[:SOURce]:CURRent:LIMit:RMS:MODE .....	131
[:SOURce]:FREQuency:LIMit:HIGH .....	131
[:SOURce]:FREQuency:LIMit:LOW .....	132
[:SOURce]:FREQuency[:IMMEDIATE] .....	132
[:SOURce]:FUNCTion[:SHAPE][:IMMEDIATE] .....	133
[:SOURce]:FUNCTion:THD:FORMat.....	135
[:SOURce]:LINE:VOLTagE[:LEVel][:IMMEDIATE][:AMPLitude] .....	135
[:SOURce]:LINE:VOLTagE[:LEVel][:IMMEDIATE]:OFFSet .....	136
[:SOURce]:MODE .....	136
[:SOURce]:PHASe:BALance .....	137
[:SOURce]:PHASe:MODE .....	137
[:SOURce]:PHASe:PHASe .....	138
[:SOURce]:PHASe:RELock.....	138
[:SOURce]:PHASe:SEtChange:STATe.....	139
[:SOURce]:PHASe:START:STATe .....	139
[:SOURce]:PHASe:STOP:STATe.....	140
[:SOURce]:PHASe:START[:IMMEDIATE] .....	140
[:SOURce]:PHASe:STOP[:IMMEDIATE] .....	141
[:SOURce]:PHASe:SYNC[:IMMEDIATE] .....	141
[:SOURce]:READ .....	142
[:SOURce]:VOLTagE:RANGe.....	143
[:SOURce]:VOLTagE:RESPonse .....	143
[:SOURce]:VOLTagE:LIMit:RMS .....	144
[:SOURce]:VOLTagE:LIMit:PEAK.....	144
[:SOURce]:VOLTagE:LIMit:HIGH .....	145
[:SOURce]:VOLTagE:LIMit:LOW .....	145
[:SOURce]:VOLTagE[:LEVel][:IMMEDIATE]	

[:AMPLitude] .....146  
 [:SOURce]:VOLTage[:LEVel][:IMMediate]:OFFSet  
 .....146  
 [:SOURce]:SQUare:DCYCLE .....147

:SYSTem:CONFIgure:PHASe 
 →  
 →

---

Description	Sets or queries the phase configuration. (Only Continuous Mode Active)	
Syntax	SYSTem:CONFIgure:PHASe <NR1>	
Query Syntax	SYSTem:CONFIgure:PHASe?	
Parameter	<NR1>	From 0 - 2 which represent different configure phase, respectively.
	0	3P4W
	1	1P2W
	2	1P3W
Return parameter	3P4W	
Example	:SYST:CONF:PHAS? 3P4W Returns the system configure phase as 3P4W.	

Set →

→ Query

**:INSTrument:EDIT**

**Description** Sets or queries instrument edit. It is convenient to use a programmed command to set all phases at the same time. If INST:EDIT ALL has been programmed, it will sent all phases.

(Only three-phase four-wire)

**Syntax** INSTrument:EDIT {<NR1>|EACH|ALL}

**Query Syntax** INSTrument:EDIT ?

**Parameter/** <NR1> | EACH (0) | ALL (1)

**Return parameter**

EACH 0 Each phase  
ALL 1 All phase

**Example** :INST:EDIT ALL

Sets instrument edit all phase.

Set →

→ Query

**:INSTrument:SELEct**

**Description** Sets or queries the phase to set continuous mode. This command affects the setting of the measurement phase. If INST: EDIT ALL has been programmed, all remote operation commands will send to all output phases.

(For single-phase, only L1 can be set. For single-phase three-wire, L1and L2 can be set.)

**Syntax** :INSTrument:SELEct {<NR1>|L1|L2|L3}

**Query Syntax** :INSTrument:SELEct?

**Parameter/** <NR1> From 0 ~ 2, which represent different phase to set sequence, respectively.

**Return parameter**

L1 | 0 L1 phase  
L2 | 1 L2 phase  
L3 | 2 L3 phase

**Example** :INST:SEL L2

Sets the L2 phase to set continuous mode.

`[[:SOURce]:CURRent:LIMit:PEAK:HIGH` 


Description	Sets or queries the Ipk-High Limit parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:PEAK:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:PEAK:HIGH? [MINimum MAXimum]	
Parameter	<NR2>	Ipk-High Limit in Arms.
	MINimum	Minimum settable peak current high limit
	MAXimum	Maximum settable peak current high limit
Return parameter	<NR2>	Returns the Ipk-High Limit value
Example	CURR:LIM:PEAK:HIGH? +42.0000  Returns the peak current high limit as +42.0 A.	

`[[:SOURce]:CURRent:LIMit:PEAK:LOW` 


Description	Sets or queries the Ipk-Low Limit parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:PEAK:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:PEAK:LOW? [MINimum MAXimum]	
Parameter	<NR2>	Ipk-Low Limit in Arms.
	MINimum	Minimum settable peak current low limit
	MAXimum	Maximum settable peak current low limit
Return parameter	<NR2>	Returns the Ipk-Low Limit value
Example	:CURR:LIM:PEAK:LOW? -42.0000  Returns the peak current low limit as -42.0 A.	

`[[:SOURce]:CURRent:LIMit:RMS[:AMPLitude]` 


Description	Sets or queries the Irms parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude]? [MINimum MAXimum]	
Parameter	<NR2>	Irms in A.
	MINimum	Minimum settable current
	MAXimum	Maximum settable current
Return parameter	<NR2>	Returns the Irms.
Example	:CURR:LIM:RMS? +10.5000 Returns the Irms setting.	

[:SOURce]:CURRent:LIMit:PEAK:MODE 



Description	Sets or queries Ipk limit enabled or disabled.	
Syntax	[:SOURce]:CURRent:LIMit:PEAK:MODE {<bool> OFF ON}	
Query Syntax	[:SOURce]:CURRent:LIMit:PEAK:MODE?	
Parameter/	<bool>	OFF (0) ON (1)
Return parameter	OFF   0	Ipk limit off
	ON   1	Ipk limit on
Example	:CURR:LIM:PEAK:MODE ON Sets Ipk limit enabled.	

**[[:SOURce]:CURRent:LIMit:RMS:MODE** 



Description	Sets or queries IRMS limit status.	
Syntax	[:SOURce]:CURRent:LIMit:RMS:MODE {<bool> OFF ON}	
Query Syntax	[:SOURce]:CURRent:LIMit:RMS:MODE?	
Parameter/	<bool>	OFF (0) ON (1)
Return parameter	OFF   0	IRMS limit off
	ON   1	IRMS limit on
Example	:CURR:LIM:RMS:MODE ON Sets IRMS limit enabled.	

**[[:SOURce]:FREQuency:LIMit:HIGH** 



Description	Sets or queries the frequency upper limit range. (Only AC+DC-INT or AC-INT or AC+DC-ADD or AC-ADD or AC-VCA Active)	
Syntax	[:SOURce]:FREQuency:LIMit:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQuency:LIMit:HIGH? [INimum MAXimum]	
Parameter	<NR2>	Frequency in Hz.
	MINimum	Minimum settable frequency
	MAXimum	Maximum settable frequency
Return parameter	<NR2>	Returns the frequency limit
Example	FREQ:LIM:HIGH? +999.9000 Returns the frequency upper limit.	

Set →  
 → Query

**[[:SOURce]:FREQUency:LIMit:LOW**

---



Description	Sets or queries the frequency lower limit range. (Only AC+DC-INT or AC-INT or AC+DC-ADD or AC-ADD or AC-VCA Active)	
Syntax	[:SOURce]:FREQUency:LIMit:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQUency:LIMit:LOW? [INimum MAXimum]	
Parameter	<NR2>	Frequency in Hz.
	MINimum	Minimum settable frequency
	MAXimum	Maximum settable frequency
Return parameter	<NR2>	Returns the frequency limit
Example	FREQ:LIM:LOW? +1.0000 Returns the frequency lower limit.	

Set →  
 → Query

**[[:SOURce]:FREQUency[:IMMediate]**

---

Description	Sets or queries the frequency for the immediate trigger. (Only AC+DC-INT or AC-INT or AC+DC-ADD or AC-ADD or AC-VCA Active)	
Syntax	[:SOURce]:FREQUency[:IMMediate] {<NR2>(HZ) MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQUency[:IMMediate]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Frequency setting in Hz.
	MINimum	Minimum frequency
	MAXimum	Maximum frequency
Example	:FREQ 60 Sets the frequency of 60Hz.	

**[[:SOURce]:FUNctio[n]:SHApe][:IMMediate]**  

Description	Sets or queries the waveforms of power supply. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Syntax	[:SOURce]:FUNctio[n]:SHApe][:IMMediate] {<NR1> ARB1 ARB2 ARB3 ARB4  ...  ARB13 ARB14 ARB15 ARB16 SIN SQU TRI ARB17 ARB18 ARB19 ARB20  ...  ARB250 ARB251 ARB252 ARB253}	
Query Syntax	[:SOURce]:FUNctio[n]:SHApe][:IMMediate]?	
Parameter / Return parameter	<NR1>	From 0 – 255, which represent different waveforms, respectively.
Parameter	ARB1   0	Arbitrary wave 1
	ARB2   1	Arbitrary wave 2
	ARB3   2	Arbitrary wave 3
	ARB4   3	Arbitrary wave 4
		.
		.
		.
	ARB13   12	Arbitrary wave 13
	ARB14   13	Arbitrary wave 14
	ARB15   14	Arbitrary wave 15
	ARB16   15	Arbitrary wave 16
	SIN   16	Sin wave
	SQU   17	Square wave
	TRI   18	Triangle wave
	ARB17   19	Arbitrary wave 17
	ARB18   20	Arbitrary wave 18
	ARB19   21	Arbitrary wave 19
	ARB20   22	Arbitrary wave 20
		.
		.
		.
	ARB250   252	Arbitrary wave 250
	ARB251   253	Arbitrary wave 251
	ARB252   254	Arbitrary wave 252
	ARB253   255	Arbitrary wave 253

Example           :SOUR:FUNC:SHAP:IMM?  
                  TRI  
                  Returns the waveform as Triangle wave.

**[[:SOURce]:FUNctio:n:THD:FORMat** (Set) →  
→ (Query)

Description	Sets or queries the THD format.	
Syntax	[:SOURce]:FUNctio:n:THD:FORMat {<bool> IEC CSA}	
Query Syntax	[:SOURce]:FUNctio:n:THD:FORMat?	
Parameter / Return parameter	<bool>	IEC (0)   CSA (1)
	IEC   0	IEC THD format
	CSA   1	CSA THD format
Example	:SOUR:FUNC:THD:FORM? IEC Returns the THD format as IEC.	

**[[:SOURce]:LINE:VOLTage[:LEVel][[:IMMediate** (Set) →  
→ (Query)  
**][:AMPLitude]**

Description	Sets or queries the RMS line voltage for the continuous operation mode. (Not available in phase mode unbalance and DC-INT, AC+DC-EXT, AC-EXT , AC+DC-ADD, AC-ADD and AC-VCA)	
Syntax	[:SOURce]:LINE:VOLTage[:LEVel][[:IMMediate][:AMPLitude]{<NR2>(V) MINimum MAXimum}	
Query Syntax	[:SOURce]:LINE:VOLTage[:LEVel][[:IMMediate][:AMPLitude]?[MINimum MAXimum]	
Parameter / Return parameter	<NR2>	Vrms
	MINimum	Minimum line voltage
	MAXimum	Maximum line voltage
Example	:LINE:VOLT 150.0 Sets the line voltage to 150.0 ACV.	

`[[:SOURce]:LINE:VOLTage[:LEVel][:IMMediate] Set →`  
`]:OFFSet Query ←`

Description	Sets or queries the line voltage offset value. (Not available in phase mode unbalance and only AC+DC-INT or AC+DC-Sync Active)	
Syntax	<code>[[:SOURce]:LINE:VOLTage[:LEVel][:IMMediate]:OFFSet {&lt;NR2&gt;(V)   MINimum   MAXimum}</code>	
Query Syntax	<code>[[:SOURce]:LINE:VOLTage[:LEVel][:IMMediate]:OFFSet? [MINimum   MAXimum]</code>	
Parameter / Return parameter	<code>&lt;NR2&gt;</code>	Voltage offset value
	<code>MINimum</code>	Minimum line voltage offset value
	<code>MAXimum</code>	Maximum line voltage offset value
Example	<code>:LINE:VOLT:OFFS?</code> <code>+150.0000</code> Returns the line voltage offset value as 150.0.	

`[[:SOURce]:MODE Set →`  
`Query ←`

Description	Sets or queries the output mode of power supply.	
Syntax	<code>[[:SOURce]:MODE {&lt;NR1&gt;   ACDC-INT   AC-INT   DC-INT   ACDC-EXT   AC-EXT   ACDC-ADD   AC-ADD   ACDC-SYNC   AC-SYNC   AC-VCA}</code>	
Query Syntax	<code>[[:SOURce]:MODE?</code>	
Parameter / Return parameter	<code>&lt;NR1&gt;</code>	From 0 - 9, which represent different output modes, respectively.
	<code>ACDC-INT   0</code>	AC+DC-INT
	<code>AC-INT   1</code>	AC-INT
	<code>DC-INT   2</code>	DC-INT
	<code>ACDC-EXT   3</code>	AC+DC-EXT
	<code>AC-EXT   4</code>	AC-EXT
<code>ACDC-ADD   5</code>	AC+DC-ADD	

AC-ADD   6	AC-ADD
ACDC-SYNC   7	AC+DC-SYNC
AC-SYNC   8	AC-SYNC
AC-VCA   9	AC-VCA

**Example**      MODE?  
                   ACDC-INT  
                   Returns the output mode as AC+DC-INT.

Set →  
 → Query

**[::SOURCE]:PHASe:BALance**

**Description**      Sets or queries the balance setting phase or line.  
                           (Only phase mode is balance Active)

**Syntax**            [::SOURCE]:PHASe:BALance{<bool>|PHASe|LINE}

**Query Syntax**    [::SOURCE]:PHASe:BALance?

<b>Parameter / Return parameter</b>	<bool>	PHASe (0)   LINE (1)
	PHASe 0	Phase setting
	LINE 1	Line setting

**Example**            :PHAS:BAL?  
                           LINE  
                           Returns the balance setting as LINE.

Set →  
 → Query

**[::SOURCE]:PHASe:MODE**

**Description**      Sets or queries the balance mode.  
                           (Only three-phase four-wire Active)

**Syntax**            [::SOURCE]:PHASe:MODE{<bool>|UNBalance|BALance}

**Query Syntax**    [::SOURCE]:PHASe:MODE?

<b>Parameter / Return parameter</b>	<bool>	UNBalance (0)   BALance (1)
	UNBalance 0	UNBalance
	BALance 1	Balance

Example :PHAS:MODE?  
Balance  
Returns the phase mode as Balance.

Set →

**[[:SOURce]:PHASe:PHASe**

→ Query

Description Sets or queries the target and phase angle parameter. (For three-phase four-wire, L12 and L13 can be set. For single-phase three-wire, L12 can be set.)

Syntax [[:SOURce]:PHASe:PHASe <NR1> | L12 | L13,<NR2> | MINimum | MAXimum

Query Syntax [[:SOURce]:PHASe:PHASe?

Parameter <target>	<NR1>	
	L12	0 Phase angle between L1-L2
	L13	1 Phase angle between L1-L3

Parameter <phase angle>	<NR2>
	MINimum 0
	MAXimum 359.9

Return parameter <target>,<phase angle> Returns the the target and phase angle parameter.

Example :PHAS:PHAS? L12  
+120.0  
Returns the Phase angle 120.0 between L1-L2.

Set →

**[[:SOURce]:PHASe:RELock**

→ Query

Description Sets or queries the relock function in three-phase mode.

Syntax [[:SOURce]:PHASe:RELock {<bool>|OFF|ON}

Query Syntax [[:SOURce]:PHASe:RELock?

Parameter/ Return parameter	<bool>	OFF (0)   ON (1)
-----------------------------	--------	------------------

OFF	0 Phase relock off
ON	1 Phase relock on

Example :PHAS:REL ON  
Sets Phase relock enabled

Set →

**[[:SOURce]:PHASe:SETChange:STATe**

→ Query

Description	Sets or queries the set change phase state.	
Syntax	[:SOURce]:PHASe:SETChange:STATe {<bool> OFF ON}	
Query Syntax	[:SOURce]:PHASe:SETChange:STATe?	
Parameter/ Return parameter	<bool>	OFF (0) ON (1)
	OFF	0 Set change phase off
	ON	1 Set change phase on

Example :PHAS:SETC:STAT ON  
Sets change phase enabled

Set →

**[[:SOURce]:PHASe:START:STATe**

→ Query

Description	Sets or queries state of start phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Syntax	[:SOURce]:PHASe:START:STATe {<bool> FREE FIXED}	
Query Syntax	[:SOURce]:PHASe:START:STATe?	
Parameter/ Return parameter	<bool>	FREE (0) FIXED (1)
	FREE   0	Start phase Free
	FIXED   1	Start phase Fixed

Example :PHAS:STAR:STAT?  
FREE  
Returns the state of start phase as Free.

Set →  
 → Query

**[[:SOURce]:PHASe:STOP:STATe**

---

Description	Sets or queries state of stop phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Syntax	[:SOURce]:PHASe:STOP:STATe {<bool> FREE FIXED}	
Query Syntax	[:SOURce]:PHASe:STOP:STATe?	
Parameter/ Return parameter	<bool> FREE   0 FIXED   1	FREE (0) FIXED (1) Start phase Free Start phase Fixed
Example	:PHAS:STOP:STAT?  FIXED  Returns the state of stop phase as Fixed.	

Set →  
 → Query

**[[:SOURce]:PHASe:START[:IMMEDIATE]**

---

Description	Sets or queries the start phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Syntax	[:SOURce]:PHASe:START[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:PHASe:START[:IMMEDIATE]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Start phase value 0° 359.9°
Example	:PHAS:STAR 0  Sets the starting phase to 0.	

Set →  
 → Query

**[[:SOURce]:PHASe:STOP[:IMMediate]**

---

Description	Sets or queries the off phase of the waveform. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Note:	Sets the off phase of the waveform after the output has been turned off.	
Syntax	[:SOURce]:PHASe:STOP[:IMMediate] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:PHASe:STOP[:IMMediate]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Stop phase value
	MINimum	0 °
	MAXimum	359.9 °
Example	:PHAS:STOP 60  Sets the stop phase to 60.	


Set →  
 → Query

**[[:SOURce]:PHASe:SYNC[:IMMediate]**

---


Description	Sets or queries the sync delay phase. (Only AC+DC-sync or AC-sync Active)	
Syntax	[:SOURce]:PHASe:SYNC[:IMMediate]{<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:PHASe:SYNC[:IMMediate]?[MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Sync delay phase value
	MINimum	0 °
	MAXimum	359.9 °
Example	:PHAS:SYNC 0  Sets the sync delay phase to 0.	

**[:SOURce]:READ**



Description	Returns the measurement readouts.	
Query Syntax	[:SOURce]:READ?	
Return parameter	<code>&lt;L1-Vrms&gt;,&lt;L1-Vavg&gt;,&lt;L1-Vmax&gt;,&lt;L1-Vmin&gt;,&lt;L1-Vpkh&gt;,&lt;L1-Irms&gt;,&lt;L1-lavg&gt;,&lt;L1-lmax&gt;,&lt;L1-lmin&gt;,&lt;L1-lpkH&gt;,&lt;L1-P&gt;,&lt;L1-S&gt;,&lt;L1-Q&gt;,&lt;L1-PF&gt;,&lt;L1-CF&gt;,&lt;L1-THDv&gt;,&lt;L1-THDi&gt;,&lt;L1-Freq&gt;,&lt;L2-Vrms&gt;,&lt;L2-Vavg&gt;,&lt;L2-Vmax&gt;,&lt;L2-Vmin&gt;,&lt;L2-Vpkh&gt;,&lt;L2-Irms&gt;,&lt;L2-lavg&gt;,&lt;L2-lmax&gt;,&lt;L2-lmin&gt;,&lt;L2-lpkH&gt;,&lt;L2-P&gt;,&lt;L2-S&gt;,&lt;L2-Q&gt;,&lt;L2-PF&gt;,&lt;L2-CF&gt;,&lt;L2-THDv&gt;,&lt;L2-THDi&gt;,&lt;L2-Freq&gt;,&lt;L3-Vrms&gt;,&lt;L3-Vavg&gt;,&lt;L3-Vmax&gt;,&lt;L3-Vmin&gt;,&lt;L3-Vpkh&gt;,&lt;L3-Irms&gt;,&lt;L3-lavg&gt;,&lt;L3-lmax&gt;,&lt;L3-lmin&gt;,&lt;L3-lpkH&gt;,&lt;L3-P&gt;,&lt;L3-S&gt;,&lt;L3-Q&gt;,&lt;L3-PF&gt;,&lt;L3-CF&gt;,&lt;L3-THDv&gt;,&lt;L3-THDi&gt;,&lt;L3-Freq&gt;</code>	<p><code>&lt;THDv&gt;,&lt;THDi&gt;</code> returns values in AC-INT mode only, whereas returns Invalid in other modes.</p> <p><code>&lt;S&gt;,&lt;Q&gt;,&lt;PF&gt;,&lt;CF&gt;</code> returns Invalid in DC-INT mode.</p> <p><code>&lt;Freq&gt;</code> returns values in AC+DC-Sync and AC-Sync modes only, whereas returns Invalid in other modes.</p>
Example	<pre>:READ? &gt;+0.1084,-0.0003,+0.3819,-0.3915,- 0.6148,+0.0000,+0.0000,+0.0000,+0.0000,- 0.0091,+0.0000,+0.0000,+0.0003,+0.0000,+0.0000,Invalid,Invalid,Invalid,+0.1406,-0.0002,+0.4467,-0.4515,- 0.6245,+0.0000,+0.0000,+0.0000,+0.0000,- 0.0091,+0.0000,+0.0000,+0.0003,+0.0000,+0.0000,Invalid,Invalid,Invalid,+0.1252,-0.0004,+0.4371,-0.4671,- 0.6437,+0.0000,+0.0000,+0.0000,+0.0000, - 0.0572,+0.0000,+0.0000,+0.0010,+0.0000,+0.0000,Invalid,Invalid,Invalid</pre>	

**[:SOURce]:VOLTage:RANGe** 



Description	Sets or queries the voltage range.	
Syntax	[:SOURce]:VOLTage:RANGe {<NR1> 100 200 AUTO}	
Query Syntax	[:SOURce]:VOLTage:RANGe?	
Parameter / Return parameter	<NR1> 100   0 200   1 AUTO   2	From 0 – 2, which represent different voltage ranges, respectively. 100V 200V AUTO (Only AC+DC-INT or AC-INT or DC-INT or AC+DC-sync or AC-sync Active)
Example	:SOUR:VOLT:RANG? 200 Returns the voltage range as 200V.	

**[:SOURce]:VOLTage:RESPonse** 



Description	Sets or queries the voltage response. (Fast not available for single-phase or output impedance set to on.)	
Syntax	[:SOURce]:VOLTage:RESPonse {<NR1> SLOW MEDIum FAST}	
Query Syntax	[:SOURce]:VOLTage:RESPonse?	
Parameter / Return parameter	<NR1> SLOW   0 MEDIum   1 FAST   2	From 0 – 2, which represent different voltage response ,respectively. Voltage response slow. Voltage response medium. Voltage response fast.
Example	VOLT:RESP? +1 Returns the voltage response as medium.	

Set →

**[:SOURce]:VOLTage:LIMit:RMS**

→ Query

Description	Sets or queries the voltage limit for the continuous operation mode. (Only AC-INT or AC-ADD or AC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:RMS {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:RMS? [MINimum MAXimum]	
Parameter	<NR2>	Vrms.
	MINimum	Minimum voltage limit
	MAXimum	Maximum voltage limit
Return parameter	<NR2>	Returns the voltage limit.
Example	VOLT:LIM:RMS? +350.0000 Returns the Vrms limit.	

Set →

**[:SOURce]:VOLTage:LIMit:PEAK**

→ Query

Description	Sets or Queries the Value of Vpp in Specific Mode(AC-INT or AC-ADD or AC-Sync) and Specific Wave Shape(TRI or ARB) and Specific V Unit(p-p)	
Syntax	[:SOURce]:VOLTage:LIMit:PEAK <NR2>   MINimum   MAXimum	
Query Syntax	[:SOURce]:VOLTage:LIMit:PEAK? [ MINimum   MAXimum ]	
Parameter	<NR2>	Vpp
	MINimum	Minimum Vpp limit
	MAXimum	Maximum Vpp limit
Return parameter	<NR2>	Returns the Vpp limit.
Example	VOLT:LIM:PEAK? +500.0000 Returns the Vpp limit.	

**[[:SOURce]:VOLTage:LIMit:HIGH** (Set) →  
→ (Query)


Description	Sets or queries the voltage high limit. (Only AC+DC-INT or DC-INT or AC+DC-ADD or AC+DC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:HIGH? [MINimum MAXimum]	
Parameter	<NR2>	Voltage high limit
	MINimum	Minimum voltage high limit
	MAXimum	Maximum voltage high limit
Return parameter	<NR2>	Returns the voltage high limit.
Example	VOLT:LIM:HIGH? +500.0000 Returns the voltage high limit.	

**[[:SOURce]:VOLTage:LIMit:LOW** (Set) →  
→ (Query)

Description	Sets or queries the voltage low limit. (Only AC+DC-INT or DC-INT or AC+DC-ADD or AC+DC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:LOW? [MINimum MAXimum]	
Parameter	<NR2>	Voltage low limit
	MINimum	Minimum voltage low limit
	MAXimum	Maximum voltage low limit
Return parameter	<NR2>	Returns the voltage low limit.
Example	VOLT:LIM:LOW? -500.0000 Returns the voltage low limit.	



**[[:SOURce]:SQUare:DCYcle**



**Description** Sets or queries the square wave signal duty cycle. The settable range depends on the frequency. (Not available for DC-INT, AC+DC-EXT and ACEXT)

**Syntax** [[:SOURce]:SQUare:DCYcle {<NR2>|MINimum|MAXimum}

**Query Syntax** [[:SOURce]:SQUare:DCYcle?

<b>Parameter/Return parameter</b>	<NR2>	square wave signal duty cycle.
	MINimum	Minimum square wave signal duty cycle.
	MAXimum	Maximum square wave signal duty cycle.

**Example** :SQU:DCYC?  
+50.0  
Returns the square wave signal duty cycle as 50.0%.


## Sequence Commands

[:SOURce]:SEQuence:INSTrument:SElect .....	148
[:SOURce]:SEQuence:CPARameter .....	149
[:SOURce]:SEQuence:CSTep .....	150
[:SOURce]:SEQuence:CTIME.....	150
[:SOURce]:SEQuence:CJUMp:CNT .....	150
[:SOURce]:SEQuence:NSParameter .....	151
[:SOURce]:SEQuence:SPARameter .....	152
[:SOURce]:SEQuence:STEP .....	153
[:SOURce]:SEQuence:CONDition .....	154
:TRIGger:SEQuence:SELEcted:EXECute .....	154

[:SOURce]:SEQuence:INSTrument:SElect 

Description	Sets or queries the phase to set sequence.(Only Sequence Mode Active. For single-phase and single-phase three-wire, only L1 can be set.	
Syntax	[:SOURce]:SEQuence:INSTrument:SElect {<NR1> L1 L2 L3}	
Query Syntax	[:SOURce]:SEQuence:INSTrument:SElect?	
Parameter/ Return parameter	<NR1>	From 0 ~ 2, which represent different phase to set sequence, respectively.
	L1   0	L1 phase
	L2   1	L2 phase
	L3   2	L3 phase
Example	:SEQ:INST:SEL L2 Sets the L2 phase to set sequence .	

**[:SOURce]:SEQuence:CPARameter**



Description	Sets the common parameters for the Sequence mode. Please see the user manual for a full description of each parameter. (Only Sequence Mode Active)	
Syntax	[:SOURce]:SEQuence:CPARameter {<NR2>,<NR2>,<bool> OFF ON,<NR2>,<bool> OFF ON,<NR1> CONTInue END HOLD,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON}	
Query Syntax	[:SOURce]:SEQuence:CPARameter?	
Parameter	<NR2> <NR2> <bool> OFF ON FR EE FIXED <NR2> <bool> OFF ON FR EE FIXED <NR1> CONTInue E ND HOLD <NR1> <bool> OFF ON <NR1> <NR1> <NR1> <bool> OFF ON <NR1> <bool> OFF ON <bool>	Step Time On phase On Phase settings: on (fixed) (1) / off (free) (0) Off phase Off Phase settings: on (fixed) (1) / off (free) (0) Term settings: Continue(0)/End(1)/Hold(2) Jump step number (0 ~ 999) Jump on(1)/off(0) Jump Cnt (0~ 9999) Sync Code: LLL(0) / LLH(1) / LHL(2) / LHH(3) / HLL(4) / HLH(5) / HHL(6) / HHH(7) Branch1 (0 ~ 999) Branch1 on(1)/off(0) Branch2 (0 ~ 999) Branch2 on(1)/off(0) Reserved (Fixed to 0)
Return parameter	<NR2>,<NR2>,<bool>,<NR2>,<bool>,<NR1>,<NR1>,<bool>,<NR1>,<NR1>,<bool>,<NR1>,<bool>,<NR1>,<bool>,<bool> Returns the common parameters in the following order: Step time, on phase, on phase on/off, off phase, off phase on/off, term settings, jump step number, jump on/off, jump count, code on/off, branch1, branch1 on/off, branch2, branch2 on/off, reserved on/off.	

Example1 :SEQ:CPAR 1,1,0,10,1,HOLD,10,1,0,1,0,0,0,0,0  
 Example2 :SEQ:CPAR?  
 +1.0000,+1.0,+0,+10.0,+1,HOLD,+10,+1,+0,+1,+0,+0,+0,  
 +0,+0

**[[:SOURce]:SEQuence:CSTep] → Query**

Description Returns the currently running step number. (Only Sequence Mode Active)

Query Syntax [[:SOURce]:SEQuence:CSTep?

Return parameter <NR1> Current step number

Example :SEQ:CSTep?  
 +1

**[[:SOURce]:SEQuence:CTIME] → Query**

Description Returns the currently running step number and elapsed time. (Only Sequence Mode Active)

Query Syntax [[:SOURce]:SEQuence:CTIME?

Return parameter <NR1> Current step number,current elapsed hours,current elapsed minutes, current elapsed second

Example :SEQ:CTIME?  
 +1,+0,+0,+18

**[[:SOURce]:SEQuence:CJUMp:CNT] → Query**


Description Returns the currently running step number and jump count.If the jump to function is turned off, the returned information is "-1". If jump count is set to infinity, the returned information is "Inf".(Only Sequence Mode Active)

Query Syntax [[:SOURce]:SEQuence:CJUMp:CNT?

Return parameter <NR1> Current step number,current jump count

Example :SEQ:CJUMP:CNT?  
+1,+1

[::SOURCE]:SEQUENCE:NSPARAMETER



**Description** Sets or queries the parameters for a new specified step. (Only Sequence Mode Active)

**Syntax** [::SOURCE]:SEQUENCE:NSPARAMETER  
{<NR2>,<NR1>|CONST|KEEP|SWEep,<NR2>,<NR1>|CONSt|KEEP|SWEep,<NR2>,<NR1>|CONSt|KEEP|SWEep,SIN,<NR2>,<NR2>}

**Query Syntax** [::SOURCE]:SEQUENCE:NSPARAMETER?

<b>Parameter</b>	<NR2>	ACV setting
	<NR1> CONSt KEEP SWEep	ACV mode: Constant(0)   Keep(1)   Sweep(2)
	<NR2>	DCV. Not applicable. This parameter will be ignored.
	<NR1> CONSt KEEP SWEep	DCV mode: Constant(0)   Keep(1)   Sweep(2)
	<NR2>	Frequency
	<NR1> CONSt KEEP SWEep	Frequency mode: Constant(0)   Keep(1)   Sweep(2)
	Waveform	ARB1   ARB2   ARB3   ARB4   ...   ARB13   ARB14   ARB15   ARB16   SIN   SQU   TRI   ARB17   ARB18   ARB19   ARB20   ...   ARB250   ARB251   ARB252   ARB253
	<NR2>	Square wave signal duty cycle.
	<NR2>	Phase angle. (L1 phase Fixed to 0.)

**Return parameter** <NR2>,<NR1> | CONSt | KEEP | SWEep,<NR2>,<NR1> | CONSt | KEEP | SWEep,<NR2>,<NR1> | CONSt | KEEP | SWEep,ARB1 | ARB2 | ARB3 | ARB4 | ...  
| ARB13 | ARB14 | ARB15 | ARB16 | SIN | SQU | TRI | ARB17 | ARB18 | ARB19 | ARB20 | ...  
| ARB250 | ARB251 | ARB252 | ARB253

Returns the step parameters in the following order:  
ACV, ACV mode, DCV, DCV mode, frequency, frequency mode, wave, square wave signal duty cycle, phase.

Example :SEQ:NSP?  
+0.0,CONST,+0.0,CONST,+50.00,CONST,SIN,+50.0,+0

[[:SOURce]:SEQuence:SPARAmeter 

Description Sets or queries the parameters for a specified step.  
(Only Sequence Mode Active)


Syntax [:SOURce]:SEQuence:SPARAmeter  
{<NR2>,<NR1>|CONSt|KEEp|SWEep,<NR2>,<NR1>|CO  
NSt|KEEp|SWEep,<NR2>,<NR1>|CONSt|KEEp|SWEep,S  
IN,<NR2>}

Query Syntax [:SOURce]:SEQuence:SPARAmeter?

Parameter	<NR2> ACV setting <NR1> CONSt  KEEp SWEep ACV mode: Constant(0)   Keep(1)   Sweep(2) <NR2> DCV. Not applicable. This parameter will be ignored. <NR1> CONSt  KEEp SWEep DCV mode: Constant(0)   Keep(1)   Sweep(2) <NR2> Frequency <NR1> CONSt  KEEp SWEep Frequency mode: Constant(0)   Keep(1)   Sweep(2) Waveform ARB1   ARB2   ARB3   ARB4   ...   ARB13   ARB14   ARB15   ARB16   SI N   SQU   TRI   ARB17   ARB18   ARB1 9   ARB20   ...   ARB250   ARB251   ARB252   ARB253 <NR2> Phase angle. (L1 phase Fixed to 0.)
Return parameter	<NR2>,<NR1>   CONSt   KEEp   SWEep,<NR2>,<NR1>   CONSt   KEEp   SWEep,<NR2>,<NR1>   CONSt   KEEp   S WEep,ARB1   ARB2   ARB3   ARB4   ...   ARB13   ARB14   ARB15   ARB16   SIN   SQU   TRI   ARB1 7   ARB18   ARB19   ARB20   ...   ARB250   ARB251   ARB252   ARB253 Returns the step parameters in the following order: ACV, ACV mode, DCV, DCV mode, frequency, frequency mode, wave, phase.

Example :SEQ:SPAR?  
+0.0,CONST,+0.0,CONST,+50.00,CONST,SIN,+0

**[[:SOURce]:SEQuence:STEP**



Description	Sets or queries the current step number. (Only Sequence Mode Active)	
Syntax	[:SOURce]:SEQuence:STEP {<NR1>   MINimum   MAXimum}	
Query Syntax	[:SOURce]:SEQuence:STEP? [MINimum   MAXimum]	
Parameter/Return parameter	<NR1>	Step number
	MINimum	Minimum step number
	MAXimum	Maximum step number
Example	:SEQ:STEP 1 Sets the step number to 1.	

**[:SOURce]:SEQUence:CONDition** → Query

Description	Returns the sequence status.(Only Sequence Mode Active)		
Query Syntax	[:SOURce]:SEQUence:CONDition?		
Return parameter	<NR1>	Current sequence status	0 (Idle mode) 1 (Run mode) 2 (Hold mode)
Example	:SEQ:COND? 1		

**:TRIGger:SEQUence:SElected:EXECute** Set →

Description	Sets to execute actions for sequence mode. (Only Sequence Mode Active)		
Syntax	:TRIGger:SEQUence:SElected:EXECute {STOP START HOLD BRAN1 BRAN2}		
Parameter	STOP	START	Holds sequence execution
	START	HOLD	Stops sequence execution
	HOLD	BRAN1	Starts sequence execution
	BRAN1	BRAN2	Holds sequence execution
	BRAN2		Jumps to Branch 1 execution
			Jumps to Branch 2 execution
Example	TRIG:SEQ:SEL:EXEC STAR Starts sequence execution.		

## Simulate Commands

[.SOURce]:SIMulation:CONDition.....	156
[.SOURce]:SIMulation:ABNormal:CODE .....	156
[.SOURce]:SIMulation:ABNormal:FREQuency .....	157
[.SOURce]:SIMulation:ABNormal:PHASe	
:STARt:ENABle.....	157
[.SOURce]:SIMulation:ABNormal:PHASe	
:STARt[:IMMediate].....	157
[.SOURce]:SIMulation:ABNormal:PHASe	
:STOP:ENABle .....	158
[.SOURce]:SIMulation:ABNormal:PHASe	
:STOP[:IMMediate] .....	158
[.SOURce]:SIMulation:ABNormal:TIME .....	159
[.SOURce]:SIMulation:ABNormal:VOLTage.....	159
[.SOURce]:SIMulation:CSTep .....	160
[.SOURce]:SIMulation:CTIME .....	161
[.SOURce]:SIMulation:CREPeat:COUNt? .....	161
[.SOURce]:SIMulation:INITial:CODE.....	162
[.SOURce]:SIMulation:INITial:FREQuency .....	162
[.SOURce]:SIMulation:INITial:PHASe:STARt:ENABle .....	163
[.SOURce]:SIMulation:INITial:PHASe:STARt[:IMMediate].....	163
[.SOURce]:SIMulation:INITial:PHASe:STOP:ENABle .....	164
[.SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate] .....	164
[.SOURce]:SIMulation:INITial:VOLTage.....	165
[.SOURce]:SIMulation:NORMal<1   2>:CODE .....	165
[.SOURce]:SIMulation:NORMal 1:FREQuency.....	166
[.SOURce]:SIMulation:NORMal<1   2>	
:PHASe:STARt:ENABle .....	166
[.SOURce]:SIMulation:NORMal<1   2>	
:PHASe:STARt[:IMMediate] .....	167
[.SOURce]:SIMulation:NORMal<1   2>	
:PHASe:STOP:ENABle.....	167
[.SOURce]:SIMulation:NORMal<1   2>	

:PHASe:STOP[:IMMediate] ..... 168  
 [:SOURce]:SIMulation:NORMAl<1 | 2>:TIME ..... 168  
 [:SOURce]:SIMulation:NORMAl 1:VOLTage..... 169  
 [:SOURce]:SIMulation:REPeat:COUNt..... 169  
 [:SOURce]:SIMulation:REPeat:ENABle ..... 170  
 [:SOURce]:SIMulation:TRANsition<1 | 2>:TIME... 170  
 [:SOURce]:SIMulation:TRANsition<1 | 2>:CODE . 171  
 :TRIGger:SIMulation:SELEcted:EXECute ..... 171

**[:SOURce]:SIMulation:CONDition** → Query

Description	Returns the simulation status. (Only Simulation Mode Active)		
Query Syntax	[:SOURce]:SIMulation:CONDition?		
Return parameter	<NR1>	Current simulation status	0 (Idle mode) 1 (Run mode) 2 (Hold mode)
Example	:SIM:COND? 1		

**[:SOURce]:SIMulation:ABNormal:CODE** Set →  
→ Query

Description	Sets the external trigger output for the abnormal step parameter. This option is only applicable when in the Simulation mode. (Only Simulation Mode Active)		
Syntax	[:SOURce]:SIMulation:ABNormal:CODE {<NR1> MINimum MAXimum}		
Query Syntax	[:SOURce]:SIMulation:ABNormal:CODE? [MINimum MAXimum]		
Parameter/Return parameter	<NR1>	External trigger output, 0=LLL, 1=LLH, 2= LHL, 3= LHH, 4= HLL, 5= HLH, 6=HHL, 7= HHH	
	MINimum	0 (LLL)	
	MAXimum	7 (HHH)	
Example	SIM:ABN:CODE 1		

Set →  
 → Query

**[[:SOURce]:SIMulation:ABNormal:FREQuency**

Description	Sets or queries the frequency of the abnormal step of the simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:ABNormal:FREQuency {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:FREQuency? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Frequency of abnormal step
	MINimum	Minimum frequency
	MAXimum	Maximum frequency
Example	:SIM:ABN:FREQ 55 Sets the frequency to 55Hz.	

Set →  
 → Query

**[[:SOURce]:SIMulation:ABNormal:PHASe :START:ENABle**



Description	Enables/Disables (Fixed/Free) the ON Phs parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:START:ENABle {<bool> OFF ON FREE FIXED}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:START:ENABle?	
Parameter/Return parameter	OFF   0   FREE	Disabled
	ON   1	Enabled
	FIXED	
Example	:SIM:ABN:PHAS:STAR:ENAB 1 Enable the ON Phs.	

Set →  
 → Query

**[[:SOURce]:SIMulation:ABNormal:PHASe :START[:IMMEDIATE]**



Description	Sets or queries the ON Phs parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)						
Syntax	[[:SOURce]:SIMulation:ABNormal:PHASe:START[:IMMEDIATE] {<NR2> MINimum MAXimum}						
Query Syntax	[[:SOURce]:SIMulation:ABNormal:PHASe:START[:IMMEDIATE]? [MINimum MAXimum]						
Parameter/Return parameter	<table border="1"> <tr> <td>&lt;NR2&gt;</td> <td>ON Phs (start phase)</td> </tr> <tr> <td>MINimum</td> <td>0</td> </tr> <tr> <td>MAXimum</td> <td>359.9</td> </tr> </table>	<NR2>	ON Phs (start phase)	MINimum	0	MAXimum	359.9
<NR2>	ON Phs (start phase)						
MINimum	0						
MAXimum	359.9						
Example	:SIM:ABN:PHAS:STAR 0 Sets ON Phs to 0.						

[[:SOURce]:SIMulation:ABNormal:PHASe  
:STOP:ENABLE

Description	Enables/Disables (Fixed/Free) the OFF Phs parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)						
Syntax	[[:SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE {<bool> OFF ON FREE FIXED }						
Query Syntax	[[:SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE?						
Parameter/Return parameter	<table border="1"> <tr> <td>OFF   0   FREE</td> <td>Disabled</td> </tr> <tr> <td>ON   1  </td> <td>Enabled</td> </tr> <tr> <td>FIXED</td> <td></td> </tr> </table>	OFF   0   FREE	Disabled	ON   1	Enabled	FIXED	
OFF   0   FREE	Disabled						
ON   1	Enabled						
FIXED							
Example	:SIM:ABN:PHAS:STOP:ENAB 1 Enable the OFF Phs.						

[[:SOURce]:SIMulation:ABNormal:PHASe  
:STOP[:IMMEDIATE]

Description	Sets or queries the OFF Phs parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)
-------------	---

Note: Sets the off phase of the waveform after the output has been turned off.

Syntax [:SOURce]:SIMulation:ABNormal:PHASe:STOP  
[:IMMEDIATE] {<NR2> | MINimum | MAXimum}

Query Syntax [:SOURce]:SIMulation:ABNormal:PHASe:STOP  
[:IMMEDIATE]? [MINimum | MAXimum]

Parameter/Return parameter	<NR2>	OFF Phs (Stop phase)
	MINimum	0
	MAXimum	359.9

Example :SIM:ABN:PHAS:STOP 0  
Sets OFF Phs to 0.

[:SOURce]:SIMulation:ABNormal:TIME  


Description Sets or queries the Time parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)

Syntax [:SOURce]:SIMulation:ABNormal:TIME  
{<NR2> | MINimum | MAXimum}

Query Syntax [:SOURce]:SIMulation:ABNormal:TIME?  
[MINimum | MAXimum]

Parameter/Return parameter	<NR2>	Time of the abnormal step in seconds
	MINimum	0.0001
	MAXimum	999.9999s

Example :SIM:ABN:TIME 1  
Sets the abnormal step time to 1 second.

[:SOURce]:SIMulation:ABNormal:VOLTage  

Description Sets or queries the Vset parameter of the abnormal step for the Simulation mode. (Only Simulation Mode Active)

Syntax [:SOURce]:SIMulation:ABNormal:VOLTage  
{<NR2> | MINimum | MAXimum}

Query Syntax	[:SOURce]:SIMulation:ABNormal:VOLTage? [MINimum   MAXimum]	
Parameter/Return parameter	<NR2>	Voltage of the abnormal step.
	MINimum	Minimum settable voltage
	MAXimum	Maximum settable voltage
Example	:SIM:ABN:VOLT MAX Sets the abnormal step voltage to the maximum.	

**[:SOURce]:SIMulation:CSTep** → **Query**



Description	Returns the currently running step. (Only Simulation Mode Active)	
Query Syntax	[:SOURce]:SIMulation:CSTep?	
Return parameter	<NR1>	Current step +0 = Initial step +1 = Normal1 step +2 = Transition1 step +3 = Abnormal step +4 = Transition2 step +5 = Normal2 step
Example	:SIM:CSTep? +1	

[:SOURce]:SIMulation:CTIME → Query



Description	Returns the currently running step number and elapsed time.(Only Simulation Mode Active)
Query Syntax	[:SOURce]:SIMulation:CTIME?
Return parameter	<NR1> Current step number,current elapsed hours,current elapsed minutes, current elapsed second +0 = Initial step +1 = Normal1 step +2 = Transition1 step +3 = Abnormal step +4 = Transition2 step +5 = Normal2 step
Example	:SIM:CTIME? +1,+0,+0,+18

[:SOURce]:SIMulation:CREPeat:COUNT? → Query



Description	Returns the currently running step and jump count. If the jump to function is turned off, the returned information is "-1". If jump count is set to infinity, the returned information is "Inf".(Only Simulation Mode Active)
Query Syntax	[:SOURce]:SIMulation:CREPeat:COUNT?
Return parameter	<NR1> Current step,current repeat count +0 = Initial step +1 = Normal1 step +2 = Transition1 step +3 = Abnormal step +4 = Transition2 step +5 = Normal2 step
Example	:SIM:CREPeat:COUNT? +1,+1

**[:SOURce]:SIMulation:INITial:CODE** 



Description	Sets the external trigger output for the initial step parameter. This option is only applicable when in the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:INITial:CODE {<NR1> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:INITial:CODE? [MINimum MAXimum]	
Parameter/Return parameter	<NR1>	0=LLL, 1=LLH, 2= LHL, 3= LHH, 4= HLL, 5= HLH, 6=HHL, 7= HHH
	MINimum	0 (LLL)
	MAXimum	7 (HHH)
Example	SIM:INIT:CODE 1	

**[:SOURce]:SIMulation:INITial:FREQuency** 



Description	Sets or queries the frequency of the initial step of the simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:INITial:FREQuency {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:INITial:FREQuency? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Frequency of initial step
	MINimum	Minimum frequency
	MAXimum	Maximum frequency
Example	:SIM:INIT:FREQ 60 Sets the frequency of the initial step to 60Hz.	

`[:SOURce]:SIMulation:INITial:PHASe:STARt:ENABle`  



**Description** Enables/Disables (Fixed/Free) the ON Phs parameter of the initial step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STARt:ENABle {<bool>|OFF|ON|FREE|FIXED}`

**Query Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STARt:ENABle?`

<b>Parameter/Return parameter</b>	OFF   0   FREE	Disabled
	ON   1   FIXED	Enabled

**Example** `:SIM:INIT:PHAS:STAR:ENAB 1`  
Enable the ON Phs.

`[:SOURce]:SIMulation:INITial:PHASe:STARt[:IMMediate]`  

**Description** Sets or queries the ON Phs parameter of the initial step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STARt[:IMMediate] {<NR2>|MINimum|MAXimum}`

**Query Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STARt[:IMMediate]? [MINimum|MAXimum]`

<b>Parameter/Return parameter</b>	<NR2>	ON Phs (start phase)
	MINimum	0
	MAXimum	359.9

**Example** `:SIM:INIT:PHAS:STAR 0`  
Sets ON Phs to 0.

`[:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE` (Set) →  
→ (Query)

**Description** Enables/Disables (Fixed/Free) the OFF Phs parameter of the initial step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE {<bool>|OFF|ON|FREE|FIXED }`

**Query Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE?`

<b>Parameter/Return parameter</b>	OFF   0   FREE	Disabled
	ON   1   FIXED	Enabled

**Example** `:SIM:INIT:PHAS:STOP:ENAB 1`  
Enable the OFF Phs.

`[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate]` (Set) →  
→ (Query)

**Description** Sets or queries the OFF Phs parameter of the initial step for the Simulation mode. (Only Simulation Mode Active)


**Note:** Sets the off phase of the waveform after the output has been turned off.

**Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate] {<NR2>|MINimum|MAXimum}`

**Query Syntax** `[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate]? [MINimum|MAXimum]`

<b>Parameter/Return parameter</b>	<NR2>	OFF Phs (Stop phase)
	MINimum	0
	MAXimum	359.9

**Example** `:SIM:INIT:PHAS:STOP 0`  
Sets OFF Phs to 0.

**[[:SOURce]:SIMulation:INITial:VOLTage** 



Description	Sets or queries the Vset parameter of the initial step for the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:INITial:VOLTage {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:INITial:VOLTage? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Voltage of the initial step. Minimum settable voltage Maximum settable voltage
Example	:SIM:INIT:VOLT MAX Sets the initial step voltage to the maximum.	

**[[:SOURce]:SIMulation:NORMal<1|2>:CODE** 



Description	Sets the external trigger output for the normal 1 or normal 2 step parameter. This option is only applicable when in the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:NORMal<1 2>:CODE {<NR1> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:NORMal<1 2>:CODE? [MINimum MAXimum]	
Parameter/Return parameter	<NR1> MINimum MAXimum	0=LLL, 1=LLH, 2= LHL, 3= LHH, 4= HLL, 5= HLH, 6=HHL, 7= HHH 0 (LLL) 7 (HHH)
Example	SIM:NORM1:CODE 1	

Set →



`[:SOURce]:SIMulation:NORMal 1:FREQuency` → Query

Description	Sets or queries the frequency of the normal1 step of the simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:NORMal 1:FREQuency {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:NORMal 1:FREQuency? [MINimum MAXimum]	
Parameter/Return parameter	1 <NR2> MINimum MAXimum	Normal 1 Frequency of abnormal step Minimum frequency Maximum frequency
Example	:SIM:NORM1:FREQ 60 Sets the frequency to 60Hz.	

Set →

`[:SOURce]:SIMulation:NORMal<1|2>:PHASe:STARt:ENABle` → Query

Description	Enables/Disables (Fixed/Free) the ON Phs parameter of the normal1 or normal2 step for the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STARt:ENABle { <bool> OFF ON FREE FIXED}	
Query Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STARt:ENABle?	
Parameter/Return parameter	<1 2> OFF   0   FREE ON   1   FIXED	Normal 1 or Normal 2 Disabled Enabled
Example	:SIM:NORM1:PHAS:STAR:ENAB 1 Enable the ON Phs.	

`[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STARt[:IMMediate]` 





**Description** Sets or queries the ON Phs parameter of the normal1 or normal2 step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** `[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STARt[:IMMediate] {<NR2> | MINimum | MAXimum}`

**Query Syntax** `[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STARt[:IMMediate]? [MINimum | MAXimum]`

<b>Parameter/Return parameter</b>	<code>&lt;1   2&gt;</code>	Normal 1 or Normal 2
	<code>&lt;NR2&gt;</code>	ON Phs (start phase)
	<code>MINimum</code>	0
	<code>MAXimum</code>	359.9

**Example** `:SIM:NORM1:PHAS:STAR 0`  
Sets ON Phs to 0.

`[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STOP:ENABle` 



**Description** Enables/Disables (Fixed/Free) the OFF Phs parameter of the normal1 or normal2 step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** `[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STOP:ENABle {<bool> | OFF | ON | FREE | FIXED}`

**Query Syntax** `[[:SOURce]:SIMulation:NORMal<1 | 2>:PHASe:STOP:ENABle?`

<b>Parameter/Return parameter</b>	<code>&lt;1   2&gt;</code>	Normal 1 or Normal 2
	<code>OFF   0   FREE</code>	Disabled
	<code>ON   1  </code>	Enabled
	<code>FIXED</code>	

**Example** `:SIM:NORM1:PHAS:STOP:ENAB 1`  
Enable the OFF Phs.

[:SOURce]:SIMulation:NORMal<1|2> Set →  
 :PHASe:STOP[:IMMEdiate] → Query

**Description** Sets or queries the OFF Phs parameter of the normal1 or normal2 step for the Simulation mode. (Only Simulation Mode Active)

**Note:** Sets the off phase of the waveform after the output has been turned off.

**Syntax** [:SOURce]:SIMulation:NORMal<1|2>:PHASe:STOP[:IMMediate] {<NR2>|MINimum|MAXimum}

**Query Syntax** [:SOURce]:SIMulation:NORMal<1|2>:PHASe:STOP[:IMMediate]? [MINimum|MAXimum]

<b>Parameter/Return parameter</b>	<1 2>	Normal 1 or Normal 2
	<NR2>	OFF Phs (Stop phase)
	MINimum	0
	MAXimum	359.9

**Example** :SIM:NORM1:PHAS:STOP 0  
 Sets OFF Phs to 0.

[:SOURce]:SIMulation:NORMal<1|2>:TIME Set →  
→ Query

**Description** Sets or queries the Time parameter of the normal1 or normal2 step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** [:SOURce]:SIMulation:NORMal<1|2>:TIME {<NR2>|MINimum|MAXimum}

**Query Syntax** [:SOURce]:SIMulation:NORMal<1|2>:TIME? [MINimum|MAXimum]

<b>Parameter/Return parameter</b>	<1 2>	Normal 1 or Normal 2
	<NR2>	Time of the step in seconds
	MINimum	0.0001
	MAXimum	999.9999s

**Example** :SIM:NORM1:TIME 1  
 Sets the step time to 1 second.

**[[:SOURce]:SIMulation:NORMal 1:VOLTage** (Set) →  
→ (Query)

**Description** Sets or queries the Vset parameter of the normal1 step for the Simulation mode. (Only Simulation Mode Active)

**Syntax** [[:SOURce]:SIMulation:NORMal 1:VOLTage {<NR2> | MINimum | MAXimum}

**Query Syntax** [[:SOURce]:SIMulation:NORMal 1:VOLTage? [MINimum | MAXimum]

<b>Parameter/Return parameter</b>	<b>1</b>	Normal 1
	<b>&lt;NR2&gt;</b>	Voltage of the abnormal step.
	<b>MINimum</b>	Minimum settable voltage
	<b>MAXimum</b>	Maximum settable voltage

**Example** :SIM:NORM1:VOLT MAX  
Sets the normal1step voltage to the maximum.

**[[:SOURce]:SIMulation:REPeat:COUNt** (Set) →  
→ (Query)

**Description** Sets or queries the repeat count for the Simulation mode. (Only Simulation Mode Active)

**Syntax** [[:SOURce]:SIMulation:REPeat:COUNt {<NR1> | MINimum | MAXimum}

**Query Syntax** [[:SOURce]:SIMulation:REPeat:COUNt? [MINimum | MAXimum]



<b>Parameter/Return parameter</b>	<b>&lt;NR1&gt;</b>	0 ~ 9999 (0 = infinite loop)
	<b>MINimum</b>	0
	<b>MAXimum</b>	9999

**Example** :SIM:REP:COUN 1  
Sets the repeat count to 1.

**[:SOURce]:SIMulation:REPeat:ENABLE** 


Description	Turns the repeat function on or off for the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:REPeat:ENABLE {<bool> OFF ON}	
Query Syntax	[:SOURce]:SIMulation:REPeat:ENABLE?	
Parameter/Return parameter	OFF   0	Disabled
	ON   1	Enabled
Example	:SIM:REP:ENAB 1 Enables the repeat function.	

**[:SOURce]:SIMulation:TRANSition<1|2>:TIME** 

  


Description	Sets or queries the Time parameter of the transition step for the Simulation mode. (Only Simulation Mode Active)	
Syntax	[:SOURce]:SIMulation:TRANSition<1 2>:TIME {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:TRANSition<1 2>:TIME? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Time of the step in seconds
	MINimum	0
	MAXimum	999.9999s
Example	:SIM:TRAN1:TIME 1 Sets the step time to 1 second.	

`[[:SOURce]:SIMulation:TRANSition<1|2>:COD E` (Set) →  
→ (Query)

Description	Sets the external trigger output for the transition step parameter. This option is only applicable when in the Simulation mode. (Only Simulation Mode Active)	
Syntax	<code>[[:SOURce]:SIMulation:TRANSition&lt;1 2&gt;:CODE {&lt;NR1&gt; MINimum MAXimum}</code>	
Query Syntax	<code>[[:SOURce]:SIMulation:TRANSition&lt;1 2&gt;:CODE? [MINimum MAXimum]</code>	
Parameter/Return parameter	<code>&lt;NR1&gt;</code>	0=LLL, 1=LLH, 2= LHL, 3= LHH, 4= HLL, 5= HLH, 6=HHL, 7= HHH
	<code>MINimum</code>	0 (LLL)
	<code>MAXimum</code>	7 (HHH)
Example	SIM:TRAN1:CODE 1	

`:TRIGger:SIMulation:SElected:EXECute` (Set) →

Description	Sets to execute actions for simulate mode. (Only Simulation Mode Active)	
Syntax	<code>:TRIGger:SIMulation:SElected:EXECute {STOP START HOLD}</code>	
Parameter	<code>STOP</code>	Stops simulate execution
	<code>START</code>	Starts simulate execution
	<code>HOLD</code>	Holds simulate execution
Example	TRIG:SIM:SEL:EXEC STAR Starts simulate execution.	

## Input Subsystem Command

:INPut:SOURce .....	172
:INPut:GAIN .....	172
:INPut:SYNC:SOURce .....	173

### :INPut:SOURce

Set →

→ Query

**Description** Sets or queries state of source. (Only AC+DC-EXT or AC-EXT or AC+DC-ADD or AC-ADD or AC-VAC Active)

**Syntax** :INPut:SOURce {<NR1>|L1EXT|L2EXT|L3EXT}

**Query Syntax** :INPut:SOURce?

<b>Parameter/Return parameter</b>	<NR1> L1EXT 0 L2EXT 1 L3EXT 2	L1EXT (0)   L2EXT (1)   L3EXT(2) L1 EXT source L2 EXT source L3 EXT source
-----------------------------------	--	---

**Example** :INP:SOUR?  
  
L1EXT  
  
Returns the state of source as L1EXT.

Set →

→ Query

### :INPut:GAIN


**Description** Sets or queries the input gain value. (Only AC+DC-EXT or AC-EXT or AC+DC-ADD or AC-ADD or AC-VCA Active)

**Syntax** :INPut:GAIN {<NR2>(V)|MINimum|MAXimum}

**Query Syntax** :INPut:GAIN? [MINimum|MAXimum]

<b>Parameter/Return parameter</b>	<NR2> MINimum MAXimum	Input gain value Minimum input gain value Maximum input gain value
-----------------------------------	-----------------------------	--

Example :INP:GAIN?  
 +150.0000  
 Returns the input gain value as 150.0.



**:INPut:SYNC:SOURce**

Description Sets or queries state of sync source. (Only AC+DC-sync or AC-sync Active)

Syntax :INPut:SYNC:SOURce  
 {<NR1>|L1Line|L2Line|L3Line|EXT}

Query Syntax :INPut:SYNC:SOURce?

Parameter/	<NR1>	L1Line(0)   L2Line(1)   L3Line(2)   EXT(3)
Return parameter	L1Line   0	L1 LINE sync source
	L2Line   1	L2 LINE sync source
	L3Line   2	L3 LINE sync source
	EXT   3	EXT sync source

Example :INP:SYNC:SOUR?  
 EXT  
 Returns the state of sync source as EXT.

## Display Command

```
:DISPlay[:WINDow]:DESIgn:MODE ..... 174
:DISPlay[:WINDow]:MEASure:SOURce<1|2|3|4>.174
```

**:DISPlay[:WINDow]:DESIgn:MODE** Set →

Description	Sets three display mode.	
Syntax	:DISPlay[:WINDow]:DESIgn:MODE{NORMal TOTal SIMPle}	
Parameter	NORMal	Configure setup and Measurement.
	TOTal	Configure setup and Measurement include total information. (Except for 1P2W)
	SIMPle	All measurement times.
Example	:DISP:DES:MODE NORM Sets standard normal display.	

**:DISPlay[:WINDow]:MEASure:SOURce<1|2|3|4>** Set →

Description	Sets standard normal display to measurement items 1 – 4.	
Syntax	:DISPlay[:WINDow]:MEASure:SOURce<1 4>{ VRMS VAVG VMAX VMIN VPKH IRMS Iavg IMAX IMIN IPKH RPOWer SPOWer QPOWer FREQuency PFACTOR CFACTOR THDV THDI LRMS LAVG LMAX LMIN}	
Parameter	Item 1	VRMS,VAVG,VMAX,VMIN,VPKH, LRMS*1, LAVG*1, LMAX*1, LMIN*1, RPOWer, SPOWer*1, QPOWer*1, THDV*2
	Item 2	IRMS , Iavg , IMAX , IMIN , IPKH , PFACTOR*1, CFACTOR*1, VAVG, THDI*2
	Item 3	RPOWer , SPOWer*1, QPOWer*1, IPKH , PFACTOR*1, CFACTOR*1, FREQuency*3

Item 4	LRMS* <sup>1</sup> , LAVG* <sup>1</sup> , LMAX* <sup>1</sup> , LMIN* <sup>1</sup> , IRMS* <sup>4</sup> , IAVG* <sup>4</sup> , IMAX* <sup>4</sup> , IMIN* <sup>4</sup> , RPOWer, IPKH* <sup>4</sup> , SPOWer* <sup>1</sup> , QPOWer* <sup>1</sup> , PFACTOR* <sup>1</sup> , CFACTOR* <sup>1</sup>
Note	<p>*<sup>1</sup>: Not available for DC-INT</p> <p>*<sup>2</sup>: Available for AC-INT only</p> <p>*<sup>3</sup>: Available for AC+DC-Sync &amp; AC-Sync only</p> <p>*<sup>4</sup>: Available for DC-INT only</p>

Example                   :DISP:MEAS:SOUR1 VRMS  
                               Sets measurement source 1 VRMS display.

## Status Register Overview

To program the ASR power supply effectively, the Status registers need to be understood. This chapter explains in detail how the Status registers are used and how to configure them.

---

Introduction to the Status Registers .....	176
The Status Registers .....	177
Questionable Status Register Group .....	178
Operation Status Register Group.....	181
Warning Status Register Group .....	183
System Lock Status Register Group .....	186
Standard Event Status Register Group.....	188
Status Byte Register & Service Request Enable Register	190

### Introduction to the Status Registers

---

#### Overview


The status registers are used to determine the status of the power supply. The status registers maintain the status of the protection conditions, operation conditions and instrument errors.

The ASR Series have a number of register groups:

- Questionable Status Register Group
- Standard Event Status Register Group
- Operation Status Register Group
- Warning Status Register Group
- System Lock Status Register Group
- Status Byte Register
- Service Request Enable Register
- Service Request Generation
- Error Queue
- Output Buffer

The diagram below shows the structure of the Status registers.


# The Status Registers

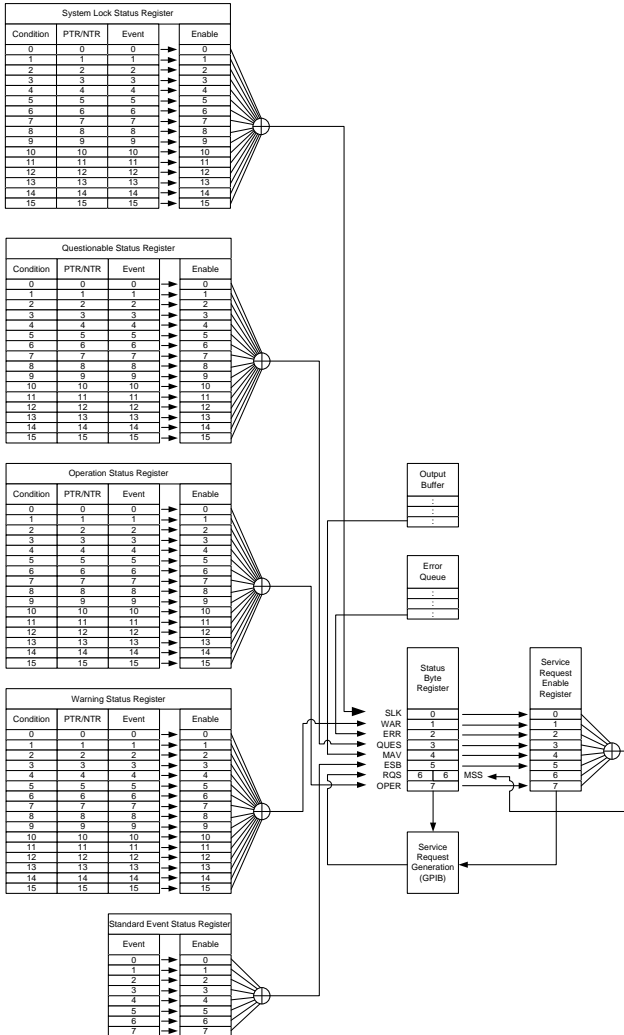

## Questionable Status Register Group

### Overview

The Questionable Status Register Group indicates if any protection modes or limits have been tripped.

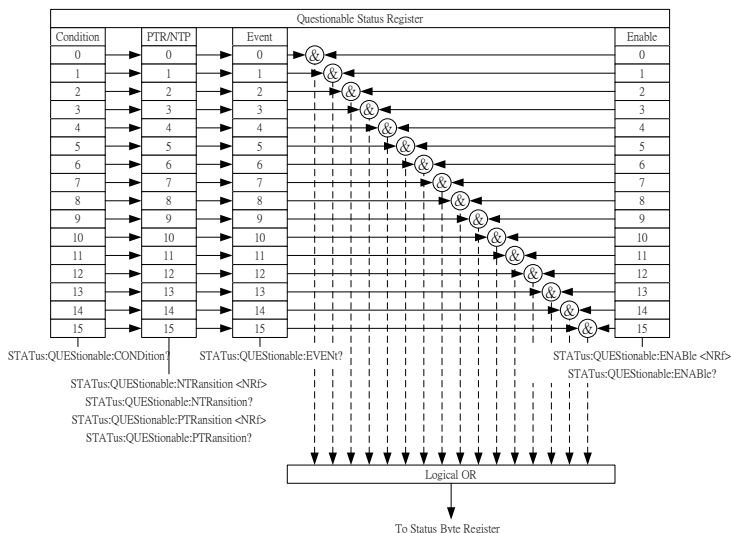

### Bit Summary

Event	Bit #	Bit Weight
Output Overvoltage	0	1
Over internal maximum voltage (110% of rating voltage).		
Over Irms Current	1	2
Output current RMS value is excessive		
DCAC Power Unit Error	3	8
Internal DCAC power unit function error.		

DCDC Power Unit Error	4	16
Internal DCDC power unit function error.		
Output Short	5	32
Call attention to output terminal short status		
Over Ipeak+ Current or Over Ipeak- Current	6	64
Positive/Negative output current peak value is excessive.		
Fan Failure	7	128
Fan failure. Contact service center.		
Calibration Data Error	8	256
The calibration data is abnormal or out of allowance range.		
Output Over-Power	9	512
Over internal power stage maximum power (110% of rating power)		
IPK Limit	10	1024
The peak current limiter is activated.		
Remote Sensing Voltage Out of Range	11	2048
The Sensing voltage limiter is activated.		
IRMS Limit	12	4096
The RMS current limiter is activated.		
Always 0	15	32768

---

Condition Register	The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.
--------------------	--

---

PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.
-----------------	---

---

Positive Transition	0→1
---------------------	-----

Negative Transition	1→0
---------------------	-----

---

Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.
----------------	--


---

Enable Register	The Enable register determines which Events in the Event Register will be used to set the QUES bit in the Status Byte Register.
-----------------	---

## Operation Status Register Group

### Overview

The Operation Status Register Group indicates the operating status of the power supply.

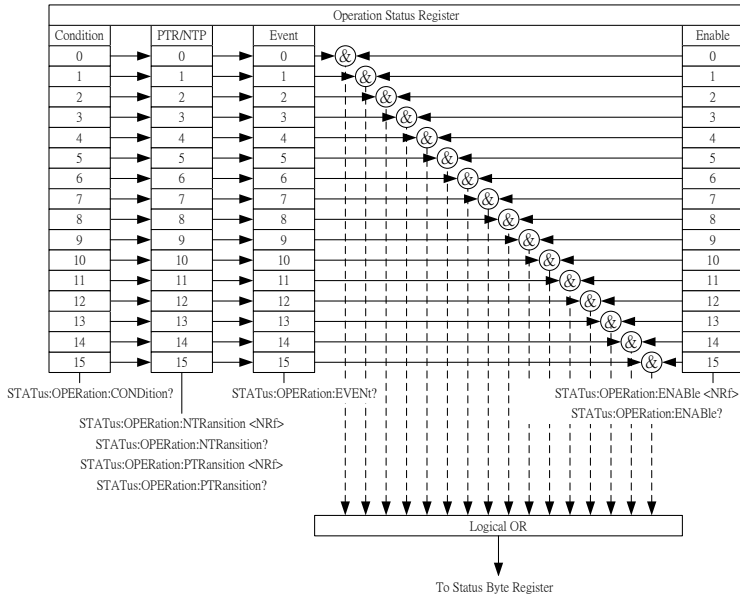

### Bit Summary

Event	Bit #	Bit Weight
Busy Status	1	2
LOCK status (SYNC) status	8	256
Hold Status(Sequence)	12	4096
Run Status(Sequence)	14	16384
Always 0	15	32768

**Condition Register**      The Operation Status Condition Register indicates the operating status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.

**PTR/NTR Filters**      The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.

Positive Transition      0→1

Negative Transition      1→0


**Event Register**      The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.

**Enable Register**      The Enable register determines which registered Events in the Event Register will be used to set the OPER bit in the Status Byte Register.

## Warning Status Register Group

### Overview

The Warning Status Register Group is a secondary protection status register for the supply output.

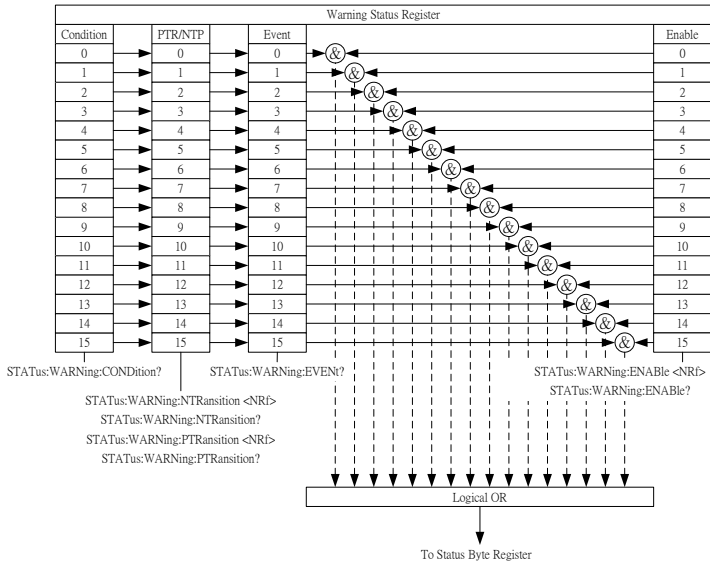

### Bit Summary

Event	Bit #	Bit Weight
Output Overvoltage Over internal maximum voltage (110% of rating voltage).	0	1
Over Irms Current Output current RMS value is excessive	1	2


Over Ipeak+ Current or Over Ipeak- Current Positive/Negative output current peak value is excessive.	3	8
DCAC Power Unit Error Internal DCAC power unit function error.	5	32
DCDC Power Unit Error Internal DCDC power unit function error.	6	64
External Sync Frequency Error The external synchronization signal input frequency is out of the allowance range.	7	128
Sensing Voltage Error Remote sense connection wire is abnormal or over maximum compensation voltage.	9	512
Over Irms Current Output current RMS value is excessive	10	1024
Over Ipeak+ Current or Over Ipeak- Current Positive/Negative output current peak value is excessive.	11	2048
Output Over-Power Over internal power stage maximum power (110% of rating power)	12	4096
IRMS Limit The RMS current limiter is activated.	13	8192

	IPK Limit	14	16384
	The peak current limiter is activated.		
	Always 0	15	32768
Condition Register	The System Lock Status Condition Register indicates the system lock status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.		
	Positive Transition	0→1	
	Negative Transition	1→0	
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.		
Enable Register	The Enable register determines which registered Events in the Event Register will be used to set the SLK bit in the Status Byte Register.		

## System Lock Status Register Group

### Overview

The System Lock Status Register Group indicates if system lock protection modes have been tripped.

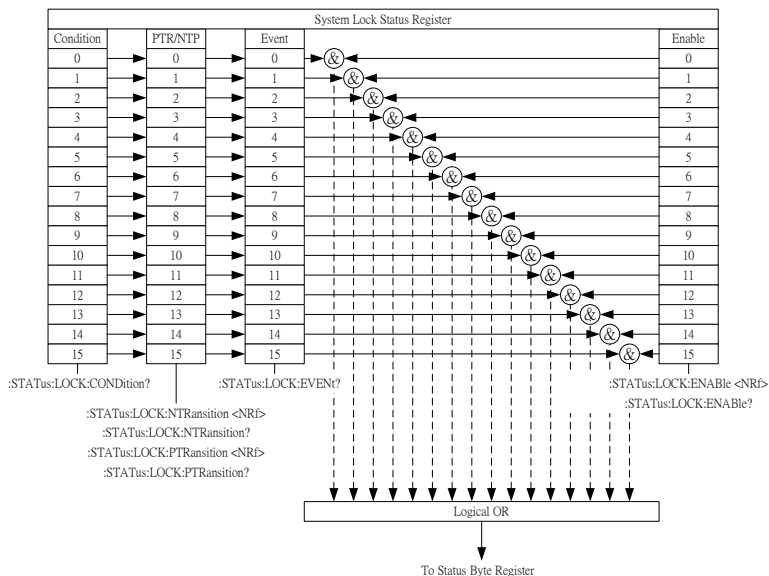

### Bit Summary


Event	Bit #	Bit Weight
Power Input Anomaly	0	1
The power input voltage is insufficient or turning off main power switch. Check input power before rebooting the unit.		
Fan Failure	7	128
Fan failure. Contact service center.		
Startup Anomaly	8	256
Abnormal startup procedure.		

	PFC Power Unit Error	9	512
	Internal PFC power unit function error.		
Condition Register	The System Lock Status Condition Register indicates the system lock status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.		
	Positive Transition	0→1	
	Negative Transition	1→0	
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.		
Enable Register	The Enable register determines which registered Events in the Event Register will be used to set the SLK bit in the Status Byte Register.		

## Standard Event Status Register Group

### Overview

The Standard Event Status Register Group indicates if any errors have occurred. The bits of the Event register are set by the error event queue.

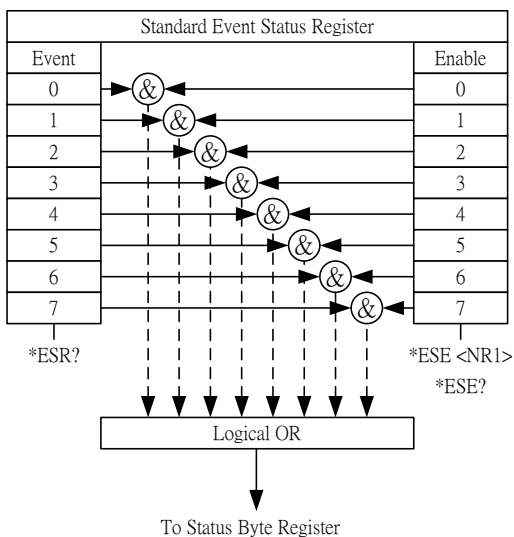

### Bit Summary


Event	Bit #	Bit Weight
OPC (Operation complete)	0	1
The OCP bit is set when all selected pending operations are complete. This bit is set in response to the *OPC command.		
RQC (Request control)	1	2

	QUE (Query Error)	2	4
	The Query Error bit is set in response to an error reading the Output Queue. This can be caused by trying to read the Output Queue when there is no data present.		
	DDE (Device Dependent Error)	3	8
	Device specific error.		
	EXE (Execution Error)	4	16
	The EXE bit indicates an execution error due to one of the following: illegal command parameter, parameter out of range, invalid parameter, the command didn't execute due to an overriding operation condition.		
	CME (Command Error)	5	32
	The CME bit is set when a syntax error has occurred. The CME bit can also be set when a <GET> command is received within a program message.		
	URQ (User Request)	6	64
	PON (Power On)	7	128
	Indicates the power is turned on.		
Event Register	Any bits set in the event register indicate that an error has occurred. Reading the Event register will reset the register to 0.		
Enable Register	The Enable register determines which Events in the Event Register will be used to set the ESB bit in the Status Byte Register.		

## Status Byte Register & Service Request Enable Register

### Overview

The Status Byte register consolidates the status events of all the status registers. The Status Byte register can be read with the \*STB? query and can be cleared with the \*CLS command.

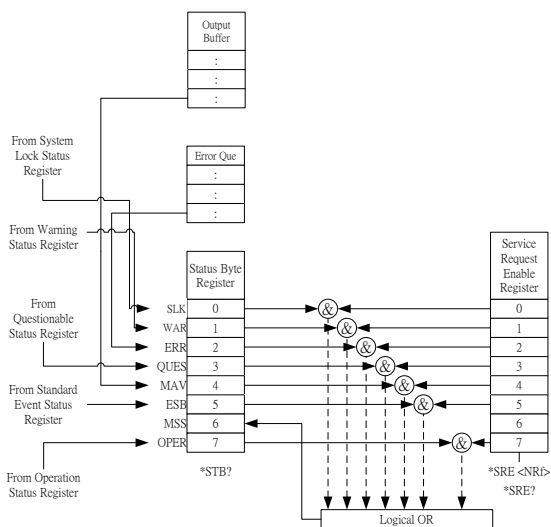

### Bit Summary

Event	Bit #	Bit Weight
SLK(System Lock Status Register Summary)	0	1
WAR (Warning Status Register)	1	2
ERR (Error Queue not empty)	2	4
QUES (Questionable Status Register)	3	8
MAV (Message Available)	4	16
ESB(Standard Event Status Register Summary)	5	32

---

	RQS / MSS(Reuest Service / Master Summary Status)	6	64
	OPER (Operation Status Register)	7	128

---

Status Byte Register	Any bits set in the Status byte register acts as a summary register for all the three other status registers and indicates if there is a service request, an error in the Error Queue or data in the Output Queue. Reading the Status Byte register will reset the register to 0.
Service Request Enable Register	The Service Request Enable Register controls which bits in the Status Byte Register are able to generate service requests.

---

## Error List

---

Command Errors.....	192
Execution Errors .....	196
Device Specific Errors.....	198
Query Errors.....	199

### Command Errors

---

**Overview** An <error/event number> in the range [ -199 , -100 ] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.
- An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

---

Error Code	Description
-100 Command Error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2,11.5.1.1.4 has occurred.
-102 Syntax error	An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings.
-103 Invalid separator	The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC?
-104 Data type error	The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered.
-108 Parameter not allowed	More parameters were received than expected for the header; for example, the :SYSTem:KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed.
-109 Missing parameter	Fewer parameters were received than required for the header; for example, the :SYSTem:KLOCK command requires one parameter, so receiving :SYSTem:KLOCK is not allowed.
-111 Header separator error	A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus *SRE2 is an error.

-112 Program mnemonic too long	The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1).
-113 Undefined header	The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device.
-114 Header suffix out of range	The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid.
-115 Unexpected number of parameters	The number of parameters received does not correspond to the number of parameters expected. This is typically due to an inconsistency with the number of instruments in the selected group.
-120 Numeric data error	This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the nondecimal numeric types. This particular error message should be used if the device cannot detect a more specific error.
-121 Invalid character in number	An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data.
-128 Numeric data not allowed	A legal numeric data element was received, but the device does not accept one in this position for the header.
-131 Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.

---

-141 Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-148 Character data not allowed	A legal character data element was encountered where prohibited by the device.
-151 Invalid string data	A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character.
-158 String data not allowed	A string data element was encountered but was not allowed by the device at this point in parsing.
-160 Block data error	This error, as well as errors -161 through -169, are generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error.
-161 Invalid block data	A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied.
-168 Block data not allowed	A legal block data element was encountered but was not allowed by the device at this point in parsing.
-178 Expression data not allowed	A legal expression data was encountered but was not allowed by the device at this point in parsing.

## Execution Errors

**Overview** An <error/event number> in the range [ -299 , -200 ] indicates that an error has been detected by the instrument’s execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device’s capabilities.
- A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Error Code	Description
-200 Execution error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred.

-201 Invalid while in local	Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message cannot be executed.
-203 Command protected	Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
-211 Trigger ignored	Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error.
-213 Init ignored	Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
-220 Parameter error	Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229.
-221 Settings conflict	Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.).

---

-222 Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.).
-224 Illegal parameter value	Used where exact value, from a list of possibles, was expected.

## Device Specific Errors

---

**Overview** An <error/event number> in the range [ -399 , -300 ] or [ 1 , 32767 ] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer.

Note that the string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42,""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors,

---

or query errors; see the other error definitions in this section.

Error Code	Description
-310 System error	Indicates that some error, termed “system error” by the device, has occurred. This code is device-dependent.
-320 Storage fault	Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element.

## Query Errors

---

### Overview

An <error/event number> in the range [ -499 , -400 ] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending;
- Data in the output queue has been lost.

Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.

Error Code	Description
-400 Query error	This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred.

# A PPENDIX

## Factory Default Settings

The following default settings are the factory configuration settings for the ASR-6000 series. For details on how to return to the factory default settings, see the User's Manual.

### ASR-6450/ASR-6600

Continuous Mode	ASR-6450		ASR-6600	
	3P4W	1P2W	3P4W	1P2W
MODE	AC+DC-INT		AC+DC-INT	
Range	100V		100V	
ACV	0.00 Vrms		0.00 Vrms	
DCV	+0.00 Vdc		+0.00 Vdc	
FREQ	50.00Hz		50.00 Hz	
IRMS	15.75 A	47.25 A	21 A	63 A
ON Phs	Fixed 0.0°		Fixed 0.0°	
OFF Phs	Fixed 0.0°		Fixed 0.0°	
GAIN	100		100	
SIG	L1 LINE		L1 LINE	
Syc Phs	0.0		0.0	
SRC	L1 EXT		L1 EXT	
Wave	SIN		SIN	
Freq Limit	2000		2000	
Vrms Limit	175.0 Vrms		175.0 Vrms	
VPK+ Limit	+250 V		+250 V	

VPK- Limit	-250 V		-250 V	
IPK+ Limit	+63.00 A	+189.00 A	+84.00 A	+252.00 A
IPK- Limit	-63.00 A	-189.00 A	-84.00 A	-252.00 A

<b>MISC Configuration</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
T peak , hold(msec)	1	1
Phase Mode	Unbalance	Unbalance
Peak CLR	ALL	ALL
Power ON	OFF	OFF
Buzzer	ON	ON
Remote Sense	OFF	OFF
V Response	Medium	Medium
Output Relay	Enable	Enable
THD Format	IEC	IEC
External Control	OFF	OFF
V Unit(TRI,ARB)	rms	rms
Set Change Phase	OFF	OFF
Monitor Output1	L1 Voltage	L1 Voltage
Monitor Output2	L1 Current	L1 Current
Monitor Output Amp	±2.5	±2.5
TrgOut Select	ZC	ZC
TrgOut Width(ms)	0.1	0.1
TrgOut Source	L1	L1
Re-Lock	ON	ON
Data Average Count	8	8
Data Update Rate	Fast	Fast
Interlock	OFF	OFF
Ext Input	±5	±5

<b>LAN</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
DHCP	ON	ON

<b>USB Device</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Speed	Full	Full
Mode	TMC	TMC

<b>RS232C</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Baudrate	9600	9600
Databits	8bits	8bits
Parity	None	None
Stopbits	1bit	1bit

<b>GPIB</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Address	10	10

<b>CAN BUS</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Baudrate	125K	125K
Node ID	127	127

<b>DeviceNet</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Baudrate	125K	125K
MAC ID	63	63

<b>Output Impedance</b>	<b>ASR-6450</b>	<b>ASR-6600</b>
Output Impedance	OFF	OFF
L1 Output Inductance	0.1 $\mu$ H	0.1 $\mu$ H
L2 Output Inductance	0.1 $\mu$ H	0.1 $\mu$ H
L3 Output Inductance	0.1 $\mu$ H	0.1 $\mu$ H
L1 Output Resistance	0.1 $\Omega$	0.1 $\Omega$
L2 Output Inductance	0.1 $\Omega$	0.1 $\Omega$
L3 Output Inductance	0.1 $\Omega$	0.1 $\Omega$

<b>Sequence Mode</b>	<b>ASR-6450</b>			<b>ASR-6600</b>		
Step	0			0		
Time	0.1000 s			0.1000 s		
Jump To	OFF			OFF		
Jump Cnt	1			1		
Branch 1	OFF			OFF		
Branch 2	OFF			OFF		
Term	CONTI			CONTI		
Sync Code	LL			LL		
Item	L1	L2	L3	L1	L2	L3
ACV	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT
DCV	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT
Fset	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT
Wave	SIN	SIN	SIN	SIN	SIN	SIN
ON Phs	Free	Free	Free	Free	Free	Free
OFF Phs	Free	Free	Free	Free	Free	Free
Phase	Fixed (0)	120	240	Fixed (0)	120	240

<b>Simulate Mode</b>	<b>ASR-6450</b>			<b>ASR-6600</b>		
Step	Initial			Initial		
Repeat	OFF			OFF		
Time	0.1000 s			0.1000 s		
Term	Free			Free		
Code	LL			LL		
Item	L1	L2	L3	L1	L2	L3
ACV	0.00	0.00	0.00	0.00	0.00	0.00
Fset	50.00	50.00	50.00	50.00	50.00	50.00
Wave	SIN	SIN	SIN	SIN	SIN	SIN
ON Phs	Free	Free	Free	Free	Free	Free
OFF Phs	Free	Free	Free	Free	Free	Free

## ASR-6500/ASR-6660

Continuous Mode	ASR-6500		ASR-6660	
	3P4W	1P2W	3P4W	1P2W
MODE	AC+DC-INT		AC+DC-INT	
Range	100V		100V	
ACV	0.00 Vrms		0.00 Vrms	
DCV	+0.00 Vdc		+0.00 Vdc	
FREQ	50.00Hz		50.00 Hz	
IRMS	17.50 A	52.50 A	23.10 A	69.30 A
ON Phs	Fixed 0.0°		Fixed 0.0°	
OFF Phs	Fixed 0.0°		Fixed 0.0°	
GAIN	100		100	
SIG	L1 LINE		L1 LINE	
Syc Phs	0.0		0.0	
SRC	L1 EXT		L1 EXT	
Wave	SIN		SIN	
Freq Limit	2000		2000	
Vrms Limit	175.0 Vrms		175.0 Vrms	
VPK+ Limit	+250 V		+250 V	
VPK- Limit	-250 V		-250 V	
IPK+ Limit	+70.00 A	+210.00 A	+92.40 A	+277.20 A
IPK- Limit	-70.00 A	-210.00 A	-92.40 A	-277.20 A

MISC Configuration	ASR-6500	ASR-6660
T peak , hold(msec)	1	1
Phase Mode	Unbalance	Unbalance
Peak CLR	ALL	ALL
Power ON	OFF	OFF
Buzzer	ON	ON

Remote Sense	OFF	OFF
V Response	Medium	Medium
Output Relay	Enable	Enable
THD Format	IEC	IEC
External Control	OFF	OFF
V Unit(TRI,ARB)	rms	rms
Set Change Phase	OFF	OFF
Monitor Output1	L1 Voltage	L1 Voltage
Monitor Output2	L1 Current	L1 Current
Monitor Output Amp	±2.5	±2.5
TrgOut Select	ZC	ZC
TrgOut Width(ms)	0.1	0.1
TrgOut Source	L1	L1
Re-Lock	ON	ON
Data Average Count	8	8
Data Update Rate	Fast	Fast
Interlock	OFF	OFF
Ext Input	±5	±5

<b>LAN</b>	<b>ASR-6500</b>	<b>ASR-6660</b>
------------	-----------------	-----------------

DHCP	ON	ON
------	----	----

<b>USB Device</b>	<b>ASR-6500</b>	<b>ASR-6660</b>
-------------------	-----------------	-----------------

Speed	Full	Full
Mode	TMC	TMC

<b>RS232C</b>	<b>ASR-6500</b>	<b>ASR-6660</b>
---------------	-----------------	-----------------

Baudrate	9600	9600
Databits	8bits	8bits
Parity	None	None
Stopbits	1bit	1bit

<b>GPIB</b>	<b>ASR-6500</b>			<b>ASR-6660</b>		
Address	10			10		

<b>CAN BUS</b>	<b>ASR-6500</b>			<b>ASR-6660</b>		
Baudrate	125K			125K		
Node ID	127			127		

<b>DeviceNet</b>	<b>ASR-6500</b>			<b>ASR-6660</b>		
Baudrate	125K			125K		
MAC ID	63			63		

<b>Output Impedance</b>	<b>ASR-6500</b>			<b>ASR-6660</b>		
Output Impedance	OFF			OFF		
L1 Output Inductance	0.1 $\mu$ H			0.1 $\mu$ H		
L2 Output Inductance	0.1 $\mu$ H			0.1 $\mu$ H		
L3 Output Inductance	0.1 $\mu$ H			0.1 $\mu$ H		
L1 Output Resistance	0.1 $\Omega$			0.1 $\Omega$		
L2 Output Inductance	0.1 $\Omega$			0.1 $\Omega$		
L3 Output Inductance	0.1 $\Omega$			0.1 $\Omega$		


<b>Sequence Mode</b>	<b>ASR-6500</b>			<b>ASR-6660</b>		
Step	0			0		
Time	0.1000 s			0.1000 s		
Jump To	OFF			OFF		
Jump Cnt	1			1		
Branch 1	OFF			OFF		
Branch 2	OFF			OFF		
Term	CONTI			CONTI		
Sync Code	LL			LL		
Item	L1	L2	L3	L1	L2	L3

ACV	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT
DCV	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT	0.00, CT
Fset	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT	50.0 , CT
Wave	SIN	SIN	SIN	SIN	SIN	SIN
ON Phs	Free	Free	Free	Free	Free	Free
OFF Phs	Free	Free	Free	Free	Free	Free
Phase	Fixed (0)	120	240	Fixed (0)	120	240


Simulate Mode	ASR-6500			ASR-6660		
Step	Initial			Initial		
Repeat	OFF			OFF		
Time	0.1000 s			0.1000 s		
Term	Free			Free		
Code	LL			LL		
Item	L1	L2	L3	L1	L2	L3
ACV	0.00	0.00	0.00	0.00	0.00	0.00
Fset	50.00	50.00	50.00	50.00	50.00	50.00
Wave	SIN	SIN	SIN	SIN	SIN	SIN
ON Phs	Free	Free	Free	Free	Free	Free
OFF Phs	Free	Free	Free	Free	Free	Free

## Default Waveform Setting


ARB 1 Ramp (rising)

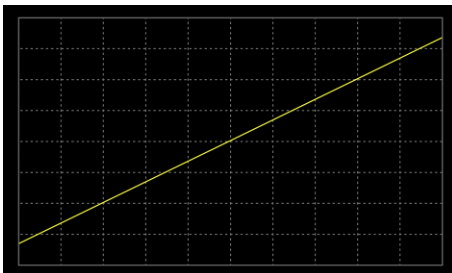


ARB 2 Ramp (falling)

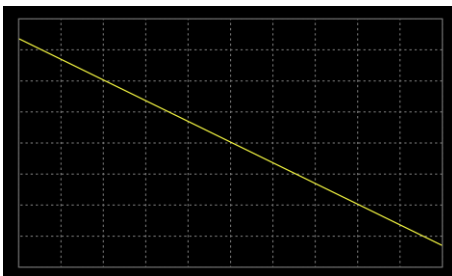


ARB 3 Sine wave, half-cycle(positive pole)

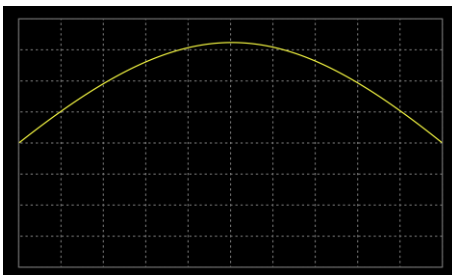


ARB 4 Sine wave, half-cycle(negative pole)

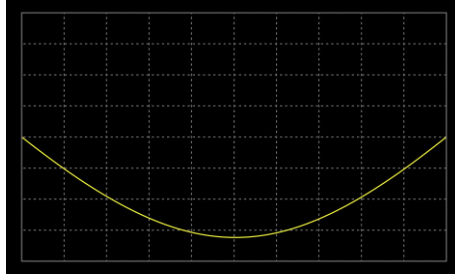


ARB 5 Sine wave, half-wave rectification (positive polarity)

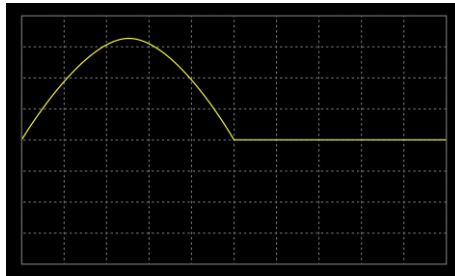


ARB 6 Sine wave, half-wave rectification(negative polarity)

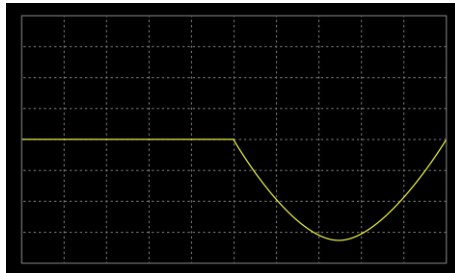


ARB 7 Sine wave, full-wave  
rectification(positive polarity)

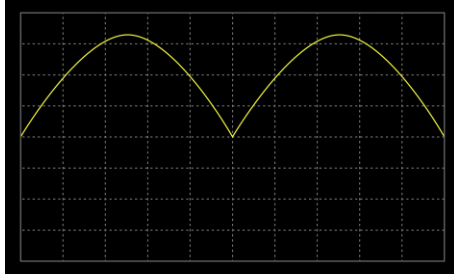


ARB 8 Sine wave, full-wave  
rectification(negative polarity)

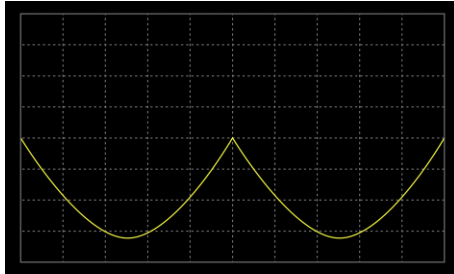


ARB 9 Second order step response(damping  
coefficient 0.1)

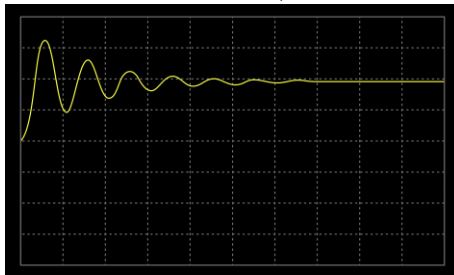


ARB 10 Second order step response(damping coefficient 0.2)

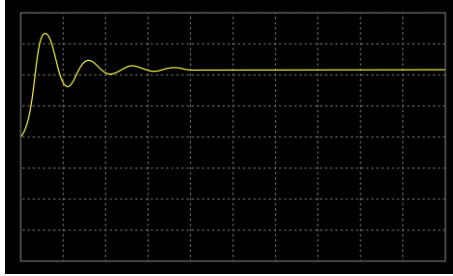


ARB 11 Second order step response(damping coefficient 0.7)

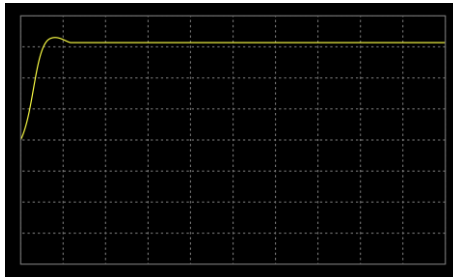


ARB 12 Second order impulse response(damping coefficient 0.1)

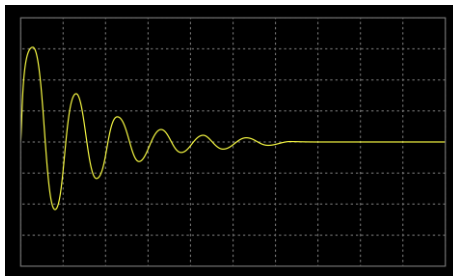


ARB 13 Second order impulse  
response(damping coefficient 0.2)

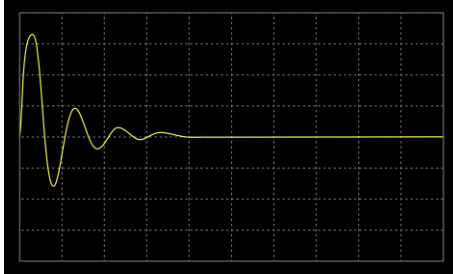


ARB 14 Second order impulse  
response(damping coefficient 0.7)

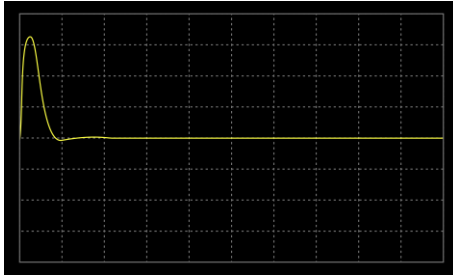

ARB 15 Exponential (rising)

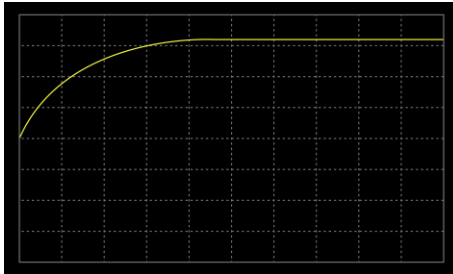


ARB 16 Exponential (falling)

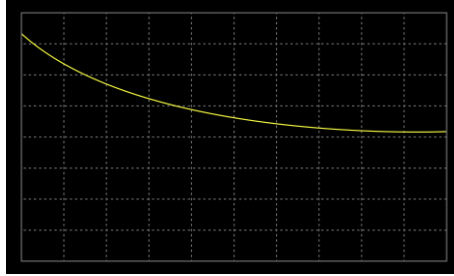


Default Sequence Setting


SEQ6 Momentary drop in supply voltage

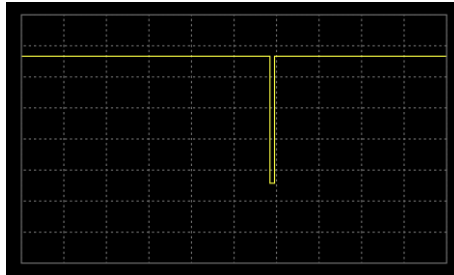


SEQ7 Reset test for Level1 systems with 12V

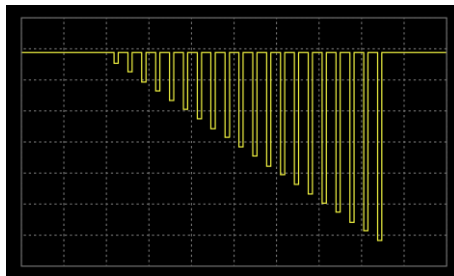

## SEQ8 Starting Profile

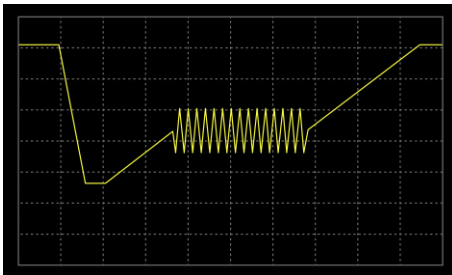

## SEQ9 Test2 Tr: 10ms, Td: 40ms

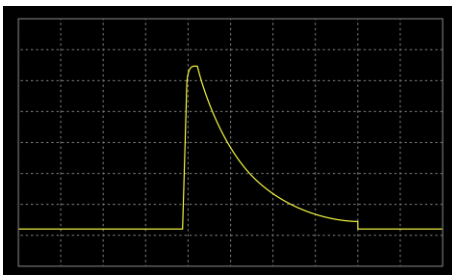

# INDEX

Accessories .....	11	Command list.....	48
Caution symbol .....	4	Command syntax.....	44
Cleaning the instrument.....	7	Error list .....	192
Default settings.....	201	Ethernet.....	23
Disposal instructions.....	7	GPIB .....	33
EN61010		LAN.....	23
pollution degree .....	7	RS232.....	27
Environment		Status registers .....	176
safety instruction.....	7	USB.....	24
Ethernet		Remote control function check	
interface.....	23	GPIB .....	34
Front panel diagram .....	13	Realterm.....	30
Ground		RS-232.....	26, 29
symbol .....	4	USB.....	26, 29
List of features .....	10	Service operation	
Model differences.....	9	about disassembly .....	5
Power on/off		Socket server function check ....	39
safety instruction.....	6	Warning symbol .....	4
Remote control.....	21	Web server function check .....	38